Growler Setup & String Gauge Chart 6, 100 string guitars E9th tuning

String #	Gauge		Pedal A or1	Pedal B or2	Pedal C or 3	LKL / F -2	LKR / E -1	RKL / G -3	RKR / D-4
	.012	F#						G	
	.015	D#							-D
	. <u>011pg</u>	G#	u <mark>l</mark> l.	A			L I	l l	L
	.014	E		l l	F#	E	-Eb	l <mark>l</mark>	*
	.01 7 pg	В	C#		C#	U	1 1	l l	
	.022nw	G#	1	A		t t	l I	l I	
	.026nW	F#						G	
	.030nW	E	· Carrie			F	-Eb	1	
	.034nW	D							C#
0	.038nW	В	C#						
4			Raise	Raise	Raise	Raise	LOWER	Raise	LOWER

Tune your strings LKR and RKR with knee lever Engaged to the lowered pitch. Then, release them and adjust the Fine tuning nuts to standard pitch.

All knee levers have adjustable stops under guitar body. They are preset at shop and should not need adjustment. If they need adjustment for more pull on a string loosen the screw. For less pull tighten the screw.

Please use caution when adjusting tuning. A small turn goes a long way and over-tightening the tuning nuts will cause the guitar to go out oT tune and possible damage the guitar. Please call or text Kelly Tor technical support at 843-999-5152.