

# What's in the Box?



(4) Pre-installed wheel locks to make mounting super easy!

(4) Completely assembled R7 retractable casters.





(1) - 1/8" extended length drill bit.



(1) - 4" long square head extension drive.



(18) - #10 - 9 x 1" square drive wood screws

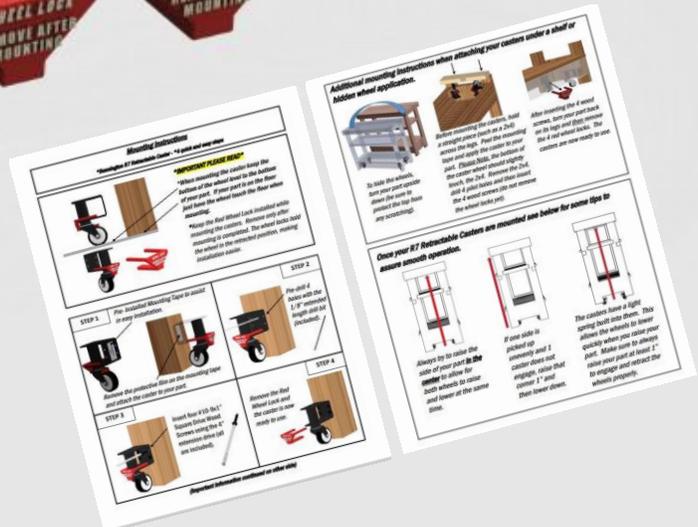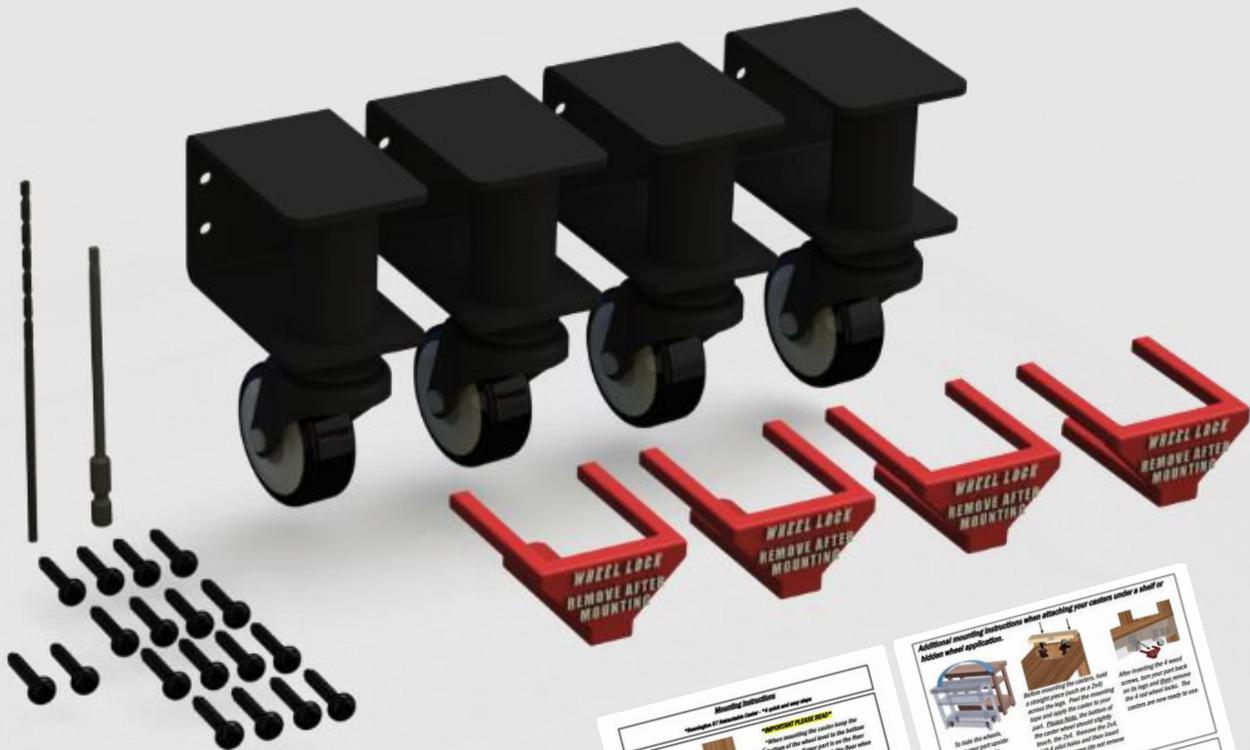

## Mounting Instructions

*\*Bennington R7 Retractable Caster - \*4 quick and easy steps*




### **\*IMPORTANT PLEASE READ\***

*\*When mounting the caster keep the bottom of the wheel level to the bottom of your part. If your part is on the floor just have the wheel touch the floor when mounting.*

*\*Keep the Red Wheel Lock installed while mounting the casters. Remove only after mounting is completed. The wheel locks hold the wheel in the retracted position, making installation easier.*

### STEP 1


*Pre- Installed Mounting Tape to assist in easy installation.*

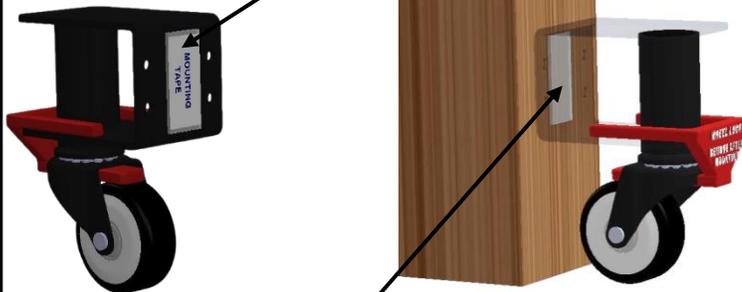

*Remove the protective film on the mounting tape and attach the caster to your part.*

### STEP 2

*Pre-drill 4 holes with the 1/8" extended length drill bit (included).*

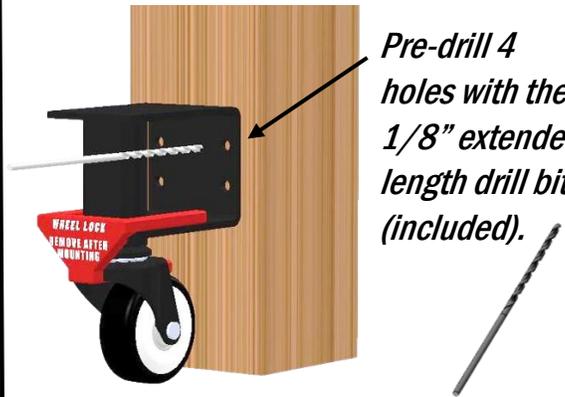

### STEP 3

*Insert four #10-9x1" Square Drive Wood Screws using the 4" extension drive (all are included).*



### STEP 4

*Remove the Red Wheel Lock and the caster is now ready to use.*




*(Important Information continued on other side)*


**Additional mounting instructions when attaching your casters under a shelf or hidden wheel application.**



To hide the wheels, turn your part upside down (be sure to protect the top from any scratching).

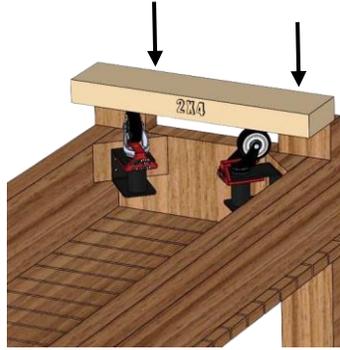


Before mounting the casters, hold a straight piece (such as a 2x4) across the legs. Peel the mounting tape and apply the caster to your part. Please Note, the bottom of the caster wheel should slightly touch, the 2x4. Remove the 2x4, drill 4 pilot holes and then insert the 4 wood screws (do not remove the wheel locks yet).

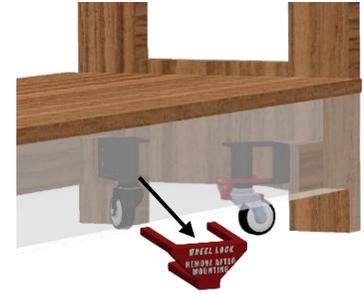


After inserting the 4 wood screws, turn your part back on its legs and then remove the 4 red wheel locks. The casters are now ready to use.


**Once your R7 Retractable Casters are mounted see below for some tips to assure smooth operation.**

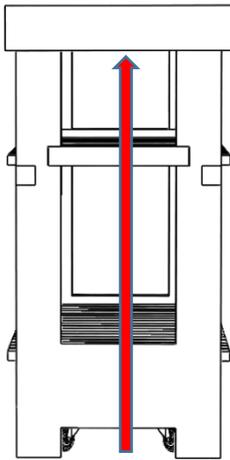

Always try to raise the side of your part in the center to allow for both wheels to raise and lower at the same time.

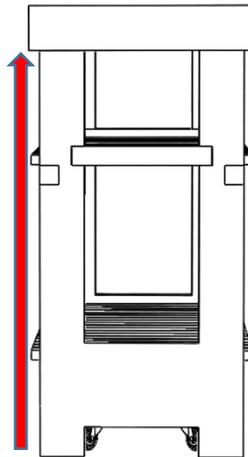

If one side is picked up unevenly and 1 caster does not engage, raise that corner 1" and then lower down.

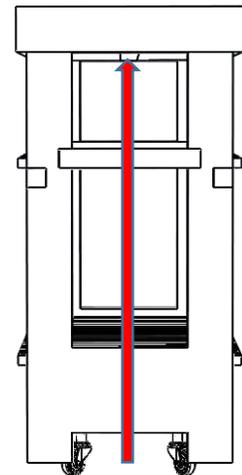

The casters have a light spring built into them. This allows the wheels to lower quickly when you raise your part. Make sure to always raise your part at least 1" to engage and retract the wheels properly.