



## TO INSPECT AND CLEAN THE YOUR 2500 MACHINE

1. **TURN THE UNIT OFF AND UNPLUG IT FROM THE POWER SOURCE.....**
2. Using a standard Phillips #2 screwdriver, remove the four (6) screws securing the top cabinet cover and lift the cover off.
3. Slide the used white ceramic generator plates straight up and remove from machine.
4. Wipe any visible dust from the inside of the unit with a dry cloth.
5. Using the alcohol wipes, we provided, clean the generator frame from which you pulled the ceramic generator plates. Be sure to thoroughly clean and wipe the inside area of the generator frame at the bottom, between the two upright posts where the ceramic generator plate rests.
6. Once the titanium plates and surrounding components are cleaned, replace the new white ceramic generator plates by sliding it straight down to the base of the generator frame. Be sure that the ceramic generator plate slides down the "SLOTS" at each end and is resting on the base of the generator frame.
7. Replace the (2) 200MA fuses if needed. Most times if the ceramic plates wear down too much the 200MA fuses will blow.
8. Remove the old green filters from back of unit and replace with the new green filters provided.
9. Test unit by turning on machines and checking to see if both green lights are on. If lights are on, then your all set!
10. Install the top cover and secure with the (6) cover screws.
11. The machine is now ready to be put back in service.

### NOTES:

- **For optimum performance we recommend replacing the generator plates at each 3 To 4-month cleaning intervals.**
- **There are three fuse holders on the back of the machine. The middle fuse is the main 2AMP fuse and the (2) fuses on either side of main fuse are the 200MA fuses which will blow if the ceramic generator plate is broken or if the generator frame becomes contaminated or breaks down over time.**
- **Review the programming instructions to ensure the unit has been properly programmed to ensure unit operates when using manually or automatically.**

## TROUBLESHOOTING THE 2500 MACHINE

**IF THE 2500 MACHINE WILL NOT START (NO GREEN LIGHTS ARE ON AND NO TIMER LIGHTS):** Check the power outlet to ensure that it is supplying power. Check the 2-Amp line fuse (large fuse, 2AMP). Replace if required.

**IF THE 2500 MACHINE STARTS BUT DOES NOT PRODUCE OZONE (FANS RUNNING but NO GREEN LIGHTS):** Check the (2) 200MA fuses (small fuse, 200MA). Replace if required.

**IF THE 2500 MACHINE STILL DOES NOT OPERATE PROPERLY, CONTACT FLOZONEAIR AT 352-329-1115 OR EMAIL US AT [INFO@FLOZONEAIR.COM](mailto:INFO@FLOZONEAIR.COM)**