

Ignition Box Instructions

Remove the four screws from the lid and carefully remove the lid. The lid may stick a little.

Remove the zip lock bag of parts.

Install the 10 amp fuse in the fuse holder.

Replace the lid and four screws. Please don't over tighten the screws.

Install the handle on top of the lid and the two cleats, one on each end, the holes, are precut. Again, do not over tighten the screws.

Battery---12 volt Absorbed Glass Mat.

Charging is done by connecting to the two 12v posts in the center of the box. Once the charger is connected pull the center switch to turn on that circuit and the battery will charge. Use a charger with low amp output 2 amp or less such as a battery maintainer.

To use the box.

Connect the appropriate wires to the engine and then pull out the appropriate switch.

Do not leave the circuit on when the engine is not running.

Care of the wood. The box was coated with linseed oil. You may want to recoat it occasionally to keep it from drying out and cracking.

Should provide many years of good use.