

Rogue Valley Sporting Clays

2 Bird System

- 1. Turn On Station:** Press ANY button on the handheld to “wake up” the system. The screen will display “Insert Tag”. Insert your card and you are ready to begin
 - 2. Throw Birds Manually:** Press a Trap button to fire a bird from that station (A, B, or Doubles).
- **Doubles:** Press Doubles to fire a True Pair (thrown simultaneously).
 - **Solo Shooter: Simple Delay:** Setting a delay between the time a trap button is pressed and the time the trap(s) fire allows solo shooters to go out alone without a trapper. Set the desired delay time to allow you to press a trap button and get ready before the target is launched. The delay must be set before a Target TAG card is inserted.
 - **Do NOT insert your bird card yet**
 - The screen should be blank and the system in standby
 - Press any button to turn on station
 - Set the delay: Press **Trap 2** to enter the Delay Settings
 - Press Trap 2 to add 1 second delay each time it is pressed
 - Press Trap 1 to reduce delay by 1 second each time it is pressed
 - Once complete, wait for the display to self-exit the delay settings
 - Insert your Bird Card and when ready press your desire Trap button (A, B or Doubles)
 - The delay countdown will begin immediately
 - After the bird is thrown, you may continue to select targets and the delay will remain
 - **Solo Shooter: Delayed Doubles** (*simulates a report pair*):
 - **Do NOT insert your bird card yet**
 - The screen should be blank and the system in standby
 - Press any button to turn on station
 - Set the first bird delay: Press **Trap 2** to enter the Delay Settings
 - Press Trap 2 to add 1 second delay each time it is pressed
 - Press Trap 1 to reduce delay by 1 second each time it is pressed
 - Set the second bird delay: Press the **Doubles** button to enter a second delay timer.
 - Press Trap 2 to add 1 second delay each time it is pressed
 - Press Trap 1 to reduce delay by 1 second each time it is pressed
 - Once complete, wait for the display to self-exit the delay settings
 - Insert your Bird Card and when ready press your desire Trap button (A or B)
 - The delay countdown will begin immediately
 - After the bird is thrown, the second timer will count down and then throw the alternate target.



Good luck, have fun!

Rogue Valley Sporting Clays

4 Bird System

- Turn On Station:** Press ANY button on the handheld to “wake up” the system. The screen will display “Insert Tag”.
 - Insert Card:** Insert your card and you are ready to begin
- Throw Birds Manually:** Press a Trap button to fire a bird from that station (A, B, C, D, or Doubles).
 - Doubles:** Press Doubles to fire a True Pair (thrown simultaneously).
 - Solo Shooter: Simple Delay:** Setting a delay between the time a trap button is pressed and the time the trap(s) fire allows solo shooters to go out alone without a trapper. Set the desired delay time to allow you to press a trap button and get ready before the target is launched. The delay must be set before a Target TAG card is inserted.
 - Do NOT insert your bird card yet
 - Press any button to turn on station
 - Set the delay: Press **Trap 2** to enter the Delay Settings
 - Press Trap 2 to add 1 second delay each time it is pressed
 - Press Trap 1 to reduce delay by 1 second each time it is pressed
 - Once complete, wait for the display to self-exit the delay settings
 - Insert your Bird Card and when ready press your desire Trap button (A, B, C, D, or Doubles)
 - The delay countdown will begin immediately
 - After the bird is thrown, you may continue to select targets and the delay will remain
 - Solo Shooter: Delayed Doubles** (*simulates a report pair*):
 - Do NOT insert your bird card yet
 - Press any button to turn on station
 - Set the first bird delay: Press **Trap 2** to enter the Delay Settings
 - Press Trap 2 to add 1 second delay each time it is pressed
 - Press Trap 1 to reduce delay by 1 second each time it is pressed
 - Set the second bird delay: Press the **Trap 3** button to enter a second delay timer.
 - Press Trap 2 to add 1 second delay each time it is pressed
 - Press Trap 1 to reduce delay by 1 second each time it is pressed
 - Once complete, wait for the display to self-exit the delay settings
 - Insert your Bird Card and when ready press your desire Trap button
 - The delay countdown will begin immediately
 - After the bird is thrown, the second timer will count down and then throw the alternate target.



Good luck, have fun!