



BOOK DIRECT AT [I5cybertruck.com](https://www.I5cybertruck.com)

2022 Operation guide

In transit- Master power switch will need to be on to power radio, back up camera, house heater, refrigerator and control panel. On master control panel water pump and LPG water heater will need to be on for hot and cold running water. Stove is ready to use at any time. All of the above does not require the generator to be on it is powered by 2 house batteries. If you would like to run the house AC, TV's, or Microwave you will need to turn on the generator. Be sure to TURN OFF GENERATOR and all of the above before connecting to home or campsite power. If you will be dry camping meaning you are at a remote location or national park where electricity is not provided this would not apply to you. If you are using the TV while in transit be sure it is locked in the viewing position of your choice. The TV mount swing arm has a locking nut on top and bottom that need to be loosened to move into position, once the position you want has been achieved tighten the nuts down so TV does not swing when the driver applies brakes. Main TV will switch off when ignition is on so driver will not be distracted this is installed from the factory due to state and federal regulation. Be sure to secure ladder when not in use. Glass stove top cover will need to be closed. Please be advised, not all driveways are RV friendly, if driveway is too steep you will need to find another entrance as you will bottom out and cause damage.

Leveling- Engage parking brake in general at all times when you park. Press the auto level button, be sure the RV has no occupants, if this is not possible ensure the occupants are stationary. When you are ready to leave press the retract all button as the very last step when slides are already in. This feature should only be used when you already on level ground. Ground should be dry and solid. Do not use in the rain or mud.

At campsite with full hook ups- With all of the above In transit items off as well as engine, connect power cord with surge protector to power supply, then water hose with regulator to RV water inlet then water supply and turn on water. If cable TV is included with your camp site, connect coax cable to RV inlet then to campsite cable connection, you will need to do a channel scan on main and outdoor TV as each area and campsite have their own channel mapping. Insure antenna signal booster is off while doing channel scan if cable is provided from you site. The antenna signal booster power is only to be on when you are using the roof antenna for signal. Finally remove RV sewer cap and connect sewer hose located in rear bumper to RV then to your camp site sewer system. Usually only 1 hose is needed with 90 fitting to connect to camp site. Once connection is complete you now may open the gray tank handle and leave open. The black will need to remain closed until you have a full load to dump, when you have a full load to dump close the gray tank, never have both tanks open. The night before you leave close your gray tank so that gray tank has a level, a gray dump is the last thing you want to run through the sewer hose to flush any black left overs. Now you are ready to open slide. Be sure to check your surroundings to insure you are clear, best to have a spotter outside. The ignition needs to be in accessory mode. Finally at the control panel turn on your 110 water heater switch.

Dry camping with no electricity- You will need to run generator while camping with no electricity. The generator provides a slow rate of charge or trickle charge to battery. It is best to keep generator running to ensure you have all the power you need. The house battery is not an unlimited source of power and requires the generator to keep it topped off. If you completely drain the house battery it will take the generator time to fully charge battery. A good practice is to run generator 2 hours in the morning and 2 hours before bed.

Slides and Awning- If it is snowing or another condition beside rain the slides need to be in. The slides have toppers and if there is a "load" on the topper like snow or sand you will not be able to bring the slides in without clearing the topper. Also if you encounter sandy or dusty winds the slide tracks on each side of the slides need to be cleaned before you bring the slide in as you risk the gears breaking and not being able to operate the slides. For safety reasons access to the roof is not allowed as walking on the roof can cause serious injury or death

without proper training. If the slides are brought in with a load the toppers will tear. Slides will not operate with engine running. You would only want the awning out during the day when you are with the RV, if it is windy or raining, snowing etc the awning needs to be closed. Once awning makes contact with RV while you close it remove finger promptly from switch to avoid over tightening. **Slides will only operate when key is in the ignition in accessory mode. No one can be sitting on the slide during operation. When fully extended do not continue to hold slide button.**

Batteries- If you happen to drain house batteries and you cannot start the generator to charge the house batteries start the engine and give it a few minutes and you will be able to start the generator then shut off engine. If you happen to drain engine battery and you have power in your house battery, there is a switch on the side of driver seat you need to hold down for a few minutes and while continuing to hold switch down start the engine. If you happen to drain both engine and house batteries you will need to call the service provider of your choice for a jump start, draining of both engine and house batteries is very unlikely, draining of only the house battery is more likely when all lights are left on and you leave for the day hiking or any activity you are not with RV.

Freezing weather- Camping in freezing weather is similar to dry camping even when you are at a camp site where you have full hook ups. You will need to fill your fresh water tank whenever it is available. Most camp sites freeze up at night and there will be no water flow anyway, here's how to set up. You will still get your electricity and TV signal from the camp site if it is provided. Your fresh water hose will not be connected to the RV city water inlet, you will only use for filling your fresh (potable) water tank and be sure to drain any water left in hose as it will freeze and leave you with no hose to fill fresh water tank. As for the sewer you can lay it all out and have it ready but you will not want to connect it to RV until you're ready to dump, and once dumping it completely remove from RV and replace cap on RV sewer discharge. Inside the RV leave water pump on and 110 heater switch on if you are plugged into electricity from camp site or propane heater switch on if you are dry camping with no electricity. IMPORTANT you must have the heater thermostat set to at least 60 at all times even if you are not with the RV, this will ensure the plumbing inside the RV will not freeze. In the event your sewer discharge black or gray tank freezes you will need to wait until mid day when temps rise, never force the handles open as they may freeze shut.

Things to keep in mind- RV furniture is built from light woods, unlike home furniture, so extra care is needed. Pots and pans are for use inside RV only. If black tank still shows a level after you dump you will need to flush toilet for a period of time to fill black tank, then dump. This will ensure it is returned on empty. When you are getting gas please do a walk around ensure everything is secure and check all 6 tires, the owner does not cover tire replacement. If you do run over a nail or pothole and you need to purchase a tire please contact me prior to purchase to ensure the proper tire is purchased so you will not need to purchase a tire twice. This also applies to any repairs, owner needs to authorize. If you are unsure in any situation on proper operation please send me a message. We are always available from the early morning to late evenings. If you have a question/concern outside of those hours I will get back to you ASAP. We want your trip to be enjoyable and full of wonderful memories, operating the unit incorrectly can cause a disruption to that and renter would be responsible for repairs. Tires are rated for 70 MPH, ideal speeds for a motorhome of this size is around 62MPH, driving over 70MPH is dangerous. When purchasing additional toilet paper insure it is RV friendly. Only toilet tissue should be flushed, anything else will cause a clog. To test if the TP is RV friendly place a square of TP in partially filled water bottle and shake it. If it breaks down the TP is good. When you are running low on fresh water supply be sure to shut off pump and water heater.

Before returning- fresh water, propane, and gas will need to be topped off locally, also black and gray tanks emptied. Your best option to handle most of your needs are any Love's travel centers. You can let us handle all or a portion of it for you, this option is fee based. Please remove your trash before handoff. Drop off is between 8am and 3pm, and extended hours, fee based are between 3pm and 5pm, after 5pm the RV will need to be returned the following day and extension of your reservation is required. Please schedule your drop off time 24 hours in advance to ensure you will not be waiting.