



VIEWING RECORDINGS AND EXPORTING FILES


Right click on the main screen and select **PLAYBACK**

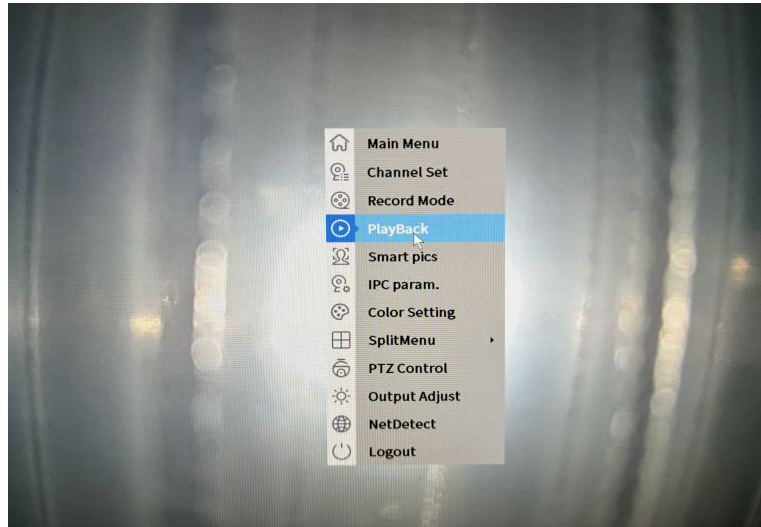

Select the day or days you want to search

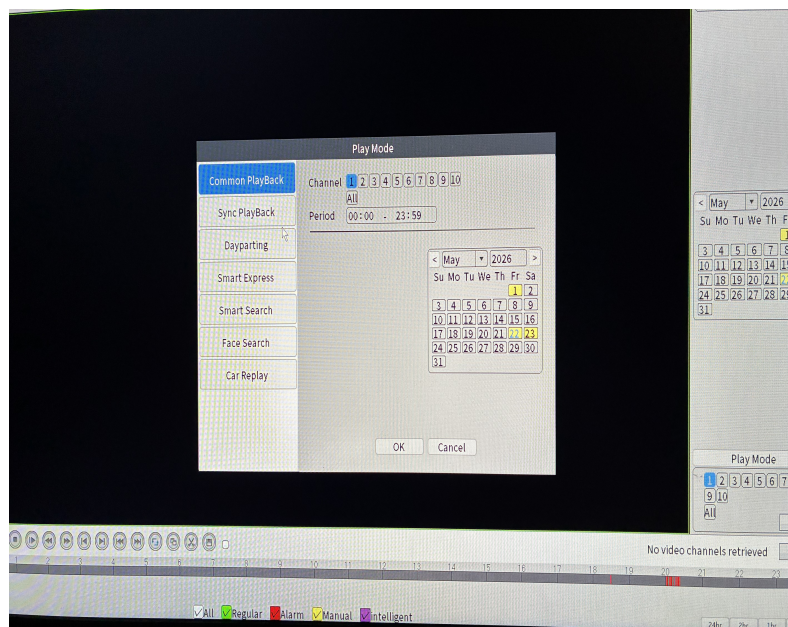


OR select **SMART EXPRESS**

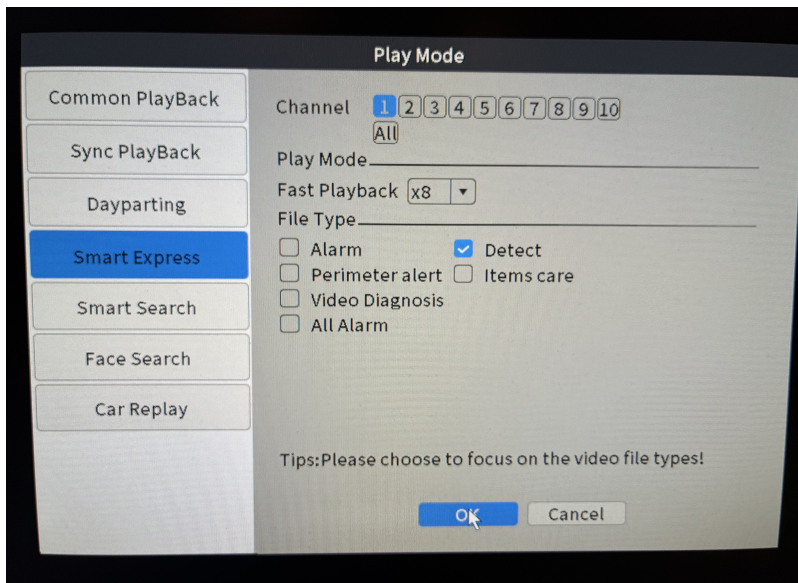

Make sure Channel 1 is selected

Under **FILE TYPE** check **DETECT**

At the bottom of the display will be colored bars on the time line representing recordings.

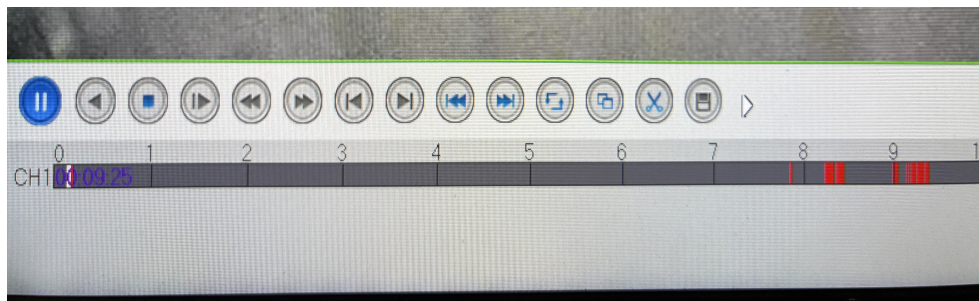


Use the normal **start, stop, fast forward** controls to view them

TO EXPORT RECORDINGS

Insert USB memory into the open USB port on the back of the recorder. Allow a few moments for it to be recognized by the system

Use the **SCISSOR icon** to mark the beginning and ending point of the recording you want to export.

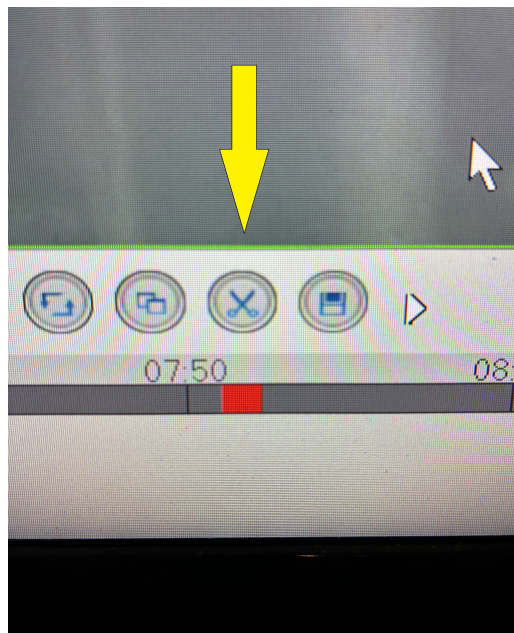

Click **BACKUP** icon

Your USB memory will be listed

Select **BACKUP**

The file you want to created will be listed by date and time

Select **START**

Click **OK**

Right click on the main display to leave the **BACK UP** dialog box

To leave the **PLAY BACK** screen, right click on the main display and select **UPWINDOW**