

AR Dry-Fire Laser Magazine

1. Insure the fire arm is unloaded, the hammer is cocked and the safety is on.
2. Remove the Rear Take-down Pin and remove the bolt carrier group and charging handle from the fire arm. (Place them in a safe place as to not damage them)
3. Remove the Reset Button and Insert the training magazine in from the top of the magazine well, you will have to depress the magazine release button to do this. (**Note:** The upper will have to be opened 90 degrees to perform the step.)
4. Reinstall the Reset button in the magazine. Place the laser cartridge in the chamber, seat it fully in the chamber with your finger. (**Do not force.**)
5. Carefully close the upper to the lower and insert the rear take down pin.
6. Dry-fire using normal trigger pull, depress the Trigger Reset Button to prepare for the next shot.
7. Observe laser dot on target. If nothing appears, see troubleshooting. Refer to Section 12: Adjusting the Striker

Note: Due to the “O”Rings, the Laser Cartridge may seat differently in your firearm. Therefore it may be necessary to Adjust the Striker screw before use. Refer to Section 12.

Quick Start Card

AR Dry-Fire Laser Magazine

1. Insure the fire arm is unloaded, the hammer is cocked and the safety is on.
2. Remove the Rear Take-down Pin and remove the bolt carrier group and charging handle from the fire arm. (Place them in a safe place as to not damage them)
3. Remove the Reset Button and Insert the training magazine in from the top of the magazine well, you will have to depress the magazine release button to do this. (**Note:** The upper will have to be opened 90 degrees to perform the step.)
4. Reinstall the Reset button in the magazine. Place the laser cartridge in the chamber, seat it fully in the chamber with your finger. (**Do not force.**)
5. Carefully close the upper to the lower and insert the rear take down pin.
6. Dry-fire using normal trigger pull, depress the Trigger Reset Button to prepare for the next shot.
7. Observe laser dot on target. If nothing appears, see troubleshooting. Refer to Section 12: Adjusting the Striker.

Note: Due to the “O”Rings, the Laser Cartridge may seat differently in your firearm. Therefore it may be necessary to Adjust the Striker screw before use. Refer to Section 12

Quick Start Card