

# USER MANUAL



**PART NUMBER:  
99216**

**Power Cannon Foam Attachment**

**English (V1.1)**

## Contents:

- Power Cannon Nozzle
- 32 fl Oz. Bottle
- 1/4" Quick-Connect Adapter
- Suction Line



## Recommended Cleaning Solution:

- Dakota Wash HD SUPER Concentrate
- 1 US Gallon
- Part No. 99221
- Safe for use on all surfaces



## Recommended Pressure Washer Specifications:

Pressure..... 1000 - 3200 psi  
Flow Rate..... 1.4 - 4.0 gal/min  
5.30 - 15.0 L/min  
Temperature..... Not to exceed 140 degrees F  
Not to exceed 60 degrees C



A DIVISION OF

**D**akota AG  
Innovations, LLC

**Need Support? Contact us:**

**E-mail [info@dakotaaginnovations.com](mailto:info@dakotaaginnovations.com)**

**Call 1-888-996-7801**

**Visit [www.POWEROFFOAM.com](http://www.POWEROFFOAM.com)**

## Assembly:

- 1) Remove contents from package.
- 2) Thread the 1/4" quick-connect adapter into the back of the Power Cannon nozzle and tighten (use thread tape to prevent leaks).
- 3) Attach suction line to the bottom of the Power Cannon nozzle.
- 4) Thread the 32 fl. Oz. Bottle into the bottom of the Power Cannon Nozzle.

## Operation:

- 1) Fill 32 fl. Oz. Bottle with desired amount of Dakota Wash HD Super Concentrate.
- 2) Make sure the pressure washer is turned off.
- 3) Remove quick-connect sprayer tip from the end of the pressure washer wand.
- 4) Insert the quick-connect end of the Power Cannon nozzle into the pressure washer wand. Make sure it is locked in.
- 5) Turn on pressure washer and apply the Dakota Wash HD Super Concentrate foam to desired surface.
  - i) The Spray Pattern and Foam Dial may need to be adjusted to achieve the proper consistency of foam (the ideal consistency is similar to that of shaving cream).
  - ii) For best results, we recommend rotating the black Foam Dial Adjustment on the top of the Power Cannon all the way to (-), then back off until desired consistency is achieved.

## Operation (Cont'd):

- 6) Allow a few minutes for the foam to soften grease and grime buildup.
- 7) Remove quick-connect Power Cannon from the end of the pressure washer wand.
- 8) Insert the quick-connect sprayer tip into the pressure washer wand. Make sure it is locked in.
- 9) High pressure rinse.
- 10) Repeat, if necessary.

## Spray Pattern Adjustment:

With the Power Cannon nozzle pointed in a safe direction away from you,

- a) Rotate black nozzle COUNTER-CLOCKWISE for a wide fan spray pattern for maximum coverage. (Recommended)
- b) Rotate black nozzle CLOCKWISE for a narrow, stream spray pattern. (NOT recommended)

## Foam Dial Adjustment:

With the Power Cannon nozzle pointed in a safe direction away from you,

- a) Rotate black dial (needle valve) on top to (-) for DRY foam.
- b) Rotate black dial (needle valve) on top to (+) for more water and less foam. (NOT recommended)