

Club Car®

2004
PRECEDENT



**Illustrated
Parts List**



USING THE ILLUSTRATED PARTS LIST

WARNING

- **This manual is to be used only for identification and ordering of service parts. Be sure to read and use the maintenance and service manual before attempting any vehicle repairs.**

This manual covers all 2004 Club Car® Precedent® Professional and Champion vehicles.

The manual is divided into 16 sections. Sections 1 through 5 pertain to both gasoline and electric vehicles, sections 6 through 11 pertain to gasoline vehicles only, sections 12 through 15 pertain to electric vehicles only, and section 16 pertains to tools that are used on all Club Car products. Note that there are two or three flags on the outside edge of each page. The first flag contains the section number of which that page is a part. The other flag (or flags) contains either the letter G or E, signifying that the page pertains to either the gasoline or electric vehicle only, or to both the gasoline and electric vehicles.

Use the Table of Contents to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section numbers, and under them, the individual page titles and numbers to be found in that section. The index can be used to find specific parts and assemblies. The index is divided into numerical and alphabetical listings with the page numbers in italic text.

There is a two-page spread for each individual page title in the Table of Contents. On the left-hand page is an illustration showing the parts in their relative positions; the parts are each tagged with an item number in a balloon. The right-hand page is the parts list page, and gives the page title at the top, then the item numbers (corresponding to the numbers on the illustration), part descriptions, and quantity of parts used. Some item numbers have more than one part number because several configurations of a component are represented together on one spread.

Note that a part description may be indented. This indentation corresponds to a parts assembly level indicated by the numbers 1, 2, 3, and 4 at the top left corner of the parts description area of the parts list page. A part that is indented to *level 2* is a component of the *level 1* part (assembly) that it is listed under. A *level 3* part is a component of the *level 2* part that it is listed under, and a *level 4* part is a component of the *level 3* part preceding it. In each case, the part quantity given for a level 2, 3, or 4 part *is the quantity used per next higher level assembly of which it is a component*. A part that is not indented is a *level 1* part. This means that the quantity given is the quantity used per the portion of the vehicle illustrated on that particular spread.

HOW TO ORDER PARTS

Replacement parts and accessories can be obtained from our network of authorized dealers and distributors. You can obtain the name and phone number of your closest Club Car contact by visiting our web site at www.clubcar.com and clicking on the "*Distributor Search*" link or by calling toll-free our Service Parts department at (800) 872-2246 or (706) 863-3000, extension 3887.



P. O. Box 204658
Augusta, Georgia 30917-4658 USA
Telephone 706-863-3000
Service Parts Fax 706-855-7413
www.clubcar.com

NOTE: *This illustrated parts list represents the most current information at the time of publication. Club Car, Inc. is continually working to further improve its vehicles and other products. These improvements may affect the parts used to service the vehicle. Any modification and/or significant change in specifications will be forwarded to all Club Car and Carryall distributors/dealers and will, when applicable, appear in future editions of this illustrated parts list.*

Club Car, Inc. reserves the right to change specifications and designs at any time without notice and without the obligation of making changes to units previously sold.

Copyright © 2004 Club Car, Inc.
Club Car, Precedent, and Surlyn
are registered trademarks of Club Car, inc.
This manual effective December 23, 2003.

CONTENTS

SECTION 1 – BODY AND TRIM

Front Body	1-3
Seat with Hip Restraints	1-5
Backrest and Structural Accessory Module (SAM)	1-7
Rear Body	1-9
Front Bumper, Brackets	1-11
Floor Mat, Retainer, and Kick Plate	1-13
Dash	1-15
Canopy	1-17

SECTION 2 – WHEELS AND TIRES

Wheels and Tires	2-3
------------------------	-----

SECTION 3 – DECALS

Decals – Gasoline Vehicle	3-3
Decals – Electric Vehicle	3-5

SECTION 4 – BRAKES AND PEDAL GROUP ASSEMBLIES

Brake Assembly	4-3
Pedal Group Connections	4-5
Pedal Group Components	4-7

SECTION 5 – STEERING, FRONT AND REAR SUSPENSION

Steering Column	5-3
Steering Gear Assembly	5-5
Front Suspension, Upper	5-7
Front Suspension, Lower	5-9
Rear Suspension	5-11

SECTION 6 – ELECTRICAL SYSTEM – GASOLINE VEHICLE

Forward/Reverse Shifter Assembly – Gasoline Vehicle	6-3
Electrical Components, Front Body – Gasoline Vehicle	6-5
Starter/Generator Assembly	6-7
Starter/Generator Mounting	6-9
Battery – Gasoline Vehicle	6-11
Wiring – Gasoline Vehicle	6-13

CONTENTS

SECTION 7 – FE290 ENGINE

FE290 Engine – Shrouds and Brackets	7-3
FE290 Engine – Ignition Components and Flywheel	7-5
FE290 Engine – Oil Circulation	7-7
FE290 Engine – Cylinder Head	7-9
FE290 Engine – Crankcase, Camshaft and Oil Sensor	7-11
FE290 Engine – Crankcase and Crankshaft	7-13
Engine Mounting	7-15

SECTION 8 – FUEL, INTAKE, AND GOVERNOR SYSTEMS

Fuel System	8-3
Carburetor Assembly	8-5
Carburetor Installation	8-7
Governor and Accelerator Cables	8-9
Choke and Air Box Assembly	8-11

SECTION 9 – EXHAUST SYSTEM

Exhaust System	9-3
----------------------	-----

SECTION 10 – TORQUE CONVERTER

Drive Clutch	10-3
Driven Clutch	10-5

SECTION 11 – UNITIZED TRANSAXLE

Unitized Transaxle – Gear Cases and Brackets	11-3
Unitized Transaxle – F&R Transmission and Gear Reduction	11-5
Unitized Transaxle – Differential and Axles	11-7

SECTION 12 – ELECTRICAL SYSTEM – ELECTRIC VEHICLE

Electrical Components, Front Body – Electric Vehicle	12-3
Wiring – IQ System Vehicle	12-5
Forward/Reverse Switch and Tow/Run Switch – IQ System Vehicle	12-7
Batteries and Charger Receptacle – IQ System Vehicle	12-9
Computer, Controller, and Solenoid – IQ System Vehicle	12-11

SECTION 13 – ELECTRIC MOTOR

Motor – IQ System Vehicle	13-3
---------------------------------	------

CONTENTS

SECTION 14 – TRANSAXLE – ELECTRIC VEHICLE

Transaxle, Type G – Electric Vehicle	14-3
Transaxle, Type K – Electric Vehicle	14-5

SECTION 15 – BATTERY CHARGER

PowerDrive Battery Charger, Domestic	15-3
PowerDrive 2 Battery Charger, Domestic	15-5
PowerDrive Battery Charger, Export	15-7
PowerDrive Battery Charger, European	15-9

SECTION 16 – MAINTENANCE AND SERVICE TOOLS


Maintenance and Service Tools	16-3
Maintenance and Service Tools, Continued	16-5
Maintenance and Service Tools, Continued	16-7

BODY AND TRIM

1


G

E

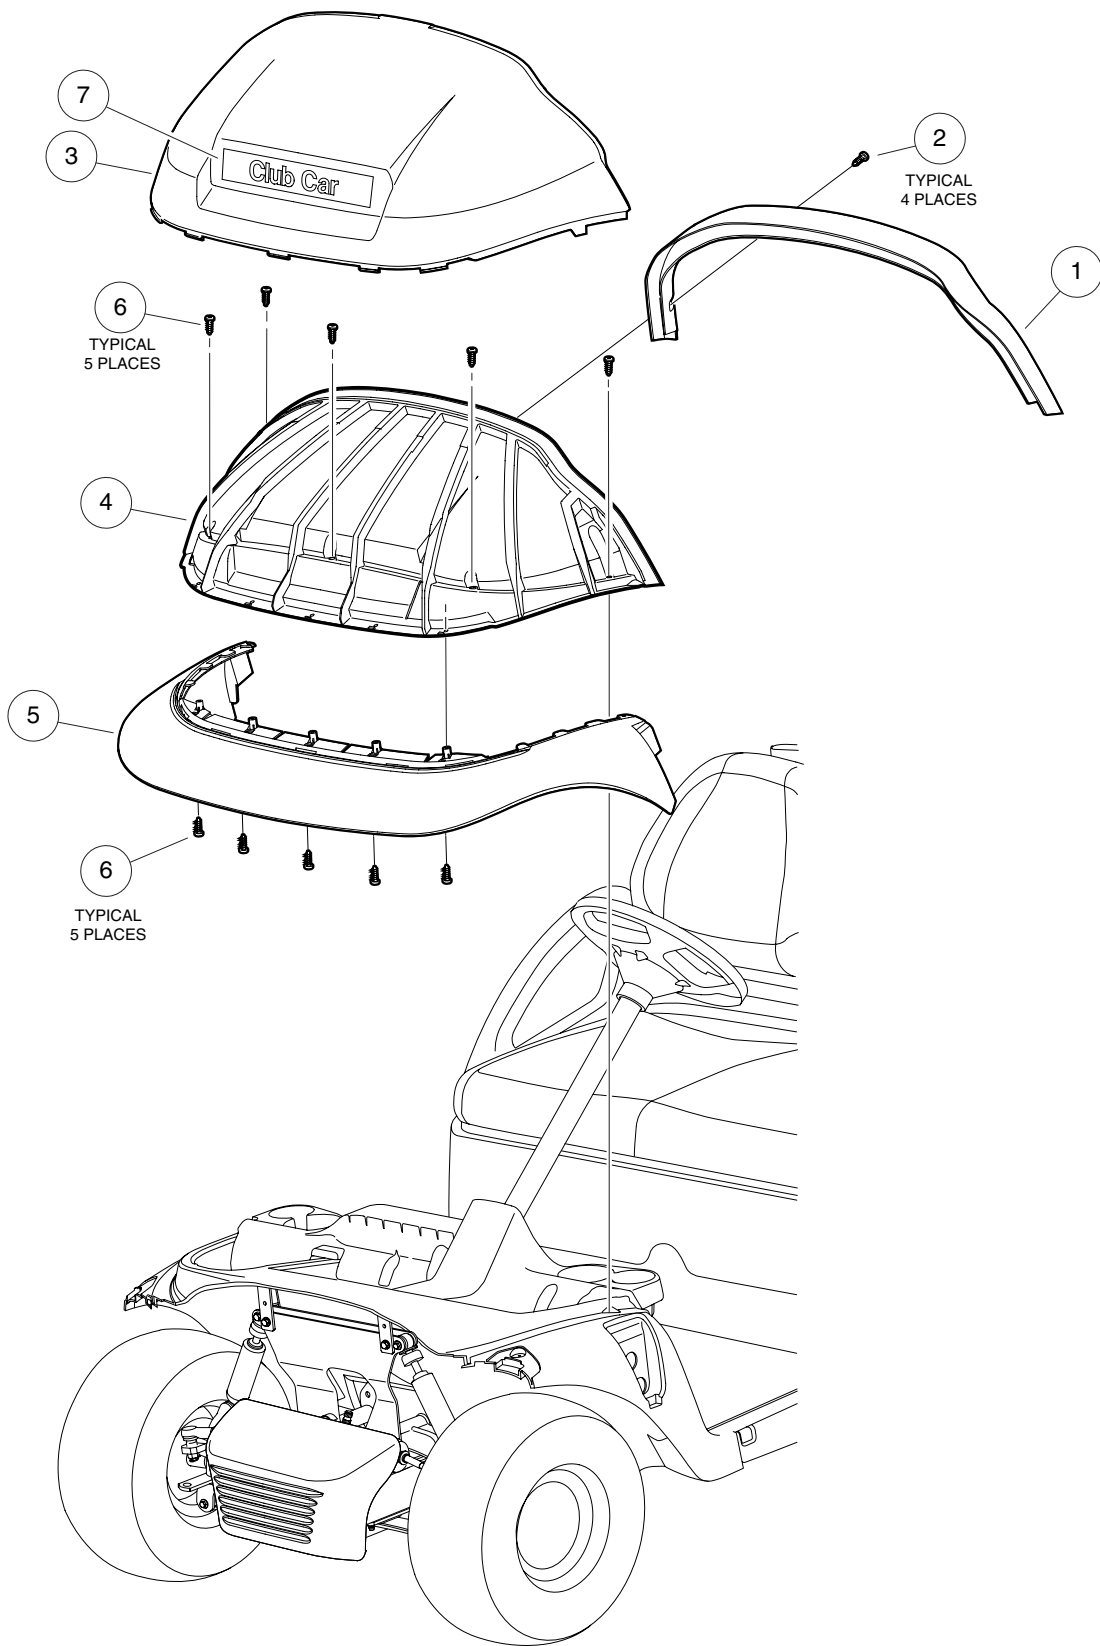


FRONT BODY

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	1 G E
		1 2 3 4			
1	102502501	Cap, Brow	1	1	
2	102296020	Screw, M6 x 20, Torx, Pan-Head	4	4	
3	102502401	Panel, Front, White	1	1	
3	102502402	Panel, Front, Beige	1	1	
3	102502404	Panel, Front, Gray	1	1	
3	102502405	Panel, Front, Red	1	1	
3	102502406	Panel, Front, Burgundy	1	1	
3	102502407	Panel, Front, Green	1	1	
3	102502408	Panel, Front, Blue	1	1	
3	102502409	Panel, Front, Black	1	1	
4	102501501	Brow	1	1	
5	102534401	Fascia	1	1	
6	102296020	Screw, Torx Pan-Head, M6-20	10	10	
7	102502601	Nameplate	1	1	

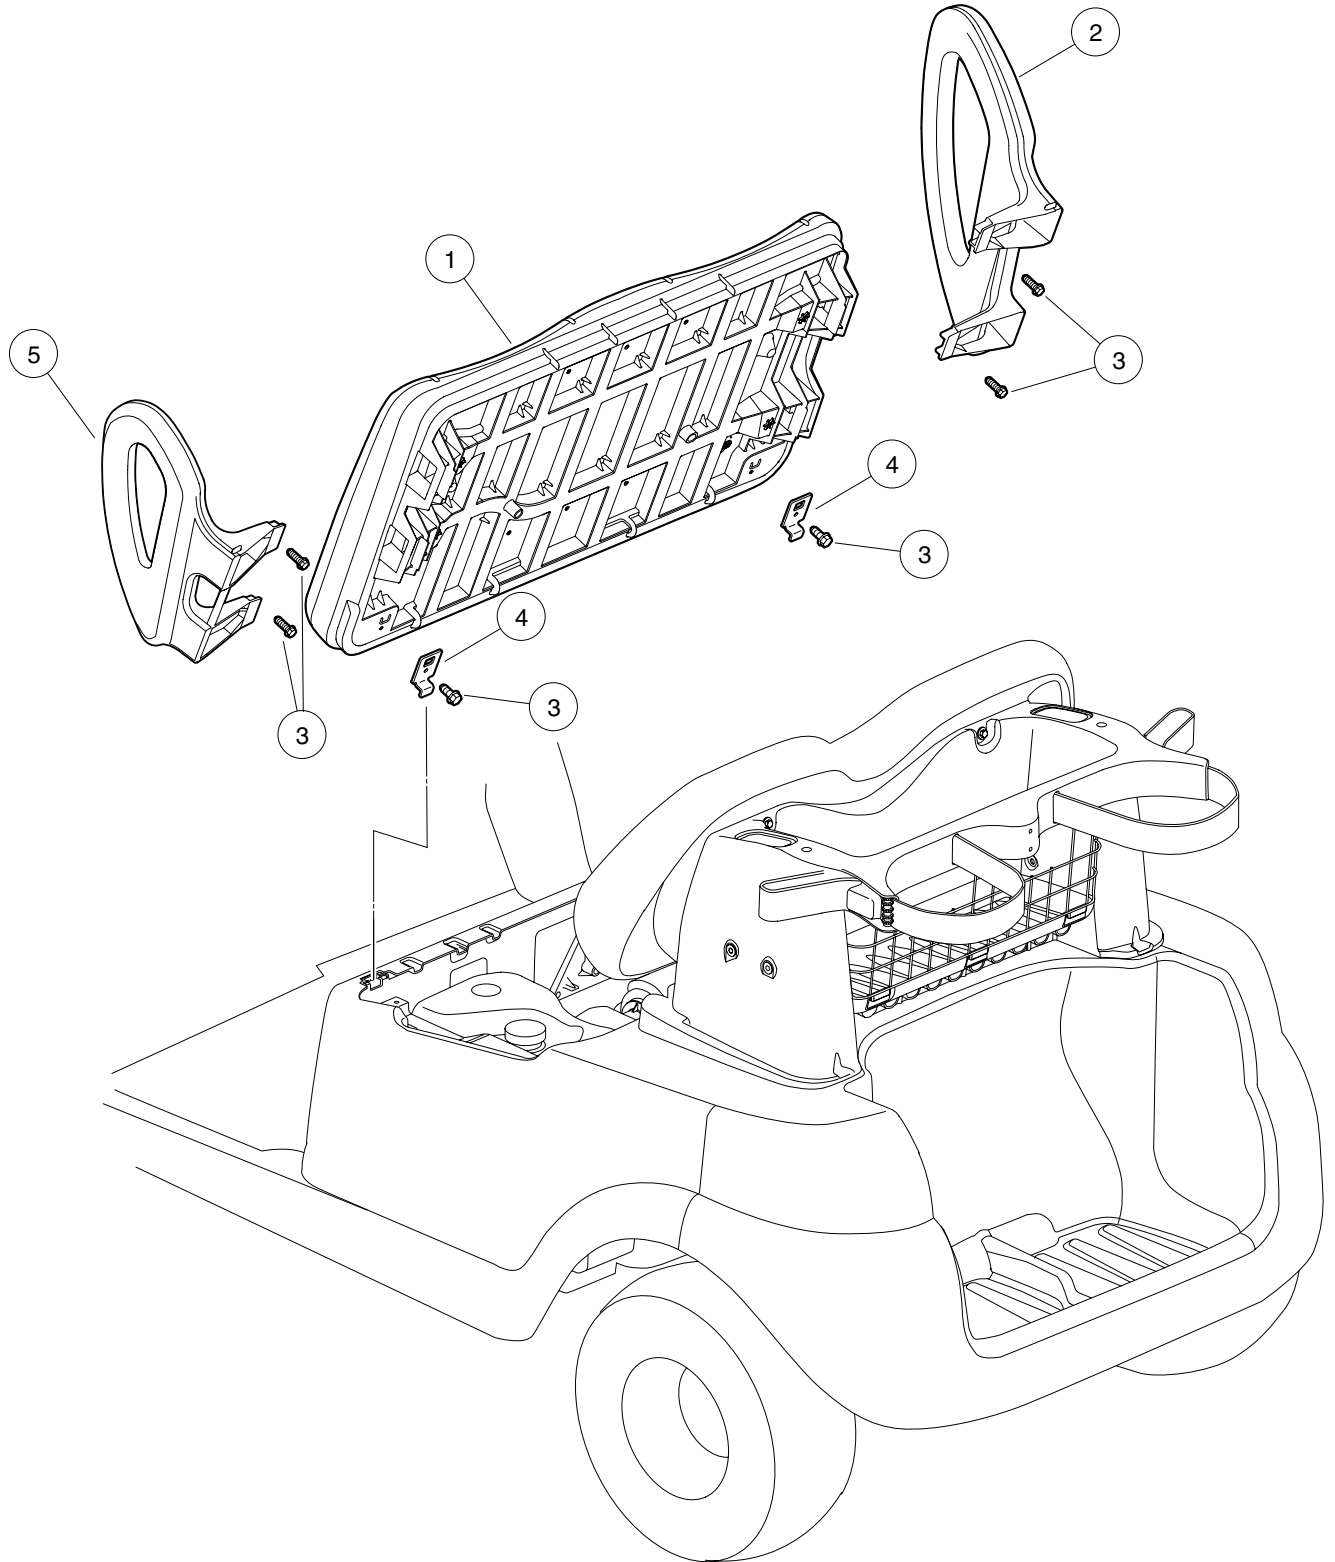


SEAT WITH HIP RESTRAINTS

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	1 G E
		1 2 3 4			
1	102552501	Seat, Beige	1	1	
1	102552502	Seat, White	1	1	
2	102562801	Restraint, Hip, Passenger-Side	1	1	
3	102562901	Screw	6	6	
4	102554601	Plate, Hinge	2	2	
5	102562701	Restraint, Hip, Driver-Side	1	1	

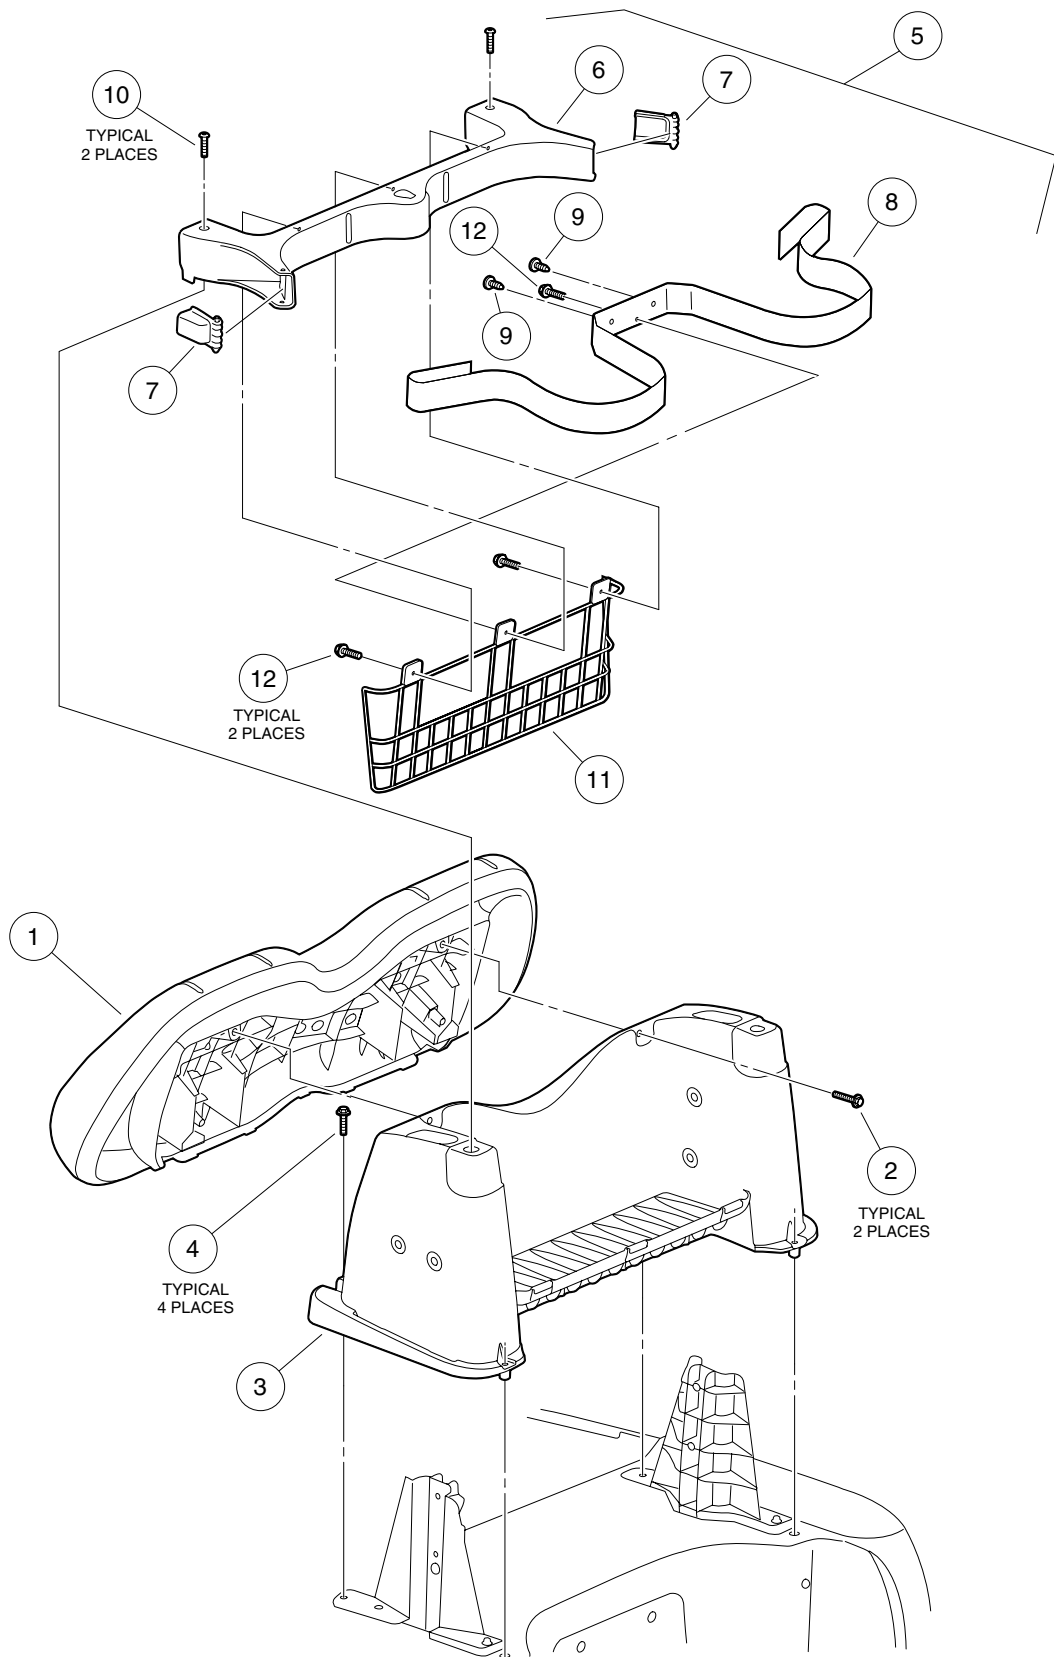


BACKREST AND STRUCTURAL ACCESSORY MODULE (SAM)

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	1 G E
		1 2 3 4			
1	102503201	Assembly, Backrest, Beige	1	1	
1	102503202	Assembly, Backrest, White	1	1	
2	102296530	Screw, SEMS, M6 x 1.0 x 30	2	2	
3	102579301	Module, Structural Accessory (SAM)	1	1	
4	102298240	Bolt, Flange-Head, M8 x 40	4	4	
5	102504001	Assembly, Bag Hoop (includes items 6 - 9)	1	1	
6	102504201	Hoop, Bag	1	1	
7	102517001	Buckle, Bag Strap	2	2	
8	102504301	Strap, Bag	1	1	
9	1010434	Barrel, Plastic	2	2	
10	102298020	Screw, Torx Pan-Head, K80 x 20	2	2	
11	102504501	Panel, SAM	1	1	
12	102297125	Screw, Thread-Forming SEMS, M6-1.0 x 25.4	3	3	

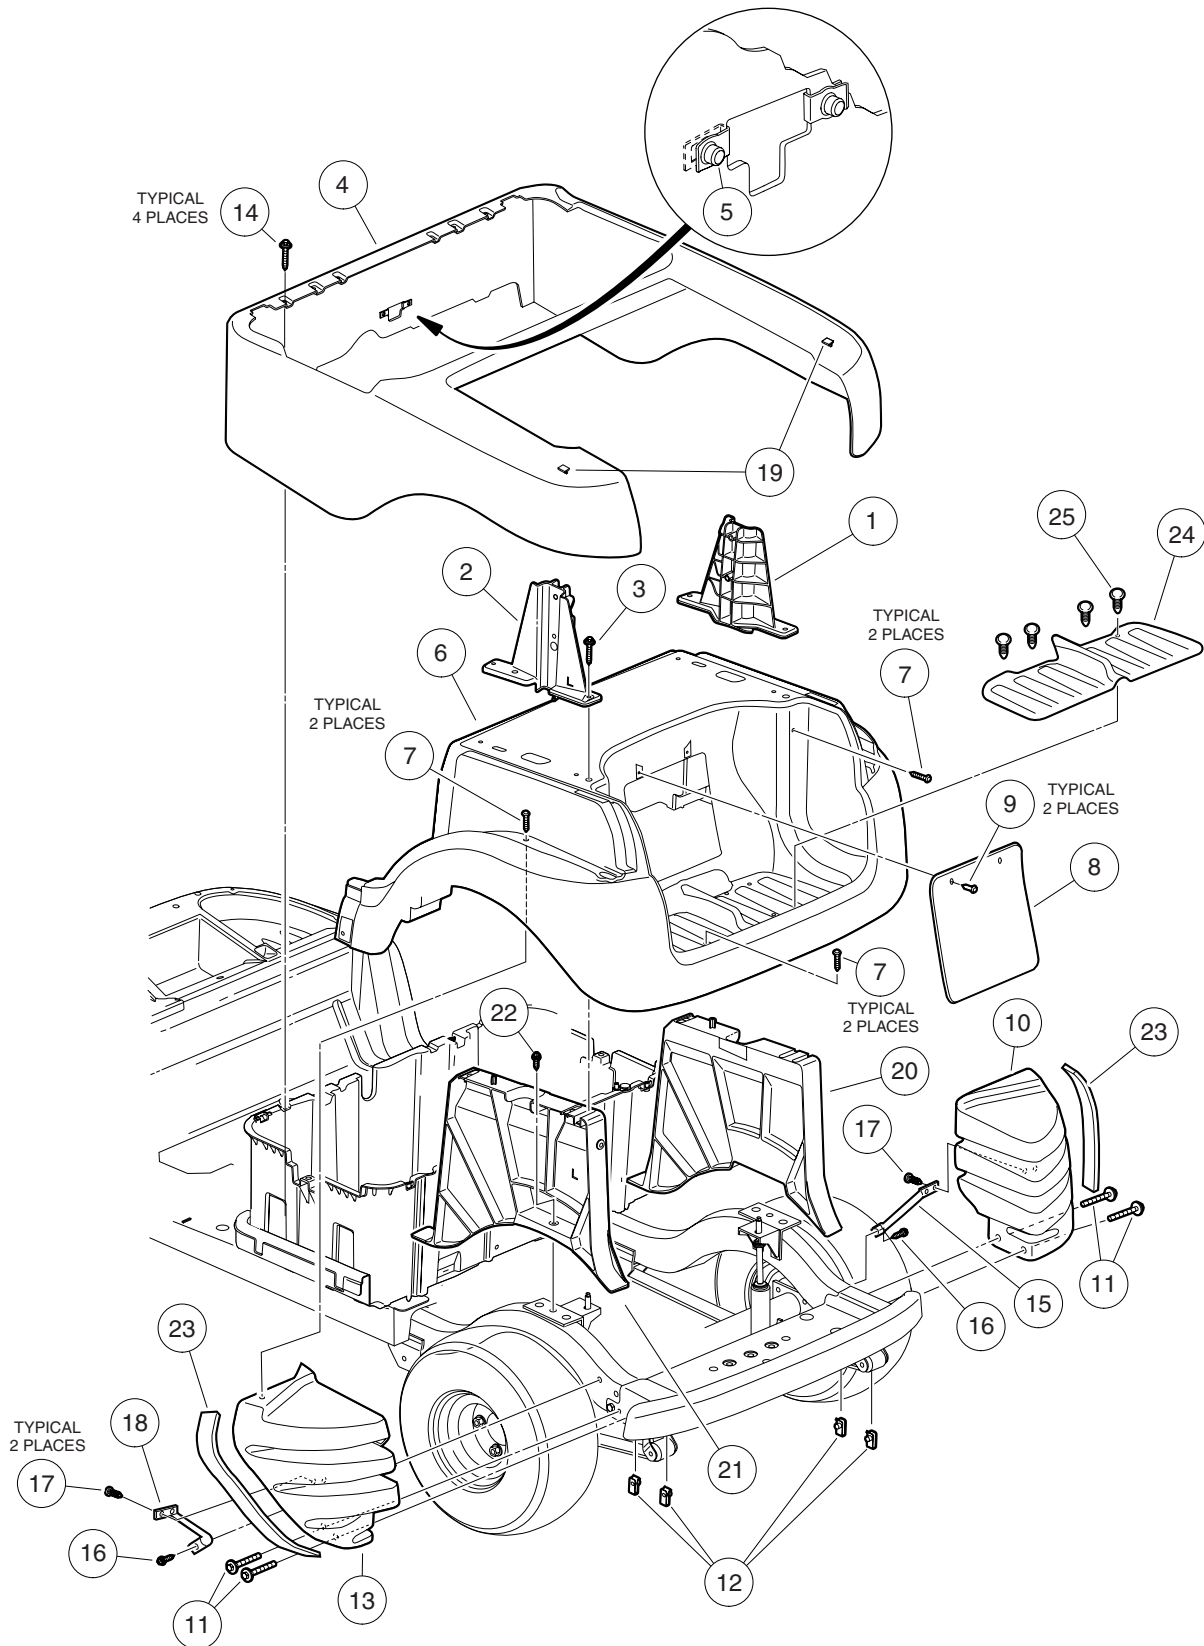


REAR BODY

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	1 G E
		1 2 3 4			
1	102503001	Bracket, Canopy Support, Passenger-Side	1	1	
2	102502901	Bracket, Canopy Support, Driver-Side	1	1	
3	102298240	Bolt, Flange Head, M8 x 40	2	2	
4	102502301	Panel, Rear Beauty, White (includes item 5)	1	1	
4	102502302	Panel, Rear Beauty, Beige (includes item 5)	1	1	
4	102502304	Panel, Rear Beauty, Gray (includes item 5)	1	1	
4	102502305	Panel, Rear Beauty, Red (includes item 5)	1	1	
4	102502306	Panel, Rear Beauty, Burgundy (includes item 5)	1	1	
4	102502307	Panel, Rear Beauty, Green (includes item 5)	1	1	
4	102502308	Panel, Rear Beauty, Blue (includes item 5)	1	1	
4	102502309	Panel, Rear Beauty, Black (includes item 5)	1	1	
5	102296601	U-Nut, M6 - 1.0	2	2	
6	102279101	Underbody, Rear	1	1	
7	102298030	Screw, Torx Pan-Head, K80 x 30	6	6	
8	102501401	Panel, Access	1	1	
9	102025701	Screw, Tufloc	2	2	
10	102545602	Liner, Rear Underbody, Passenger-Side	1	1	
11	102298580	Bolt, SEMS, M8 - 1.25 x 80,	4	4	
12	102298601	J-Clip, M8 x 1.25	4	4	
13	102545601	Liner, Rear Underbody, Driver-Side	1	1	
14	102295830	Screw, Torx Square Cone Washer, K60 x 30	4	4	
15	102560102	Support, Liner, Passenger-Side	1	1	
16	1010545	Screw, 1/4 Hex-Washer Head, Type AB	2	2	
17	102296020	Screw, Torx Pan-Head, M6 x 20	4	4	
18	102560101	Support, Liner, Driver-Side.....	1	1	
19	102292701	Clip, Body	2	2	
20	102500601	Support, Rear Underbody, Passenger-Side	1	1	
21	102500501	Support, Rear Underbody, Driver-Side	1	1	
22	102298716	Taptite, M8-1.25 x 16	2	2	
23	102562101	Tape, Foam Black, 12-inch *	A/R	A/R	
24	102553901	Liner, Bagwell	1	1	
25	1010434	Barrel, Plastic	4	4	
		* Sold by the foot, 12 inches required per side			

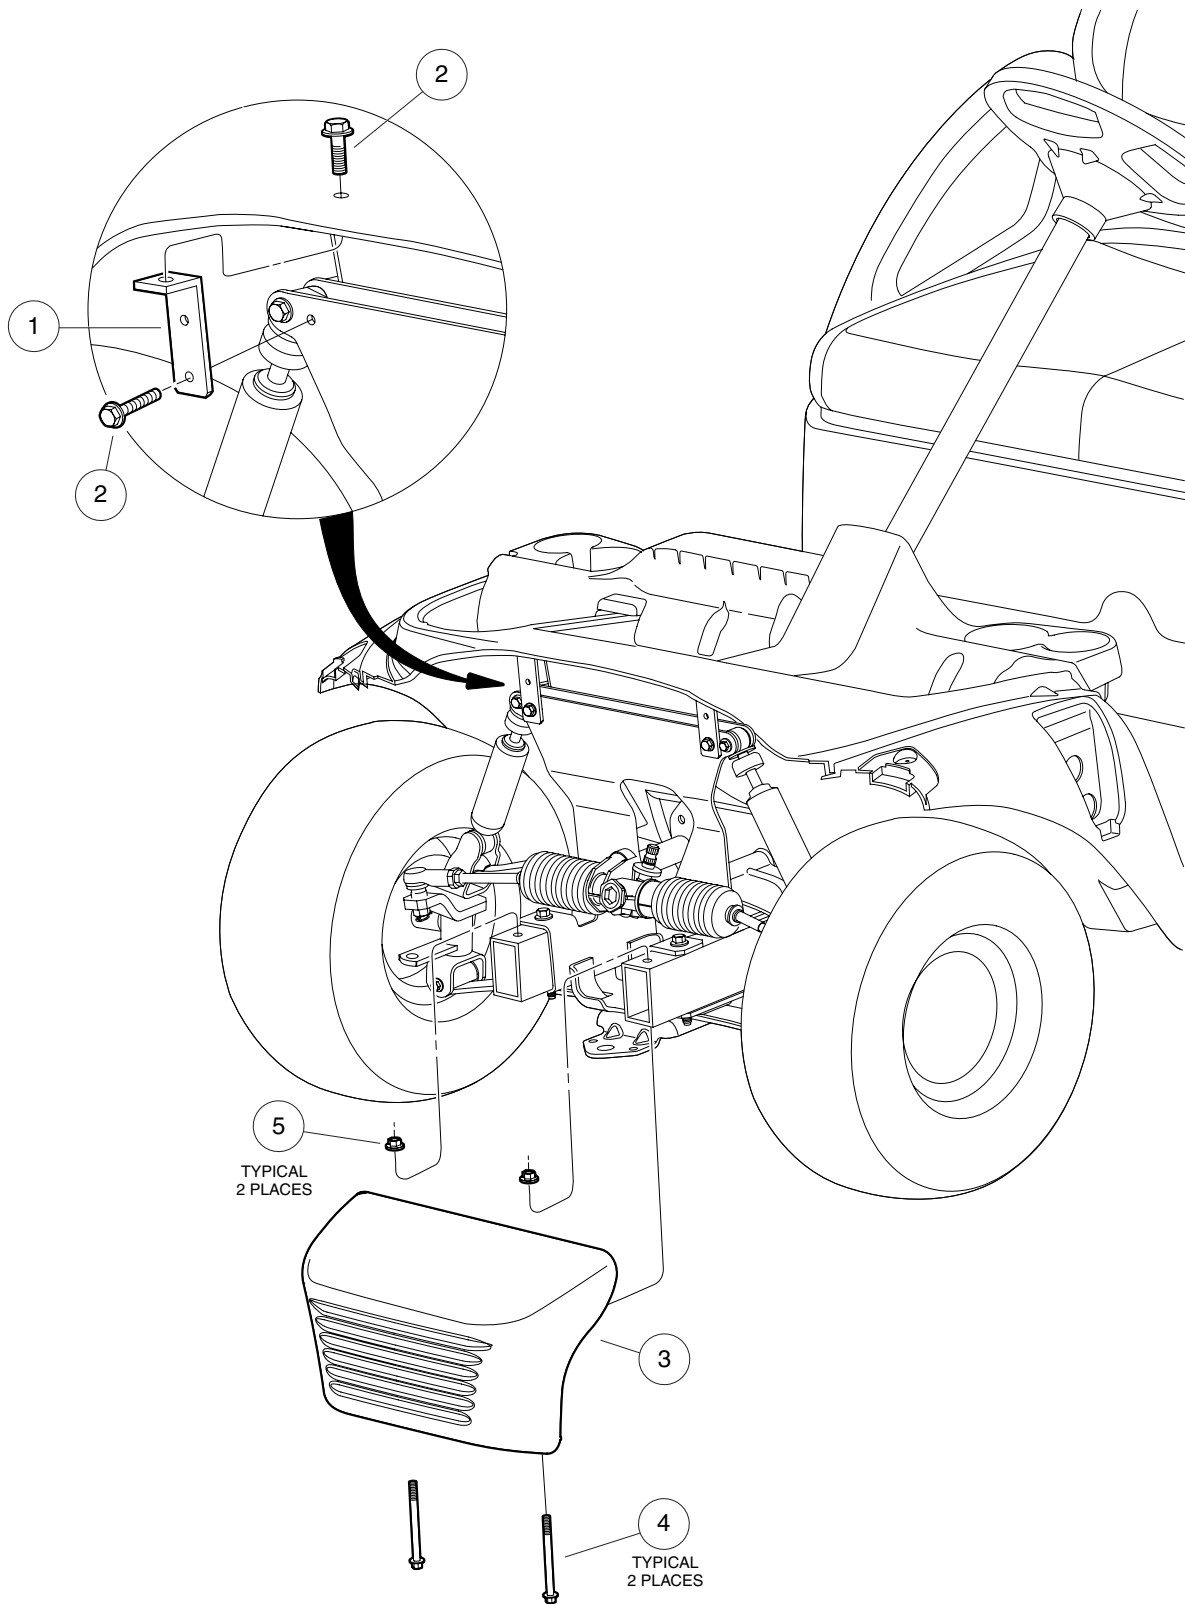


FRONT BUMPER, BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	1 G E
		1 2 3 4			
1	102521901	Bracket, Clamshell	2	2	
2	102298716	Tapite, M8-1.25 x 16	4	4	
3	102504601	Assembly, Bumper	1	1	
4	102534201	Bolt, Flat Head, M8 x 100	2	2	
5	102298401	Nut, Lock, M8	2	2	

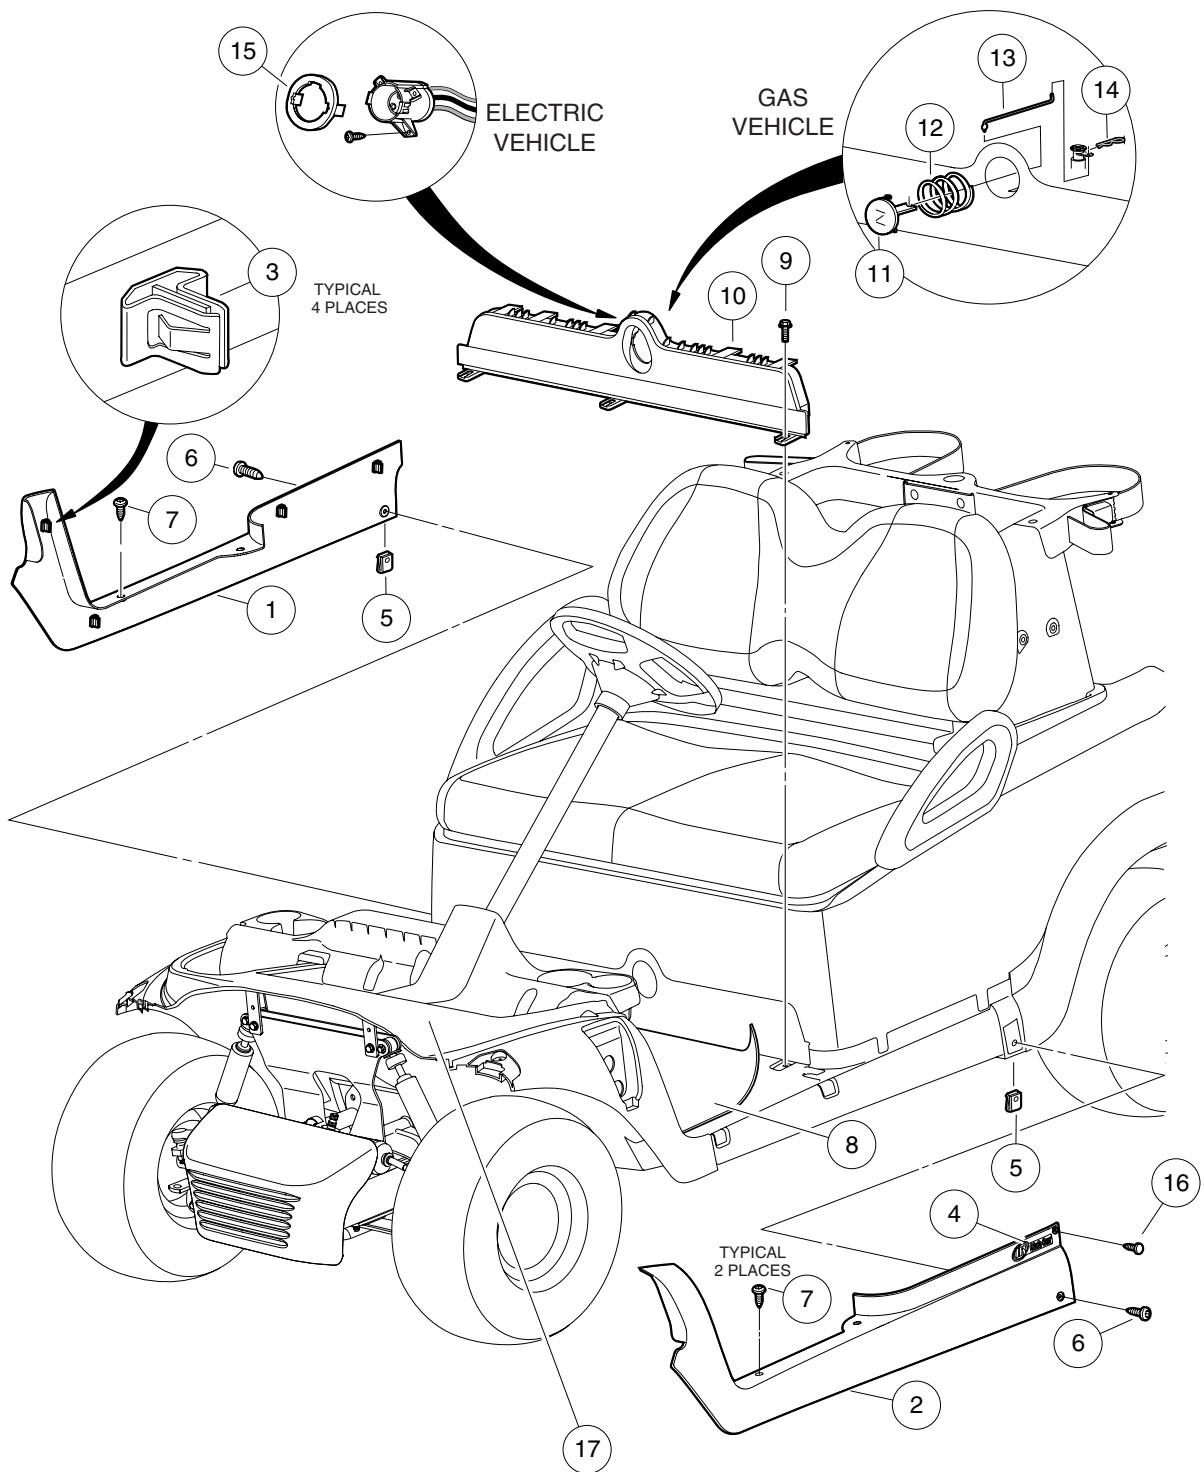


FLOOR MAT, RETAINER, AND KICK PLATE

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	1 G E
		1 2 3 4			
1	102302501	Assembly, Floor Mat Retainer, Passenger-Side (includes item 3)	1	1	
2	102302601	Assembly, Floor Mat Retainer, Driver-Side (includes item 3)	1	1	
3	102292701	Clip, Body Trim	4	4	
4	102523901	Decal, IR/Club Car	2	2	
5	102296601	U-Nut, Prevailing Torque, M6-1.0	2	2	
6	102296920	Screw, Torx Button-Head, SEMS, M6	2	2	
7	102298020	Screw, Torx Pan-Head, K80 x 20	4	4	
8	102504801	Mat, Floor	1	1	
9	102298030	Screw, Torx Pan-Head, K80 x 30	3	3	
10	102508201	Plate, Kick, Electric Vehicle		1	
10	102511701	Plate, Kick, Gasoline Vehicle (includes items 11 and 12)	1		
11	101811401	Lever, Choke	1		
12	101856201	Spring, Compression	1		
13	102514401	Rod, Choke Button	1		
14	1014413	Pin, Hair Spring, Cotter	1		
15	102516901	Trim, Socket		1	
16	102575801	Pin, Push, 6 mm	2	2	
17	102279401	Underbody, Front	1	1	

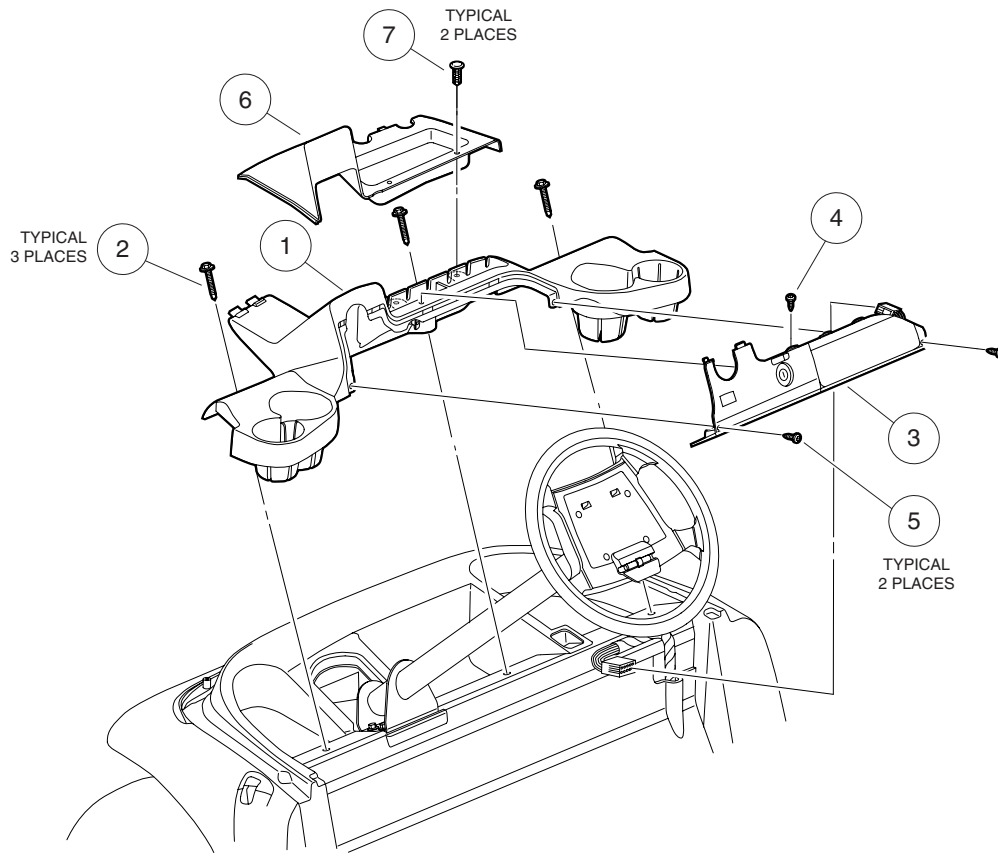

DASH

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	1
		1 2 3 4			
1	102523101	Assembly, Dash	1	1	G E
2	102292356	Screw, Hex Washer-Head, 1/4-20 x 56	3	3	
3	102522901	Instrument Panel (see page 6-5 and 12-3 for components)	1		
4	102557201	Screw, Pan-Head, #6-20	1	1	
5	102296819	Screw, Pan-Head, M6 x 19	2	2	
6	102380401	Tray, Dash	1	1	
7	1010434	Barrel, Plastic	2	2	

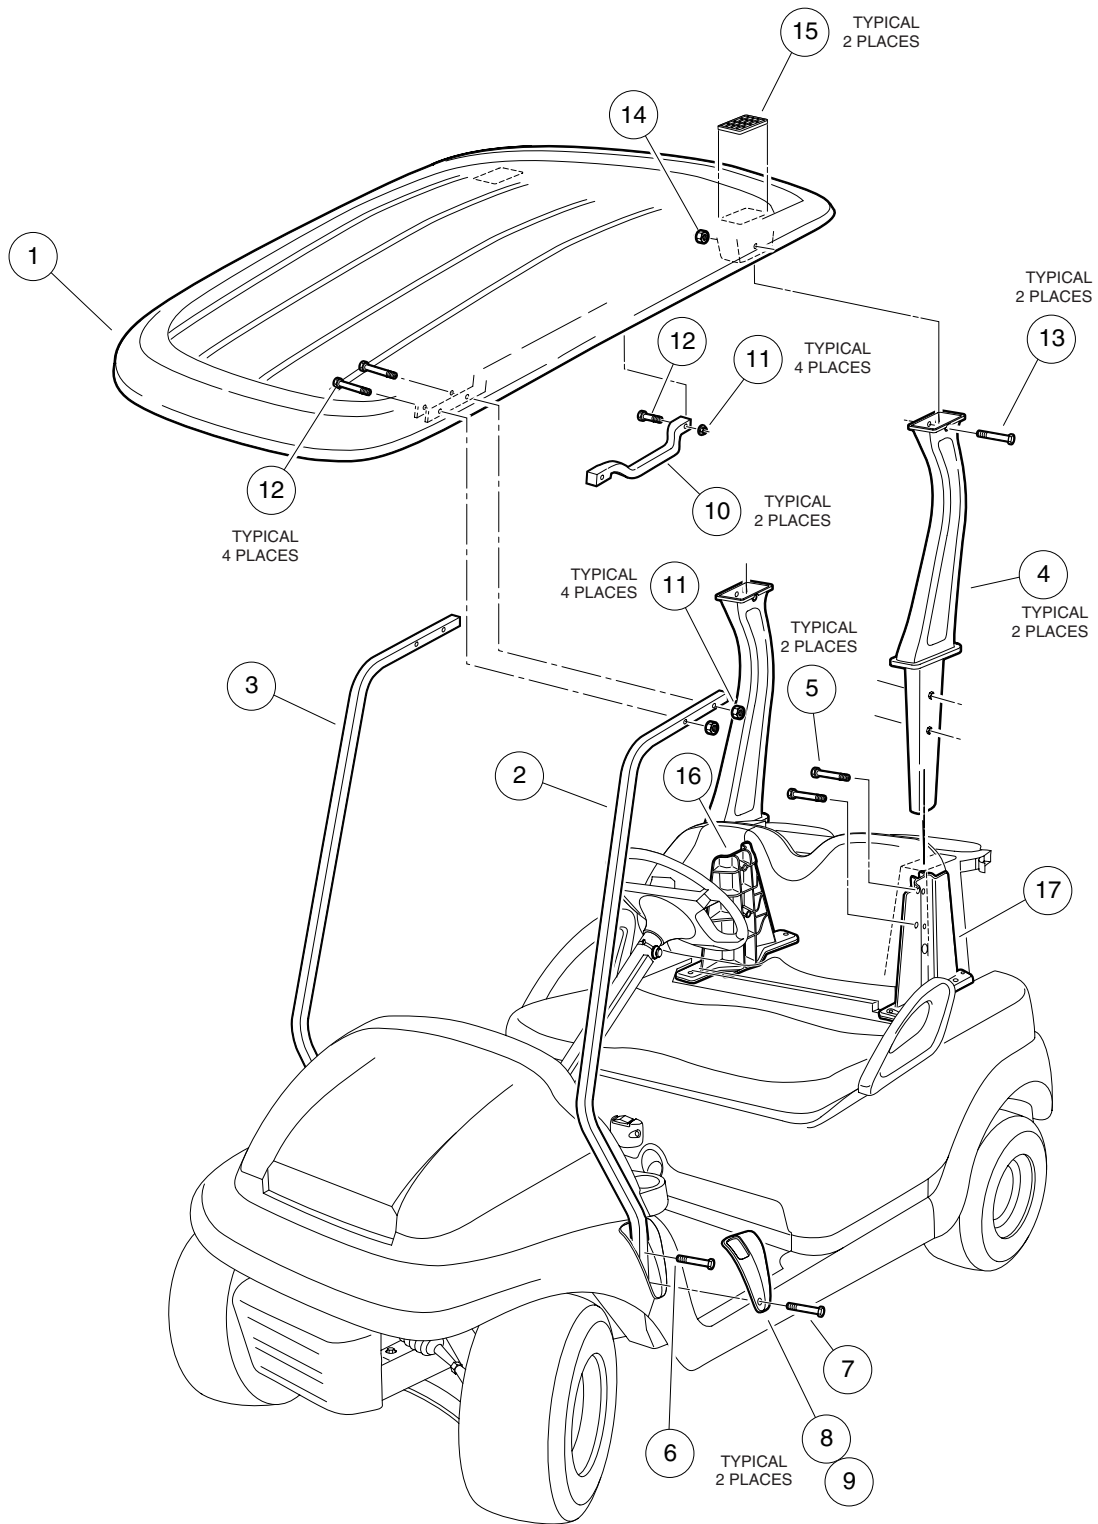

CANOPY

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	1 G E
		1 2 3 4			
	102520701	Kit, Canopy – White (includes items 1 - 15)	1	1	
	102520702	Kit, Canopy – Beige (includes items 1 - 15)	1	1	
1	102508901	Canopy, White	1	1	
1	102508902	Canopy, Beige	1	1	
2	102513301	Support, Front Canopy, Driver-Side	1	1	
3	102512401	Support, Front Canopy, Passenger-Side	1	1	
4	102513501	Support, Rear Canopy	2	2	
5	102299065	Bolt, Torx Button-Head, M8-1.25 x 65	4	4	
6	102299055	Bolt, Torx Button-Head, M8-1.25 x 55	4	4	
7	102544201	Screw, Hex-Head, M6	2	2	
8	102400001	Cover, Canopy Support, Driver-Side	1	1	
9	102400101	Cover, Canopy Support, Passenger-Side	1	1	
10	102511601	Handle, Canopy, White	2	2	
10	102511602	Handle, Canopy, Beige	2	2	
11	102296401	Nut, Lock, M6 x 1	8	8	
12	102296140	Bolt, Hex Flange-Head, M6 x 1 x 40	8	8	
13	102299360	Screw, Torx, M8-1.25 x 60	2	2	
14	102298401	Nut, Lock, M8	2	2	
15	102516301	Cover, Drain	2	2	
16	102503001	Bracket, Canopy Support, Passenger-Side	1	1	
17	102502901	Bracket, Canopy Support, Driver-Side	1	1	
18	102543901	Kit, Underbody Cover (for vehicles without a canopy)(not shown)	1	1	



WHEELS AND TIRES

2

G

E

2
G
E

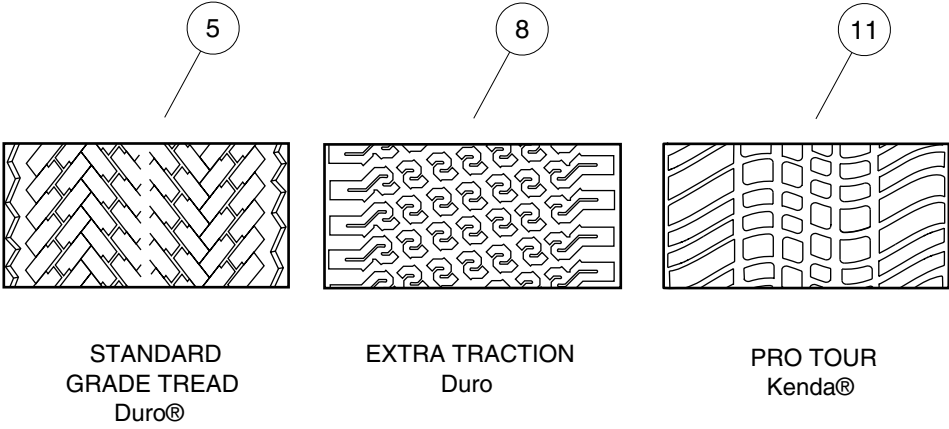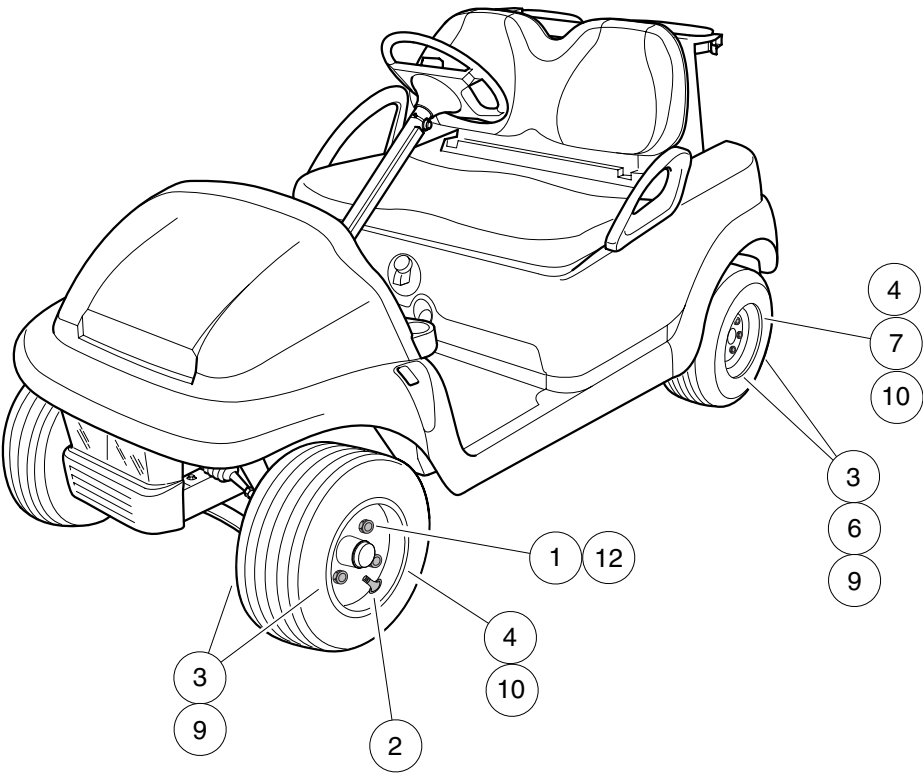

WHEELS AND TIRES

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	2 G E
		1 2 3 4			
1	1010984	Nut, Lug	16	16	
2	7310	Stem, Valve *	1	1	
		Professional vehicle:			
3	102522604	Assembly, Wheel and Standard Grade Tire (includes items 3 and 4)	4	4	
4	102557801	Wheel Rim – Gray	1	1	
5	102569304	Tire, Unmounted, Standard Grade Tread, 4-ply rated (18 x 8.50 - 8) (Duro®)	1	1	
6	102522605	Assembly, Wheel and Extra Traction Tire, Rear (includes items 7 and 8) ...	4	4	
7	102557801	Wheel Rim – Gray	1	1	
8	101769302	Tire, Unmounted, Extra Traction Grade Tread, 6-ply rated (18 x 8.50 - 8) (Duro)	1	1	
		Champion vehicle:			
9	102540601	Assembly, Wheel and Tire, Aluminum (includes items 10 and 11)	4	4	
10	102556801	Wheel Rim – Aluminum	1	1	
11	102556701	Tire, Unmounted, Pro Tour Tread (205-50 x 10) (Kenda®)	1	1	
12	102540701	Nut, Lug (Champion vehicles only)	16	16	
		* Note: Item 2 is a part of all wheel assemblies.			

2

G

E


DECALS

3

G

E

OFF ON

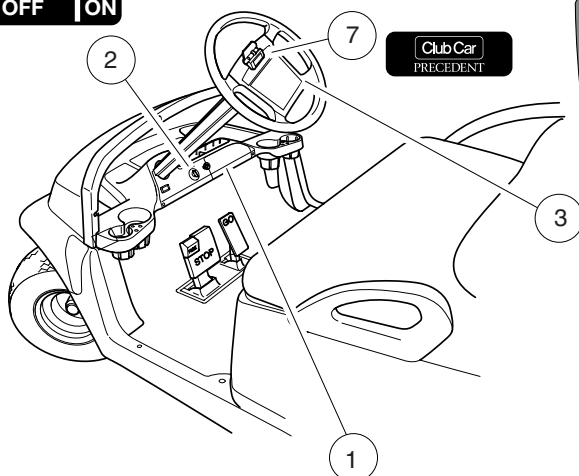

OPERATING INSTRUCTIONS

- Read owner's manual and safety warnings located on dash panel prior to driving.
- Study and understand controls.

TO OPERATE

- Turn wheels to desired direction and ensure path is clear.
- Turn key to ON position.
- While stopped, place shift lever in desired position:
F – Forward N – Neutral R – Reverse (Buzzer will sound)
- Park brake will release and vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and press brake pedal.

BEFORE LEAVING

- Press park brake pedal until it locks and holds vehicle.
- Place Forward/Reverse switch in NEUTRAL position.
- Turn key OFF and remove key when not in use.

CCI 102519201

WARNING

ROLLOVER OR FALLING OFF MAY CAUSE SERIOUS INJURY OR DEATH.

- Before using vehicle, read operating instructions.
- Do not start vehicle until all occupants are seated.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Use brakes to reduce speed when coasting downhill.
- Never operate under the influence of alcohol or drugs.
- For use by authorized persons in designated areas only.
- Remain seated while moving.
- Operate from driver side only.
- Never operate on public roads.
- Hold on to seat handle while moving.
- Two (2) persons per seat maximum.
- Never stand in front of or behind vehicle.
- Do not leave children unattended on vehicle.

CCI 102519301

FRAME GROUND
(NEAR BATTERY)

WARNING

BATTERY EXPLOSION / FIRE
CAN CAUSE SEVERE INJURY

- Do not contact positive (+) battery post or cable to frame.
- Disconnect negative (-) cable first.
- Negative (-) frame ground.

CCI 102517901

ROTATING PARTS AND
HOT MANIFOLD DECAL
(ON STARTER/GENERATOR,
ENGINE, AND TRANSAXLE)

WARNING

CAN CAUSE SEVERE INJURY





Rotating parts

HOT
manifold & muffler

KEEP CLEAR

CCI 101960501

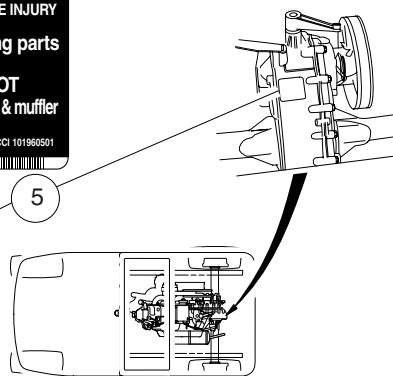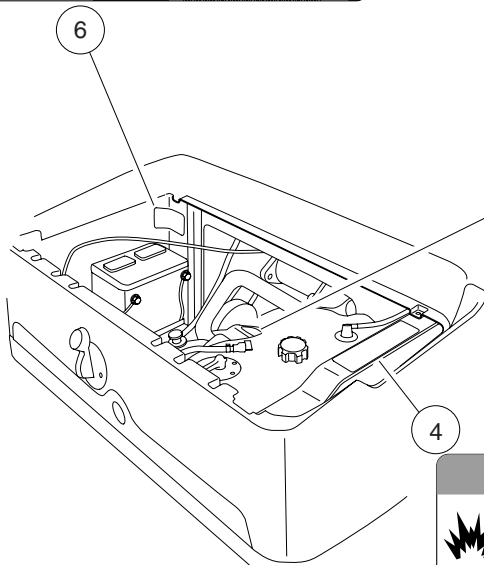

WARNING

GASOLINE EXPLOSION / FIRE CAN CAUSE SEVERE INJURY OR DEATH

- No sparks or open flame near fuel or fuel tank.
- No smoking near fuel or fuel tank.
- Stop engine and allow to cool before refueling.
- Turn fuel valve (—) on during operation.
- Turn fuel valve (—) off during storage or transport.



EXCESSIVE SPEED CAN CAUSE SEVERE INJURY OR DEATH


- Do not tamper with engine governor adjustment.

CCI 102517801

DECALS – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	3 G E
		1 2 3 4			
1	102519301	Decal, Driver/Passenger Warning	1		
2	101825101	Decal, Key Switch	1		
3	102519201	Decal, Operating Instructions (Professional vehicle – shown)	1		
3	102538101	Decal, Operating Instructions (Champion vehicle with comfort grip)	1		
4	102517801	Decal, Gasoline Warning	1		
5	101960501	Decal, Rotating Parts and Hot Manifold Warning	2		
6	102517901	Decal, Frame Ground and Governor Warning	1		
7	102540901	Decal, Club Car Clip	1		

OFF | ON

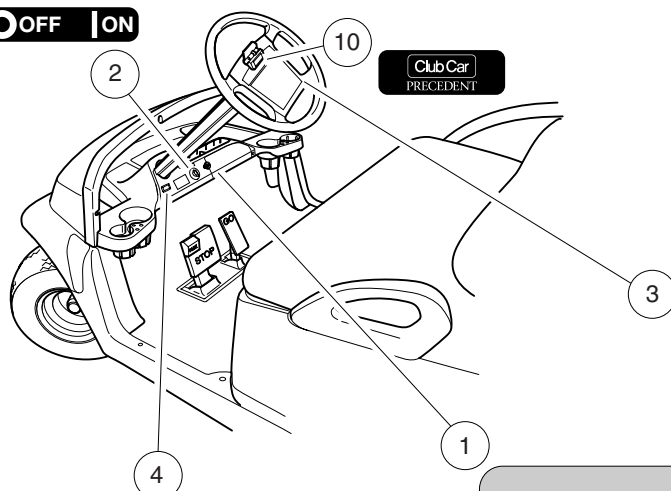

PRIVATE SPEED DECAL (IQ VEHICLES WITH PRIVATE SPEED OPTION)

IMPORTANT NOTICE

This vehicle does not conform to ANSI Z130.1 - "Standard for Golf Cars - Safety and Performance Requirements" because it is capable of speeds in excess of 15 miles per hour. Exercise caution.

CCI 10223701

OPERATING INSTRUCTIONS

- Read owner's manual and dash-mounted safety warnings prior to driving.
- Study and understand controls.

TO OPERATE

- Turn wheels to desired direction and ensure path is clear.
- Turn key to ON position.
- While stopped, place Forward/Reverse switch in desired position: F= Forward N= Neutral R= Reverse (Buzzer will sound)
- Park brake will release and vehicle will start moving when accelerator pedal is pressed.
- Slowly press accelerator pedal to increase speed.
- To stop, release accelerator pedal and press brake pedal.

BEFORE LEAVING

- Press park brake pedal until it locks and holds vehicle.
- Place Forward/Reverse switch in NEUTRAL position.
- Turn key OFF and remove key when not in use.

MOTOR BRAKING

- Electric motor braking provides speed regulation functions.
- For parked vehicle, beeping alarm indicates vehicle roll away.
- In operation, beeping alarm indicates reduction in motor braking.

CCI 102518001

WARNING

ROLLOVER OR FALLING OFF MAY CAUSE SERIOUS INJURY OR DEATH.

- Before using vehicle, read operating instructions.
- Do not start vehicle until all occupants are seated.
- Keep entire body inside vehicle while moving.
- Drive slowly in turns and straight up and down slopes.
- Use brakes to reduce speed when coasting downhill.
- Never operate under the influence of alcohol or drugs.
- For use by authorized persons in designated areas only.
- Remain seated while moving.
- Operate from driver side only.
- Never operate on public roads.
- Hold on to seat handle while moving.
- Two (2) persons per seat maximum.
- Never stand in front of or behind vehicle.
- Do not leave children unattended on vehicle.

CCI 102519301

WARNING

HEAVY LIFTING CAN CAUSE SEVERE PERSONAL INJURY

- The weight of each battery is in excess of 80 lb (36.3 kg).
- Use battery lifting tool (CCI 102519101) only with the aid of an assistant.


CCI 102518201

CAUTION

EXPOSURE TO WATER MAY DAMAGE ELECTRONIC COMPONENTS

- Do not operate vehicle without this cover properly installed.
- Do not direct water stream in the area of the cover.
- See vehicle maintenance and service manual before

CCI 102518301

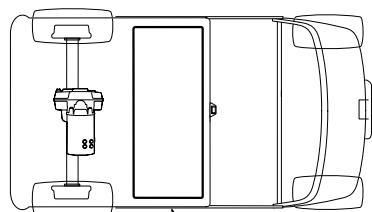

TOW/RUN DECAL (ON REAR WALL OF BATTERY BUCKET)

WARNING

BATTERY EXPLOSION / ELECTRICAL COMPONENT DAMAGE

- Place Run/Tow switch in TOW position before performing any of the following:
 - Disconnecting or connecting battery cables
 - Towing this vehicle
 - Extended storage
 - Servicing the vehicle
- Do not store items in battery compartment.
- Do not operate vehicle without the cover properly installed.
- Keep electronic components dry.
- See vehicle maintenance and service manual before servicing.

CCI 102519401

BATTERY TERMINAL WARNING DECAL (ON ELECTRICAL COMPONENT MOUNTING PLATE, 2 PLACES)

WARNING

SHORTING OF BATTERY TERMINALS CAN CAUSE PERSONAL INJURY OR DEATH.

- Do not place component mounting plate directly on top of batteries, when removing or installing plate.
- Remove plate from vehicle completely.

102527501

TOW/RUN DECAL (ON ELECTRICAL COMPONENT COVER)

WARNING

BATTERY EXPLOSION COULD RESULT IN SEVERE PERSONAL INJURY

- Do not store items in battery compartment.
- Place Run/Tow switch in TOW position before performing any of the following:
 - Disconnecting or connecting battery cables
 - Towing this vehicle
 - Extended storage
 - Servicing the vehicle

CCI 102518101

DECALS – ELECTRIC VEHICLE


ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	3 G E
		1 2 3 4			
1	102519301	Decal, Driver/Passenger Warning		1	
2	101825101	Decal, Key Switch		1	
3	102518001	Decal, Operating Instructions (Professional vehicle – shown)		1	
3	102538201	Decal, Operating Instructions (Champion vehicle with comfort grip)		1	
4	102555901	Decal, Private Speed		1	
5	102518201	Decal, Warning, Battery Weight		1	
6	102518301	Decal, Caution		1	
7	102527501	Decal, Warning, Battery Terminal		2	
8	102519401	Decal, Tow/Run, Safety		1	
9	102518101	Decal, Tow/Run with Storage Area		1	
10	102540901	Decal, Club Car Clip		1	

BRAKES AND PEDAL GROUP ASSEMBLIES

4

G

E

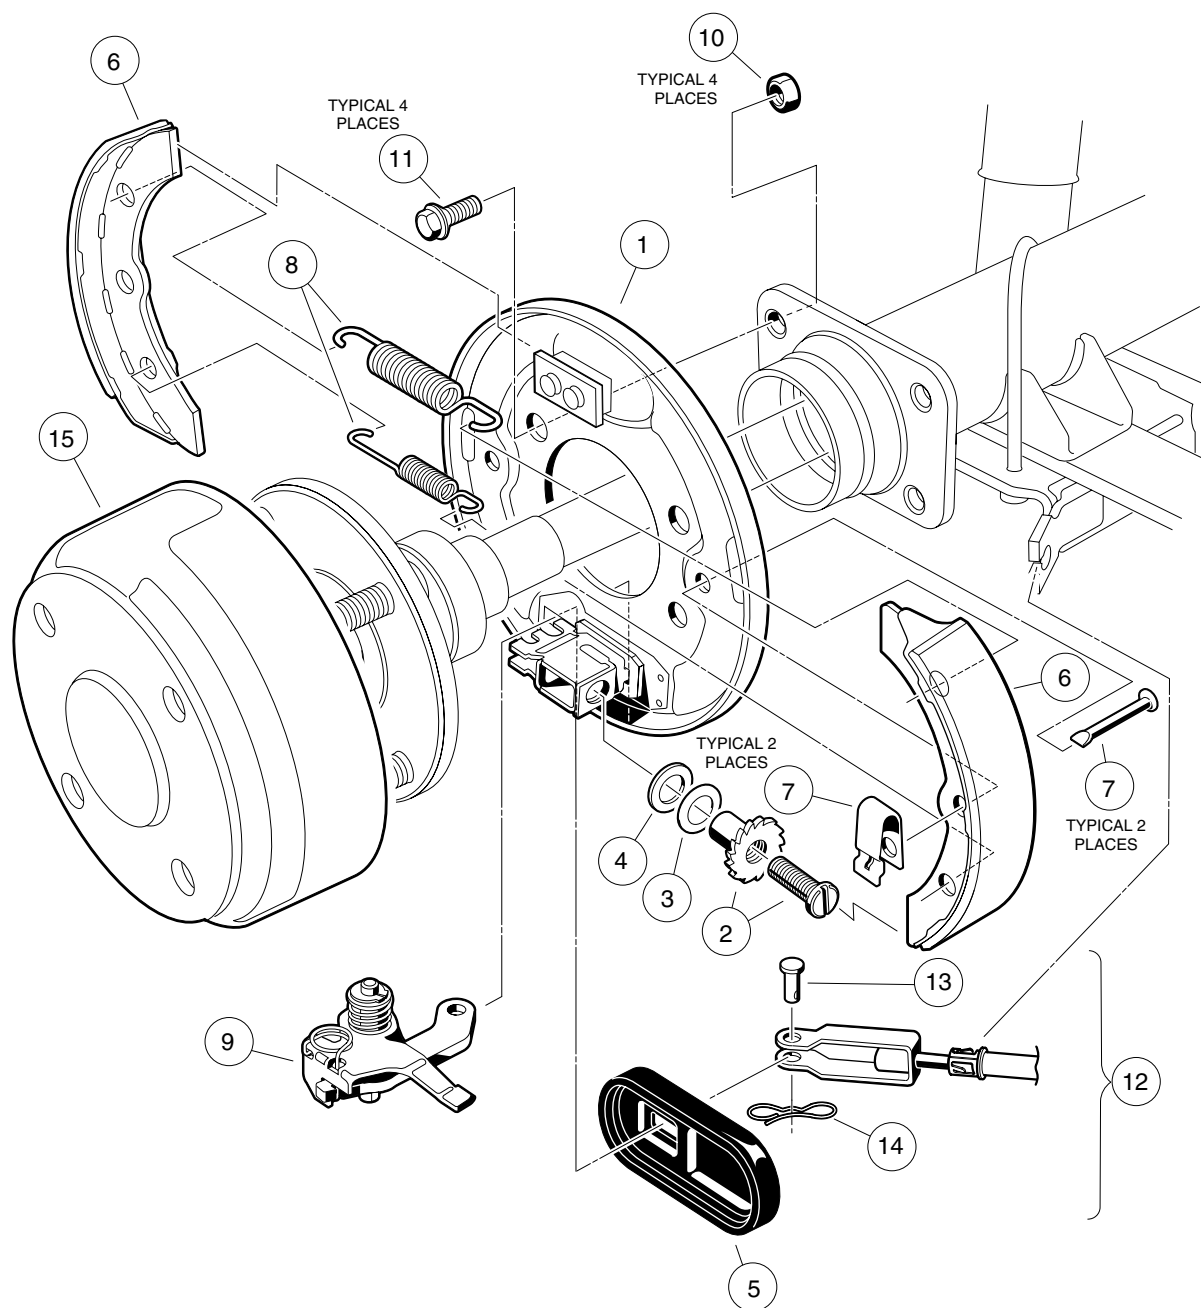


BRAKE ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	4 G E
		1 2 3 4			
	101823301	Cluster, Brake, Passenger-Side (includes items 1 - 9)	1	1	
	101823302	Cluster, Brake, Driver-Side (includes items 1 - 9)	1	1	
1	101824001	Assembly, Backing Plate, Passenger-Side (includes items 2 - 4)	1	1	
1	101824002	Assembly, Backing Plate, Driver-Side (includes items 2 - 4)	1	1	
2	101816501	Mechanism, Adjusting, Passenger-Side	1	1	
2	101816502	Mechanism, Adjusting, Driver-Side	1	1	
3	101823901	Washer	1	1	
4	101823801	Washer, Plate	1	1	
5	1010850	Cover, Dust	1	1	
6	101823201	Package, Brake Shoe (four pieces)	1	1	
7	1011466	Kit, Shoe Retainer (four pieces)	1	1	
8	101816301	Package, Brake Spring (four pieces)	1	1	
9	101815501	Assembly, Lever, Passenger-Side	1	1	
9	101815502	Assembly, Lever, Driver-Side	1	1	
10	1013924	Nut, Hex Lock, Grade 8, 5/16-24	8	8	
11	1014153	Bolt, Brake Cluster Mounting, Grade 8, 5/16-24 x 7/8	8	8	
12	102557501	Cable, Brake, Passenger-Side (includes items 13 and 14)	1	1	
12	102557502	Cable, Brake, Driver-Side (includes items 13 and 14)	1	1	
13	1010829	Pin, Clevis, 5/16	2	2	
14	102292801	Pin, Bow Tie Locking	2	2	
15	101791101	Drum, Brake	2	2	

4


G

E

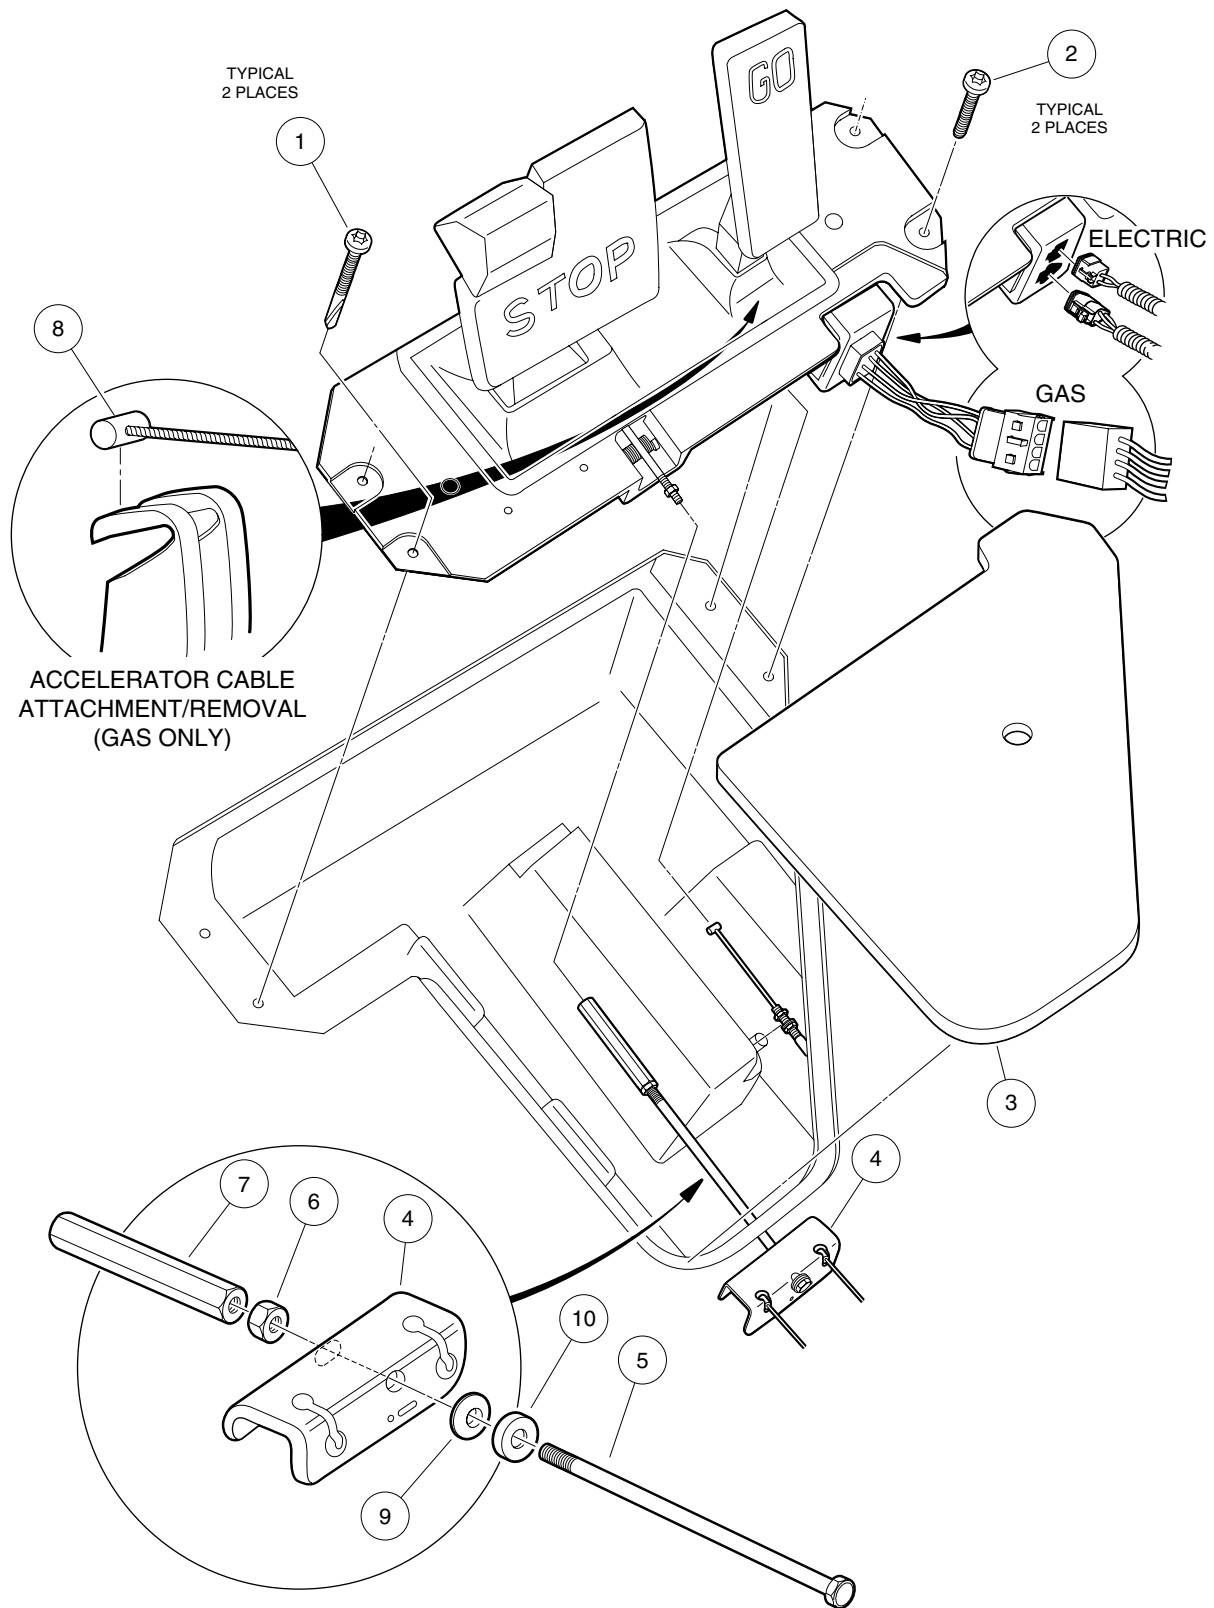

PEDAL GROUP CONNECTIONS

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	4 G E
		1 2 3 4			
1	102292201	Screw, Torx Pan Head, 1/4 - 20 x 1.25	2	2	
2	102298030	Screw, Torx Pan Head, K80 x 30	2	2	
3	102500801	Plate, Floor Cover	1	1	
4	101990802	Bracket, Equalizer	1	1	
5	102297901	Bolt, Round Head, 5/16 - 18 x 7	1	1	
6	1242	Nut, Hex, 5/16 - 18	1	1	
7	102507001	Nut, , Adjusting Hex, 5/16 - 18 (turnbuckle)	1	1	
8	102513102	Cable, Accelerator (throttle)	1		
9	102552001	Washer, Cone, 5/16	1	1	
10	102551901	Washer, Cup, 5/16	1	1	

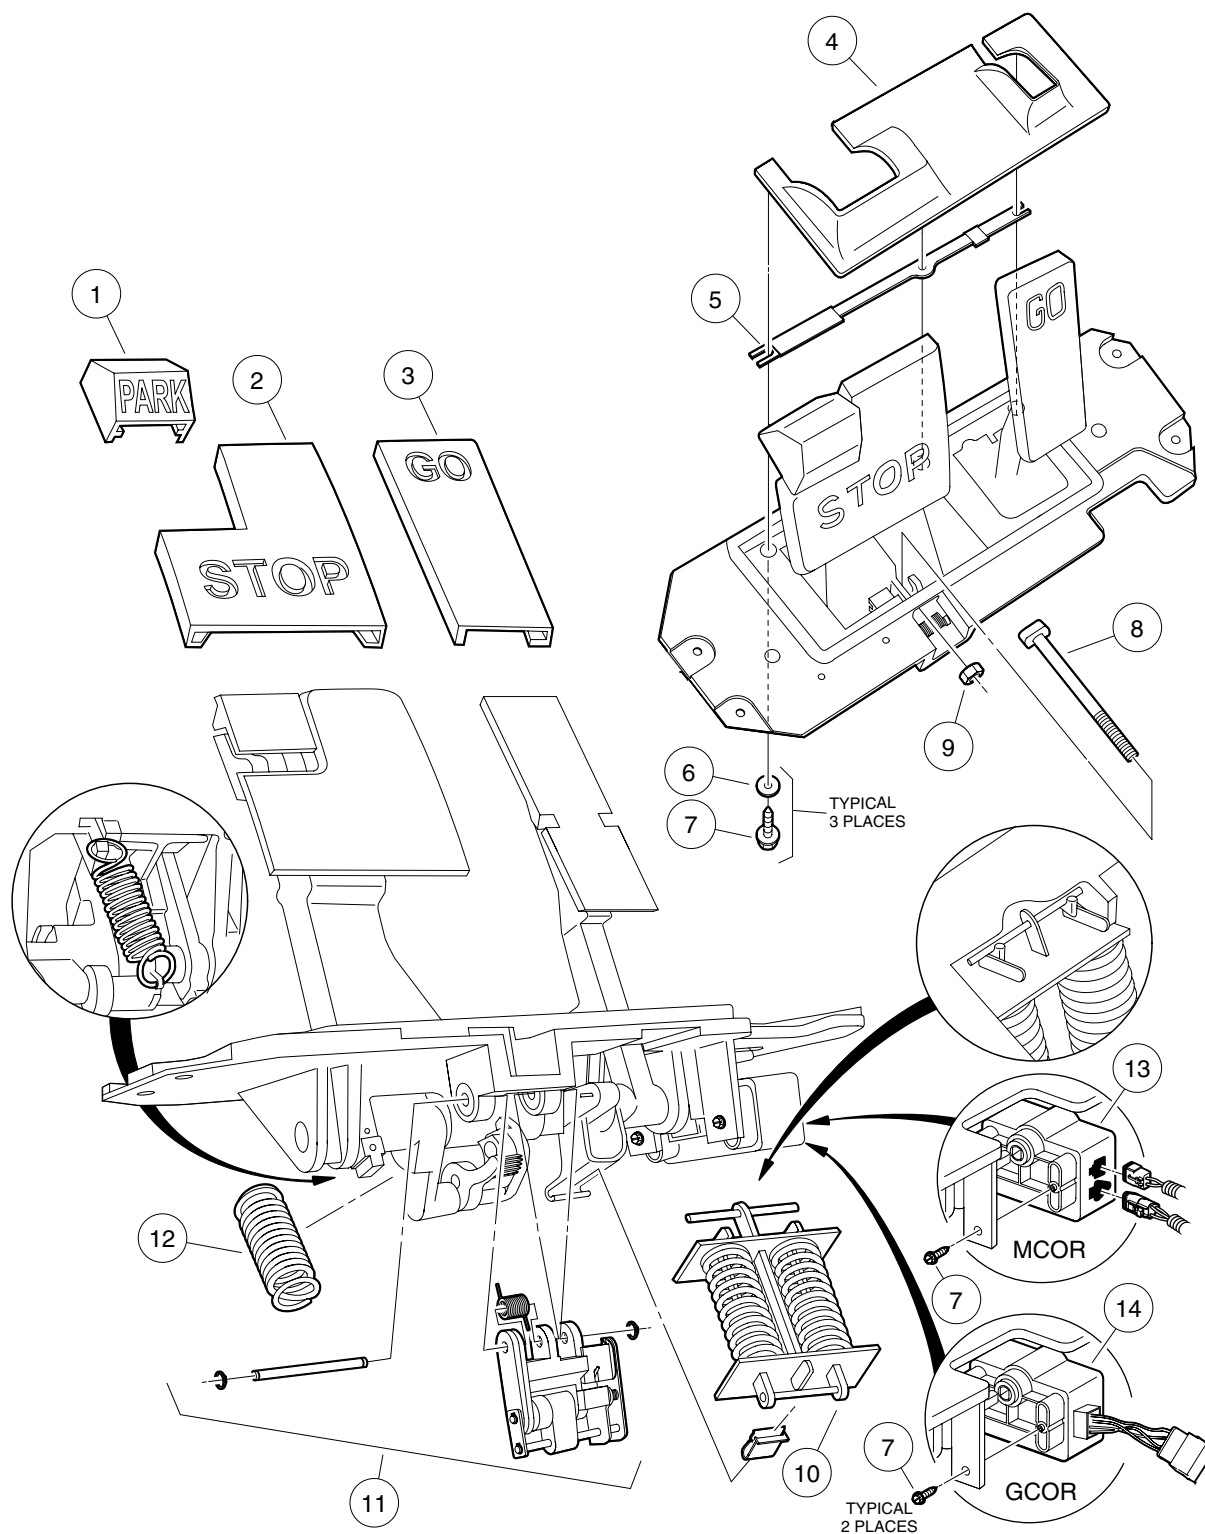

PEDAL GROUP COMPONENTS

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	4 G E
		1 2 3 4			
	102500001	Assembly, Pedal Box, Electric (includes items 1 - 13)		1	
	102500101	Assembly, Pedal Box, Gas (includes items 1 - 12 and item 14)	1		
1	102559001	Pad, Park Pedal	1	1	
2	102559101	Pad, Brake Pedal	1	1	
3	102558901	Pad, Accelerator Pedal	1	1	
4	102558801	Shield, Debris	1	1	
5	102559601	Shield, Debris, Auxiliary	1	1	
6	102563001	Washer, Standard Fender, #10	3	3	
7	102563101	Screw, Slotted Hex Washer-Head, Type A, #10	5	5	
8	102559401	Rod, Brake	1	1	
9	102559701	Nut, Brake Rod, Left-Hand Thread, UNC, 5/16-18	1	1	
10	102559501	Assembly, Accelerator Pedal Return Spring	1	1	
11	102559201	Assembly, Pawl Lock	1	1	
12	102559301	Spring, Brake Return	1	1	
13	102528501	MCOR		1	
14	102528601	GCOR	1		

4

G


E

STEERING, FRONT AND REAR SUSPENSION

5

G


E

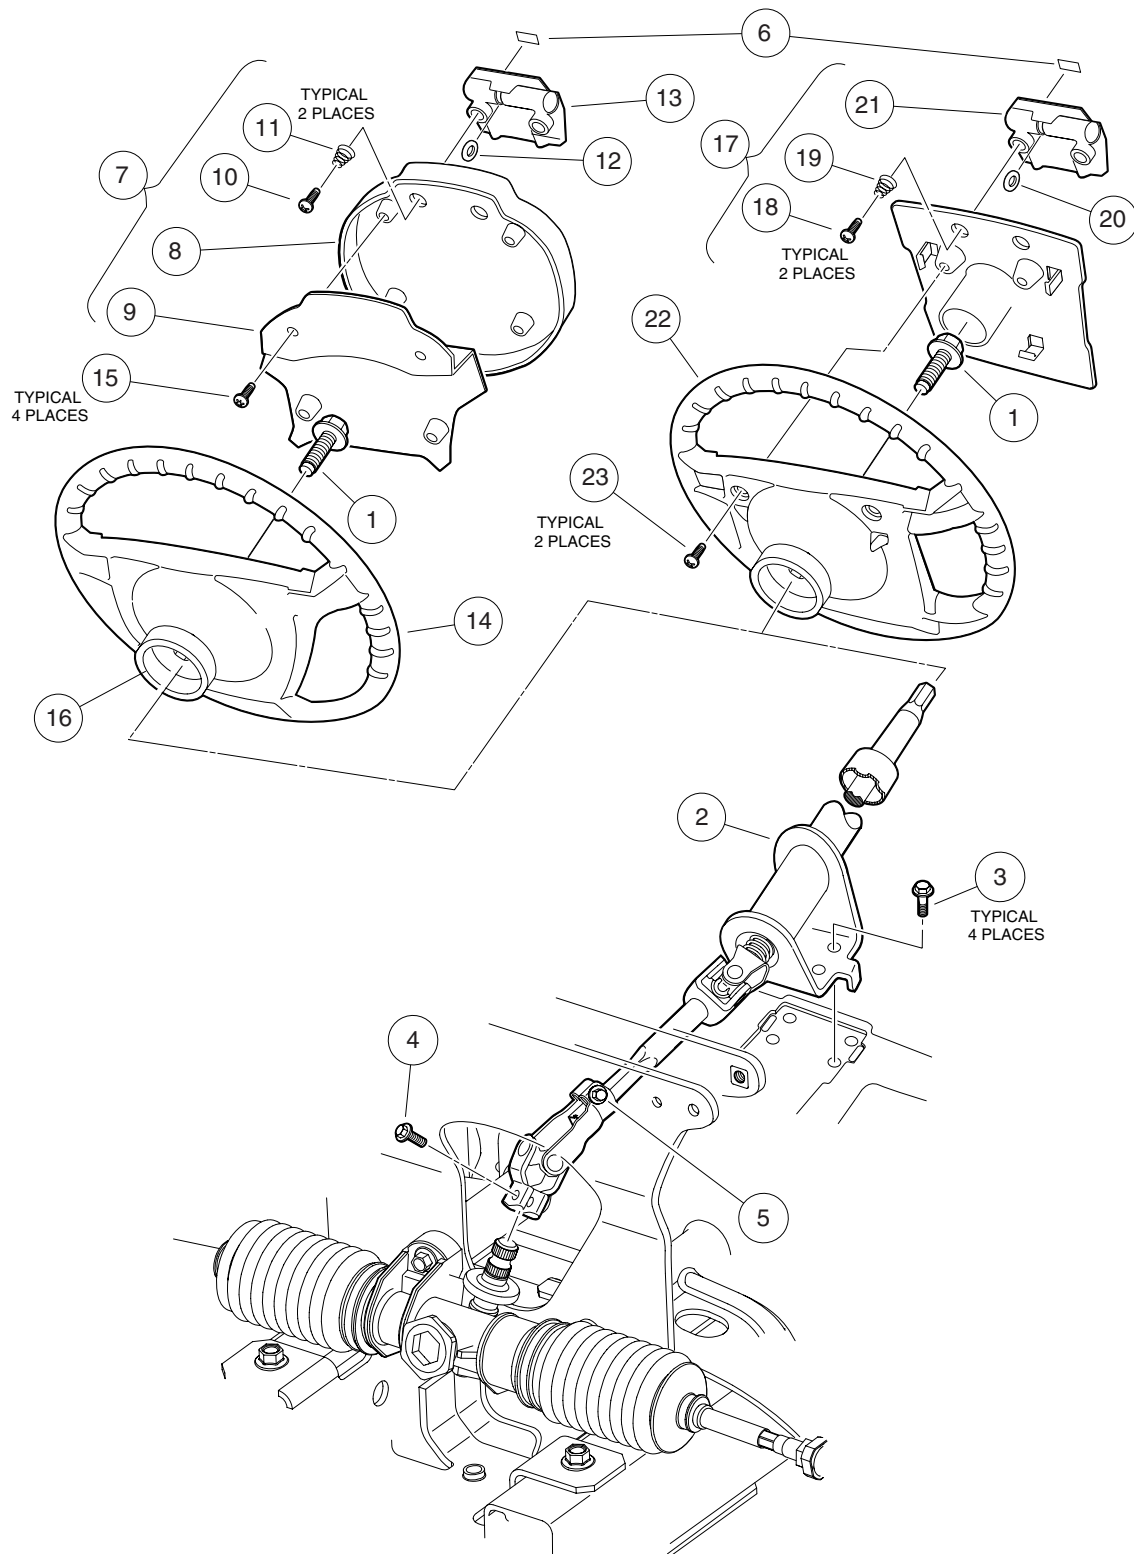

STEERING COLUMN


ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
1	102290120	Bolt, M10 - 1.5 x 20, Hex-Head Flange	1	1
2	102507101	Assembly, Steering Column	1	1
3	102298116	Bolt, M8 x 16, Flange-Head	4	4
4	102298130	Bolt, M8 x 30, Flange-Head	1	1
5	102569001	Bolt, Slider Yoke	1	1
6	102540901	Decal, Club Car Clip	1	1
		Champion Vehicle (with Comfort Grip):		
7	102540801	Assembly, Scorecard Plate (comfort grip) (includes items 8 - 13)	1	1
8	N/A	Plate, Scorecard	1	1
9	N/A	Back Plate, Scorecard	1	1
10	1012565	Screw, Round-Head, #12-14 x 1	2	2
11	1012566	Spring, Tapered Compression	2	2
12	1016214	Grip, Pencil	1	1
13	1016154	Clip, Scorecard	1	1
14	102537801	Wheel, Steering (Comfort Grip)	1	1
15	102296020	Screw, M6 x 20, Torx Pan-Head	4	4
16	102571301	Shroud, Steering Column	1	1
		Professional Vehicle:		
17	1016219	Assembly, Scorecard Plate (includes items 18 - 21)	1	1
18	1012565	Screw, Round-Head, #12-14 x 1	2	2
19	1012566	Spring, Tapered Compression	2	2
20	1016214	Grip, Pencil	1	1
21	1016154	Clip, Scorecard	1	1
22	101615602	Wheel, Steering	1	1
23	1016663	Screw, Phillips, Type A, #12-11 x 5/8	2	2

5
G
E

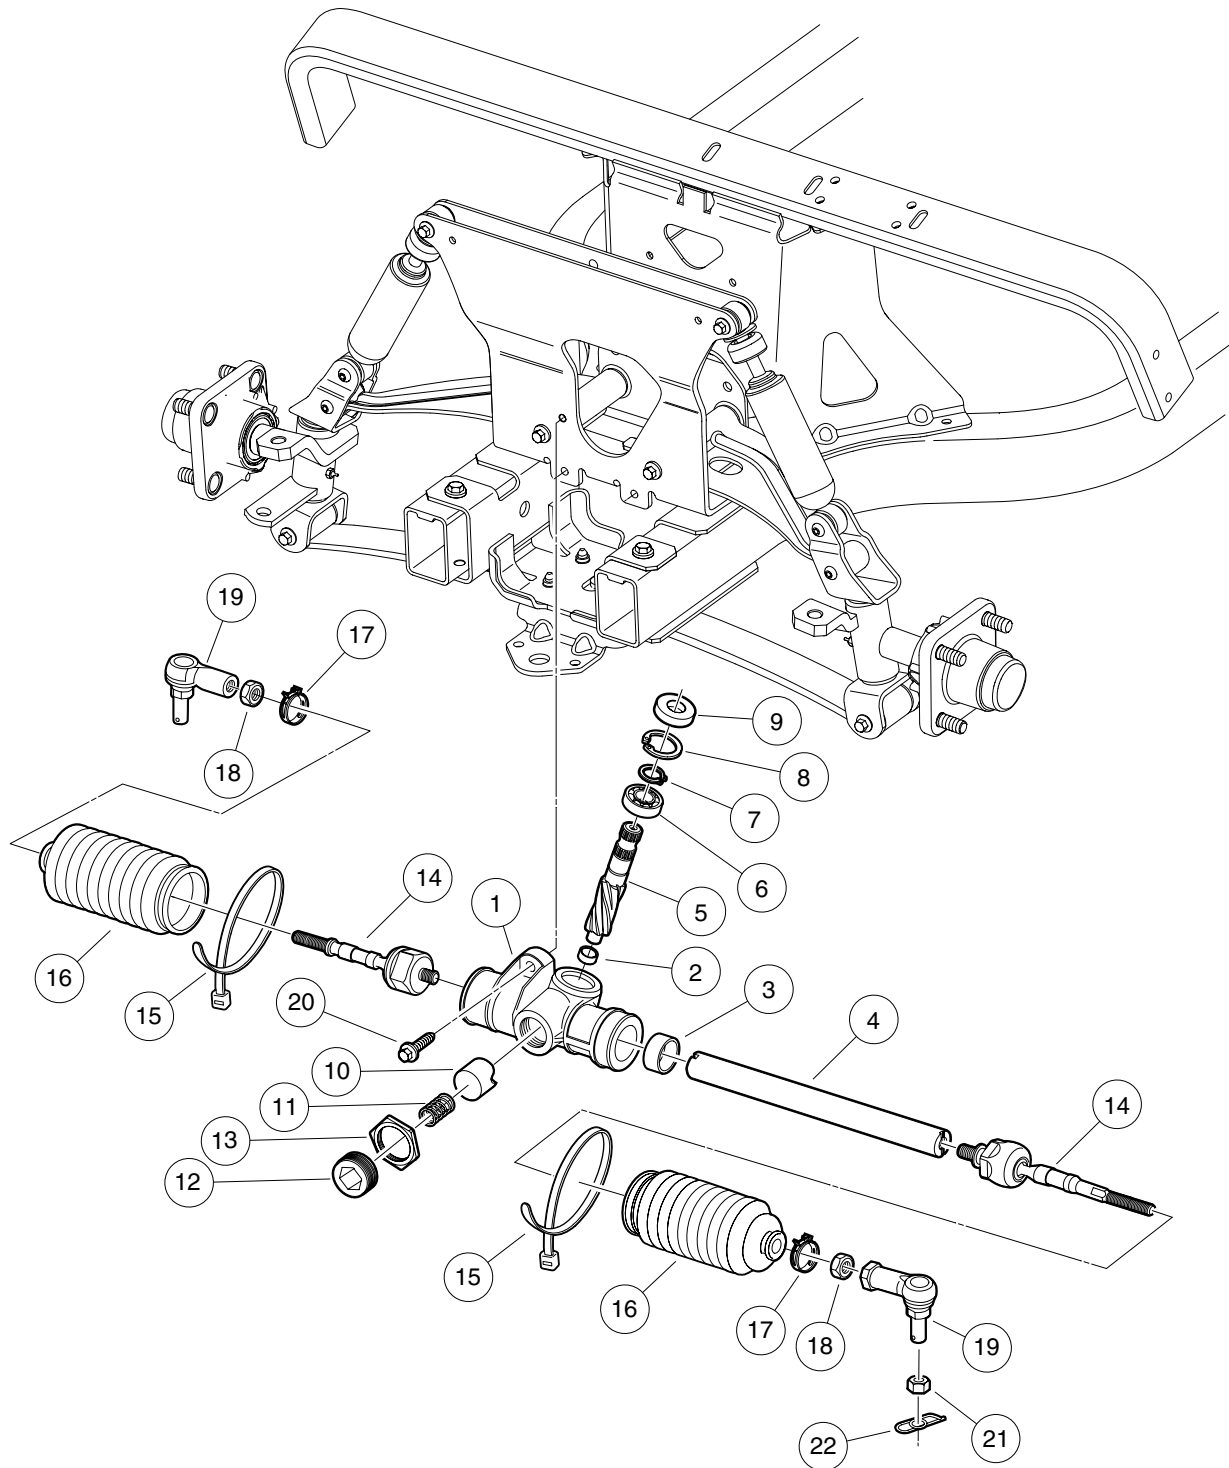


STEERING GEAR ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	5 G E
		1 2 3 4			
	102288601	Assembly, Steering Gear Box (includes item 1 - 18)	1	1	
1	N/A	Housing, Pinion (includes items 2 and 3)	1	1	
2	N/A	Bearing, Needle	1	1	
3	N/A	Bushing, Rack	1	1	
4	N/A	Rack, Steering	1	1	
5	N/A	Pinion, Steering	1	1	
6	102564901	Bearing, Ball	1	1	
7	102565001	Ring, Stop	1	1	
8	102565101	Ring, C-Type, Stop	1	1	
9	102565201	Seal, Dust, Steering Pinion	1	1	
10	102565301	Yoke, Support	1	1	
11	102565401	Spring, Yoke	1	1	
12	N/A	Plug, Yoke	1	1	
13	N/A	Nut, Lock, Rack Screw	1	1	
14	102565701	Assembly, Inner Ball Joint	1	1	
15	102565801	Tie Wrap	1	1	
16	102565901	Bellows	2	2	
17	102566001	Clip	2	2	
18	102566101	Nut, Jam	2	2	
19	102288301	Tie Rod End, M12 x 1.25	2	2	
20	102289001	Bolt, M8 x 1.25, Hex-Flange	3	3	
21	102289201	Nut, Hex Lock, M12 x 1.25	2	2	
22	102289301	Ring, Rue, 1/2 inch	2	2	

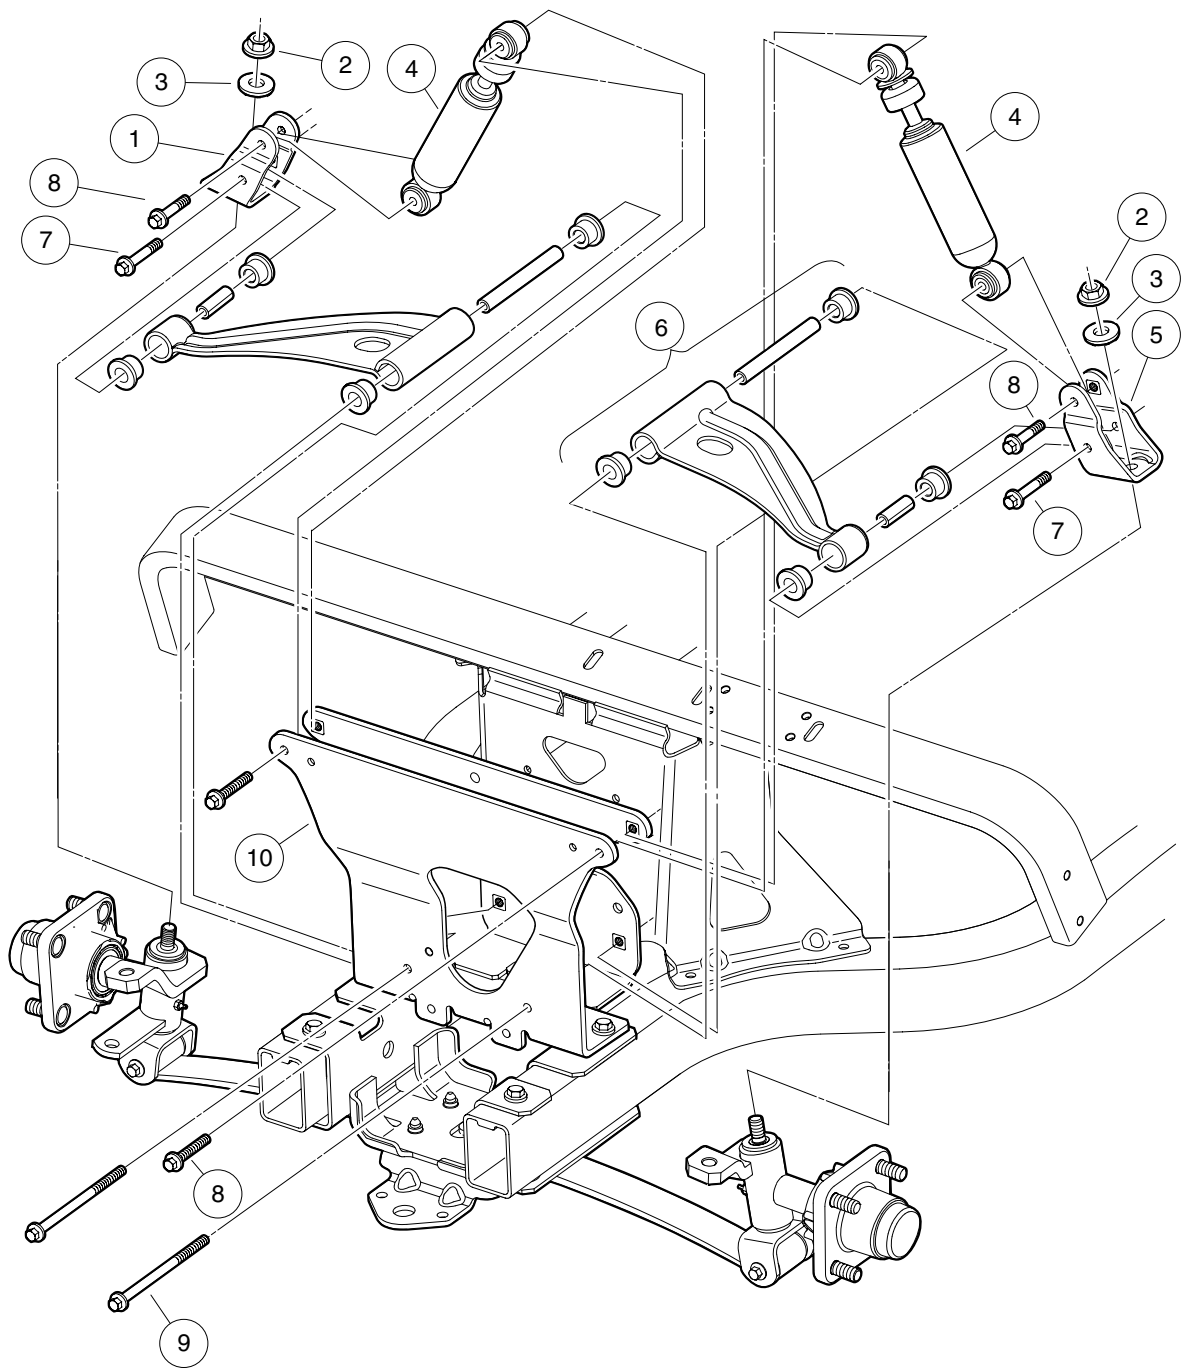


FRONT SUSPENSION, UPPER

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	5 G E
		1 2 3 4			
1	102289601	Clevis, Passenger-Side	1	1	
2	102564101	Nut	2	2	
3	102564001	Washer	2	2	
4	102288501	Absorber, Shock	2	2	
5	102289701	Clevis, Driver-Side	1	1	
6	102287301	Assembly, Control Arm (includes bushings and sleeves)	2	2	
7	102289501	Screw, Hex Cap, M8 x 1.25 x 70	2	2	
8	102289401	Screw, Hex-Cap, M8 x 1.25 x 45	4	4	
9	102288901	Bolt, M8 x 1.25 x 135, Hex-Flange	2	2	
10	102287101	Assembly, Front Structure	1	1	
11	102289901	Kit, Bushing (not shown)	1	1	

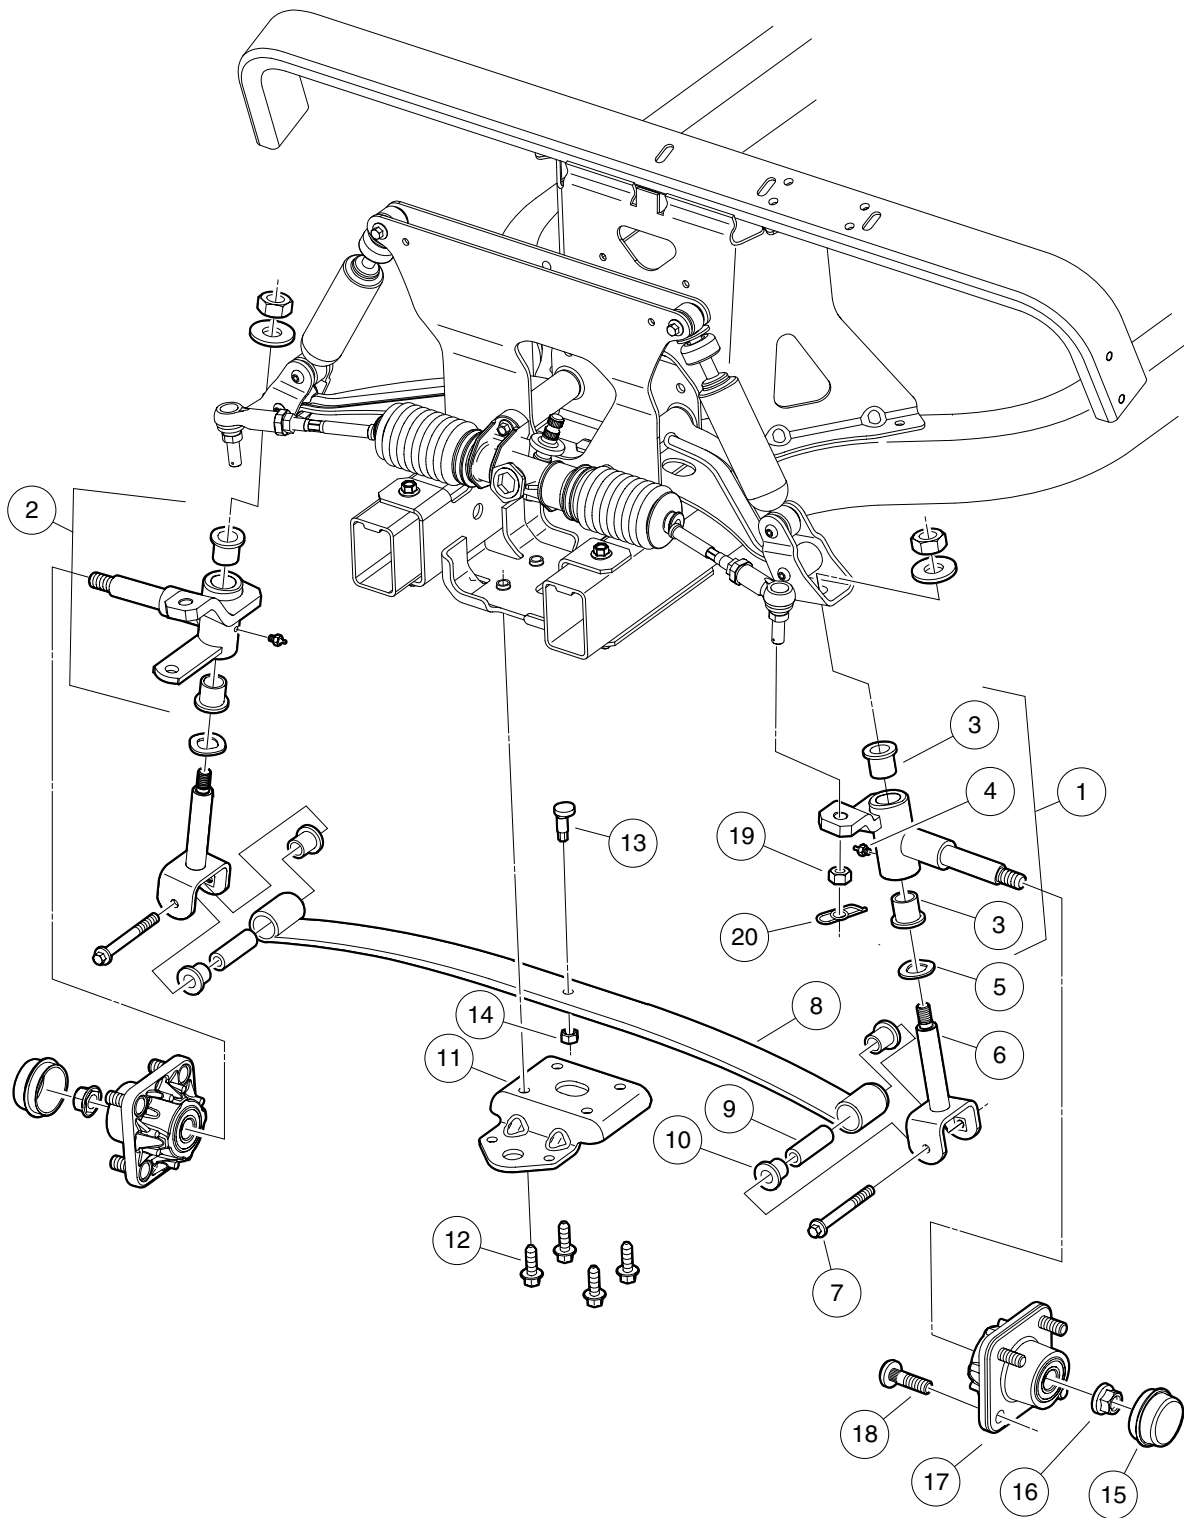

FRONT SUSPENSION, LOWER

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	5 G E
		1 2 3 4			
1	102287901	Assembly, Knuckle Spindle, Driver-Side (includes items 3 and 4)	1	1	
2	102287801	Assembly, Knuckle Spindle, Passenger-Side (includes items 3 and 4)	1	1	
3	N/A	Bushings	2	2	
4	N/A	Fitting, Grease	1	1	
5	102288401	Washer, Kingpin Wave	2	2	
6	102287201	Assembly, King Pin	2	2	
7	102289501	Screw, Hex-Head Cap, M8 x 1.25 x 70	2	2	
8	1012030	Spring, Front Leaf	1	1	
9	102288101	Sleeve, Spring Eye Mount.....	2	2	
10	102287401	Bushing, Urethane	4	4	
11	102289801	Plate, Spring	1	1	
12	102289101	Screw, Trilobular Hex-Flange, M10 x 30	4	4	
13	8745	Bolt, Eccentric Adjustment	1	1	
14	706	Nut, Hex, 3/8 - 16	1	1	
	102357701	Kit, Front Hub Replacement (includes items 15 - 18)	2	2	
15	102353201	Cap, Hub	1	1	
16	102353301	Nut, Flange Lock, M14 x 2	1	2	
17	102352801	Assembly, Hub and Ball Bearing (includes item 18)	1	1	
18	102353401	Stud, Lug	4	4	
19	102289201	Nut, Hex Lock, M12 x 1.25	2	2	
20	102289301	Ring, Rue, 1/2 inch	2	2	

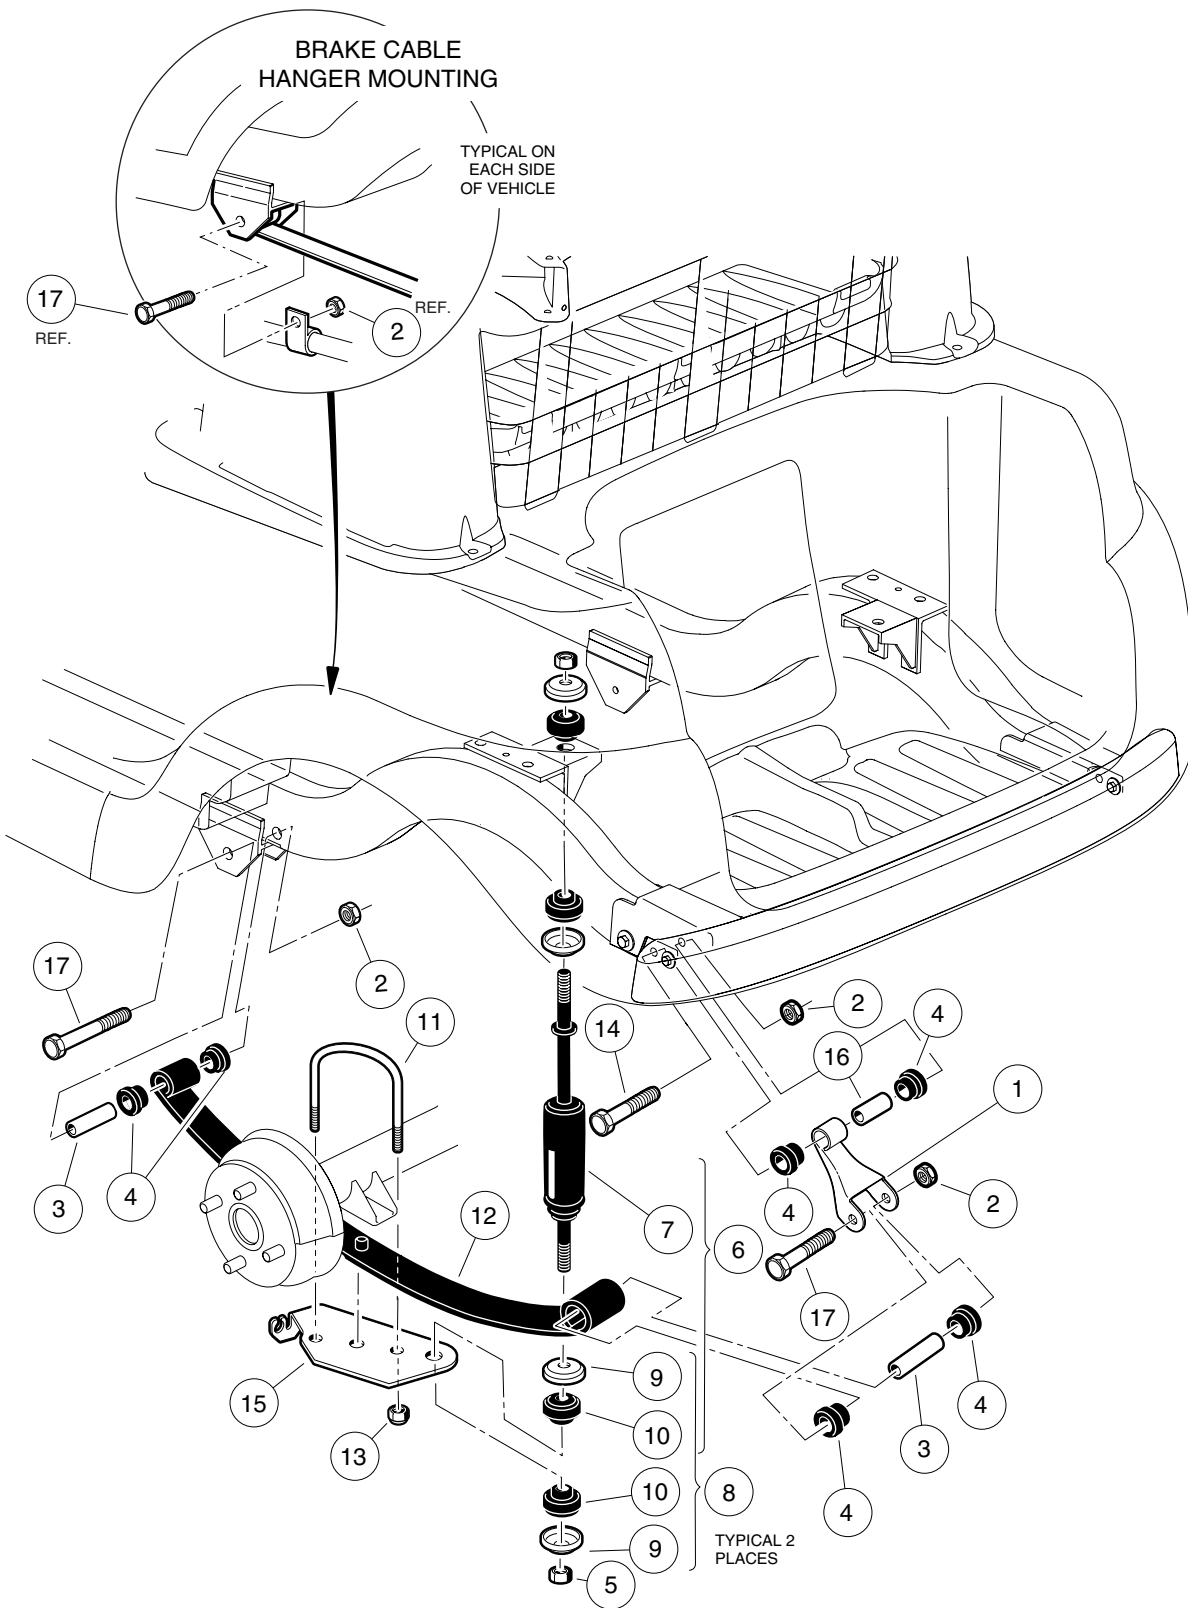

REAR SUSPENSION

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	5 G E
		1 2 3 4			
1	102506201	Shackle, Rear Spring	2	2	
2	102298401	Nut, Lock, M8	6	6	
3	102506401	Sleeve, Spring Eye Mount	4	4	
4	102506601	Bushing, Urethane	12	12	
5	1010145	Nut, UNF Hex, 3/8-24	4	4	
6	1013164	Kit, Shock Absorber (includes 2 each of item 7, and 8 each of items 9 and 10)	1	1	
7	1014236	Shock Absorber, Rear	2	2	
8	1011415	Kit, Shock Absorber Cushion (includes 2 each of items 9 and 10)	2	2	
9	N/A	Retainer, Shock Absorber Cushion	2	2	
10	N/A	Cushion, Shock Absorber	2	2	
11	1012180	U-Bolt	2	2	
12	102513001	Spring, Rear Leaf (gasoline vehicle)	2		
12	102509301	Spring, Rear Leaf (electric vehicle)		2	
13	1014555	Nut, Nylon Lock, 7/16-24	4	4	
14	102298170	Bolt, Flange Head, M8 x 70	2	2	
15	1012182	Pad, Spring, Driver-Side	1	1	
15	1012181	Pad, Spring, Passenger-Side	1	1	
16	102506301	Sleeve, Shackle Upper	2	2	
17	102298185	Bolt, Flange Head, M8 x 85	4	4	

5


G

E

ELECTRICAL SYSTEM – GASOLINE VEHICLE

6


G

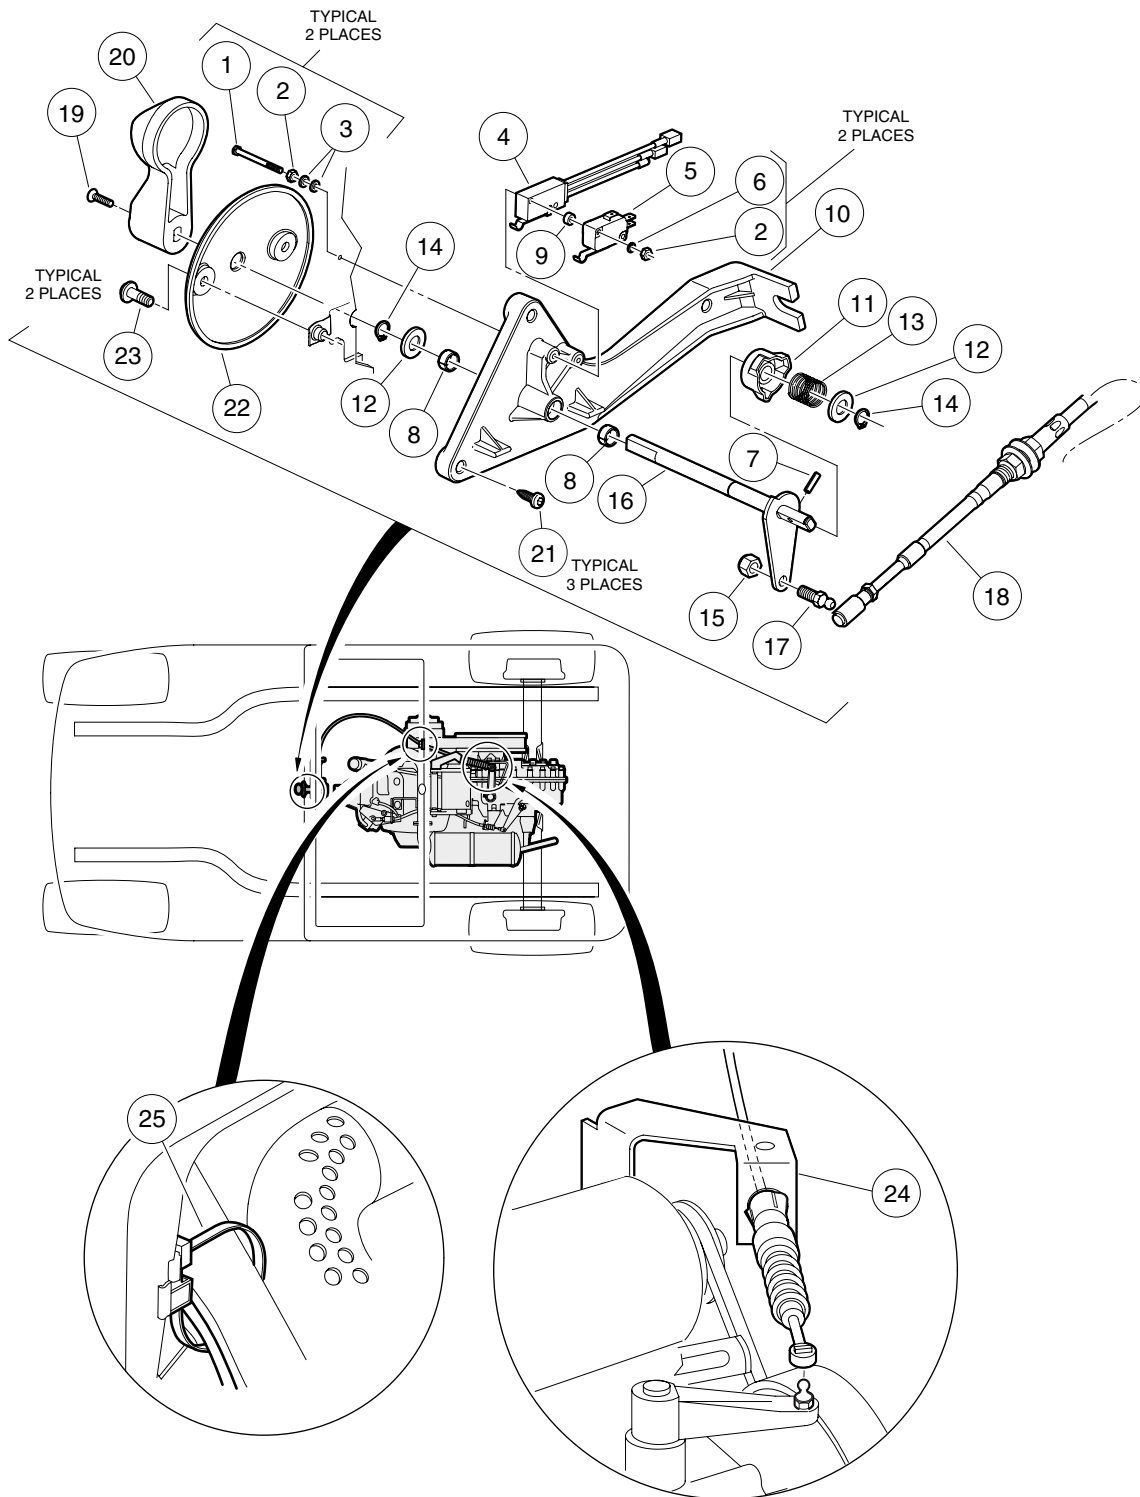

FORWARD/REVERSE SHIFTER ASSEMBLY – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	102514601	Assembly, Forward/Reverse Shifter (includes items 1 - 17)	1
1	1012594	Screw, Machine, #4-40 x 1-1/2	2
2	8057	Nut, Hex, #4-40	4
3	1012431	Washer, Flat, #4	4
4	101979101	Switch, Limit	1
5	1014807	Switch, Limit	1
6	8058	Washer, Lock, #4	2
7	1013591	Pin, Roll, 1/8	1
8	1014145	Bushing, Bronze	2
9	1014727	Washer, Nylon Flat, #4	2
10	102515601	Base, Forward/Reverse Shifter	1
11	1013584	Kit, Neutral Lockout Cam (includes item 12)	1
12	1014065	Washer, Flat	2
13	1013590	Spring, Forward/Reverse Cam	1
14	1013589	Ring, Retaining	2
15	8717	Nut, Nylon Lock, 1/4-28	1
16	102515301	Weldment, Forward/Reverse Bell Crank	1
17	1010954	Stud, Ball, 1/4-28 x 1/4	1
18	102516001	Cable, Transmission	1
19	1015064	Screw, Phillips Oval Countersunk Machine, #8-32 x 5/8	1
20	1012987	Handle, Forward/Reverse Switch	1
21	102296040	Screw, Torx Pan Head, M6 x 40	3
22	102512001	Bezel, Forward/Reverse	1
23	102296920	Screw, Torx Button Head, M6	2
24	102515501	Bracket, Transmission Cable Support	1
25	102554901	Clip, Edge.....	1


6
G

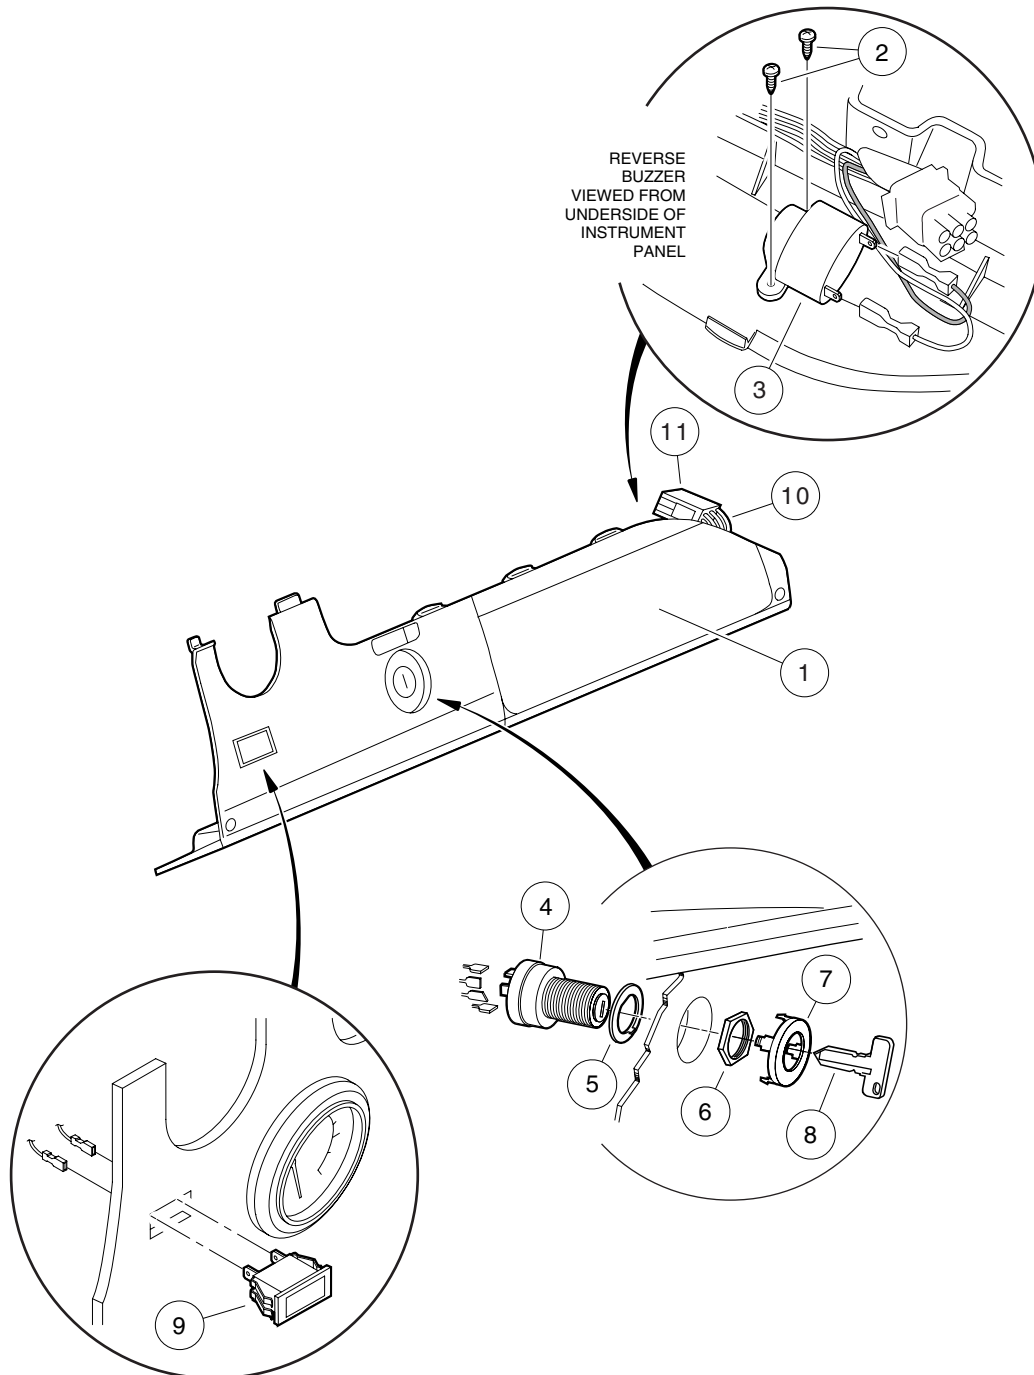

ELECTRICAL COMPONENTS, FRONT BODY – GASOLINE VEHICLE


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102522901	Instrument Panel	1
2	1016849	Screw, Pan-Head Hi-Lo, #4-24 x 5/16	2
3	1016851	Buzzer, Reverse	1
4	102515101	Switch, Key	1
5	101851101	Washer	1
6	101830701	Nut, Key Switch	1
7	101834502	Cap, Key Switch (black)	1
8	1012505	Key (pair)	1
8	AM10079	Key (bag of 50) *	1
9	1016630	Light, Low Oil Warning	1
10	102515001	Harness, Control, Instrument Panel (includes item 11)	1
11	N/A	Connector	1
* Must order in multiples of 50.			

6
G

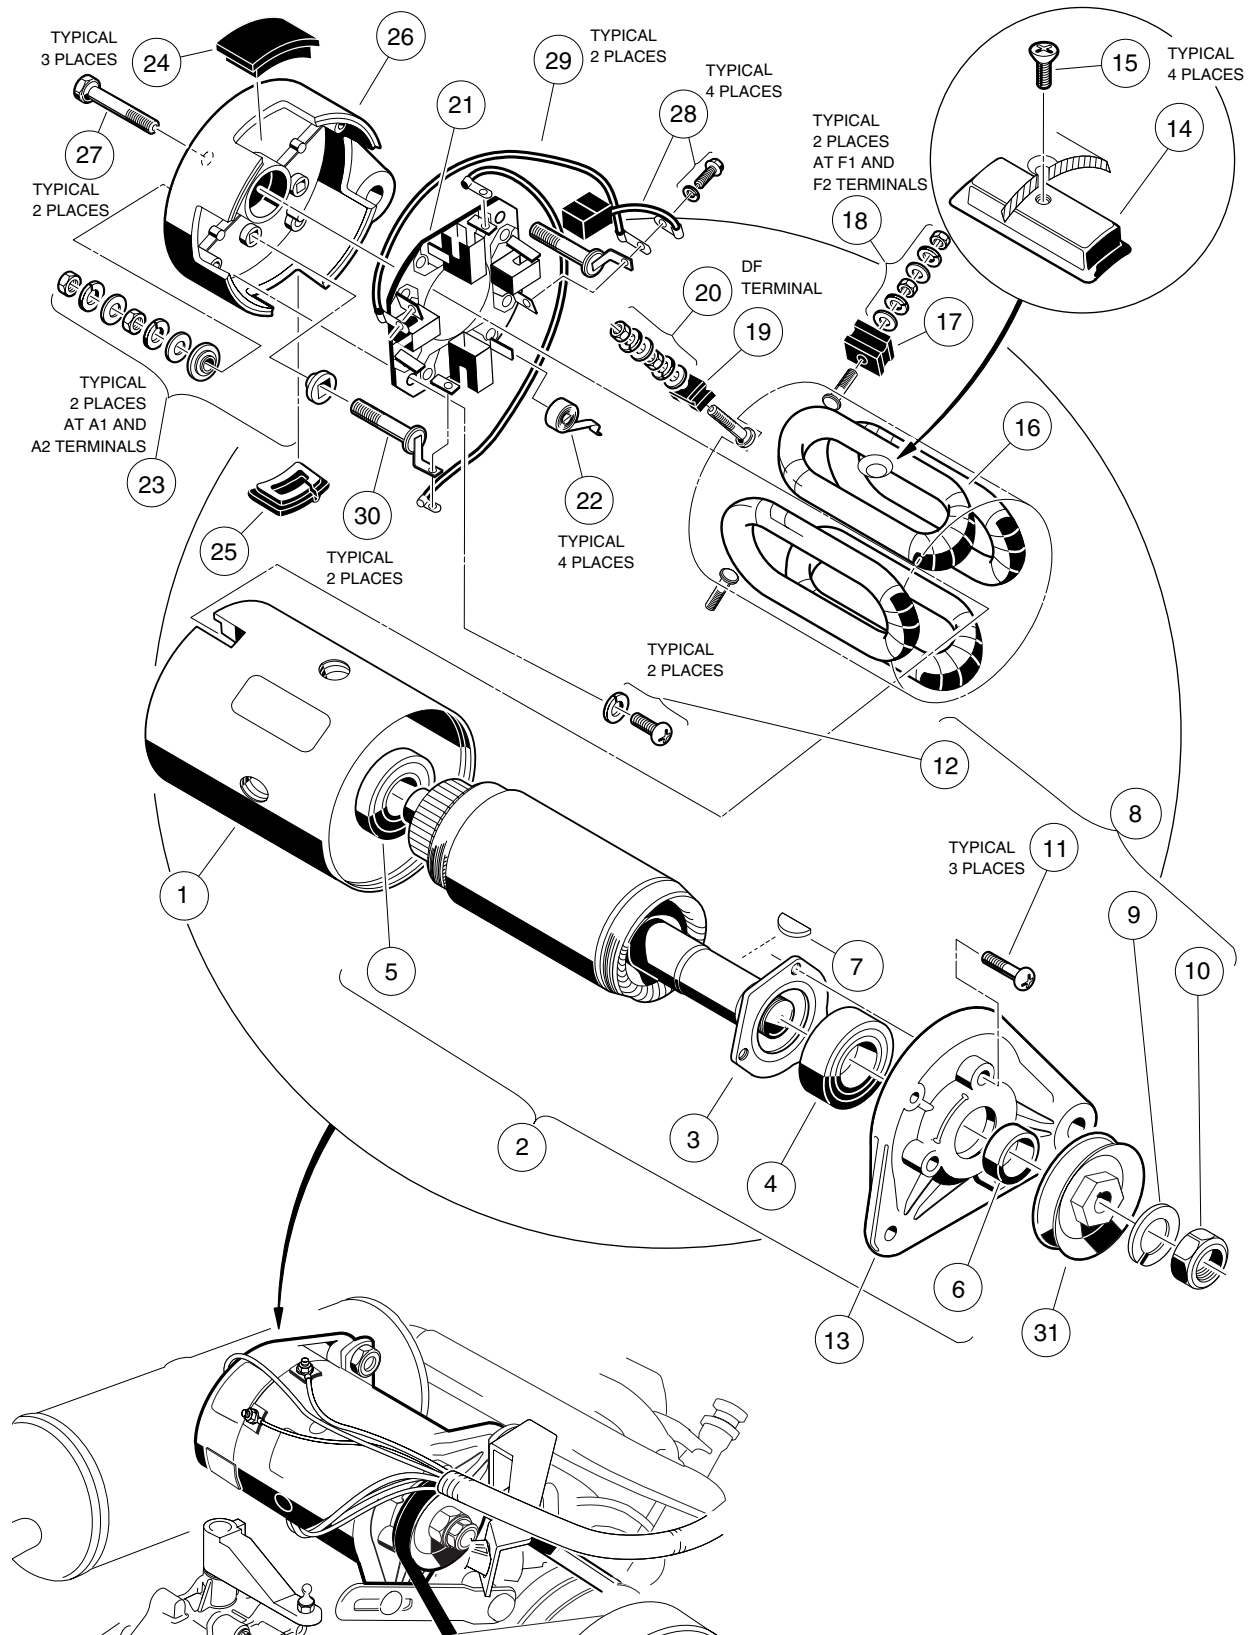

STARTER/GENERATOR ASSEMBLY


ITEM	PART NO.	DESCRIPTION	QTY	6	G
		1 2 3 4			
	101833701	Starter/Generator (clockwise rotation) (includes items 1 - 30)	1		
1	101875201	Housing, Field Coil	1		
2	101875101	Assembly, Armature (includes items 3 - 6)	1		
3	101875001	Retainer, Bearing	1		
4	1013001	Ball Bearing, Output Shaft	1		
5	1013005	Commutator, Ball Bearing	1		
6	101939901	Spacer, 5/16	1		
7	1013003	Key, Woodruff	1		
8	101876501	Kit, Pulley Nut and Screw (includes items 9 - 12)	1		
9	N/A	Washer, Lock, M14	1		
10	N/A	Nut, Hex, M14 x 2	1		
11	N/A	Screw, Cross-Recessed, M5 x .8 x 18 mm	3		
12	101896501	Screw, Cross-Recessed, M5 x .8 x 16 mm (with lock washer)	2		
13	101874901	End Bell, Output Shaft	1		
14	101875301	Set, Pole (set of 4)	1		
15	101875401	Screw, Pole Piece (set of 4)	1		
16	101875501	Coil, Field	1		
17	101875601	Insulator, F Terminal	2		
18	101877601	Package, Terminal Hardware (F1 and F2)	2		
19	101875701	Insulator, DF Terminal	1		
20	101877701	Package, Terminal Hardware (DF)	1		
21	101301102	Holder, Brush (includes item 22)	1		
22	101878101	Spring, Brush	4		
23	101876001	Package, Terminal Hardware (A1 and A2)	2		
24	101876301	Cover, Brush Inspection Port (set of 4) (includes item 25)	1		
25	1017653	Cover, Brush Inspection Port, with Drain	1		
26	101876402	End Bell, Commutator	1		
27	101879001	Bolt, Clamp, M6 x 1 x 180 mm	2		
28	101869302	Package, Brush (includes 4 brushes, 4 screws, 4 washers)	1		
29	101876202	Connector, Brush	2		
30	101875802	A Connector (set of 2)	1		
31	1014289	Pulley	1		

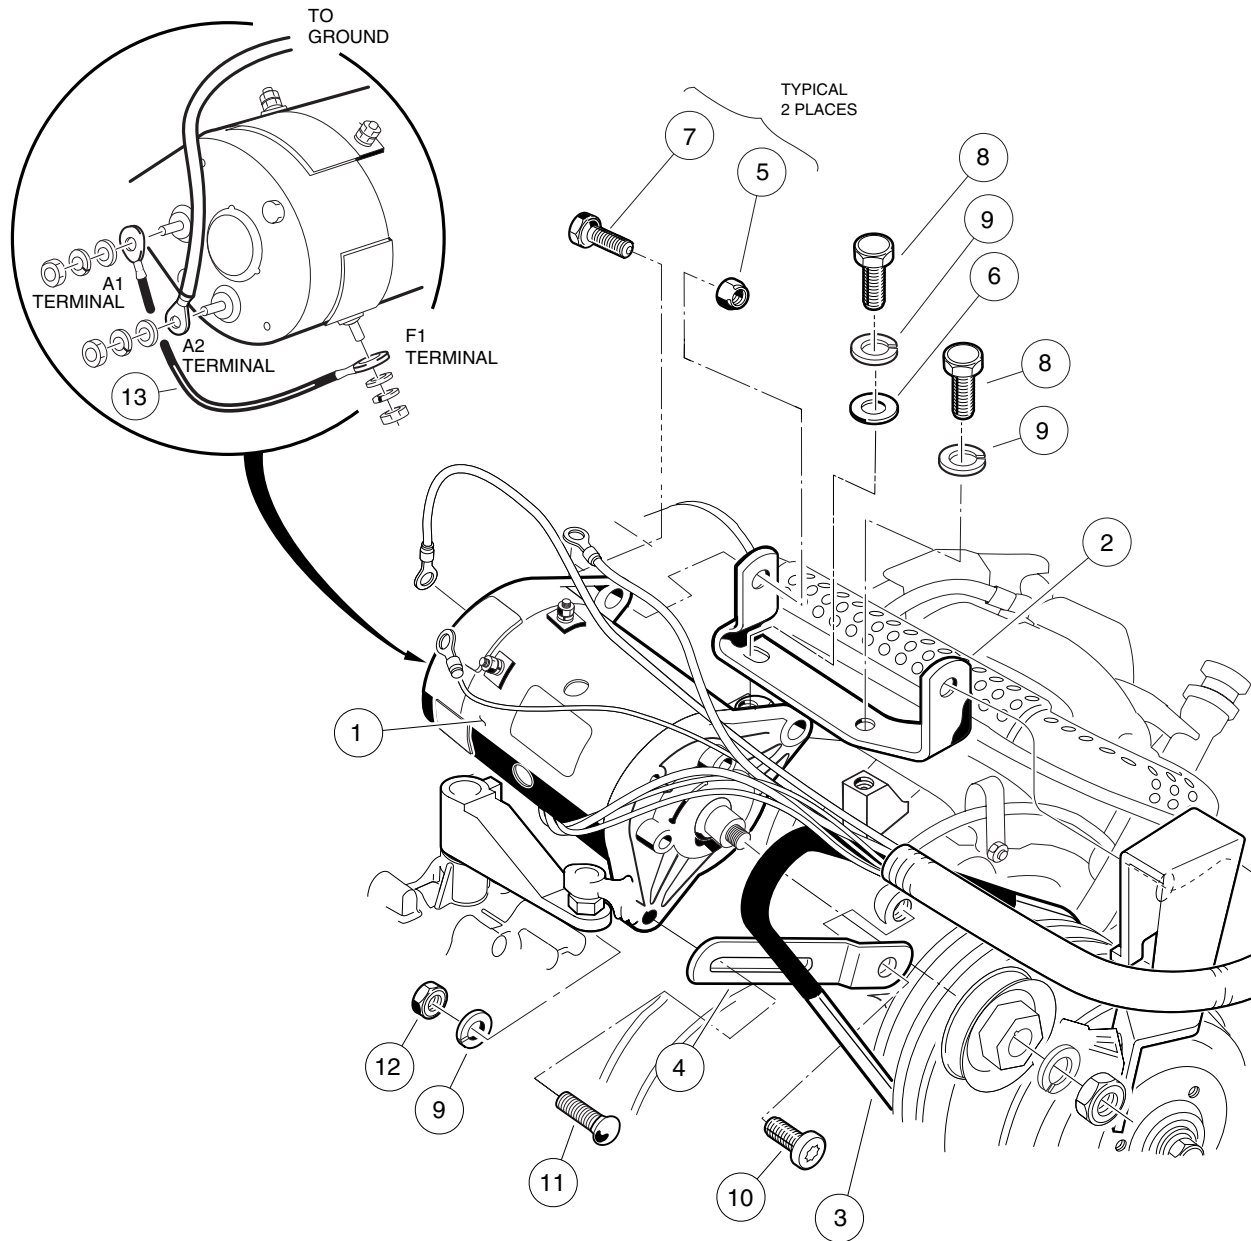

STARTER/GENERATOR MOUNTING


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101833701	Starter/Generator (clockwise rotation)	1
2	101524001	Bracket, Mounting, FE290	1
3	101916701	Belt, Starter/Generator	1
4	1016883	Bracket, Adjusting	1
5	8754	Nut, Nylon Lock, 3/8-16	2
6	1241	Washer, Flat, 5/16	1
7	1624	Screw, Hex-Head Cap, 3/8-16 x 1-1/2	2
8	1012830	Screw, Hex-Head Cap, M8 x 1.25 x 22 mm	2
9	7174	Washer, Lock, 5/16	3
10	1016074	Screw, Torx-Head, M8 x 1.25 x 18 mm	1
11	1015932	Bolt, Carriage, 5/16-18 x 1	1
12	1242	Nut, Hex, 5/16-18	1
13	101837301	Wire Assembly, #6 Green	1

6
G

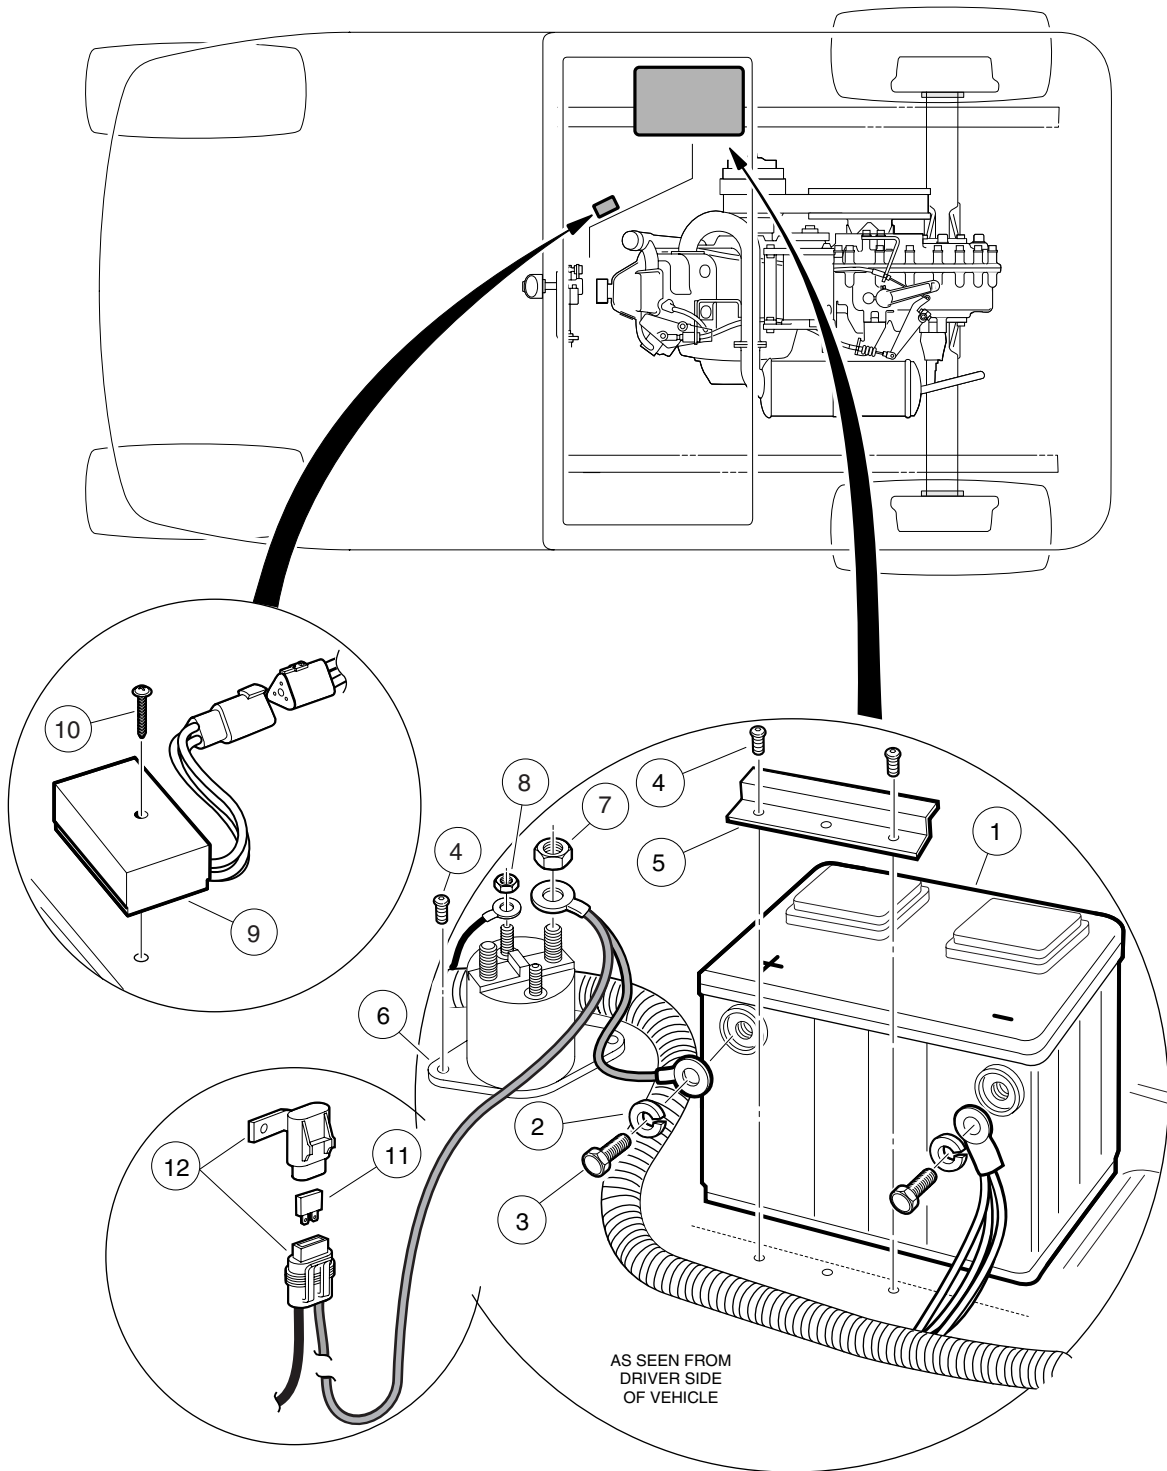

BATTERY – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY	6	G
		1 2 3 4			
1	1012328	Battery, 12-Volt	1		
2	102355301	Washer, Lock, Stainless Steel, 3/8	2		
3	1014375	Screw, Hex-Head Cap, Stainless Steel, 3/8-16 x 1/2	2		
4	102296020	Screw, Torx Pan-Head M 6 x 20	4		
5	101898001	Clamp, Battery	1		
6	1013609	Solenoid, 12-Volt	1		
7	1242	Nut, Hex, 5/16 - 18	2		
8	7893	Nut, Hex, 10 - 32	2		
9	102515901	Assembly, Voltage Regulator	1		
10	102296040	Screw, Torx Pan-Head, M6 x 40	1		
11	1012295	Fuse, 10-AMP	1		
12	N/A	Cover, Fuseholder	1		

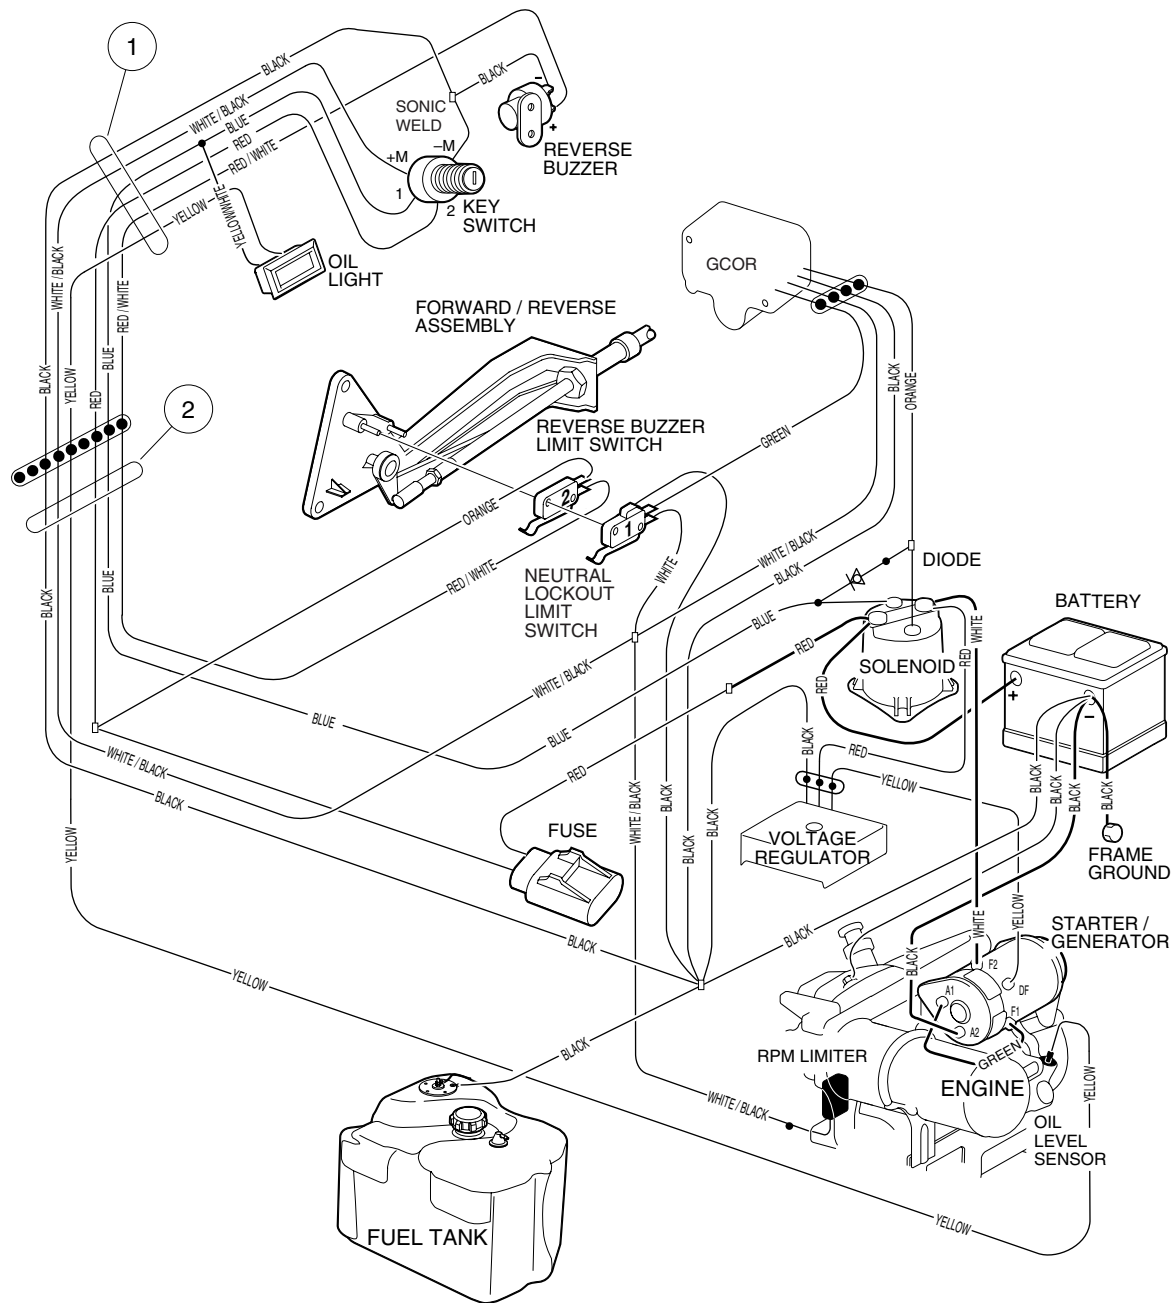

6
G

102397510 2004 Precedent Golf Cars Illustrated Parts List Page 6-13


6

G

FE290 ENGINE

7


G

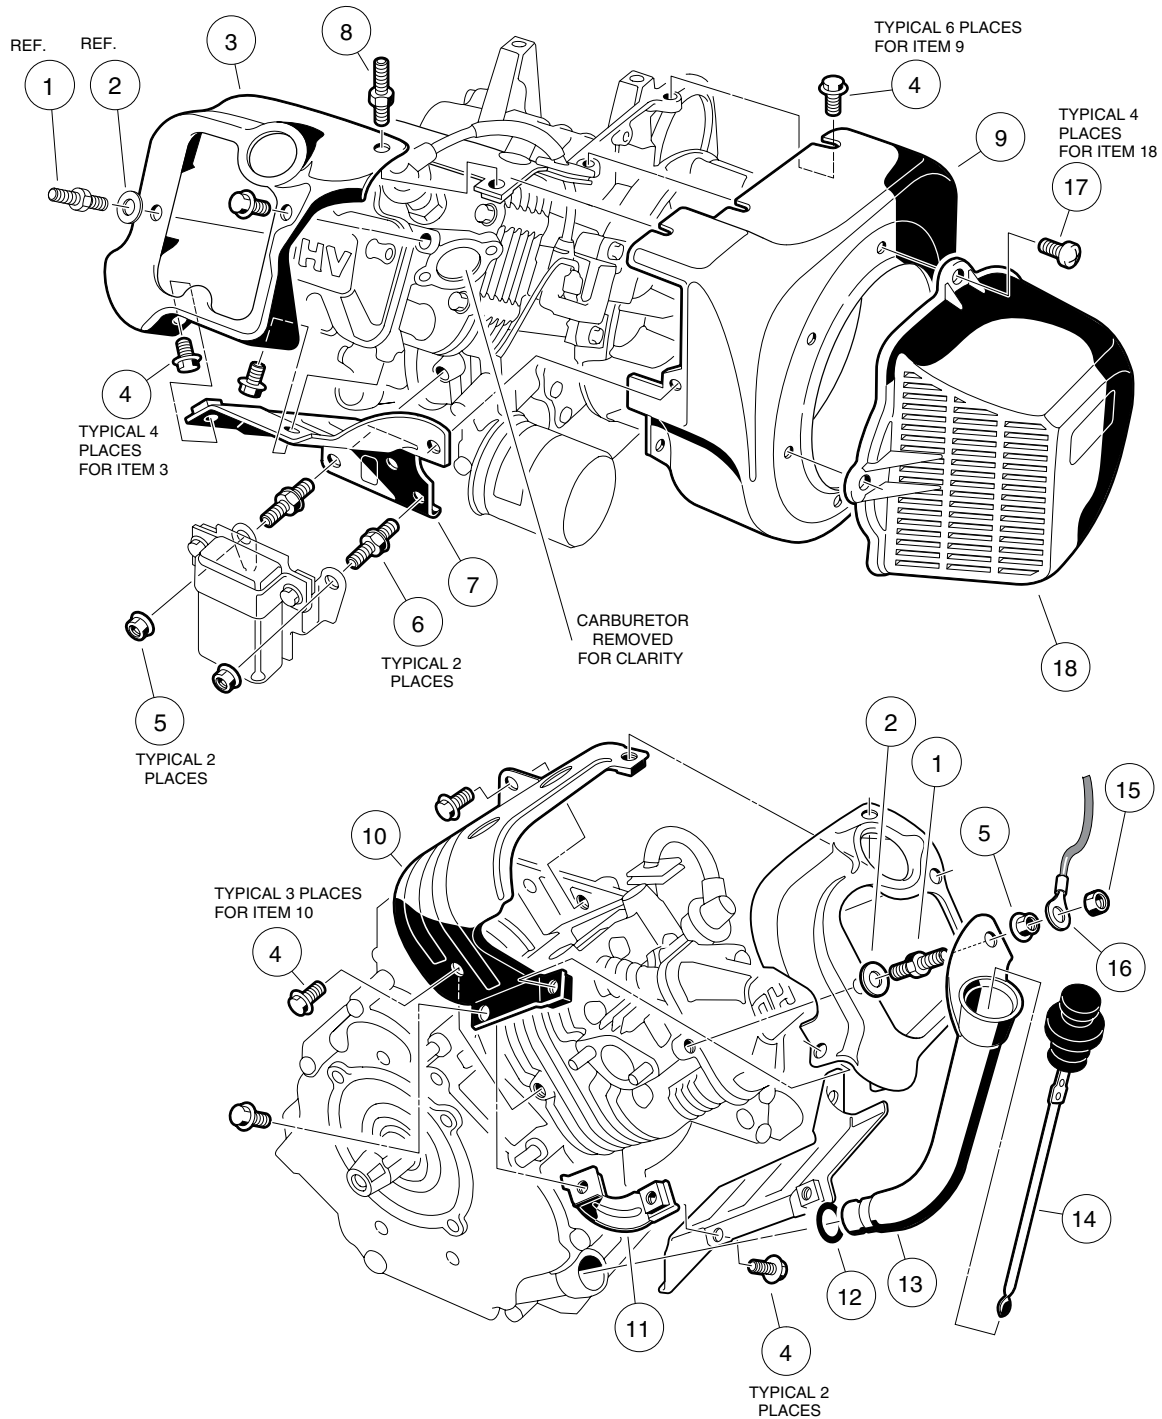

FE290 ENGINE – SHROUDS AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
	101953901	1 2 3 4 FE290 OHV Gasoline Engine (clockwise rotation) Without Automatic Compression Release (w/o ACR) with Carburetor (does not include items 15 - 18)	1
1	1016507	Bolt, 2-Ended, M6 x 1 x 29 mm	1
2	N/A	Washer, Flat, 6 mm	1
3	1016524	Shroud, Engine, FE290	1
4	1016456	Bolt, Flanged, M6 x 1 x 12 mm	15
5	1016547	Nut, Flange, M6 x 1	3
6	101909701	Bolt, 2-Ended, M6 x 1 x 27 mm	2
7	1016526	Shroud, Engine, FE290 (lower)	1
8	1017221	Bolt, 2-Ended, M6 x 1 x 46 mm	1
9	101915601	Housing, Fan	1
10	1016525	Shroud, Engine, FE290 (upper)	1
11	1016443	Bracket	1
12	1016539	O-Ring	1
13	1016536	Tube, Oil Filler, FE290	1
14	1016531	Dipstick	1
15	101887601	Nut, Nylon Lock, M6 x 1	1
16	1015332	Wire Assembly, #10 Braided Ground	1
17	1015969	Screw, Pan-Head, M6 x 1 x 14 mm	4
18	1015649	Shroud, Fan	1


7
G

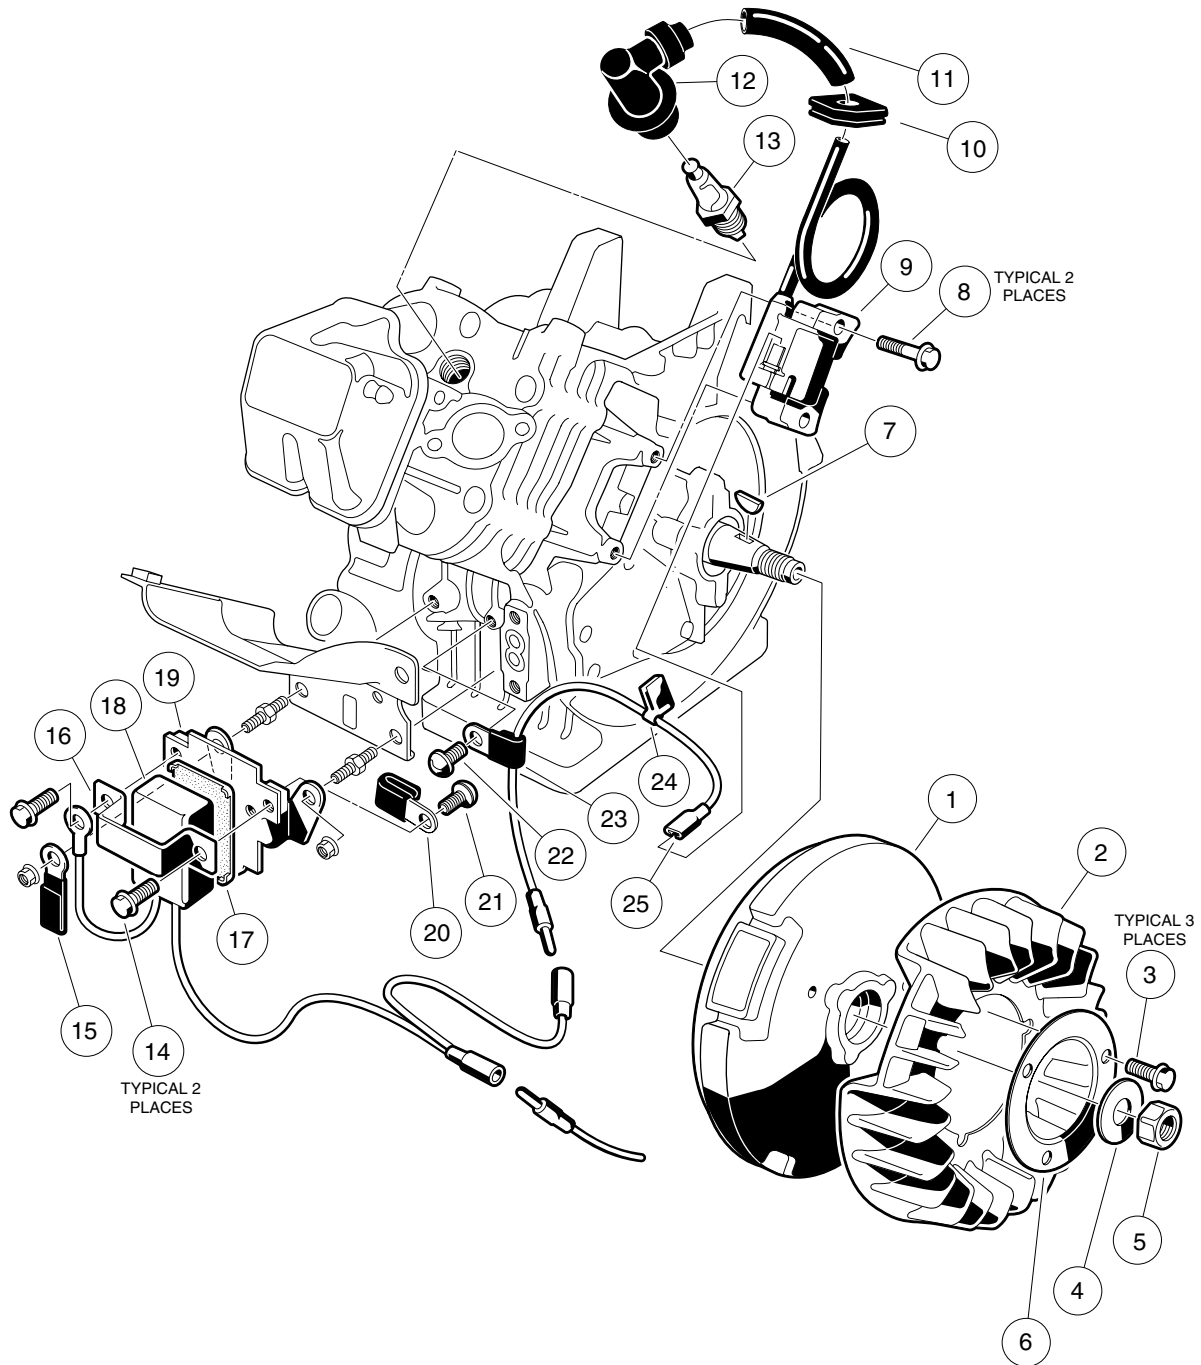

FE290 ENGINE – IGNITION COMPONENTS AND FLYWHEEL

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101915701	Flywheel	1
2	101915801	Fan, Flywheel, Gray	1
3	1017448	Screw, Flanged Hex-Head, M6 x 1 x 10 mm	3
4	1016548	Washer, Flat, 16 mm	1
5	1016505	Nut, Hex, M16 x 1.5	1
6	1017455	Plate, Flywheel Fan	1
7	1016562	Key	1
8	1016455	Bolt, Flanged, M5 x .8 x 25 mm	2
9	101909201	Coil, Ignition (with internal igniter)	1
10	1016578	Grommet	1
11	1016588	Tube, 7 mm x 70 mm	1
12	1016493	Assembly, Plug Cap	1
13	101881101	Plug, Spark, OHV	1
14	1016456	Bolt, Flanged, M6 x 1 x 12 mm	2
15	1012981	Clamp	1
16	1016579	Band, RPM Limiter Mount	1
17	1016586	Damper, RPM Limiter	1
18	101909401	Limiter, RPM, OHV	1
19	1016445	Bracket, RPM Limiter	1
20	101909501	Clamp	1
21	1016497	Screw, Cross Pan-Head, M5 x .8 x 8 mm	1
22	1016544	Screw, Cross Pan-Head Self-Tapping, M5 x .8 x 12 mm	1
23	1016561	Clamp	1
24	1016587	Clamp	1
25	101909301	Wire, Lead	1

7
G

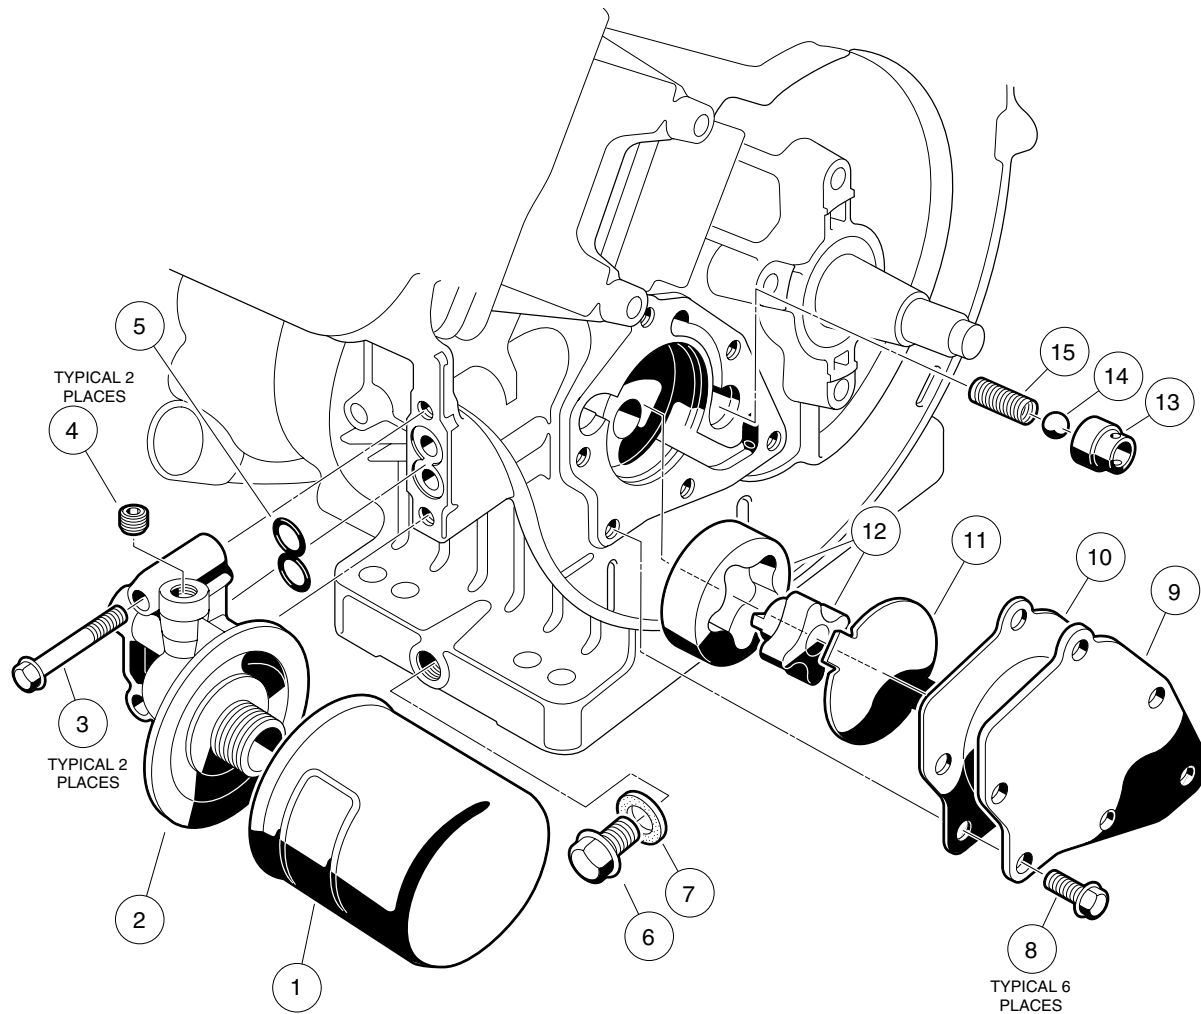


FE290 ENGINE – OIL CIRCULATION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016467	Oil Filter	1
2	1016502	Bracket, Oil Filter	1
3	1016457	Bolt, Flanged Hex-Head, M6 x 1 x 40 mm	2
4	1017507	Plug	2
5	1016570	O-Ring, Oil Filter Mount	1
6	1016576	Plug, Drain, FE290	1
7	1016432	Gasket, Drain Plug	1
8	1017456	Screw, Flanged Hex-Head, M6 x 1 x 12 mm	6
9	1016484	Cover, Pump	1
10	1016435	Gasket, Oil Pump	1
11	1016473	Plate, Oil Pump	1
12	101648203	Pump, Oil and Rotor	1
13	1016429	Seat, Valve	1
14	1016537	Ball, Steel, Pressure Relief	1
15	1016581	Spring	1

7

G

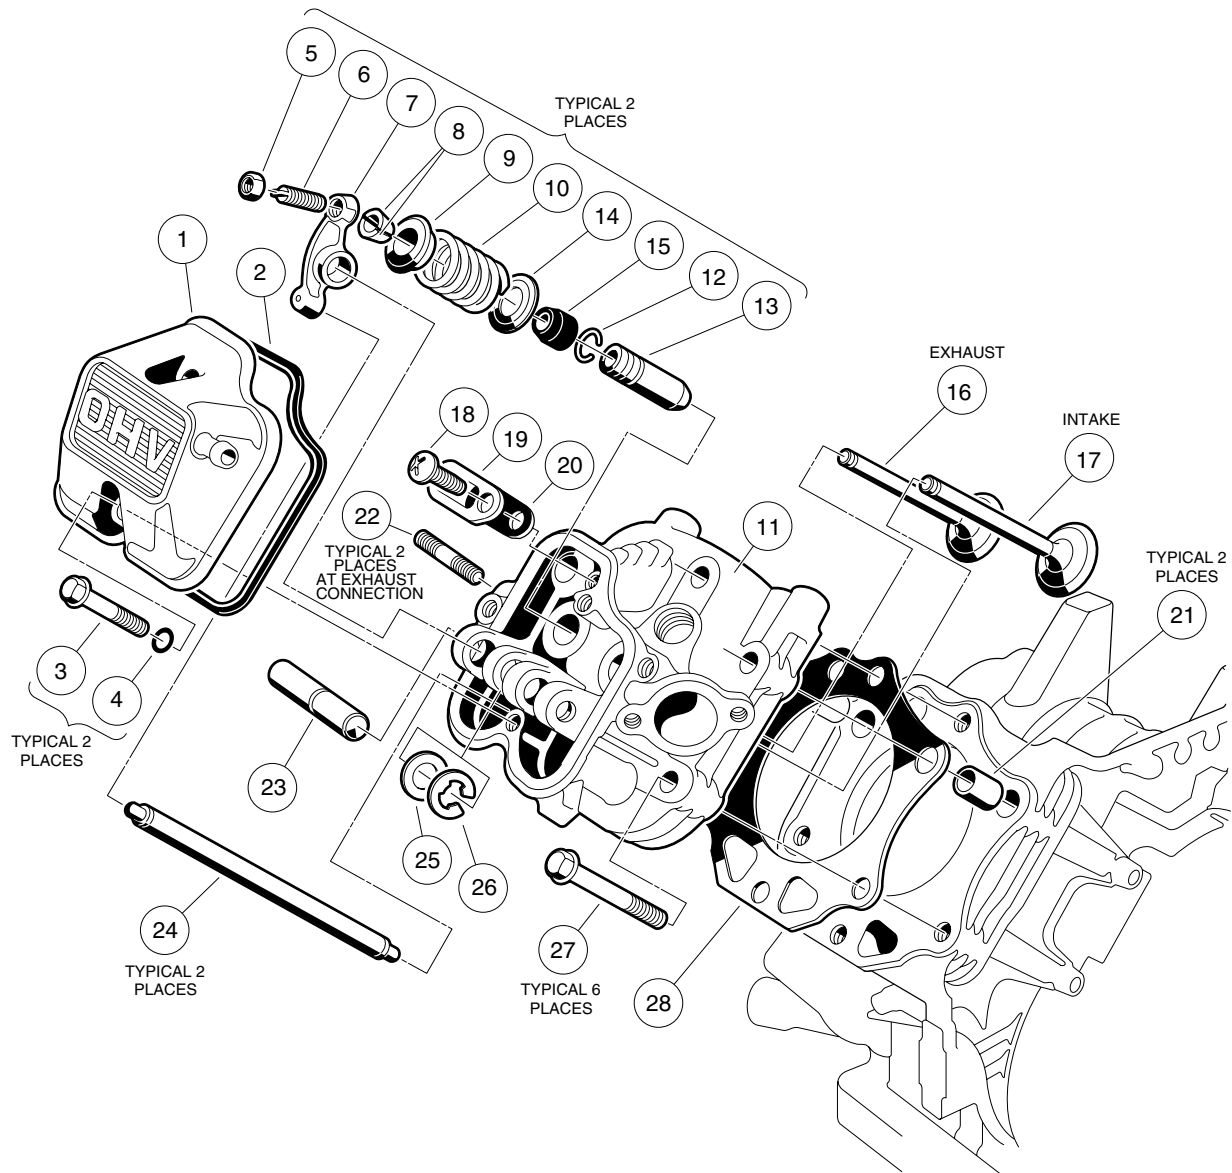


FE290 ENGINE – CYLINDER HEAD

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016442	Case, Rocker	1
2	1016436	Gasket, Rocker Case	1
3	1016583	Bolt, Flanged, M6 x 1 x 35 mm	2
4	1016569	O-Ring	2
5	1016545	Nut, Hex, M5 x .8	2
6	1016542	Screw, Stud, M5 x .8	2
7	1016451	Arm, Rocker	2
8	1016450	Collet	4
9	1016449	Retainer, Valve Spring	2
10	1016523	Spring, Engine Valve	2
11	1016431	Assembly, Cylinder Head, OHV (includes items 12 and 13)	1
12	1016560	Ring, Snap	2
13	1016519	Guide, Valve	2
14	1016479	Seat, Spring	2
15	1016566	Seal, Valve	2
16	1016448	Valve, Exhaust	1
17	1016447	Valve, Intake	1
18	1016544	Screw, Cross Pan-Head Self-Tapping, M5 x .8 x 12 mm	1
19	1016474	Plate	1
20	1016483	Valve	1
21	1016563	Pin	2
22	1016489	Bolt, Stud, M8 x 1.25 x 29 mm	2
23	1016452	Shaft, Rocker	1
24	1016471	Rod, Push	2
25	1016549	Washer, Flat, M12	1
26	1016517	Circlip, Type E	1
27	1016458	Bolt, Flanged, M8 x 1.25 x 45 mm	6
28	1016430	Gasket, Head	1
	102304701	Kit, Gasket, FE290 (not shown) (contains one each of all internal gaskets for the FE290 engine)	1

7


G

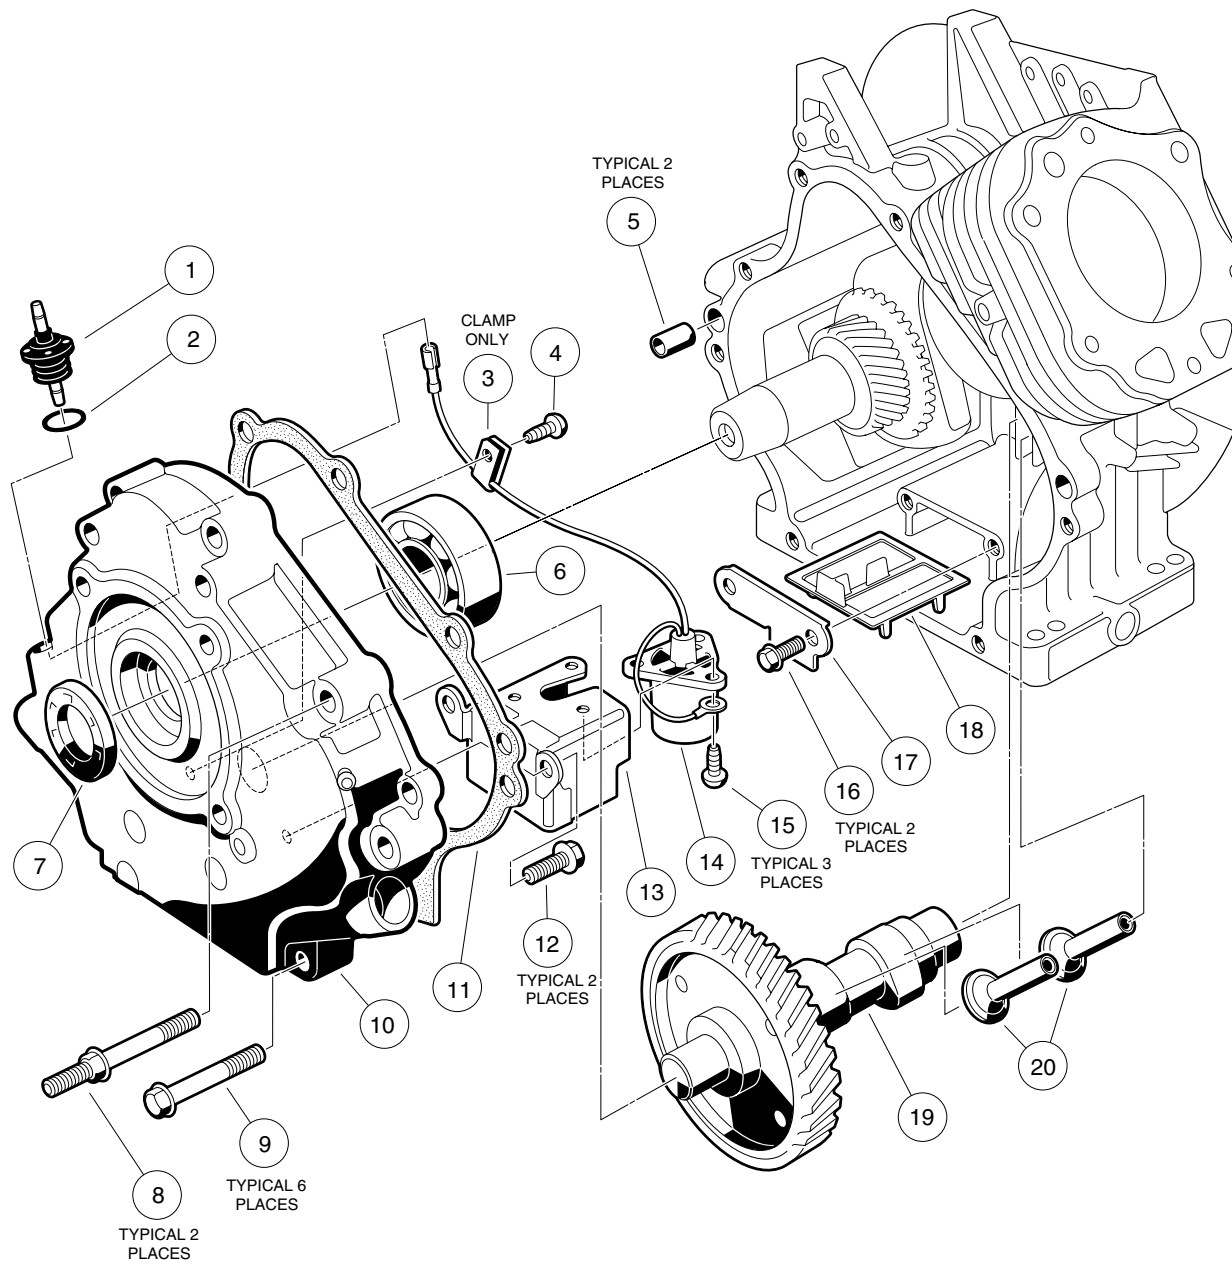

FE290 ENGINE – CRANKCASE, CAMSHAFT AND OIL SENSOR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016535	Connector, Cord	1
2	1016538	O-Ring	1
3	1016506	Clamp	1
4	1016544	Screw, Cross Pan-Head Self-Tapping, M5 x .8 x 12 mm	1
5	1016564	Pin	2
6	1016565	Bearing, Ball	1
7	1016567	Seal, Crankshaft	1
8	1016584	Bolt, 2-Ended, M8 x 1.25 x 69 mm	2
9	1016458	Bolt, Flanged, M8 x 1.25 x 45 mm	6
10	1016520	Cover, Crankcase	1
11	1016446	Gasket, Crankcase Cover	1
12	1016456	Bolt, Flanged, M6 x 1 x 12 mm	2
13	1016510	Bracket, Oil Level Switch	1
14	1016494	Sensor, Oil Level	1
15	1016496	Screw, Cross Pan-Head, M4 x .7 x 8 mm	3
16	1016454	Bolt, Flanged, M5 x .8 x 8 mm	2
17	1016472	Plate, Oil Filter Screen	1
18	1016521	Screen, Oil Filter	1
19	101915401	Camshaft, Complete	1
20	1016453	Tappet	2


7
G

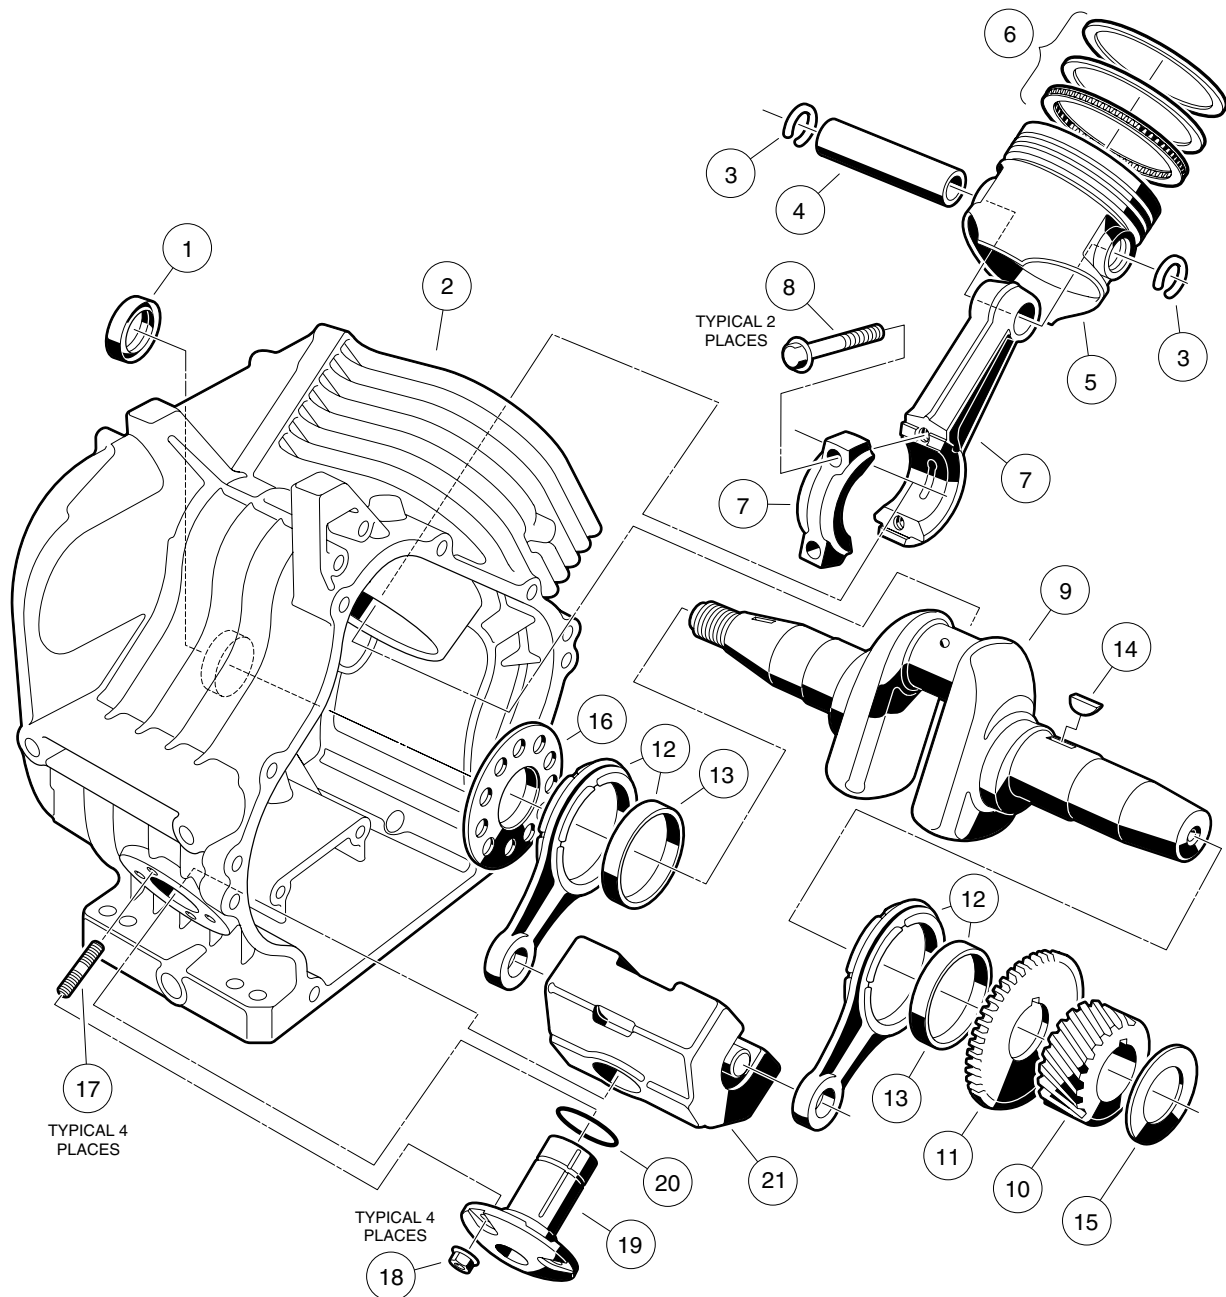

FE290 ENGINE – CRANKCASE AND CRANKSHAFT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016568	Seal, Oil	1
2	101915501	Crankcase, OHV	1
3	1016558	Ring, Snap	2
4	1016460	Pin, Piston	1
5	101645901	Piston, Standard	1
5	101645902	Piston, .25 mm Oversized	1
5	101645903	Piston, .50 mm Oversized	1
6	101646101	Ring Set, Piston, Standard	1
6	101646102	Ring Set, Piston, .25 mm Oversized	1
6	101646103	Ring Set, Piston, .50 mm Oversized	1
7	101647501	Assembly, Connecting Rod, Standard (includes 2 each of item 8)	1
7	101647502	Assembly, Connecting Rod, .50 mm Undersized (includes 2 each of item 8)	1
8	1016509	Screw, Hex-Head Cap, M7 x 1 x 36 mm	2
9	101922301	Crankshaft, FE290 (left-hand thread) (includes items 10, 11 and one each of item 12)	1
10	1016533	Gear, Helical	1
11	1016532	Gear, Spur	1
12	1016516	Assembly, Rod (includes one each of item 13)	2
13	1016580	Bearing, Plain	2
14	1016562	Key	1
15	101655001	Shim, Crankshaft, 1.13 mm Thick	A/R
15	101655002	Shim, Crankshaft, 1.18 mm Thick	A/R
15	101655003	Shim, Crankshaft, 1.23 mm Thick	A/R
15	101655004	Shim, Crankshaft, 1.28 mm Thick	A/R
15	101655005	Shim, Crankshaft, 1.33 mm Thick	A/R
15	101655006	Shim, Crankshaft, 1.38 mm Thick	A/R
15	101655007	Shim, Crankshaft, 1.43 mm Thick	A/R
15	101655008	Shim, Crankshaft, 1.48 mm Thick	A/R
15	101655009	Shim, Crankshaft, 1.53 mm Thick	A/R
16	1016559	Spacer	1
17	1016541	Bolt, Stud, M6 x 1 x 22 mm	4
18	1016547	Nut, Flanged, M6 x 1	4
19	1016470	Shaft, Counterbalance Guide	1
20	1016571	O-Ring	1
21	1016469	Weight, Counterbalance	1

7
G

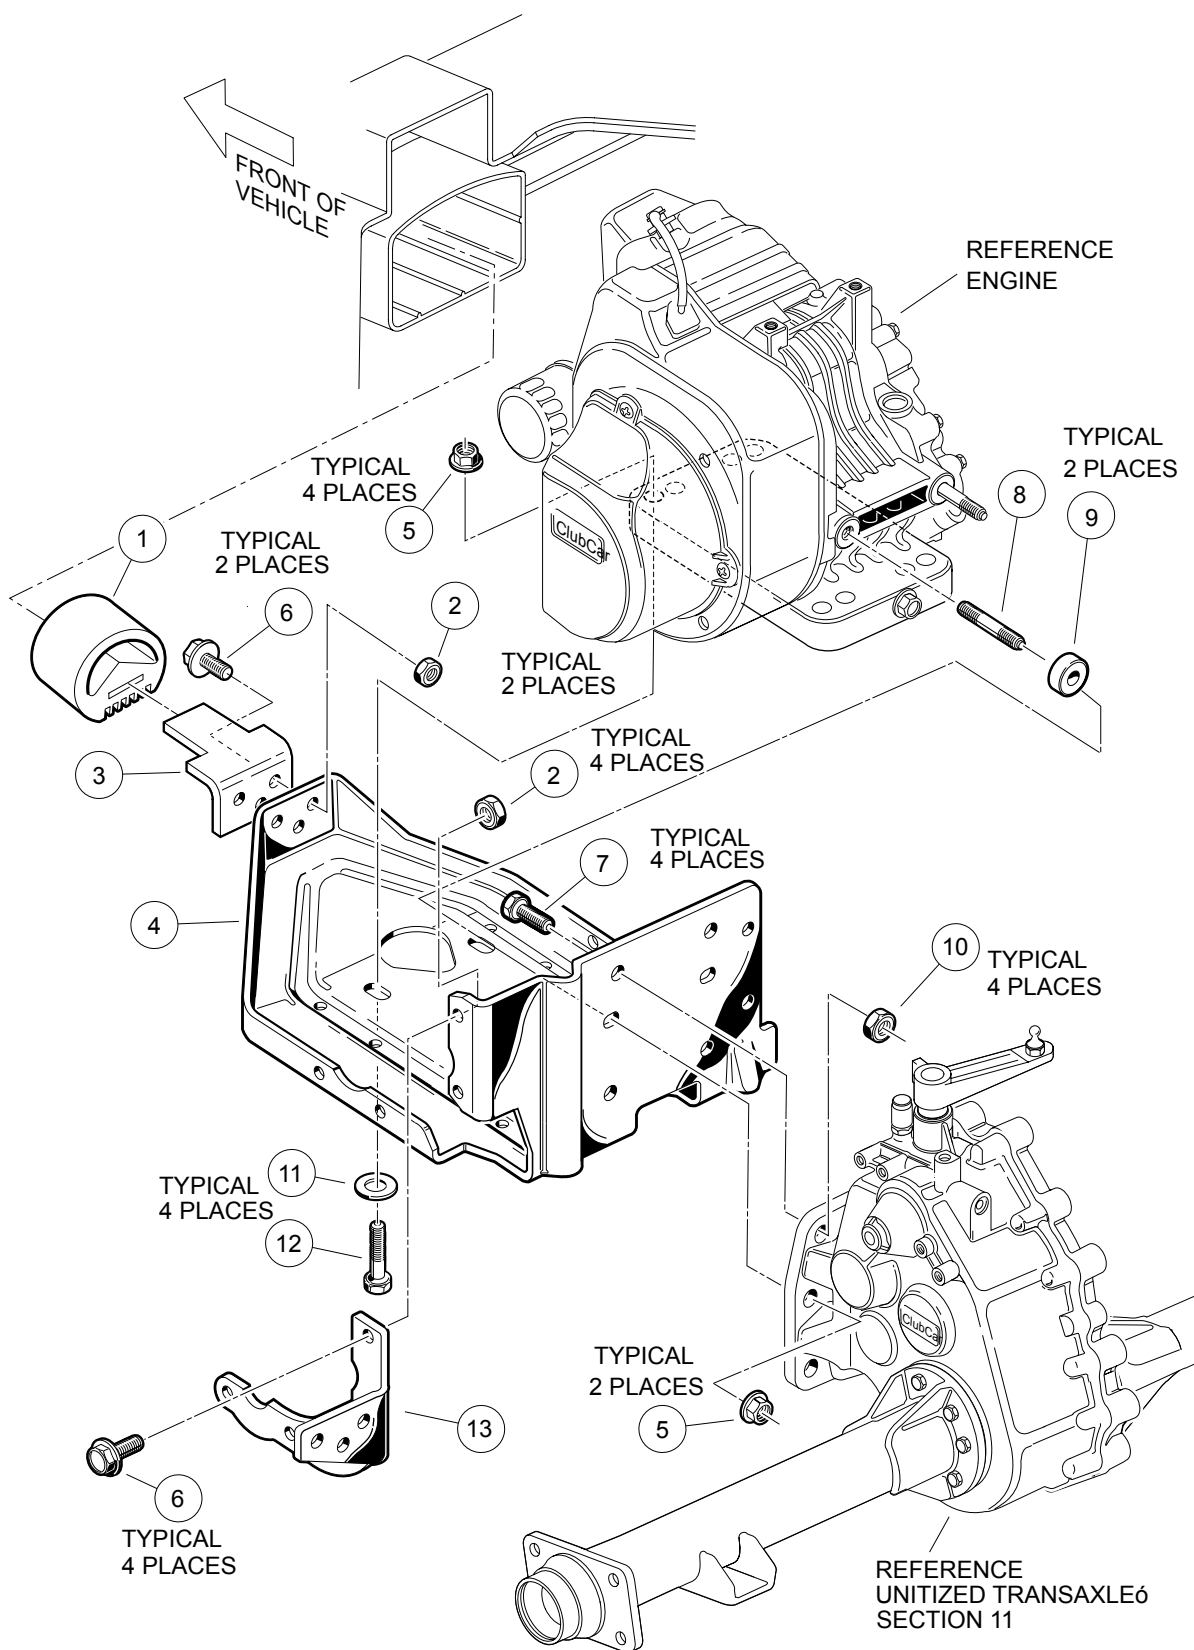

ENGINE MOUNTING

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102540301	Snubber, Inner Frame	1
2	1013924	Nut, Hex Lock, 5/16-24, UNF	6
3	101834601	Bracket, Snubber	1
4	101827101	Plate, Mounting	1
5	101833001	Nut, Flange, M8 x 1.25	6
6	101884801	Screw, Hex Washer-Head, 5/16-24 x 7/8	6
7	101833301	Screw, Hex-Head Cap, M10 x 1.25 x 30 mm	4
8	101833201	Stud, M8 x 1.25 x 60 mm	2
9	101832101	Spacer	2
10	101832901	Nut, Flange, M10 x 1.25	4
11	1012571	Washer, Heavy Flat, 5/16	4
12	101855901	Screw, Hex-Head Cap, M8 x 1.25 x 43 mm	4
13	101832701	Stiffener, Flywheel Side	1

7

G


7

G

FUEL, INTAKE, AND GOVERNOR SYSTEMS

8


G

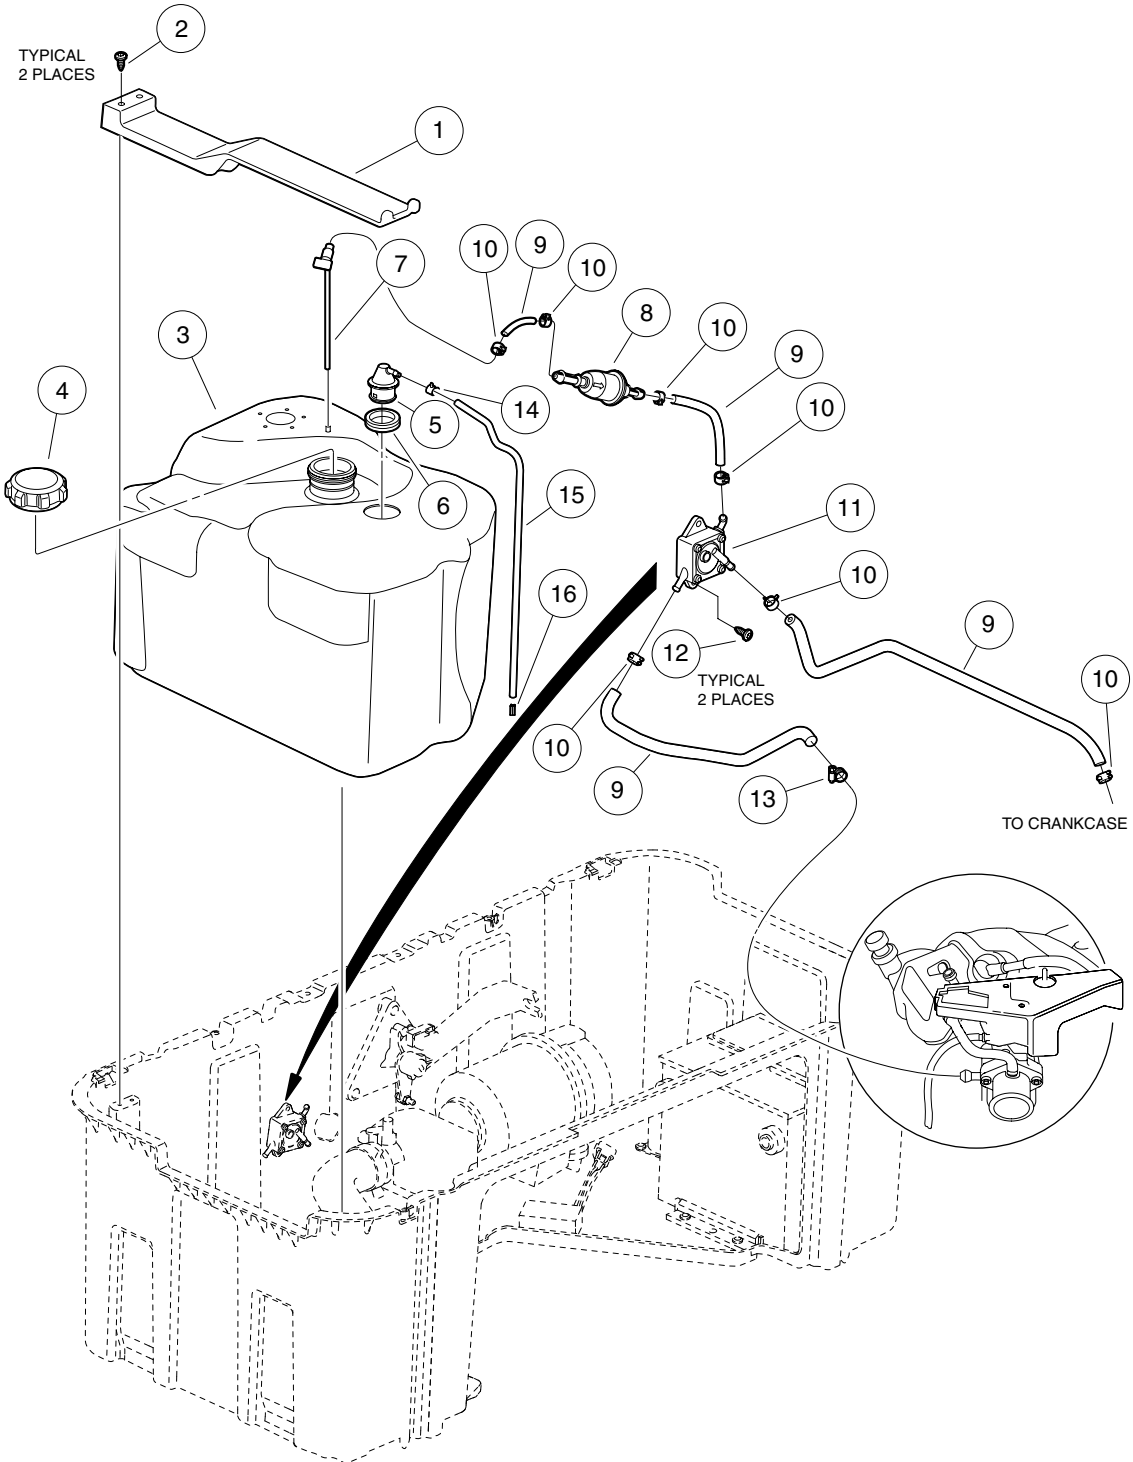

FUEL SYSTEM

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102514201	Hold Down, Tank	1
2	102296020	Screw, M 6 x 20, Torx, Pan-Head	2
3	102513402	Assembly, Fuel Tank without Sending Unit (includes items 4 - 7)	1
4	1015188	Cap, Fuel, Non-vented	1
5	1015143	Assembly, Fuel Tank Vent	1
6	1015139	Grommet, Insulation	1
7	102513701	Valve, Fuel Pickup Tube	1
8	102003201	Filter, Fuel	1
9	1013692	Line, Fuel, Bulk *	AR
10	1012649	Clamp, Hose	7
11	1014523	Pump, Fuel Impulse	1
12	102296020	Screw, M6 x 20, Torx, Pan-Head	2
13	1013687	Clamp, Hose, 3/8	1
14	1013746	Clamp, Hose	2
15	1015137	Hose, Vent, Bulk	AR
16	101824401	Barb, Vent	1
17	1014524	Kit, Fuel Impulse Pump Rebuild	1
*The total fuel line length for Precedent Golf Car is 46.5 inches (1180 mm).			

8
G

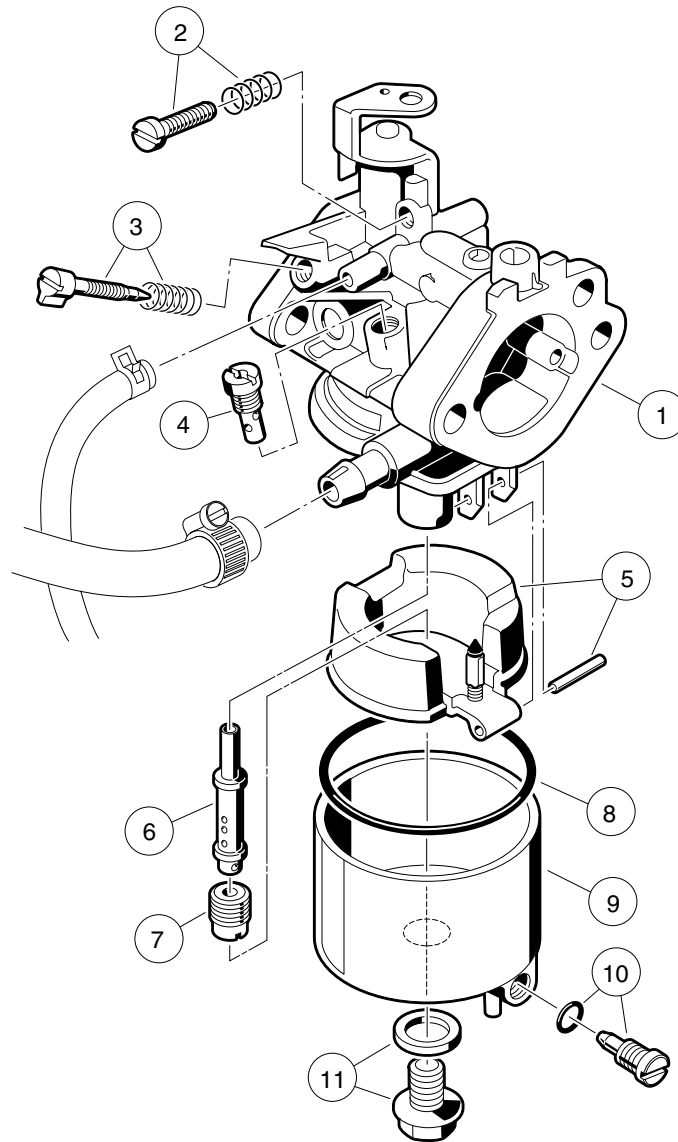


CARBURETOR ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101905601	Assembly, Carburetor (includes items 2 - 11)	1
2	1016501	Assembly, Idle Screw	1
3	N/A	Assembly, Pilot Air Screw	1
4	101973101	Jet, Pilot, #40	1
5	1016486	Assembly, Float	1
6	101973201	Nozzle, Main	1
		Standard Jetting:	
7	101642582	Jet, Main, 0 - 3,000 feet (0 - 915M)	1
7	101642580	Jet, Main, 3,000 - 5,000 feet (915 - 1524M)	A/R
7	101642578	Jet, Main, 5,000 - 8,000 feet (1524 - 2438M)	A/R
7	101642575	Jet, Main, 8,000 - 10,000 feet (2438 - 3048M)	A/R
7	101642572	Jet, Main, 10,000 Feet and Above (3048M and higher)	A/R
8	1016437	Gasket, Float Chamber	1
9	1017461	Assembly, Float Chamber (includes item 10)	1
10	1016499	Assembly, Screw	1
11	1016585	Assembly, Bolt	1

8

G

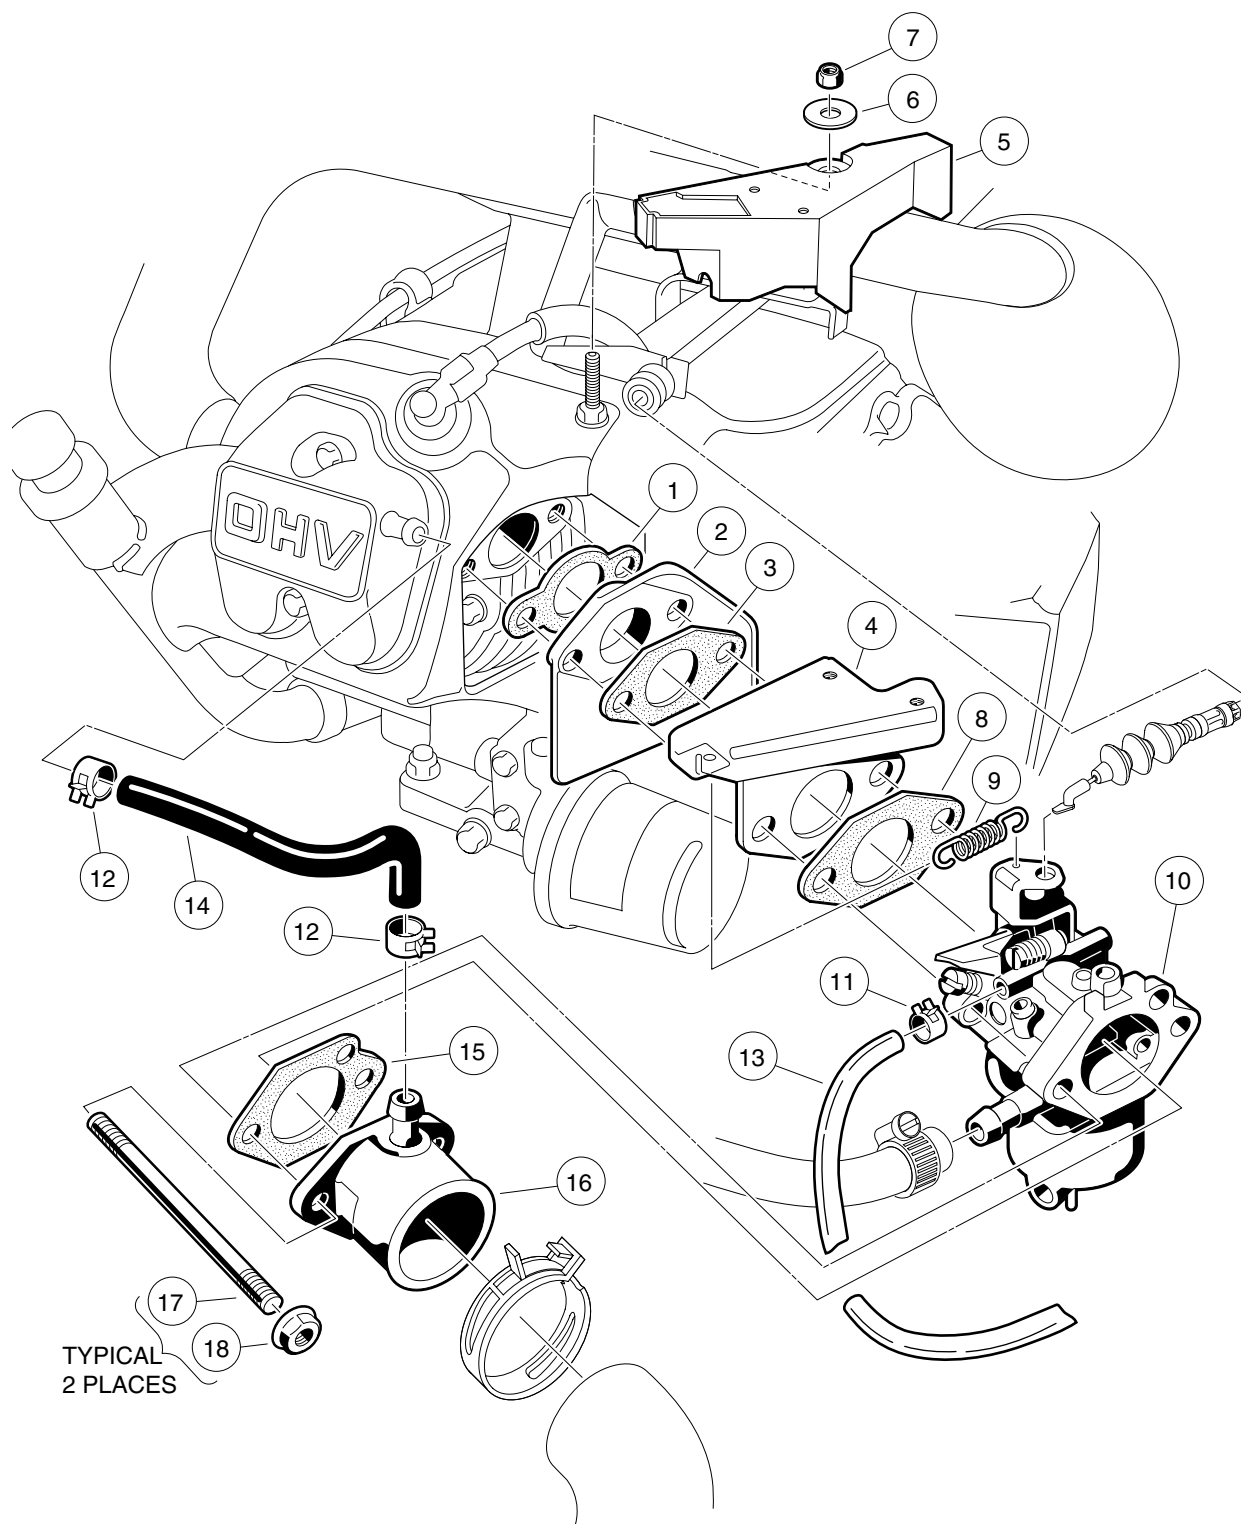


CARBURETOR INSTALLATION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016440	Gasket, Insulator	1
2	101648102	Insulator, Carburetor	1
3	1016439	Gasket, Carburetor Insulator to Throttle Bracket	1
4	1016444	Bracket, Throttle	1
5	101820201	Guard, Governor	1
6	1011697	Washer, Flat, 5/16	1
7	101887601	Nut, Nylon Lock, M6 x 1	1
8	1016441	Gasket, Throttle Bracket to Carburetor	1
9	1016582	Spring, Throttle Return	1
10	101905601	Assembly, Carburetor	1
11	1013746	Clamp, Hose (gray)	1
12	1017466	Clamp, Hose (bronze)	2
13	1015137	Line, Bulk Vent (available by the foot)	A/R
14	1016572	Tube, Crankcase Vent	1
15	1016438	Gasket, Carburetor to Intake Manifold	1
16	1016480	Pipe, Intake	1
17	101649002	Screw, 2-Ended Stud, M6 x 1 x 90 mm	2
18	1016547	Nut, Flanged, M6 x 1	2

8

G

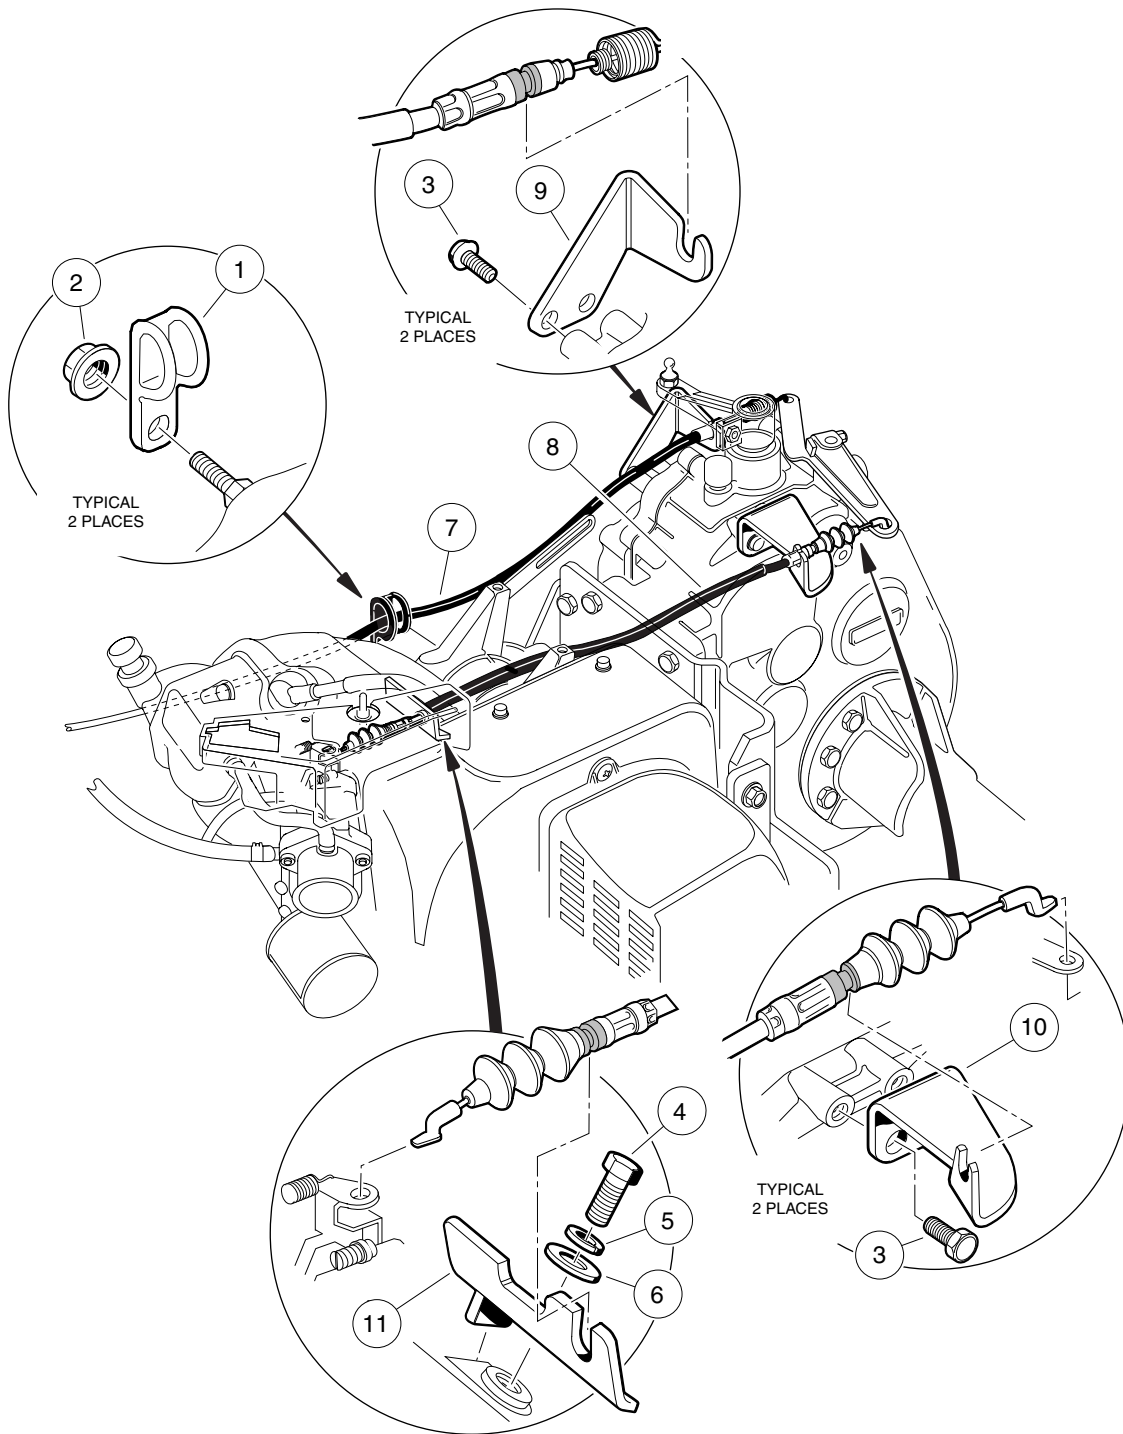


GOVERNOR AND ACCELERATOR CABLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1013700	Clamp, Cable Retaining	2
2	1016546	Nut, Flanged Hex, M8 x 1.25	2
3	1012285	Screw, Hex, Type TT, 1/4-20 x 5/8	4
4	1012830	Screw, Hex-Head Cap, M8 x 1.25 x 24 mm	1
5	7174	Washer, Lock, 5/16	1
6	1011697	Washer, Flat, 5/16	1
7	102513102	Cable, Accelerator (throttle)	1
8	102336001	Cable, Governor, Snap-in	1
9	101832302	Bracket, Accelerator Cable, Snap-in	1
10	101832202	Bracket, Governor Cable, Snap-in, Rear	1
11	101584502	Bracket, Governor Cable, Snap-in	1
12	102410606	Clamp, P- (mounts on engine to retain governor cable)	1

8

G

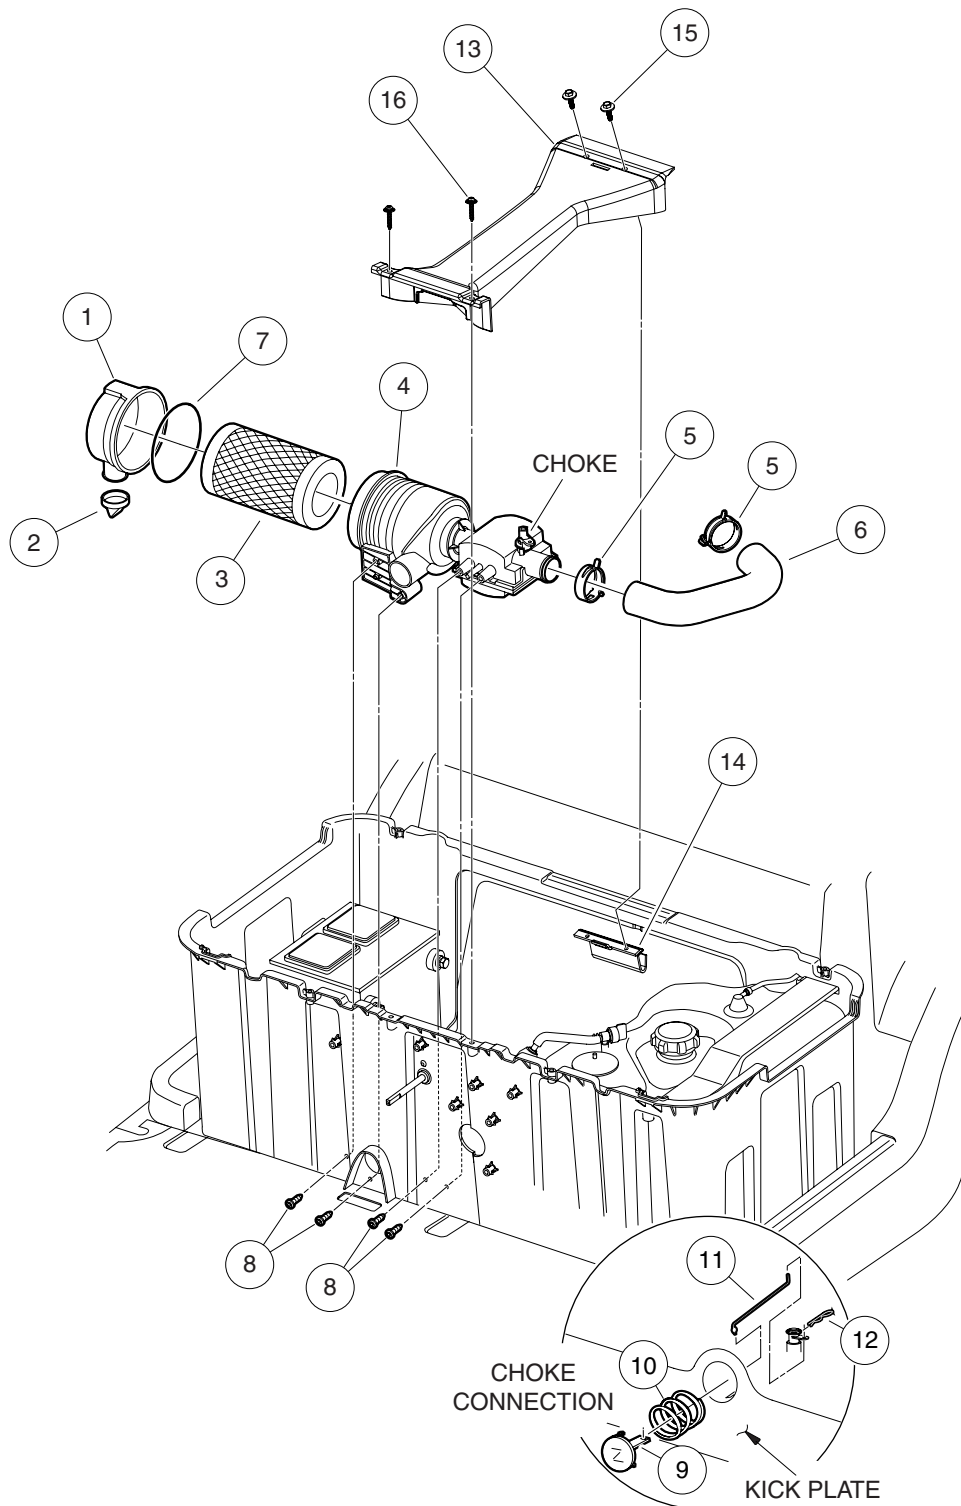

CHOKE AND AIR BOX ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	102514301	Assembly, Air Intake (includes items 1 - 7)	1
1	102558601	Cap, Air Intake	1
2	102558701	Valve, Burp	1
3	102558201	Filter, Air	1
4	N/A	Assembly, Body Intake	1
5	102558301	Clamp, Hose	2
6	102558401	Hose, Air Intake	1
7	102558501	Gasket, Air Intake	1
8	102296020	Screw, Torx Pan-Head, M6 x 20	4
9	101811401	Lever, Choke (part of kick plate)	1
10	101856201	Spring, Compression (part of kick plate)	1
11	102514401	Rod, Choke Button	1
12	1014413	Pin, Hair Spring, Cotter	1
13	102521301	Brace, PowerShield™	1
14	102521401	Support, PowerShield	1
15	102297125	Screw, Thread-Forming SEMS, M6-1 x 25.....	2
16	102295830	Screw, Cone Washer, K60 x 30.....	2

8

G


8

G

EXHAUST SYSTEM

9

G

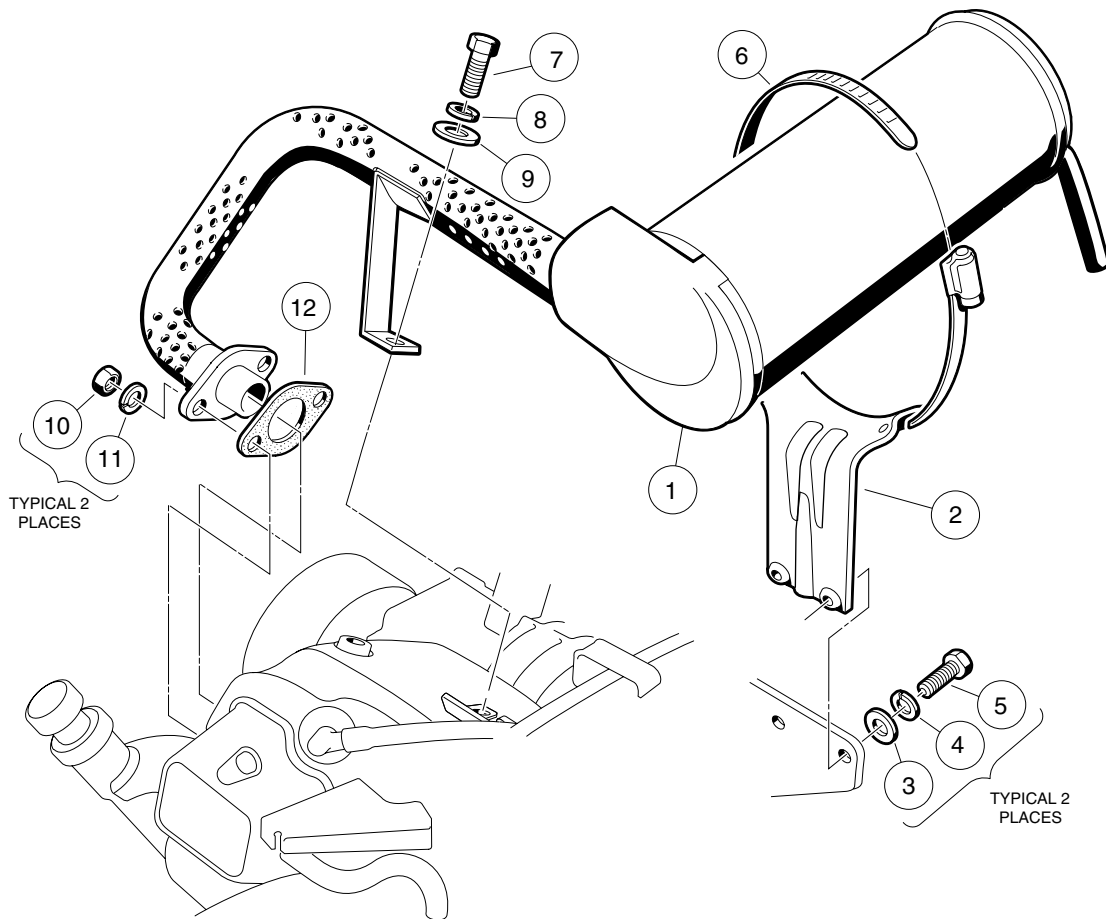

EXHAUST SYSTEM

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102522301	System, Exhaust (Gasket not included)	1
2	1015814	Bracket, Muffler Mounting	1
3	332	Washer, Flat, 1/4	2
4	451	Washer, Lock, 1/4	2
5	7847	Screw, Hex-Head Cap, 1/4-20 x 3/4	2
6	1017689	Clamp, Muffler	1
7	1012830	Screw, Hex-Head Cap, M8 x 1.25 x 22 mm	1
8	7174	Washer, Lock, 5/16	1
9	1015075	Washer, Flat, 5/16	1
10	1012528	Nut, Hex, M8 x 1.25	2
11	1013734	Washer, Lock, 8 mm	2
12	1015330	Gasket, Exhaust	1

9

G



9

G

TORQUE CONVERTER

10

G

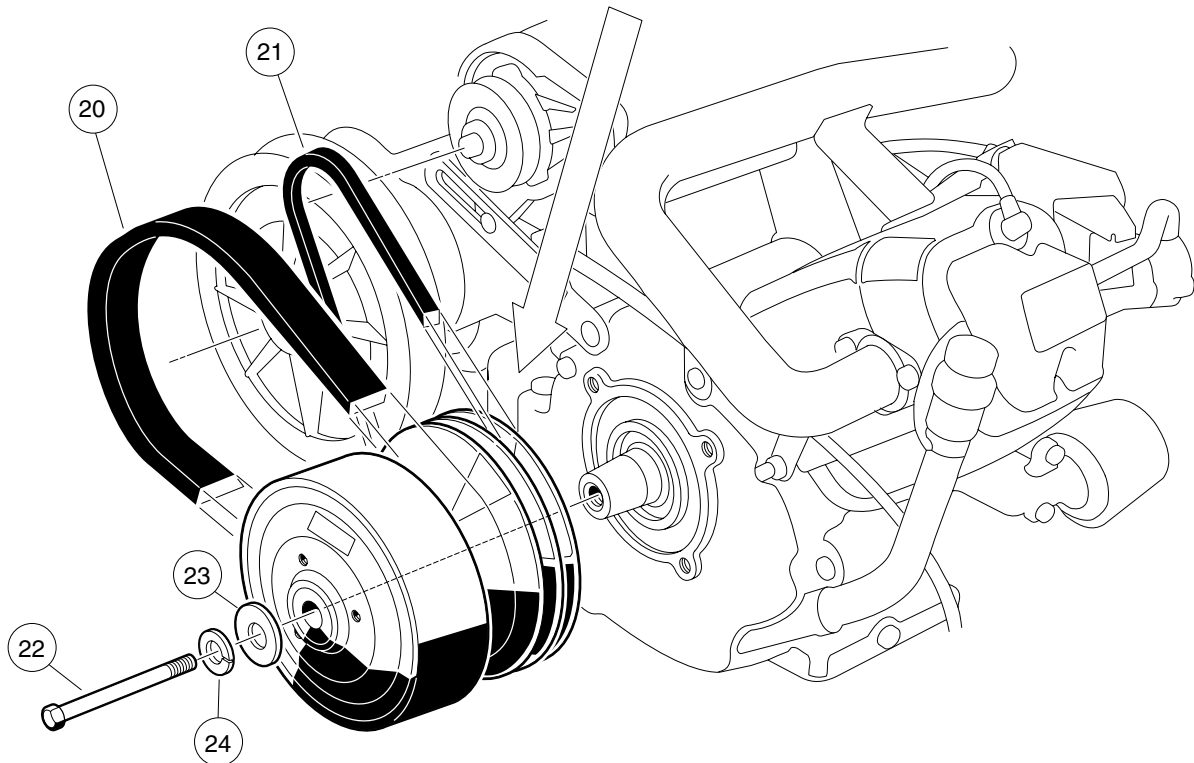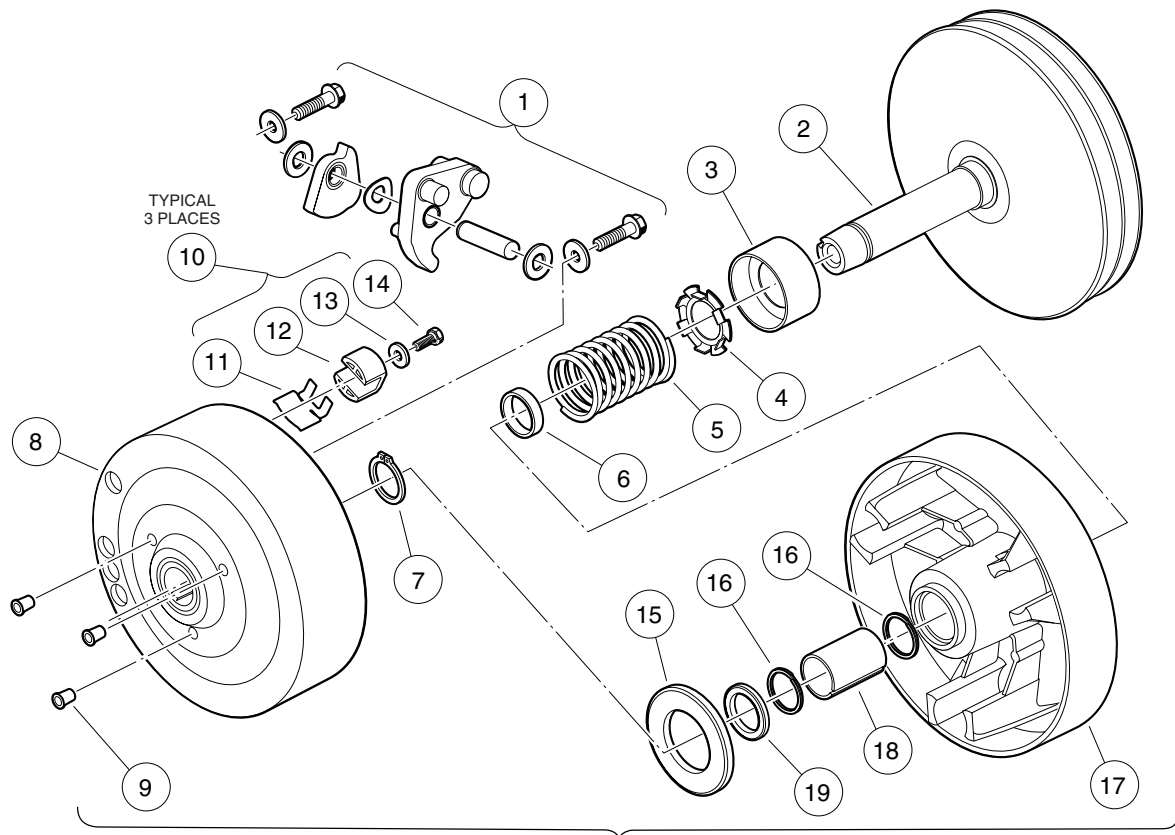


DRIVE CLUTCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	101833902	Assembly, Drive Clutch (includes items 1 - 19)	1
1	1016801	Kit, Drive Clutch Weight	1
2	101929801	Assembly, Fixed Face	1
3	1014049	Bearing, Idler	1
4	1014050	Retainer, Spring	1
5	1014051	Spring, Drive Clutch – Black	1
6	1016289	Spacer, Fixed Face Shaft	1
7	1014057	Ring, Retaining	1
8	1014059	Assembly, Drive Hub	1
9	N/A	Plug, Drive Clutch	3
10	1014453	Kit, Drive Clutch Button (includes item 11 - 14)	1
11	1014287	Spring, Drive Button	3
12	1014062	Driver, Drive Clutch	3
13	183	Washer, Flat, #10, Type A	3
14	8450	Screw, Hex-Head, #10-24 x .5	3
15	1014058	Washer, Thrust	1
16	1014056	Ring, Spiral Back-Up	2
17	1014052	Assembly, Movable Face (includes items 18 and 19)	1
18	N/A	Bushing	1
19	1014055	Retainer	1
20	1016203	Belt, Drive	1
21	101916701	Belt, Starter/Generator	1
22	101916501	Screw, Hex-Head Cap, 3/8-24 x 5-1/2 (left-hand threads)	1
23	808	Washer, Flat, 3/8	1
24	357	Washer, Lock, 3/8	1

10

G

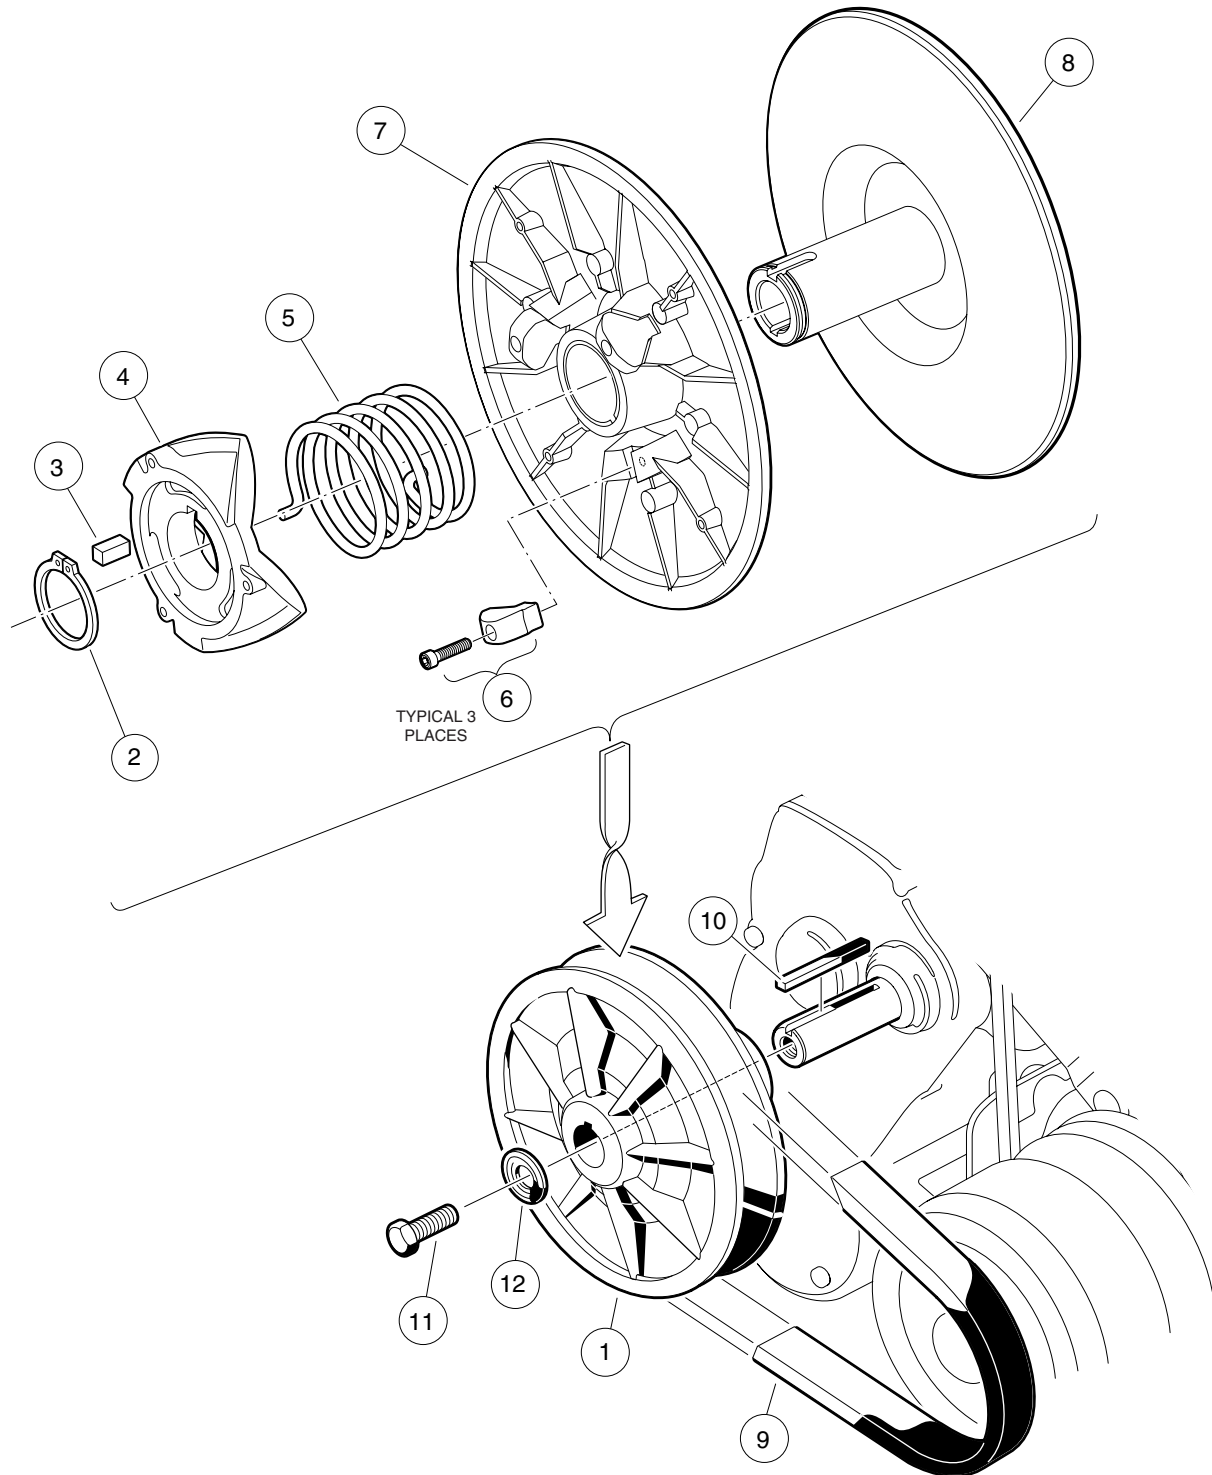

DRIVEN CLUTCH

ITEM	PART NO.	DESCRIPTION	QTY	10	G
		1 2 3 4			
1	101834001	Assembly, Driven Clutch (includes items 2 - 8)	1		
2	1014080	Ring, Retaining	1		
3	1014078	Key	1		
4	1017686	Cam	1		
5	101836201	Spring – Green	1		
6	1014454	Kit, Driven Clutch Button (includes 3 screws and 3 buttons)	1		
7	1014072	Assembly, Movable Face with Bushing	1		
8	1014070	Face, Fixed	1		
9	1016203	Belt, Drive	1		
	AM10419	Kit, Driven Clutch Hardware Repair (includes items 10 - 12)	1		
10	101833401	Key, Square Transmission	1		
11	102242101	Screw, Hex-Head Cap, Thread-Locking, 5/16-18 x 3/4	1		
12	1017327	Washer, Driven Clutch	1		


10

G

UNITIZED TRANSAXLE

11


G

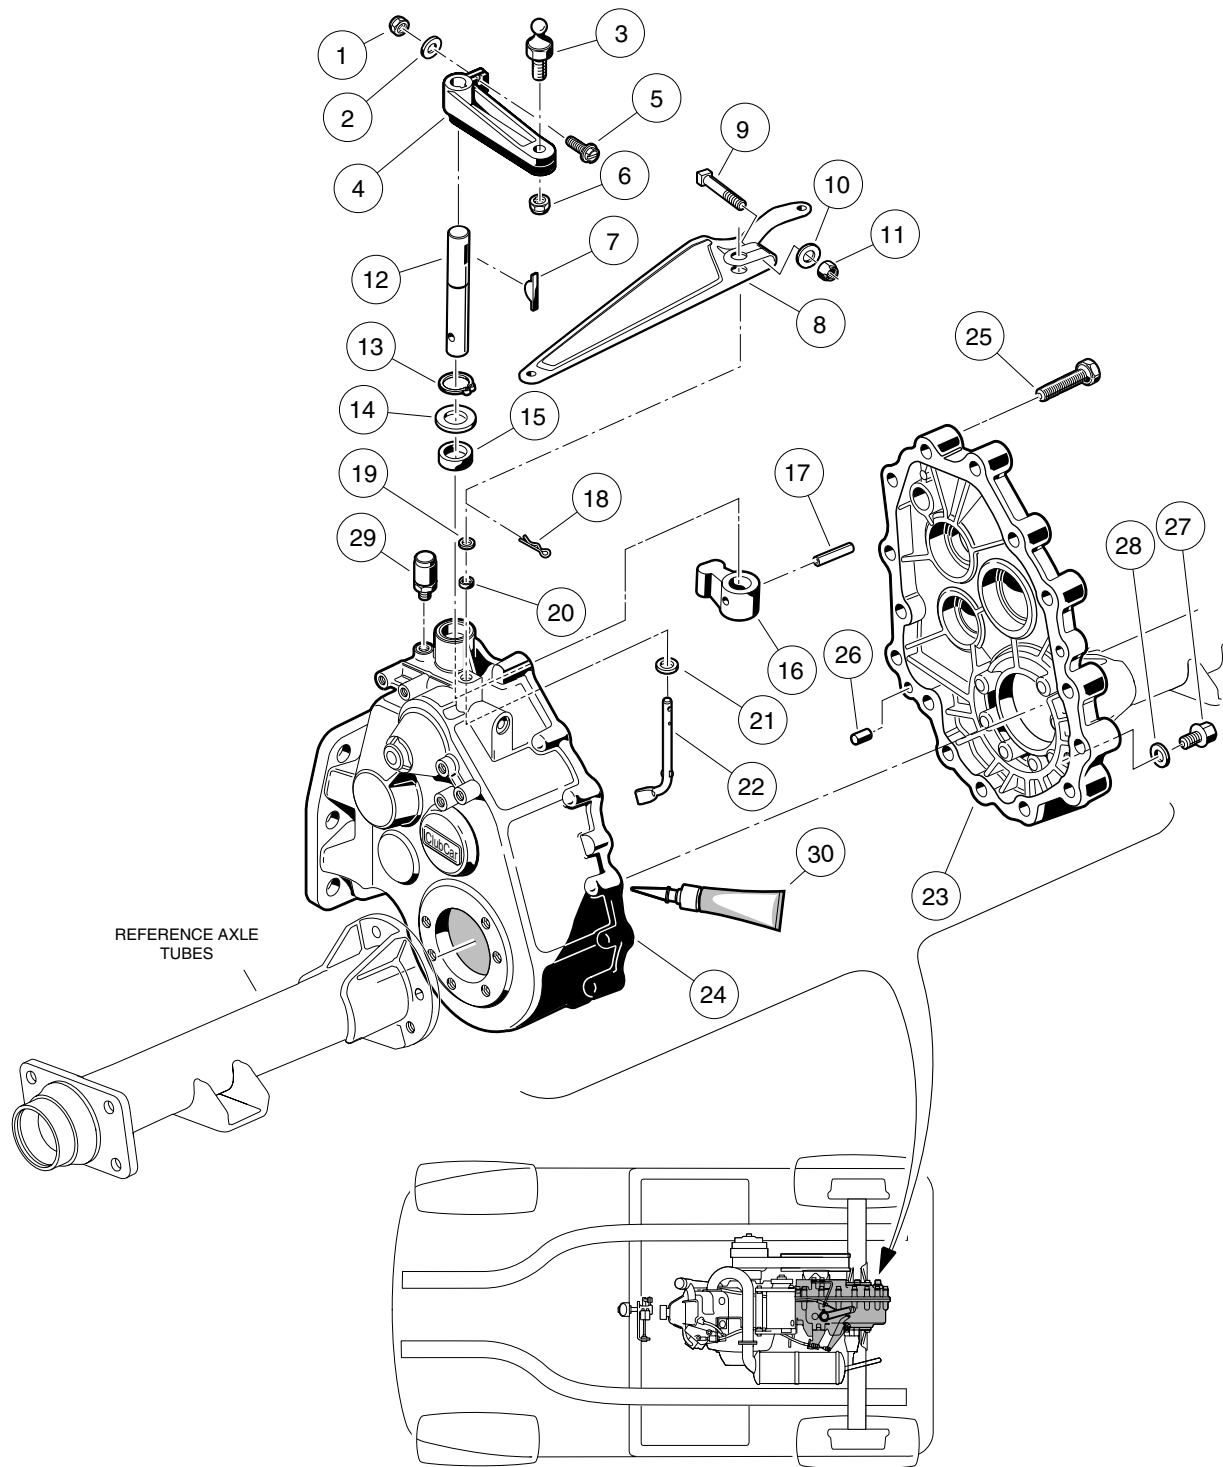

UNITIZED TRANSAXLE – GEAR CASES AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1013061	Nut, Nylon Lock, #10-32	1
2	183	Washer, Flat, #10	1
3	102526201	Stud, Threaded, 1/4-28	1
4	102515401	Lever, Transmission Shifter	1
5	1017082	Screw, Hex Washer-Head, #10-32 x 3/4	1
6	8717	Nut, Nylon Lock, 1/4-28	1
7	1017231	Key, Woodruff	1
8	101834801	Arm, Governor Lever	1
9	101886101	Screw, Square-Head, 1/4-20 x 1	1
10	1014007	Washer, Type B, 1/4	1
11	8233	Nut, Nylon Lock, 1/4-20	1
	101833601	Unitized Transaxle (includes items 12 - 86)	1
12	101890201	Shaft, Shifter	1
13	101927301	Ring, Snap	1
14	101892901	Washer, Flat	1
15	101927201	Seal, Oil	1
16	101890101	Lever, Shifter	1
17	1012752	Pin, Roll	1
18	101928601	Pin, Cotter	1
19	1016513	Washer, Flat	1
20	101927101	Seal, Oil	1
21	101893801	Washer	1
22	101891301	Arm, Pivot	1
23	101890601	Gear Case (passenger side)	1
24	101890501	Gear Case (driver side)	1
25	101926901	Bolt, Flanged, M8 x 1.25 x 40 mm	15
26	1012896	Pin, Dowel	2
27	1013759	Plug, Drain (includes item 28)	2
28	1016432	Gasket	1
29	1012711	Breather	1
30	101928701	Gasket, Liquid, 8.8 oz. (250 grams)	A/R

 
11
G



UNITIZED TRANSAXLE – F&R TRANSMISSION AND GEAR REDUCTION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
31	101892001	Rod, Shift	1
32	101890001	Fork, Shift	1
33	1012748	Spring	1
34	1012747	Ball, Steel	1
35	101889401	Guide	1
36	AM10080	Bearing, Ball	2
37	1016338	Washer, Spring	2
38	101892401	Gear, Spur	1
39	101892201	Plate, Thrust	3
40	101980901	Gear Assembly, Input, 28 Tooth (16°)	1
41	101927601	Bearing, Needle	3
42	101927501	Bearing, Needle	1
43	101981001	Ring, Synchronizer (16°)	2
44	1012741	Spring, Synchronizer	2
45	101928001	Hub, Synchronizer Clutch	1
46	1012740	Insert, Synchronizer	3
47	101927901	Sleeve, Synchronizer	1
48	101927701	Pin, Dowel	1
49	101889901	Shaft, Input	1
50	101980801	Gear Assembly, Input, 25 Tooth (16°)	1
51	1016337	Washer, Thrust	1
52	AM10081	Bearing, Ball	1
53	1012714	Seal, Oil, Input Shaft	1
54	101892601	Gear, 17 Tooth	1
55	101893201	Key	1
56	101892501	Gear, 61 Tooth	1
57	101928101	Bearing, Ball	1
58	101893901	Washer	1
59	101892301	Governor Assembly	1
60	101891601	Sleeve	1
61	101891901	Gear, Cluster Idler	1
62	7335	Bearing, Ball	2

11
G

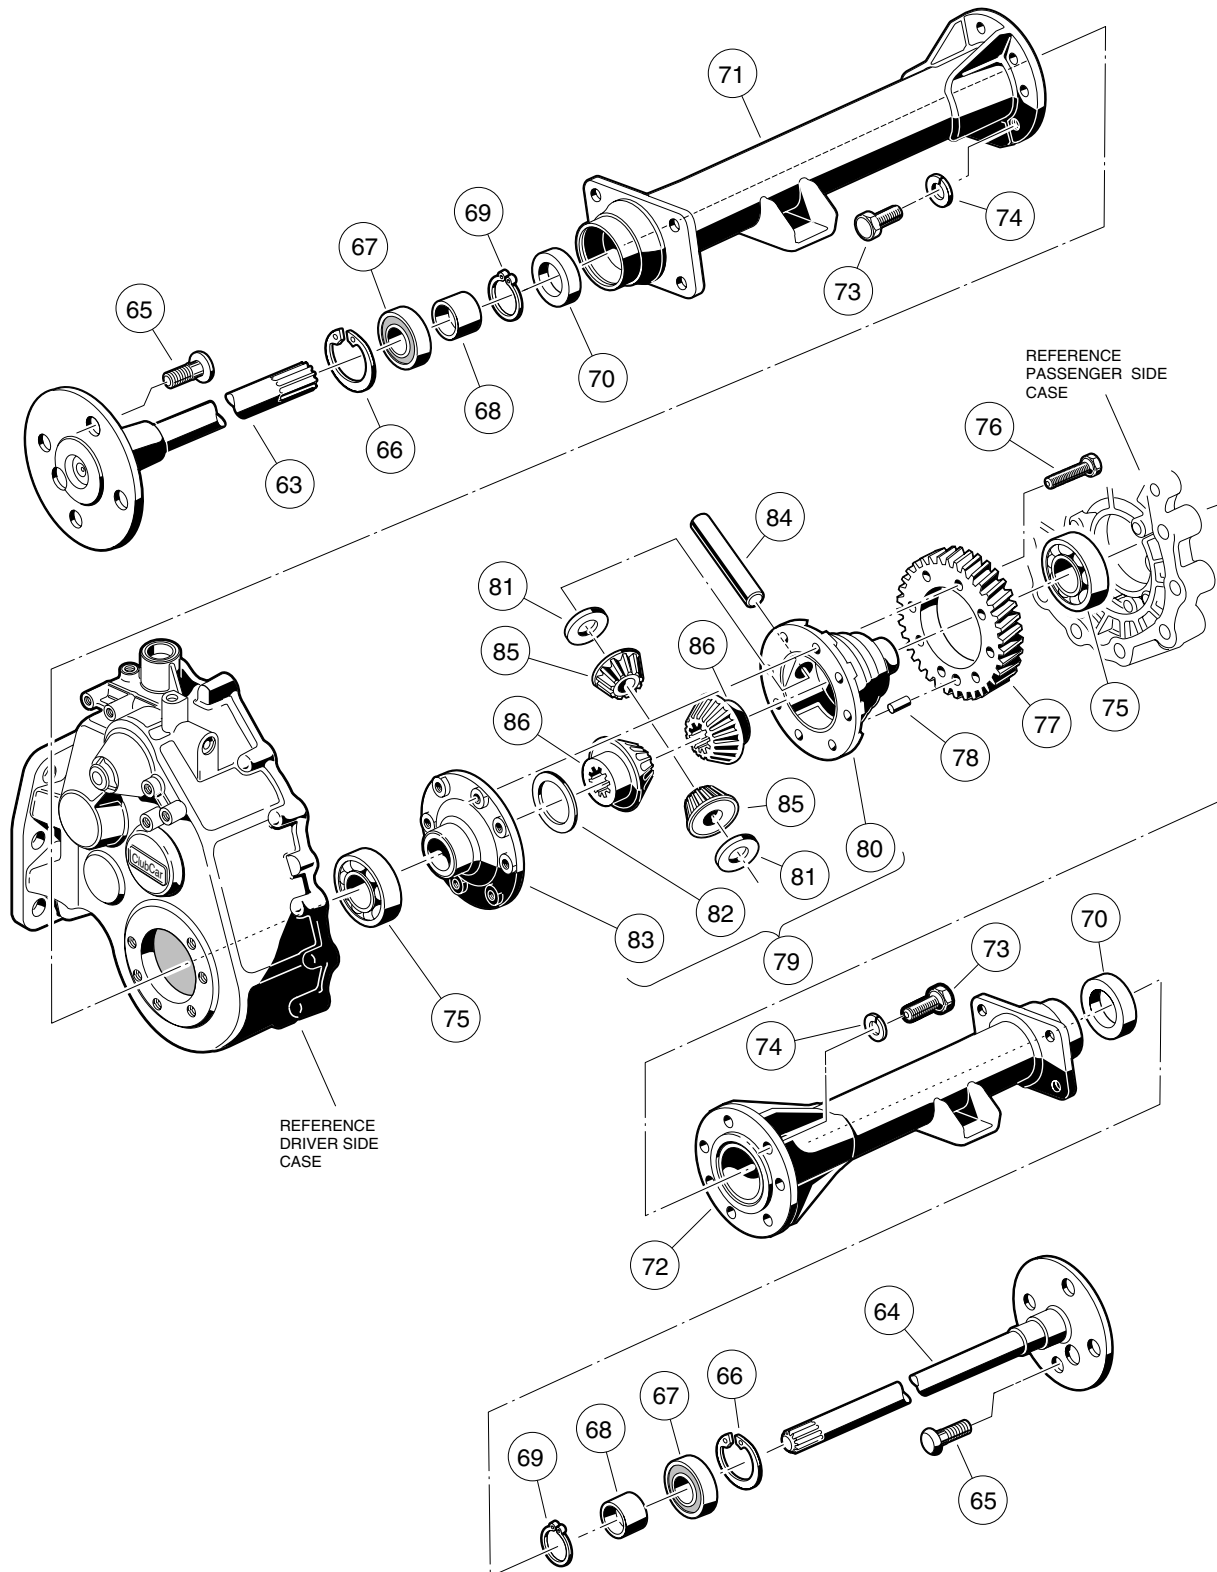

UNITIZED TRANSAXLE – DIFFERENTIAL AND AXLES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
63	101891501	Axle Assembly, Driver-Side (Includes items 65 - 69)	1
64	101891401	Axle Assembly, Passenger-Side (includes items 65 - 69)	1
65	1013787	Stud, Lug	4
66	1013792	Ring, Retaining	1
67	1011291	Bearing, Outer Axle Tube	1
68	1014207	Collar, 25 mm I. D.	1
69	1016672	Ring, Retaining	1
70	1013794	Seal, Oil	2
71	101891001	Assembly, Axle Tube, Driver-Side	1
72	101890901	Assembly, Axle Tube, Passenger-Side	1
73	1013790	Bolt, M10 x 1.5 x 30 mm	14
74	1013791	Washer, Lock, M10	14
75	7330	Bearing, Inner Axle Tube	2
76	101928301	Bolt, M8 x 1.25 x 37 mm	8
77	101892701	Gear, Output	1
78	1014193	Pin, Dowel	1
79	101910501	Kit, Differential Gear Case (includes items 80 - 83)	1
80	1013768	Case, Gear Carrier	1
81	1013774	Plate, Thrust (idler gear)	2
82	1013773	Plate, Thrust (differential gear)	1
83	1013769	Cover, Gear Case	1
84	1013772	Pin, Differential	1
85	1013770	Gear, Differential Idler	2
86	1013771	Gear, Differential	2

11
G

ELECTRICAL SYSTEM – ELECTRIC VEHICLE

12

E

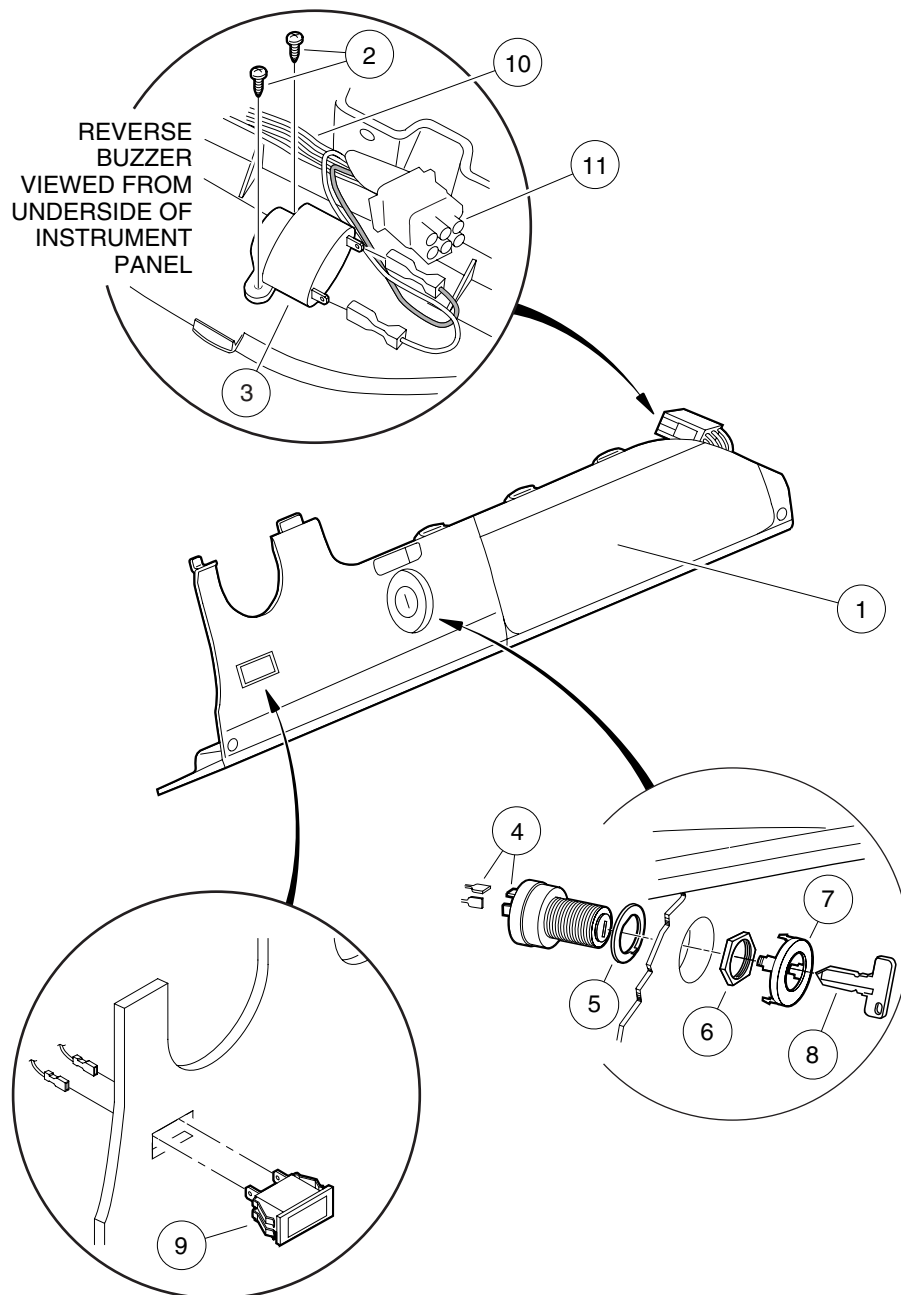


ELECTRICAL COMPONENTS, FRONT BODY – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102522901	Panel, Instrument	1
2	1016849	Screw, Pan-Head Hi-Lo, #4-24 x 5/16	2
3	1016851	Buzzer, Reverse	1
4	102508601	Switch, Key	1
5	101851101	Washer, Key Switch	1
6	101830701	Nut, Key Switch	1
7	101834502	Cap, Key Switch	1
8	1012505	Key (pair)	1
8	AM10079	Key (bag of 50)*	1
9	102508701	Light, Battery Warning (amber)	1
10	102510001	Harness, Control, Instrument Panel (includes item 11)	1
11	N/A	Connector	1
* Must order in multiples of 50.			

12

E

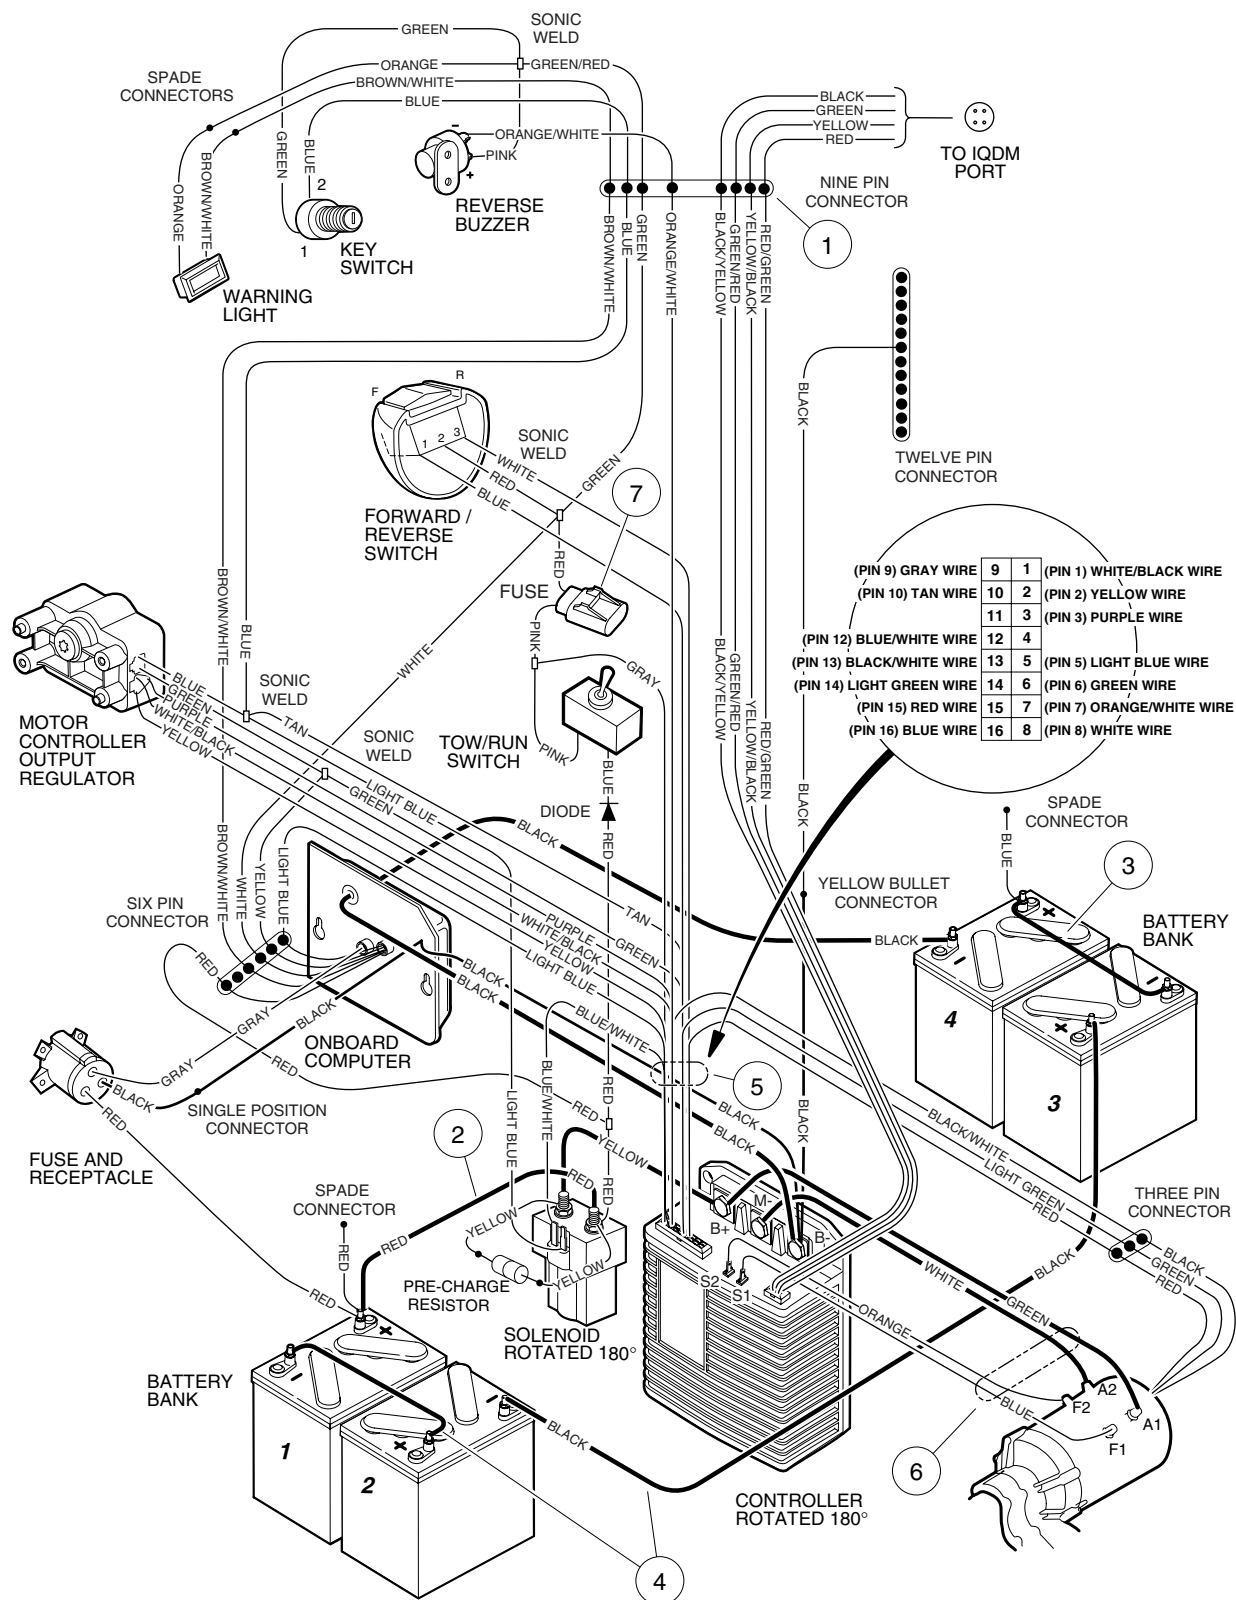


WIRING – IQ SYSTEM VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102510001	Control Harness, Instrument Panel	1
2	102509601	Wire Assembly, #6 Red	1
3	102509701	Wire Assembly, #6 Black, #10 Blue	1
4	102509801	Wire Assembly, #6 Black	2
5	102509501	Wire Harness	1
6	102510101	Wire Harness, Motor	1
7	1012295	Fuse, 10-amp	1

12

E

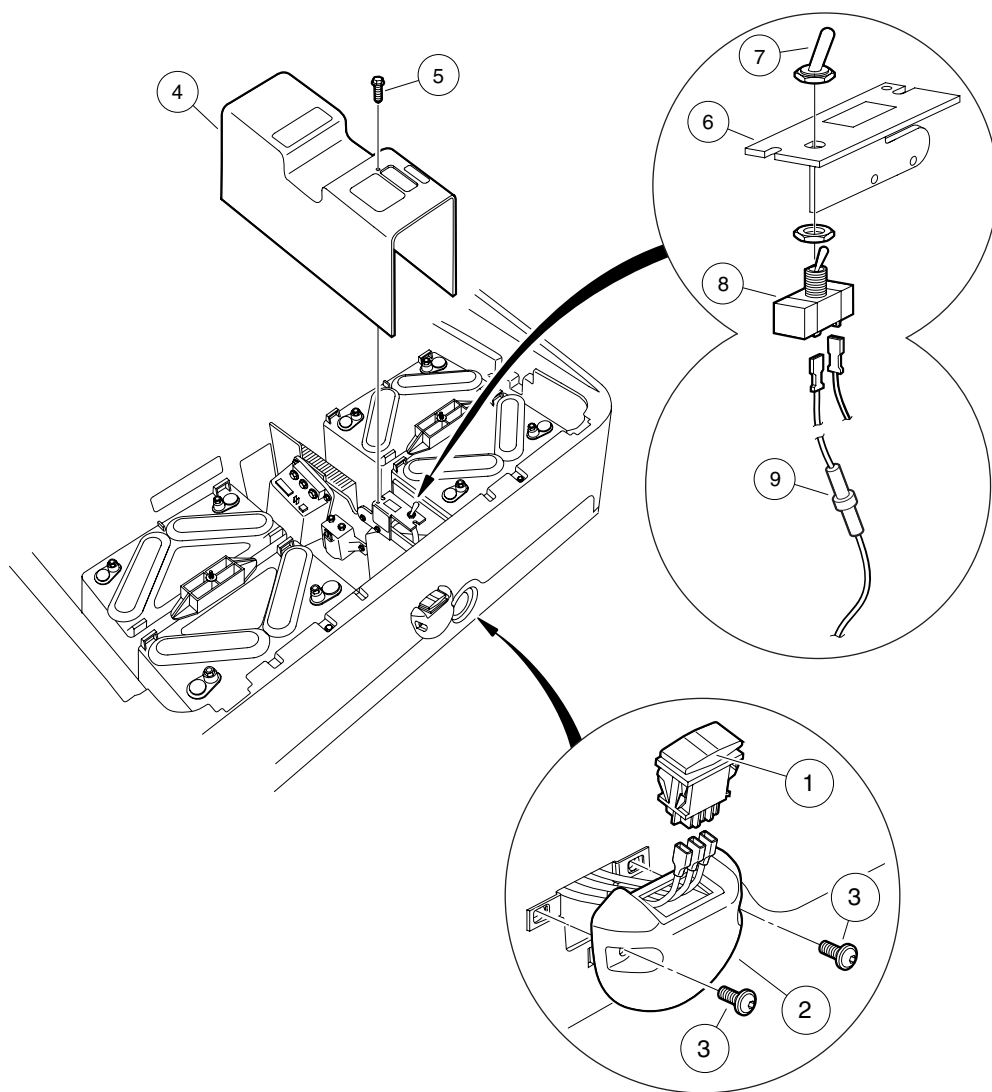


FORWARD/REVERSE SWITCH AND TOW/RUN SWITCH – IQ SYSTEM VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101856001	Switch, Forward/Reverse	1
2	102508401	Housing, Forward/Reverse Switch	1
3	102296920	Screw, Torx Pan-Head, M6.....	2
4	102510901	Cover, Electronics Module	1
5	102296716	Screw, Hex-Head, M6 x 16	1
6	102520001	Bracket, Tow/Run Switch	1
7	101908401	Boot, Tow/Run Switch (with nut)	1
8	102511101	Switch, Tow/Run	1
9	102538601	Fuse, 15 AMP	1

12

E

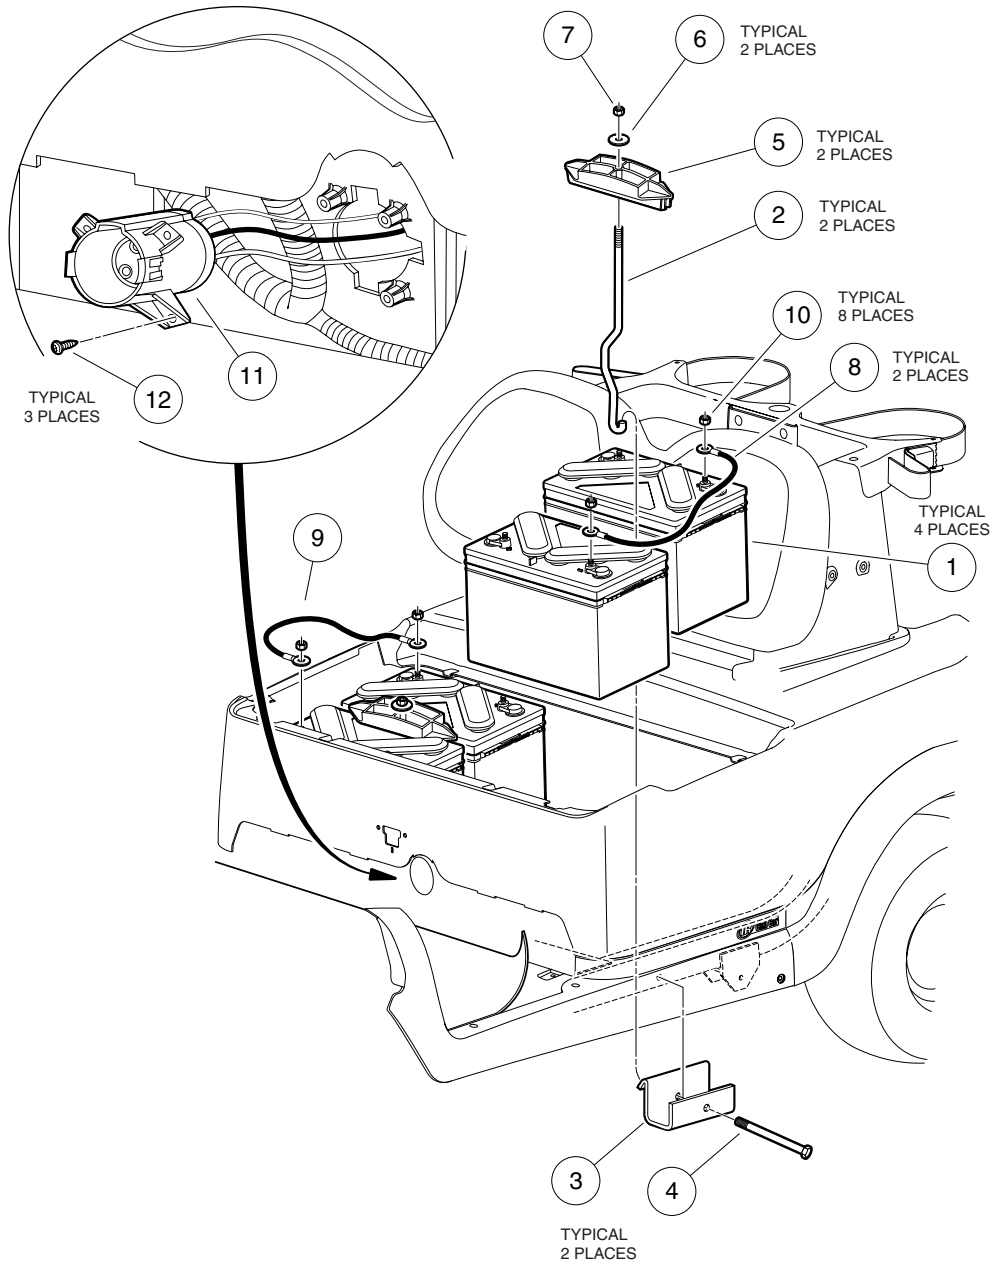


BATTERIES AND CHARGER RECEPTACLE – IQ SYSTEM VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102511301	Battery, 12-Volt, Wet	4
1	102511302	Battery, 12-Volt, Dry	4
2	102526801	Rod, Battery Clamp	2
3	102526401	Support, Battery Clamp	2
4	102298770	Taptite, M8 - 1.25 x 70	2
5	102534001	Clamp, Battery	2
6	808	Washer, Type B, 3/8 flat	2
7	8754	Nut, Hex Lock, 3/8 - 18	2
8	102509801	Wire Assembly, #6 Black	2
9	102509701	Wire Assembly, #6 Black	1
10	1014304	Nut, Hex, 5/16 - 18	8
11	102510201	Assembly, Receptacle	1
12	102293512	Screw, Torx Pan-Head, K35	3

12

E

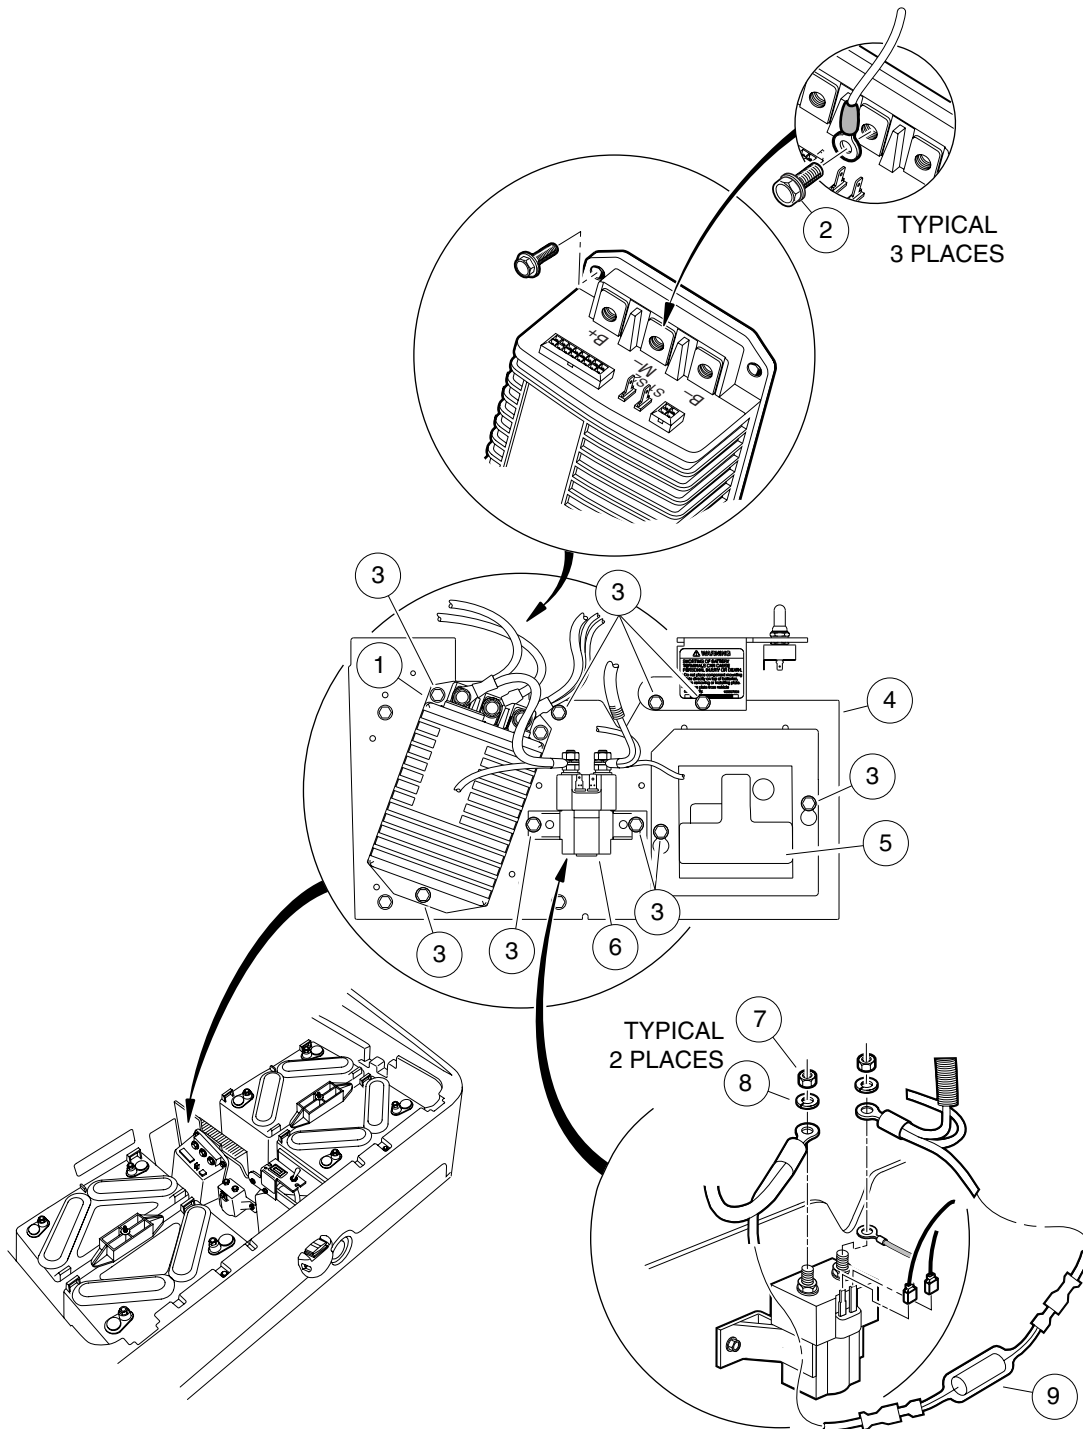

COMPUTER, CONTROLLER, AND SOLENOID – IQ SYSTEM VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101956501	Controller, 48-Volt IQ System	1
2	102240501	Screw, Hex Washer-Head, M8 x 1-1/4 x 12 mm	3
3	102296716	Screw, M6 x 16, Hex-Head	9
4	N/A	Plate, Heatsink Mounting	1
5	102511001	Computer, Onboard	1
6	101908701	Solenoid, 48-Volt (with diode) (includes items 7 and 8)	1
7	1012528	Nut, 8 mm	2
8	1013734	Washer, Lock, 8 mm	2
9	102522701	Assembly, Resistor, Pre-Charge	1

12

E


12

E

ELECTRIC MOTOR

13

E

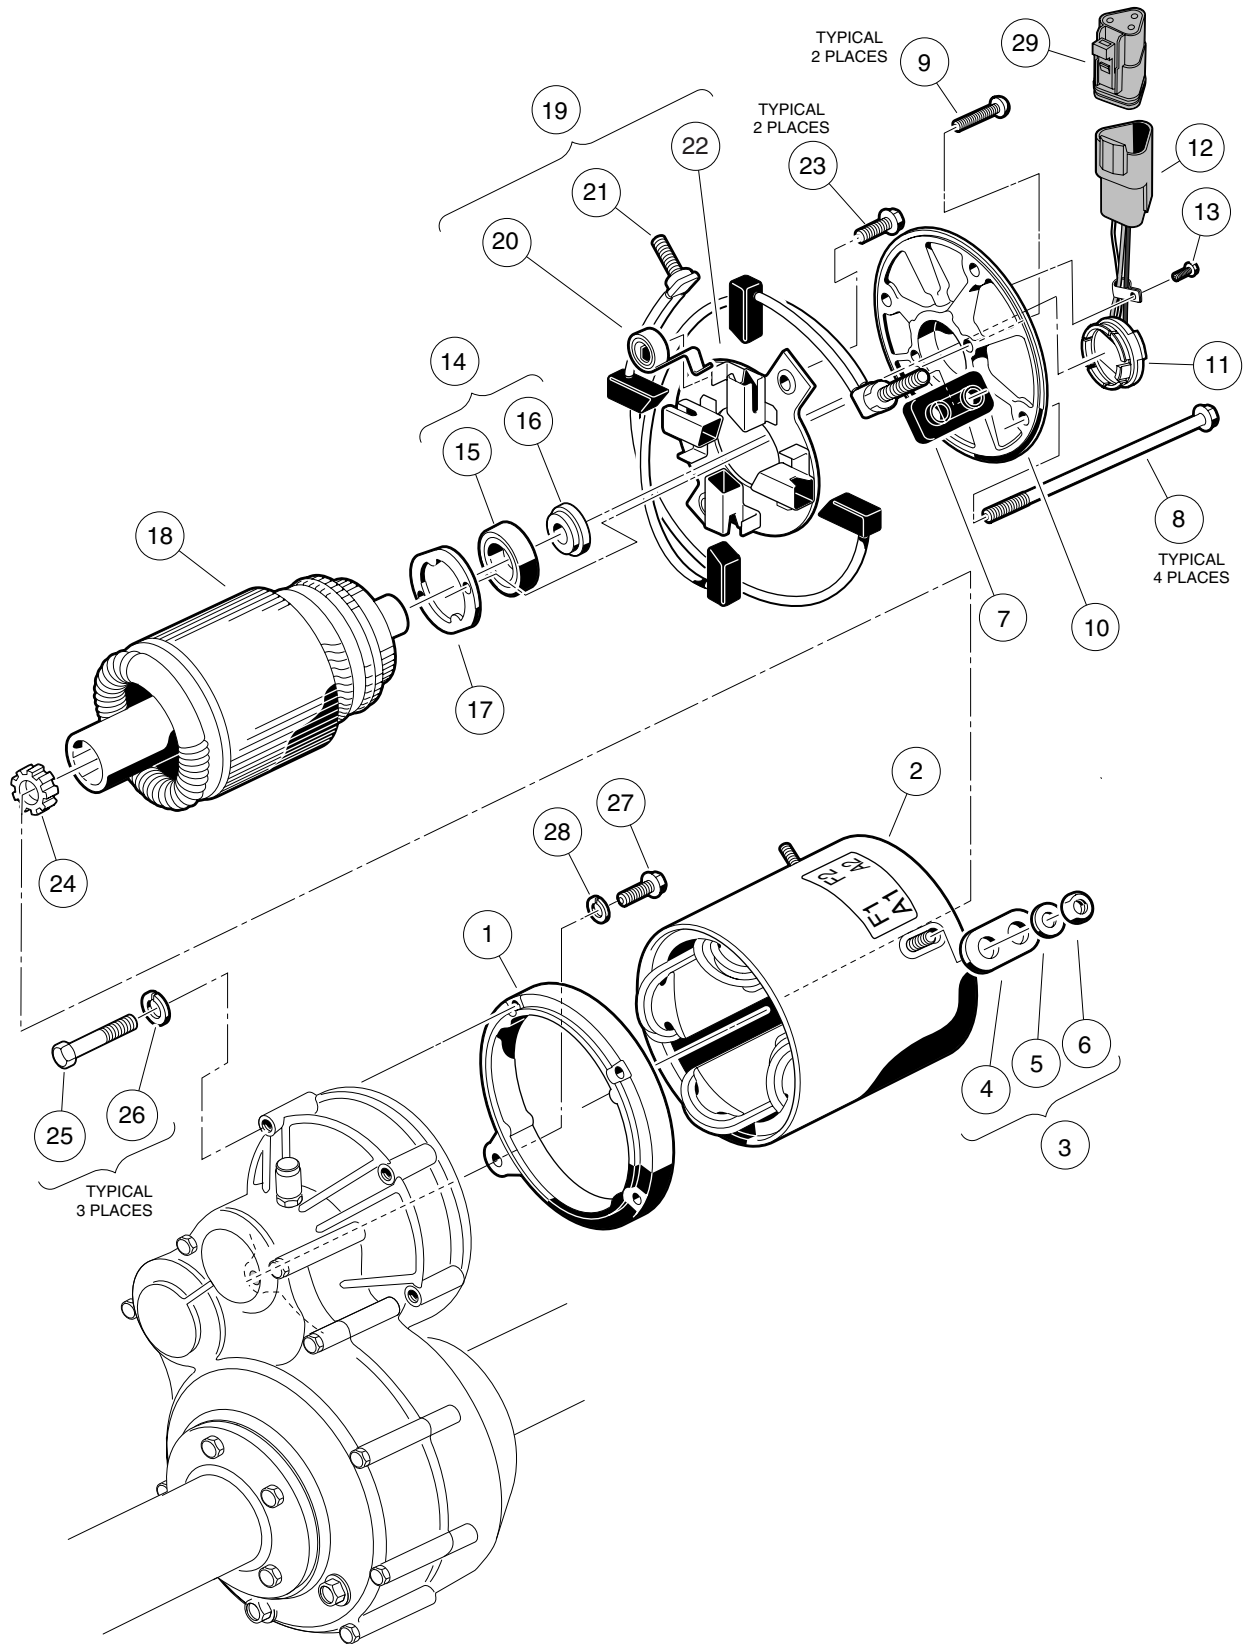

MOTOR – IQ SYSTEM VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	102240102	Assembly, 48-Volt IQ Motor, 3.20-hp (includes items 1 - 23)	1
1	1017944	Shield, End	1
2	102265501	Assembly, Stator Shell and Winding	1
3	1017947	Package, Hardware (includes items 4 - 7)	1
4	N/A	Bushing, Insulator	2
5	N/A	Washer, Flat, 5/16	4
6	N/A	Nut, Hex, 5/16-18	4
7	N/A	Bushing, Insulator	2
8	102266101	Screw, Clamp, #10-32 x 8-1/4	4
9	1017953	Screw, Bearing Retainer, #8-32 x 7/8	2
	102265901	Assembly, End Shield (includes items 10 - 13)	1
10	102266001	Shield, End	1
11	102265601	Sensor, Motor Speed (includes item 12)	1
12	101942301	Housing, Female 3-Wire, Gray	1
13	102267001	Screw, Steel Hex, Thread-Rolling, #8 x 3/8	1
14	102265701	Kit, Bearing and Magnet (includes items 15 and 16)	1
15	N/A	Bearing, Ball	1
16	N/A	Magnet	1
17	1017950	Retainer, Bearing	1
18	N/A	Armature	1
19	102327801	Assembly, Brush Rigging (includes items 20 - 22)	1
20	1011411	Package, Brush Spring (4 pieces)	1
21	102251901	Package, Brush (2 pieces) (includes 4 brushes)	1
22	1017948	Rigging, Brush	1
23	1017949	Screw, Brush Holder, #6-32 x 1/2	2
24	102235201	Bumper, Motor	1
25	1014201	Screw, Hex-Head Cap, 1/4-20 x 2-1/4	3
26	451	Washer, Lock, 1/4	3
27	1010934	Screw, Hex-Head Cap, 5/16-18 x 1	1
28	7174	Washer, Lock, 5/16	1
29	101920101	Kit, 3-Pin Plug and Wedge Lock	1

13

E


13

E

TRANSAXLE – ELECTRIC VEHICLE

14

E

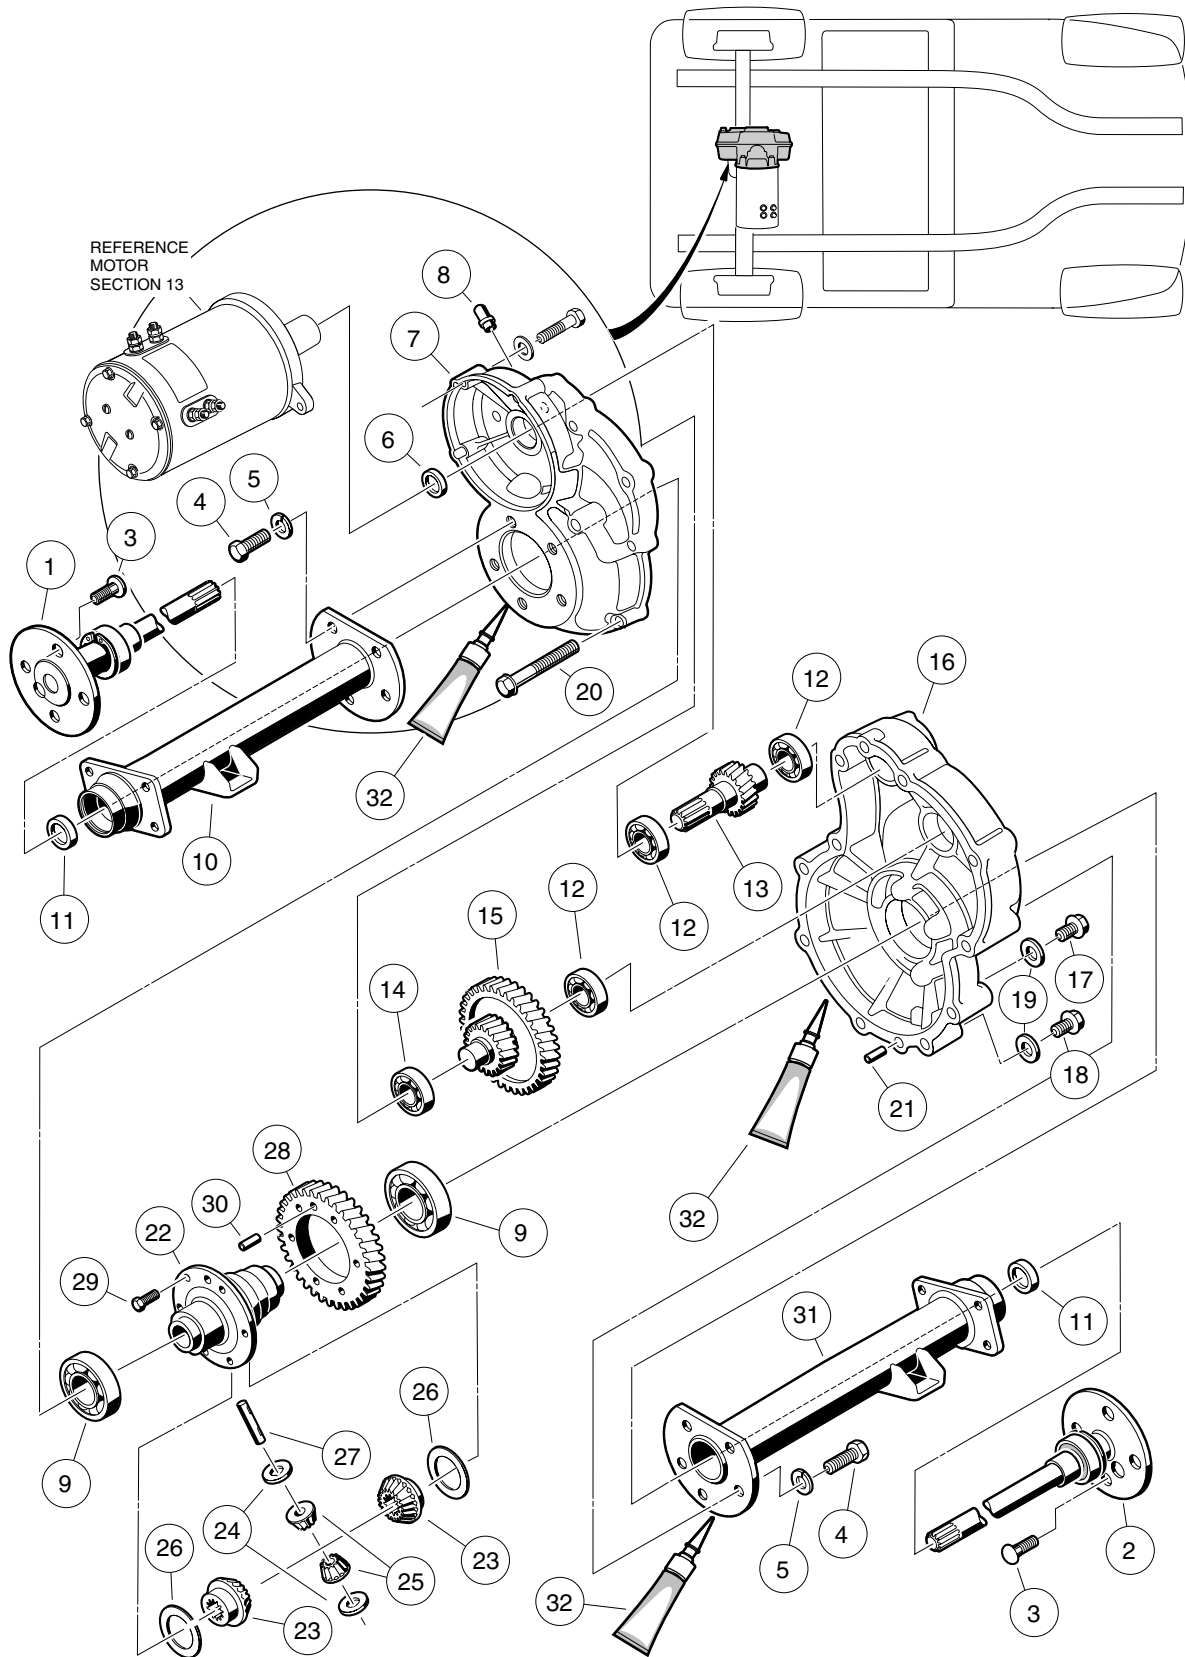


TRANSAXLE, TYPE G – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	101896001	Transaxle, Type G (includes items 1 - 32)	1
1	101895801	Axle Assembly, Passenger-Side (includes item 3)	1
2	101895901	Axle Assembly, Driver-Side (includes item 3)	1
3	101922201	Stud, Lug	4
4	101976001	Bolt, M10 x 1.5 x 35 mm	10
5	101897901	Washer, Lock	10
6	101923501	Seal, Oil, Input Shaft	1
7	101895501	Gear Case, Passenger-Side	1
8	101897201	Breather	1
9	7330	Bearing, Differential	2
10	101895601	Assembly, Axle Tube, Passenger-Side	1
11	1013794	Seal, Oil, Axle Shaft	2
12	7335	Bearing, Input Gear	3
13	101923701	Shaft, Input	1
14	7336	Bearing, Intermediate Gear	1
15	101906901	Assembly, Intermediate Gear	1
16	101895401	Gear Case, Driver-Side	1
17	101972201	Plug, Fill	1
18	101972101	Plug, Magnetic	1
19	101923201	Gasket, Plug	2
20	101897001	Bolt, M8 x 1.25 x 60 mm	11
21	101897601	Pin, Dowel	2
22	101923601	Housing, Differential	1
23	101923901	Gear, Differential	2
24	101903601	Plate, Thrust (idler gear)	2
25	101923001	Gear, Differential Idler	2
26	101903701	Plate, Thrust	2
27	101922101	Pin, Differential	1
28	101906201	Gear, Output	1
29	101897401	Bolt, M10 x 1.5 x 25 mm	4
30	101972401	Pin, Dowel	1
31	101895701	Assembly, Axle Tube, Driver-Side	1
32	101928701	Gasket, Liquid, 8.8 oz. (250 g)	A/R
Note: Transaxle type is identified by orientation of gear case bolts (item 20). The Type G Transaxle has gear case bolt heads facing toward the passenger side of the vehicle.			

14

E

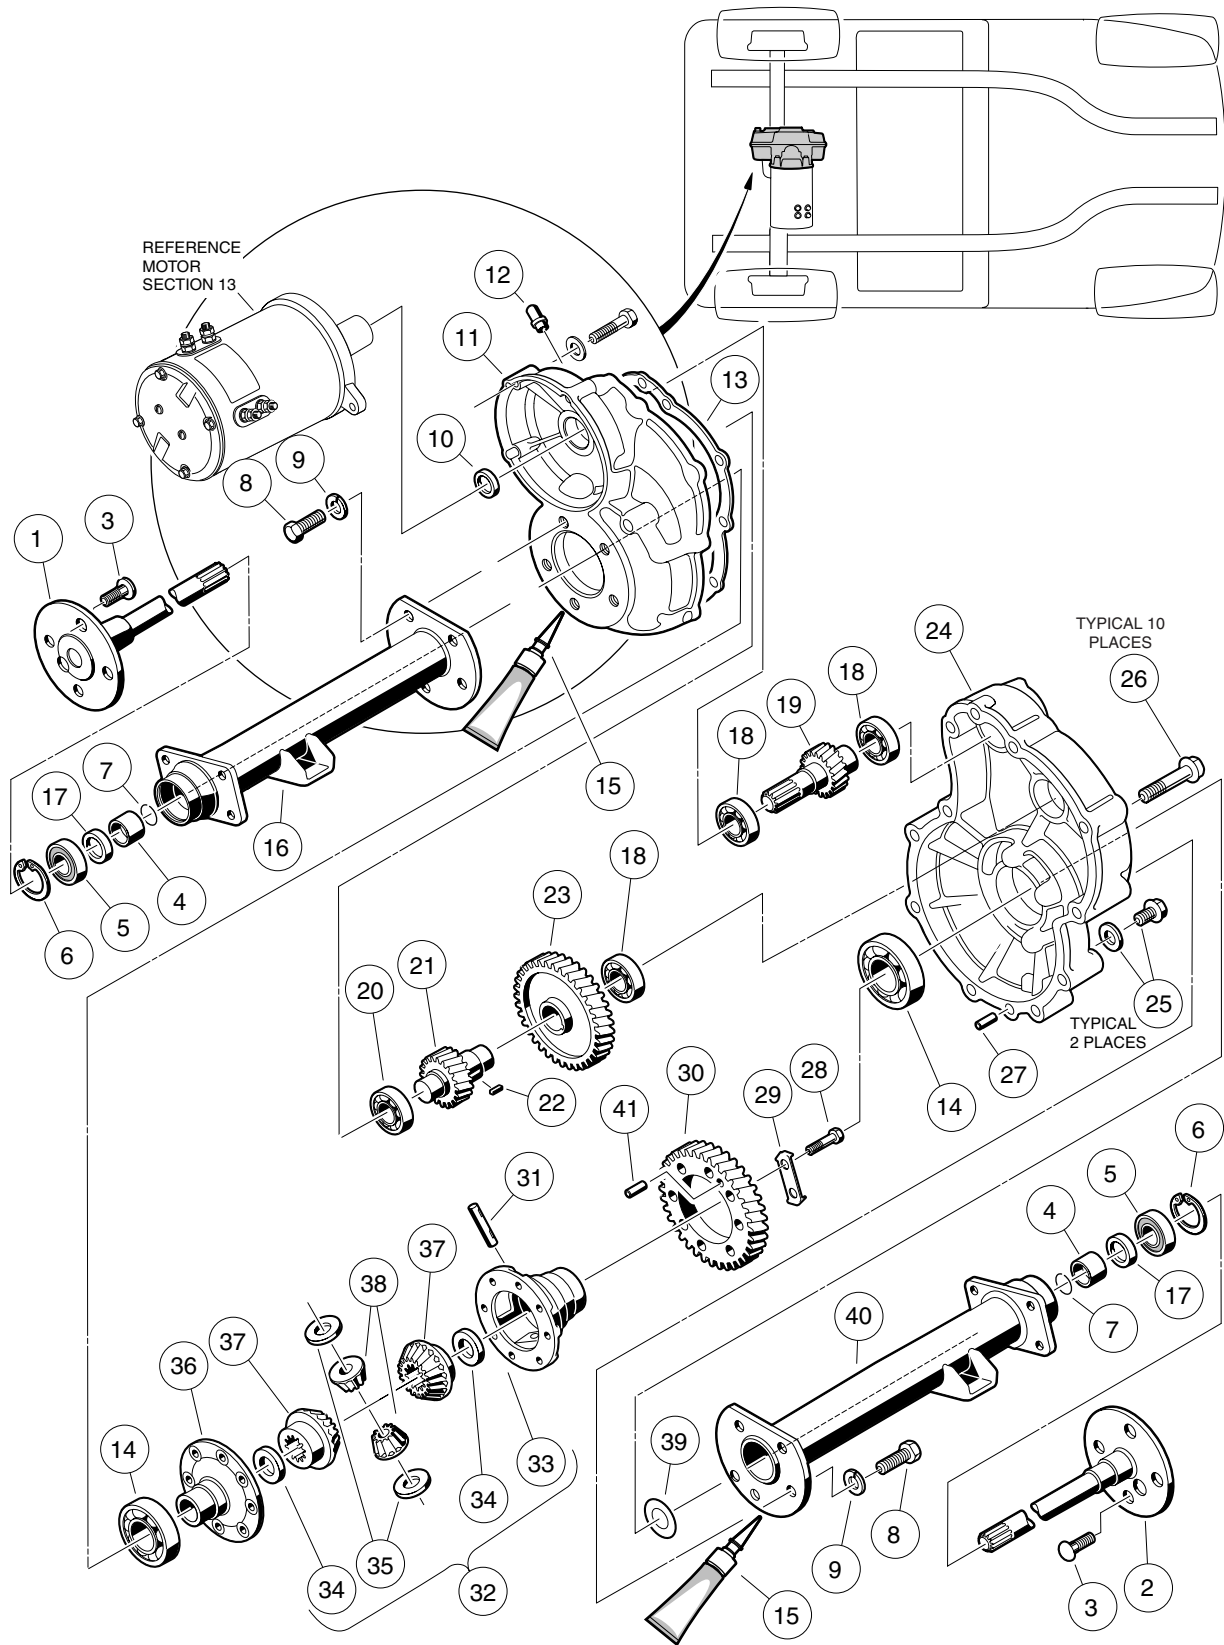

TRANSAXLE, TYPE K – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
	N/A	Transaxle, Type K (includes items 1 - 41)	1
1	1013785	Axle Assembly, Passenger-Side (includes items 3 - 7)	1
2	1013786	Axle Assembly, Driver-Side (includes items 3 - 7)	1
3	1013787	Stud, Lug	4
4	1014207	Bushing, 25 mm I. D.	1
5	1011291	Bearing, Outer Axle Tube	1
6	1013792	Circlip, Type C	1
7	1016672	Ring, Retaining	1
8	1013790	Bolt, M10 x 1.5 x 30 mm	10
9	1013791	Washer, Lock	10
10	1013775	Seal, Input Shaft Oil	1
11	1013756	Gear Case, Passenger-Side	1
12	1012711	Breather	1
13	1013758	Gasket, Case	1
14	7330	Bearing, Inner Axle Tube	2
15	101928701	Gasket, Liquid, 8.8 oz. (250 g)	A/R
16	1017704	Assembly, Axle Tube, Passenger-Side	1
17	1013794	Seal, Axle Shaft Oil	2
18	7335	Bearing, Input Gear	3
19	1013764	Shaft, Input	1
20	7336	Bearing, Intermediate Gear	1
21	1013766	Gear, Intermediate, Small	1
22	1013780	Key, Sunk	1
23	1013765	Gear, Intermediate, Large	1
24	1013757	Gear Case, Driver-Side	1
25	1013759	Plug, Fill, with Gasket	2
26	1013763	Bolt, M6 x 1 x 50 mm	10
27	1012710	Pin, Dowel	2
28	1013779	Bolt, M8 x 1.25 x 37 mm	8
29	1013782	Plate, Lock	4
30	1013767	Gear, Output	1
31	1013772	Pin, Differential	1
32	101910501	Kit, Differential Gear Case (includes items 33 - 36)	1
33	1013768	Gear Case, Differential (driver side)	1
34	1013773	Plate, Thrust (differential gear)	2
35	1013774	Plate, Thrust (idler gear)	2
36	1013769	Gear Case, Differential (passenger side)	1
37	1013771	Gear, Differential	2
38	1013770	Gear, Differential Idler	2
39	1013781	Shim	1
40	1017703	Assembly, Axle Tube, Driver-Side	1
41	1014193	Pin, Dowel	1
Note: Transaxle type is identified by orientation of gear case bolts (item 26). The Type K Transaxle has gear case bolt heads facing toward the driver side of the vehicle.			


14

E

BATTERY CHARGER

15

E

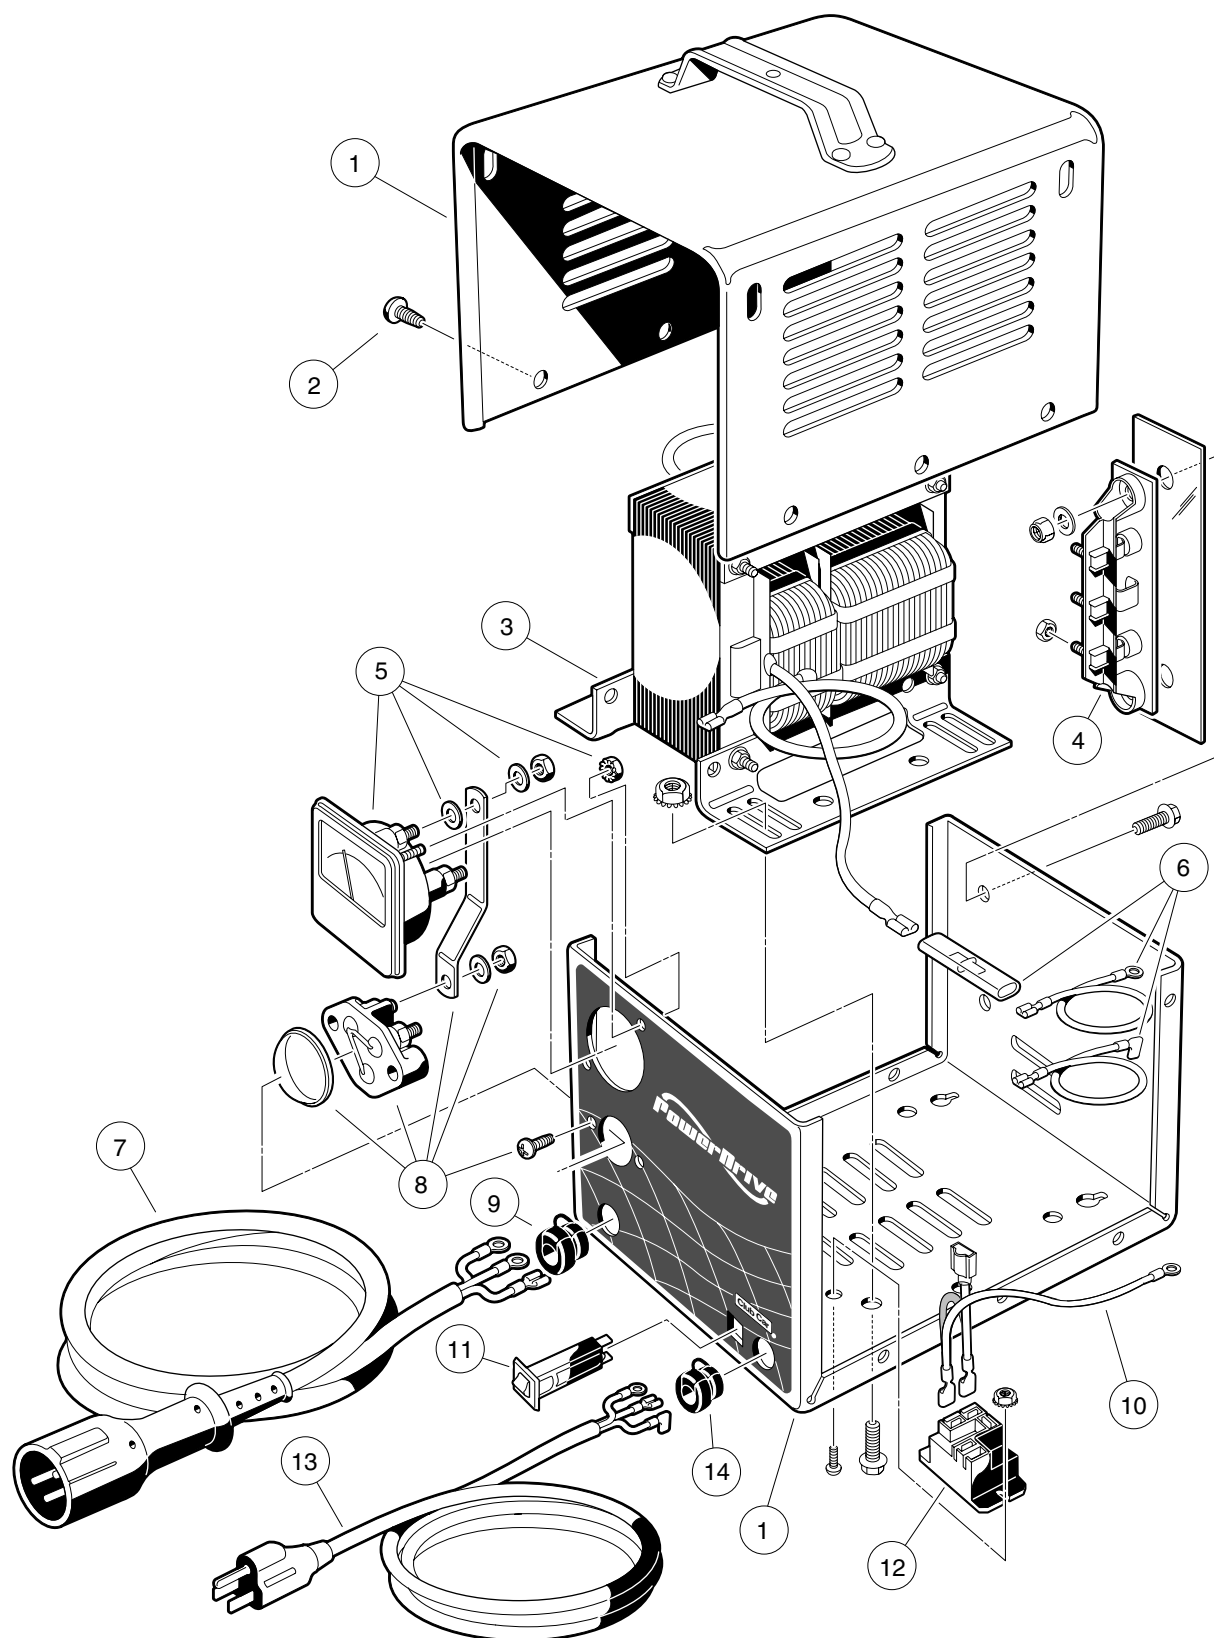


POWERDRIVE BATTERY CHARGER, DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4 PowerDrive chargers can be used with PowerDrive System 48 and IQ System vehicles.	
	101802201	Charger, Battery, PowerDrive, Domestic 120-V AC 48-V DC 60-Hz (model number 17930-11) (includes items 1 - 14) 103-inch DC cord with male 3-pin plug, 12-AWG 74-inch AC cord with male grounded plug	1
	101802202	Charger, Battery, PowerDrive 120-V AC 48-V DC 60-Hz (model number 17930-18) (includes items 1 - 14) 144-inch DC cord with male 3-pin plug, 12-AWG 108-inch AC cord with male grounded plug	1
	101802203	Charger, Battery, PowerDrive 120-V AC 48-V DC 60-Hz (model number 17930-19) (includes items 1 - 14) 240-inch DC cord with male 3-pin plug, 12-AWG 108-inch AC cord with male grounded plug	1
1	101828301	Assembly, Case (includes fasteners)	1
2	7577	Screw, Pan-Head, Self-Tapping, #10-16 x 1/2	10
3	101819701	Assembly, Transformer	1
4	1015914	Assembly, Heatsink, with Diodes (includes mounting hardware)	1
5	101828501	Ammeter (includes mounting hardware)	1
6	101831101	Kit, Wire Assembly	1
7	101828901	Cordset, DC, 113-Inch Long with Male 3-Pin Plug, 12-AWG	1
7	101828902	Cordset, DC, 154-Inch Long with Male 3-Pin Plug, 12-AWG	1
7	101828903	Cordset, DC, 250-Inch Long with Male 3-Pin Plug, 12-AWG	1
8	1012101	Assembly, Fuse (includes mounting hardware)	1
9	1012098	Bushing, Strain Relief, DC Cord, 12-AWG	1
10	101914401	Assembly, Voltage Suppressor	1
11	CCX8506	Breaker, Circuit, 15-Amp, 120-V AC	1
12	101828601	Relay, Power, 48-V DC	1
13	101828801	Cordset, AC, 80-Inch Long	1
13	101828802	Cordset, AC, 116-Inch Long	1
14	1015917	Bushing, Strain Relief, AC Cord	1

15


E

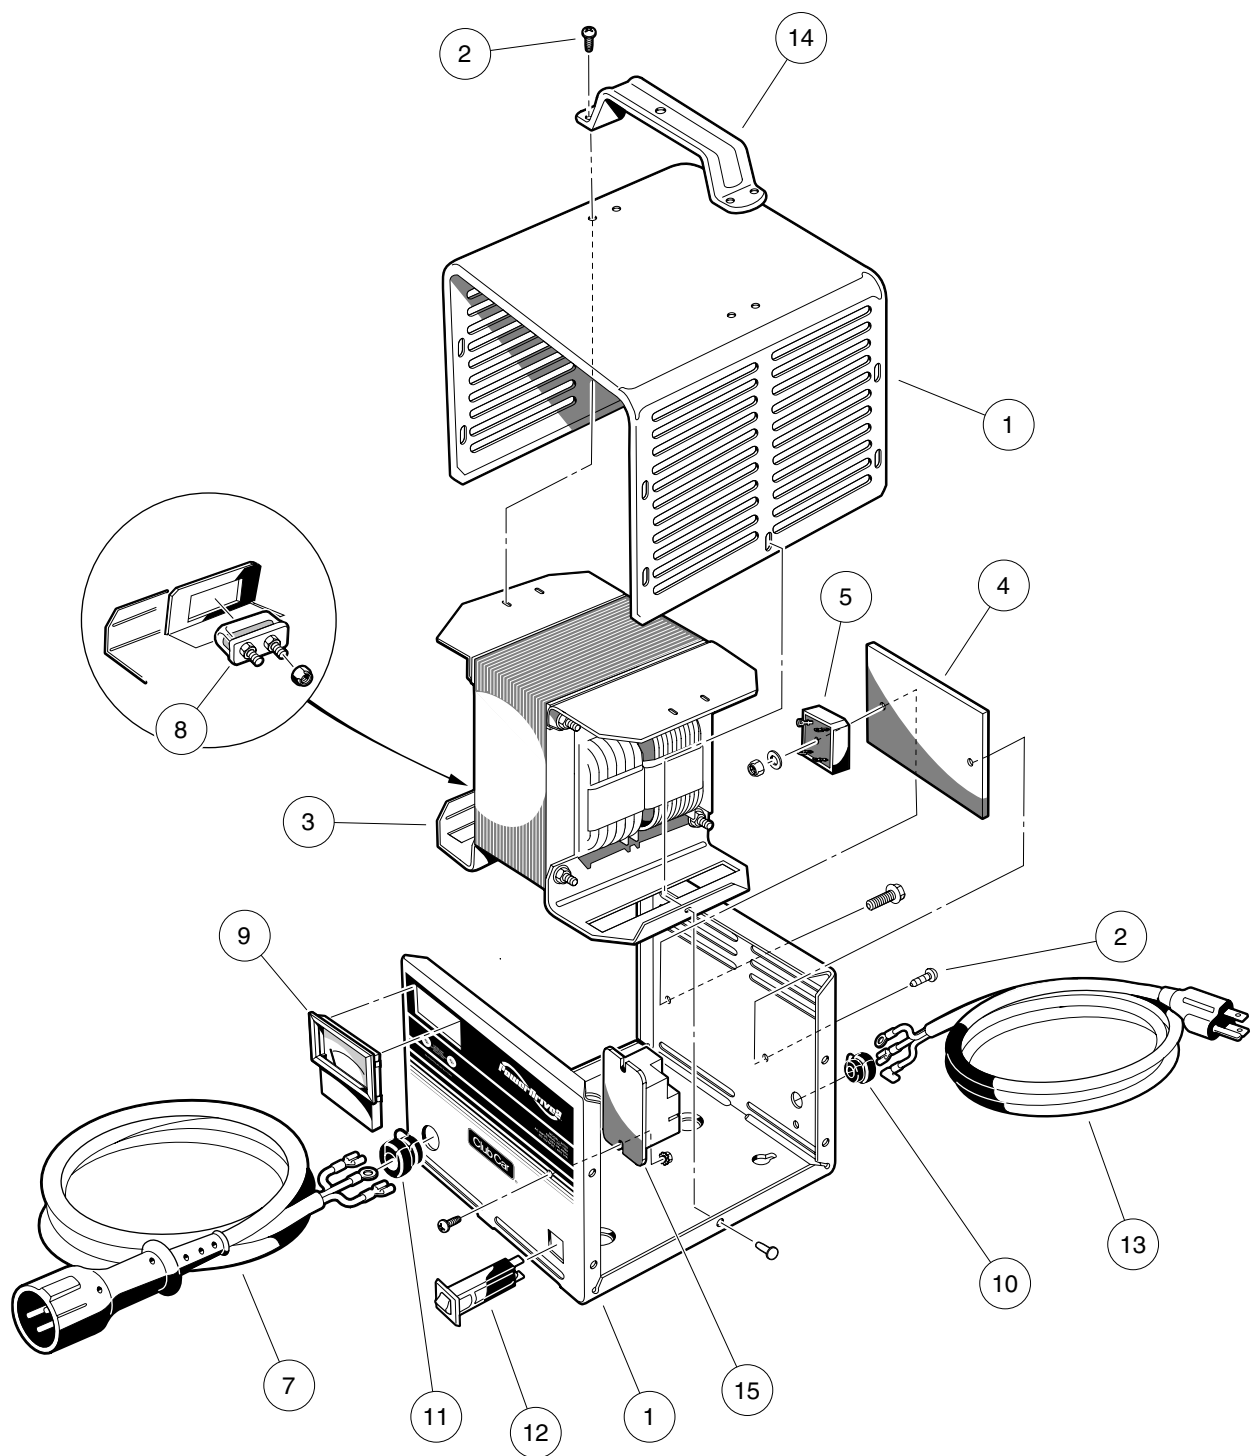

POWERDRIVE 2 BATTERY CHARGER, DOMESTIC

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4 PowerDrive 2 chargers can be used with PowerDrive System 48 and IQ System vehicles.	
	101802204	Charger, Battery, PowerDrive 2, Domestic 120-V AC 48-V DC 60-Hz (model number 22110-11) (includes items 1 - 15) 103-inch DC cord with male 3-pin plug, 12-AWG 74-inch AC cord with male grounded plug	1
	101802205	Charger, Battery, PowerDrive 2 120-V AC 48-V DC 60-Hz (model number 22110-18) (includes items 1 - 15) 144-inch DC cord with male 3-pin plug, 12-AWG 108-inch AC cord with male grounded plug	1
	101802206	Charger, Battery, PowerDrive 2 120-V AC 48-V DC 60-Hz (model number 22110-19) (includes items 1 - 15) 240-inch DC cord with male 3-pin plug, 12-AWG 108-inch AC cord with male grounded plug	1
1	102273201	Assembly, Case (includes item 2)	1
2	7577	Screw, Pan-Head, Self-Tapping, #10-16 x 1/2	12
3	102273301	Assembly, Transformer (includes rivets)	1
4	102273401	Plate, Heatsink	1
5	102273501	Assembly, Diode with Heatsink Film (includes mounting hardware)	1
6	102273601	Kit, Wire Assembly (includes voltage suppressor) (not shown)	1
7	101828904	Cordset, DC, 113-Inch Long with Male 3-Pin Plug, 12-AWG	1
7	101828905	Cordset, DC, 154-Inch Long with Male 3-Pin Plug, 12-AWG	1
7	101828906	Cordset, DC, 250-Inch Long with Male 3-Pin Plug, 12-AWG	1
8	102273701	Assembly, Fuse, 30-Amp (includes terminal hardware)	1
9	102273801	Ammeter (includes mounting hardware)	1
10	102273901	Bushing, Strain Relief, AC Cord	1
11	1012098	Bushing, Strain Relief, DC Cord, 12-AWG	1
12	CCX8506	Breaker, Circuit, 15-Amp, 120-V AC	1
13	101828801	Cordset, AC, 80-Inch Long	1
13	101828802	Cordset, AC, 116-Inch Long	1
14	102274001	Handle, PowerDrive 2 Charger (with four screws)	1
15	101828601	Relay, Power, 48-V DC	1


15
E

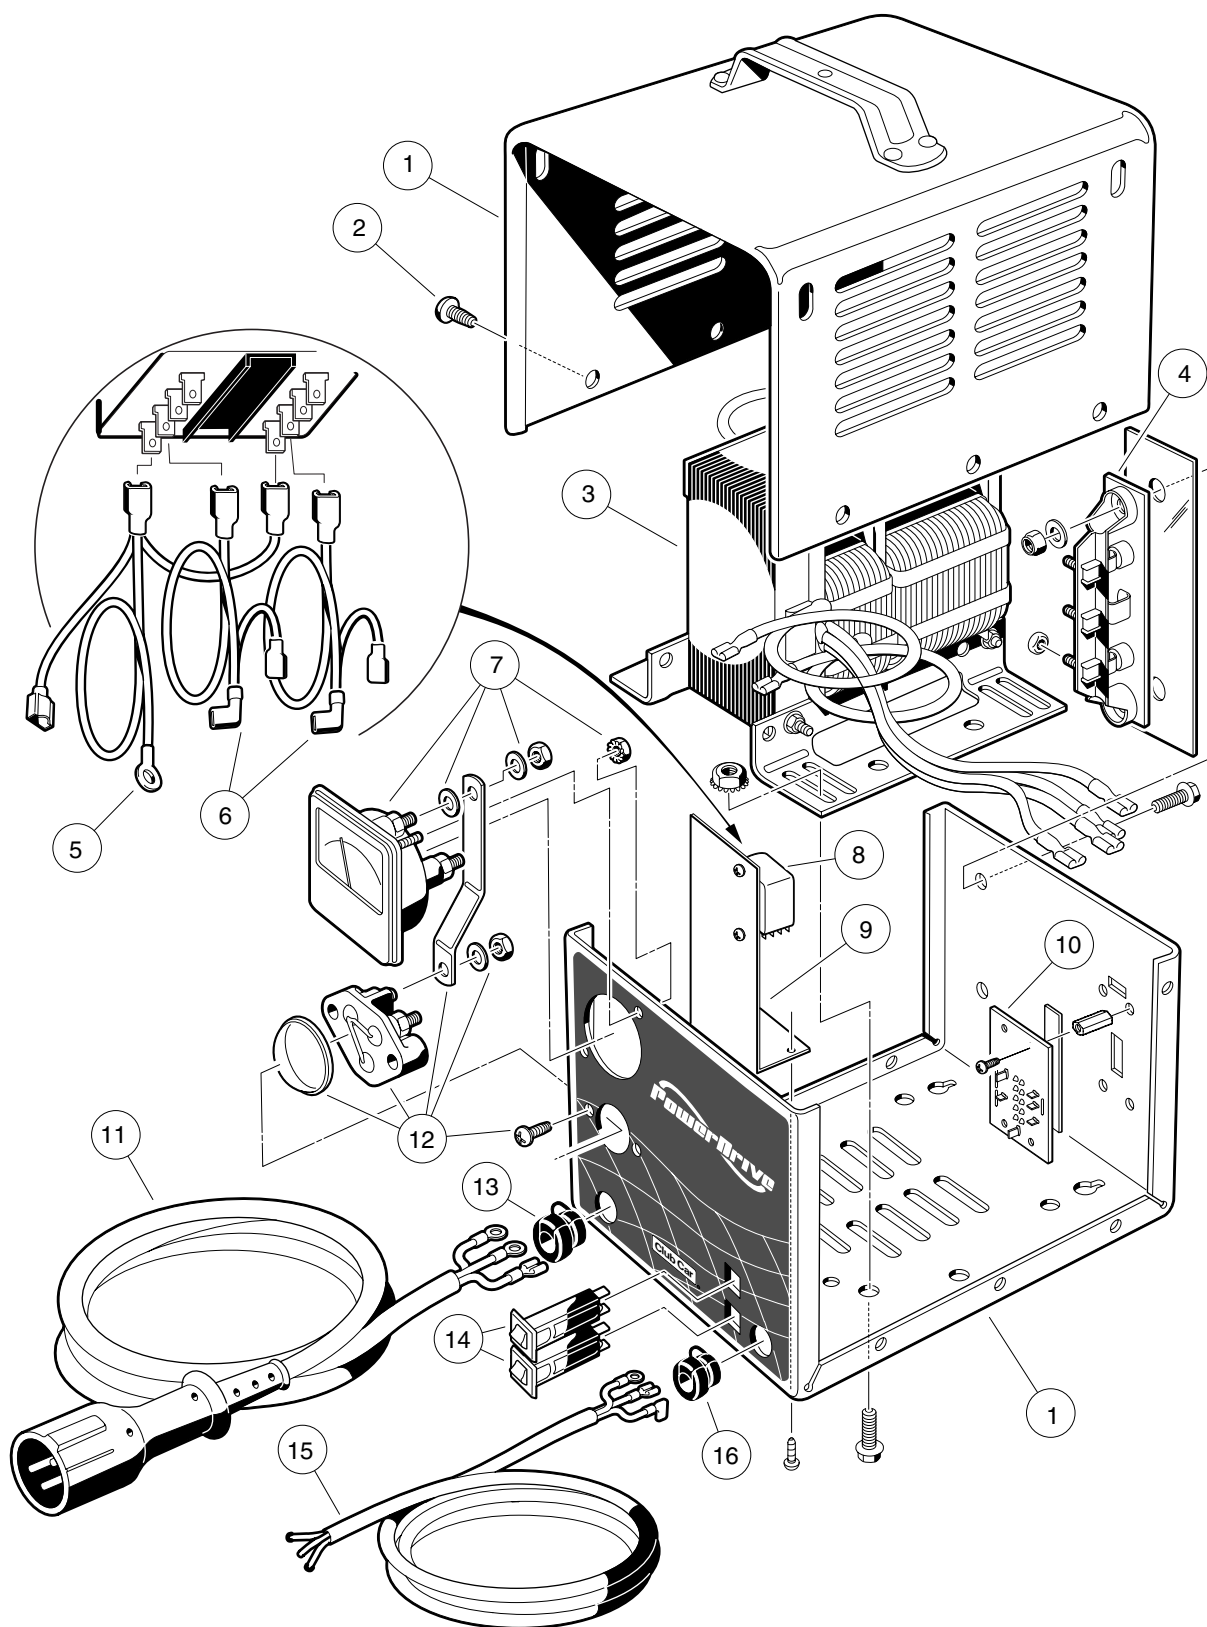

POWERDRIVE BATTERY CHARGER, EXPORT

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4 PowerDrive chargers can be used with PowerDrive System 48 and IQ System vehicles.	
	101831503	Charger, Battery, PowerDrive, Export with 4-Position Switch 100 - 200 - 220 - 240 V AC, 48-V DC 50/60-Hz (model number 18780-11) (includes items 1 - 16) 103-inch DC cord with male 3-pin plug, 12-AWG 74-inch AC cord with no plug	1
	101831504	Charger, Battery, PowerDrive Export with 4-Position Switch 100 - 200 - 220 - 240 V AC, 48-V DC 50/60-Hz (model number 18780-18) (includes items 1 - 16) 144-inch DC cord with male 3-pin plug, 12-AWG 108-inch AC cord with no plug	1
1	N/A	Assembly, Case	1
2	7577	Screw, Pan-Head, Self-Tapping, #10-16 x 1/2	10
3	101838201	Assembly, Transformer	1
4	1015914	Assembly, Heatsink, with Diodes (includes mounting hardware)	1
5	101914401	Assembly, Voltage Suppressor	1
6	101838501	Kit, Wire Assembly	1
7	101828501	Ammeter (includes hardware)	1
8	101838301	Relay, Power, 48-V DC (includes mounting hardware)	1
9	101838701	Bracket, Power Relay Mounting	1
10	101838601	Switch, 4-Position Slide	1
11	101828901	Cordset, DC, 113-Inch Long with Male 3-Pin Plug, 12-AWG	1
11	101828902	Cordset, DC, 154-Inch Long with Male 3-Pin Plug, 12-AWG	1
11	101828903	Cordset, DC, 250-Inch Long with Male 3-Pin Plug, 12-AWG	1
12	1012101	Assembly, Fuse (includes hardware)	1
13	1012098	Bushing, Strain Relief, DC Cord, 12-AWG	1
14	101838401	Breaker, Circuit, 10-Amp	2
15	101831701	Cordset, AC, 80-Inch Long with Leads (no plug)	1
15	101831702	Cordset, AC, 116-Inch Long with Leads (no plug)	1
16	1015917	Bushing, Strain Relief, AC Cord	1

15
E

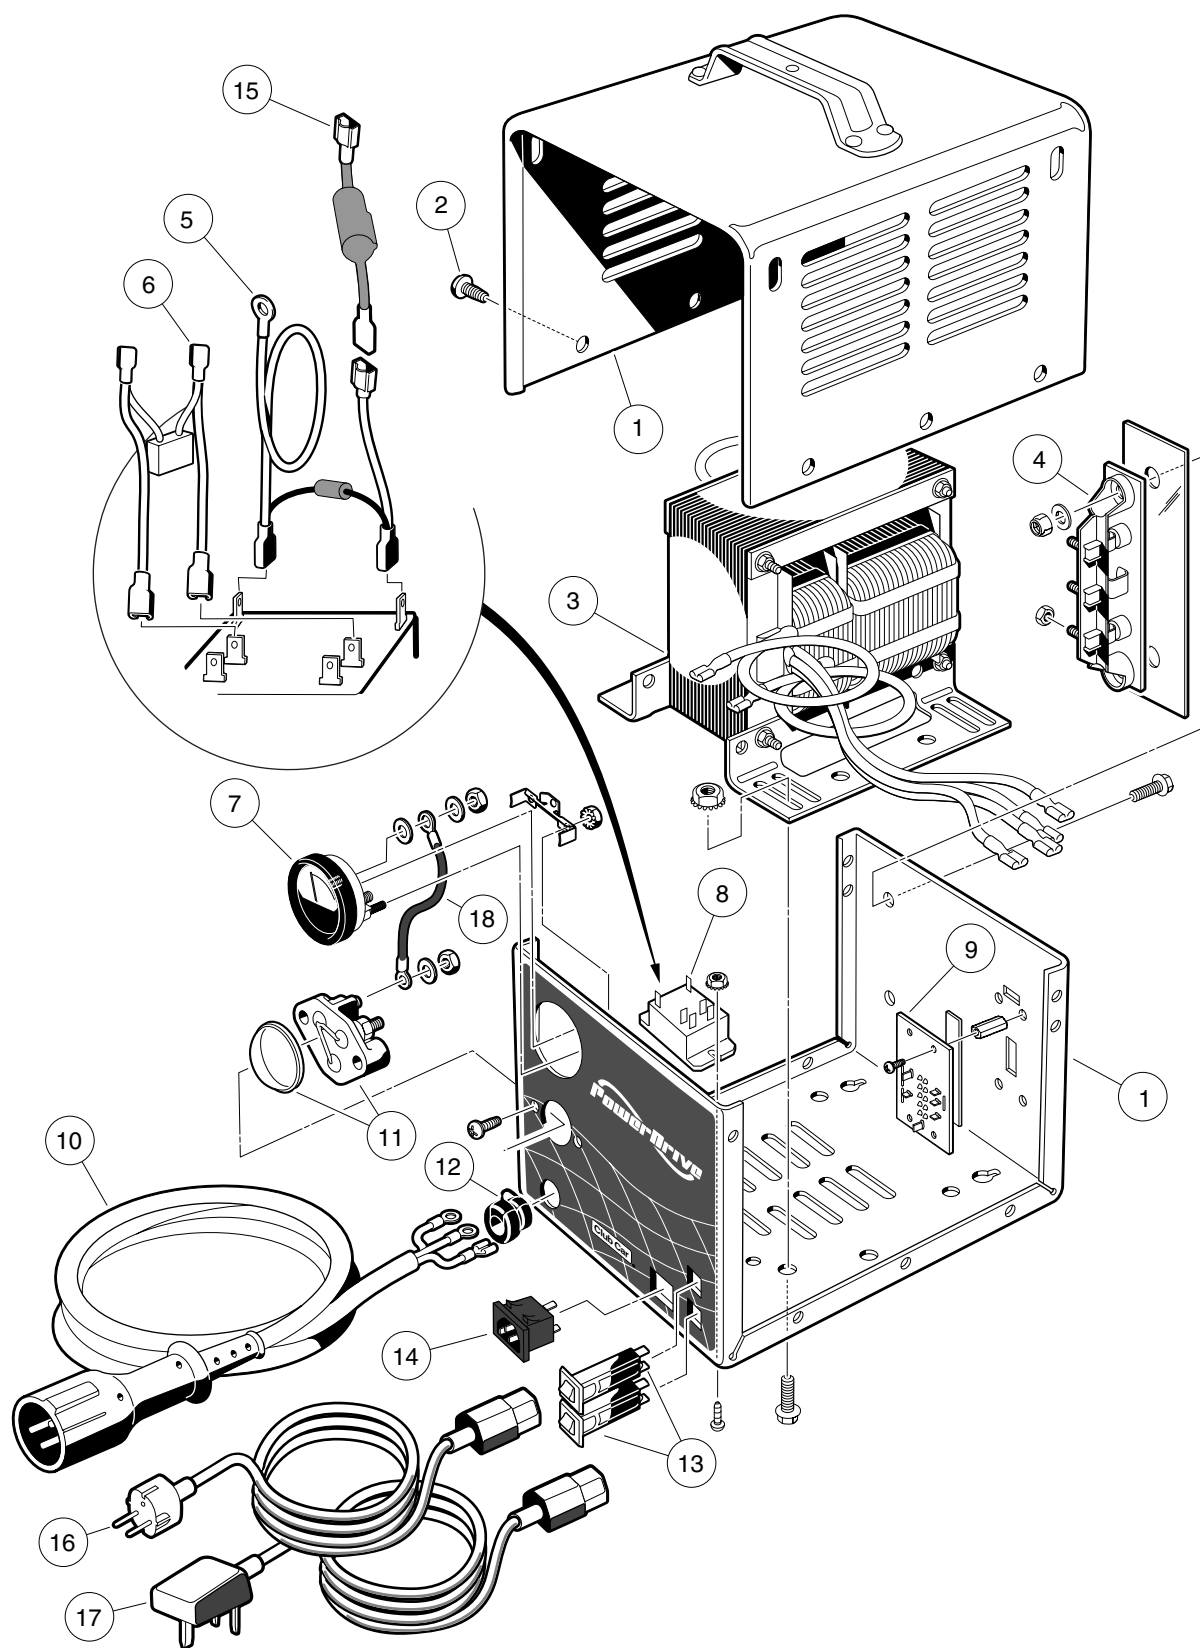

POWERDRIVE BATTERY CHARGER, EUROPEAN

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4 PowerDrive chargers can be used with PowerDrive System 48 and IQ System vehicles.	
	101956201	Charger, Battery, PowerDrive, European with 4-Position Switch 100 - 200 - 220 - 240 V AC, 48-V DC 50/60-Hz (model number 20300) (includes items 1 - 15) 103-inch (261 cm) DC cord with male 3-pin plug, 12-AWG	1
	101956202	Charger, Battery, PowerDrive European with 4-Position Switch 100 - 200 - 220 - 240 V AC, 48-V DC 50/60-Hz (model number 20310) (includes items 1 - 15) 144-inch (366 cm) DC cord with male 3-pin plug, 12-AWG	1
1	N/A	Assembly, Case	1
2	7577	Screw, Pan-Head, Self-Tapping, #10-16 x 1/2	10
3	****	Assembly, Transformer	1
4	1015914	Assembly, Heatsink, with Diodes (includes mounting hardware)	1
5	****	Assembly, AC Voltage Suppressor.....	1
6	****	Kit, Wire Assembly	1
7	101976601	Ammeter (includes hardware)	1
8	101987501	Relay, Power, 48-V DC (includes mounting hardware)	1
9	101838601	Switch, 4-Position Slide	1
10	101828901	Cordset, DC, 103-Inch (261 cm) Long with Male 3-Pin Plug, 12-AWG	1
10	101828902	Cordset, DC, 144-Inch (366 cm) Long with Male 3-Pin Plug, 12-AWG	1
10	101828903	Cordset, DC, 250-Inch (635 cm) Long with Male 3-Pin Plug, 12-AWG	1
11	1012101	Assembly, Fuse (includes hardware)	1
12	1012098	Bushing, Strain Relief, DC Cord, 12-AWG	1
13	101838401	Breaker, Circuit, 10-Amp	2
14	101973501	Receptacle, AC Cord	1
15	****	Assembly, Current Limiter	1
16	101958301	Cordset, AC, Continental Europe, 96-Inch (244 cm) Long (with male 2-pin plug)	1
17	101958201	Cordset, AC, U.K., 96-Inch (244 cm) Long (with male 3-pin plug)	1
18	N/A	Wire, Jumper.....	1
	****	Special order item available on request	

15
E

15

E

MAINTENANCE AND SERVICE TOOLS

16


G

E

16


G

E

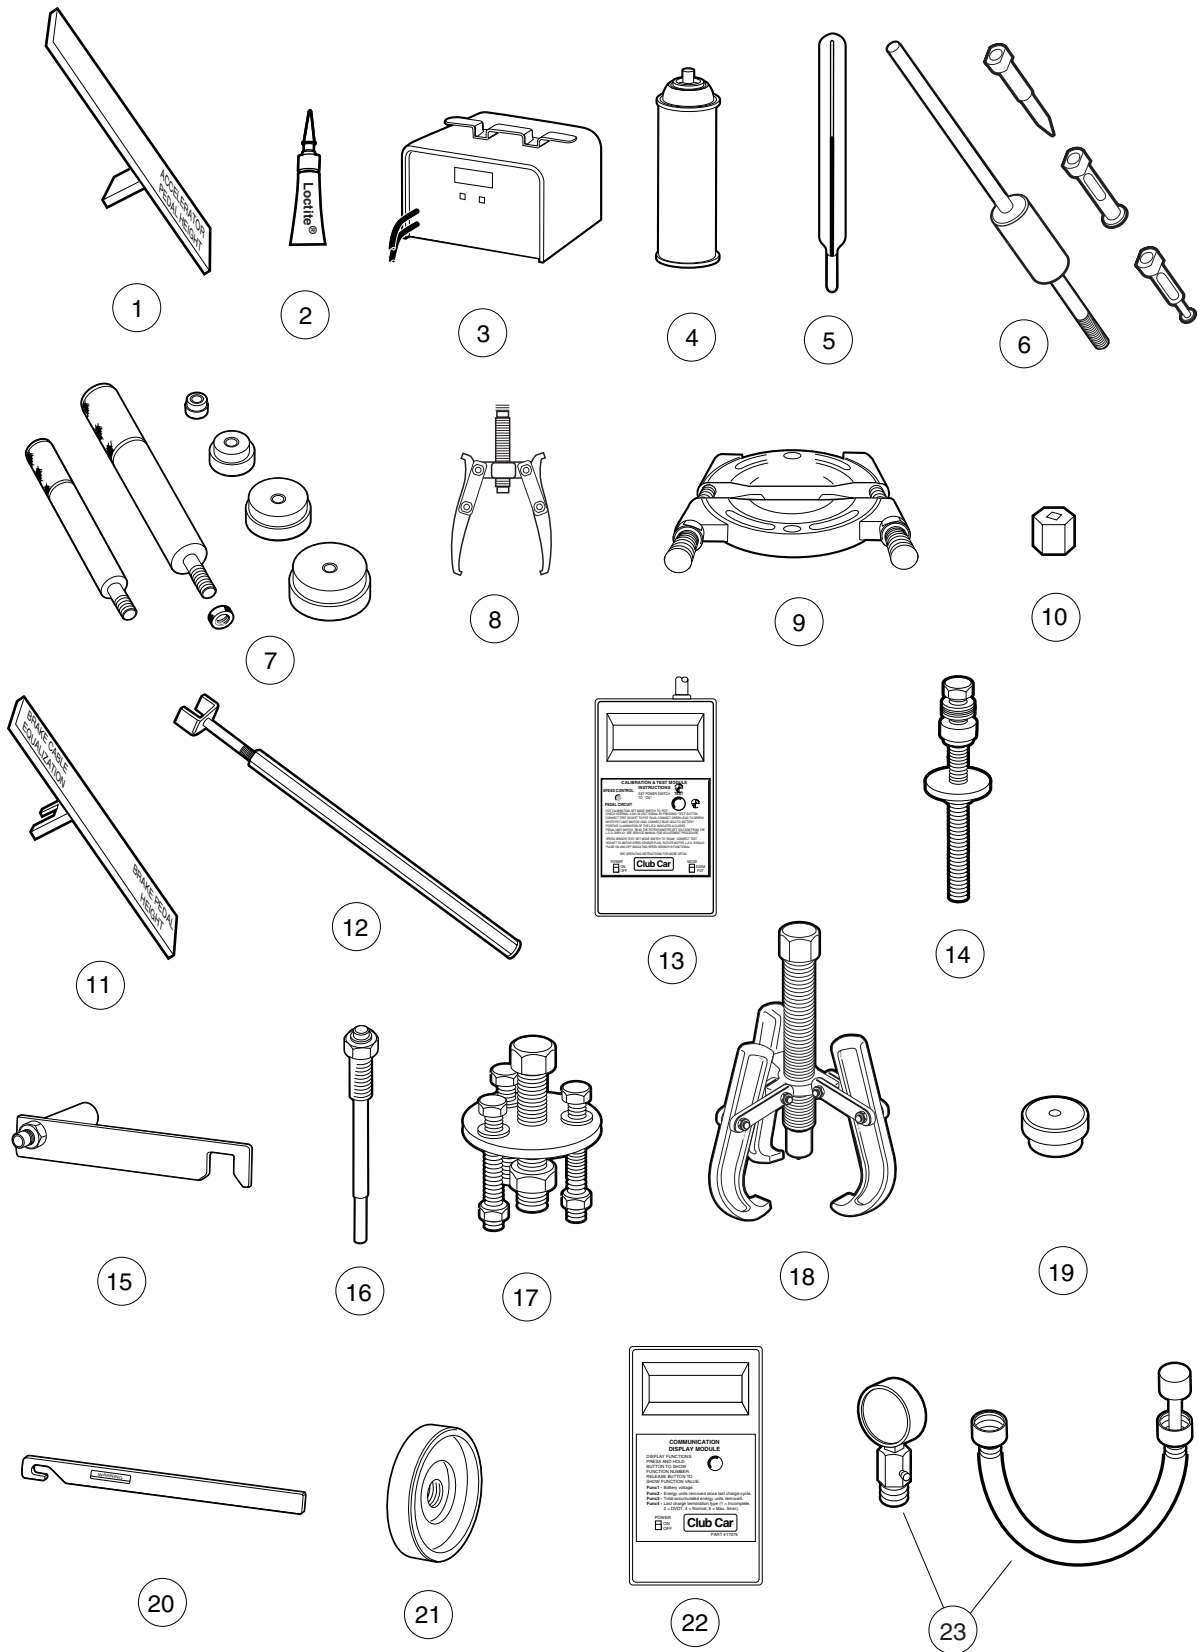

MAINTENANCE AND SERVICE TOOLS


ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	16 G E
		1 2 3 4 The following tool list includes all tools available from Club Car for maintenance and service procedures for gasoline and/or electric vehicles, both past and present models. Be sure to carefully examine the tool list for applicability to your vehicle before ordering.			
1	101871001	Accelerator Pedal Adjustment Tool	1	1	
2	101813202	Adhesive, Guide Ring, 3-Gram Tube	1	1	
3	101831901	Battery Discharge Machine, 36/48 Volt		1	
4	1014305	Battery Terminal Protector Spray	1	1	
5	1011767	Battery Thermometer		1	
6	1016417	Bearing and Oil Seal Remover Assembly	1	1	
7	1016416	Bearing Driver Set	1	1	
8	1012811	Bearing Puller	1	1	
9	1012812	Bearing Puller Wedge Attachment	1	1	
10	1013582	Brake Adjustment Tool (used only on vehicles with manually adjusted mechanical brakes)	1	1	
	102249901	Brake Pedal Adjustment Tool Kit (used for the Carryall Electric Industrial Truck only) (includes items 11 and 12)		1	
11	****	Brake Pedal Adjustment Tool		1	
12	****	Brake Pedal Tension Tool		1	
13	101887101	Calibration Test Module		1	
14	101808401	Cam Installation Tool	1		
	1014510	Clutch Tool Kit (includes items 15 - 21)	1		
15	1014498	Clutch Alignment Tool (for pre-unitized transaxle vehicles built prior to 1997 model year)	1		
16	1014496	Drive Clutch Puller	1		
17	1014497	Drive Clutch Hub Puller	1		
18	1014508	Driven Clutch Cam Puller	1		
19	1014507	Driven Clutch Puller Plug	1		
20	1015524	Drive Clutch Holder Tool Assembly	1		
21	101809101	Press Weldment	1		
22	101831801	Communication Display Module		1	
23	101641002	Compression Gauge and Adapter	1		
		Please refer to the maintenance and service manual for proper tool application. **** Special order item available upon request			

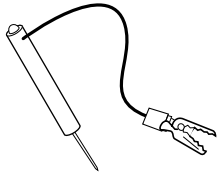


24



25

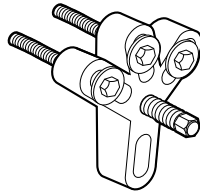


26

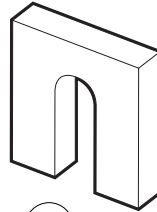


27



 28




29

 


30



31

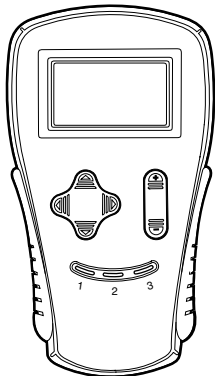


32

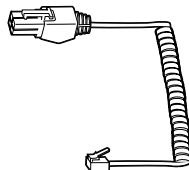

33



 
34




35



36

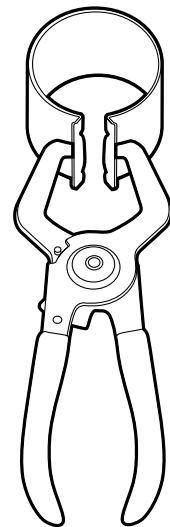

37

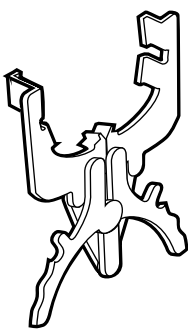


38



39



40

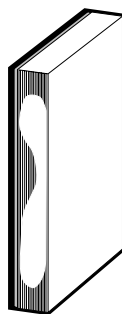

41



42



43



44



45


MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
24	1011273	Continuity Tester	1	1
25	1012151	Dry Moly Lubricant	1	1
26	1016627	Flywheel Puller Kit	1	
27	1016418	Gear Yoke	1	1
28	101933101	Governor Shaft Installation Tool	1	
29	102169401	Hydraulic Brake Adjuster (for vehicles equipped with hydraulic brakes)	1	
30	1011478	Hydrometer	1	1
31	1013593	Internal Retaining Ring Pliers	1	1
32	102248803	IQ Display Module (IQDM) Kit (for IQ System vehicles only) (includes items 33 and 34)		1
33	102241502	Cable, IQDM		1
34	102251501	Adaptor, Cable		1
35	101928701	Liquid Gasket (transaxle case)	1	1
36	102243402	Moly-Teflon Lubricant (4-oz. (113-gram) tube)		1
37	1016414	Piston Ring Compressor Kit (FE290, FE350 and FE400 engines)	1	
38	1016415	Piston Ring Pliers	1	
39	1012549	Retaining Ring Pliers, 45° External	1	1
40	1012560	Retaining Ring Pliers, 90° Internal	1	1
41	101823101	Safety First Card (50 per pack)	1	1
42	1012809	Seal Puller	1	1
43	102330901	Spanner Wrench (for coil over shock front suspension vehicles only)	1	1
44	1014264	Steering Column Bearing Press Tool	1	1
45	1014259	Steering Column Retaining Ring Tool	1	1
		Please refer to the maintenance and service manual for proper tool application.		


16

G

E

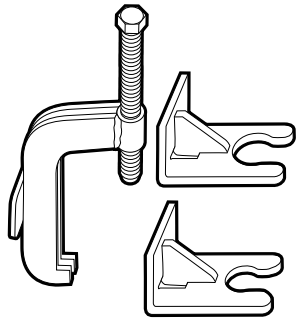

46

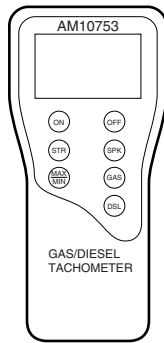


47




48


49

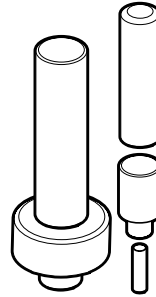


50

 

51

 

52

 


53



54




55

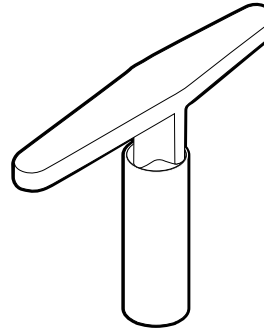


56




57

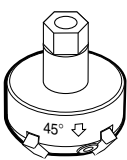


58

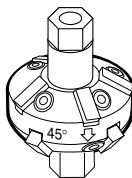

59

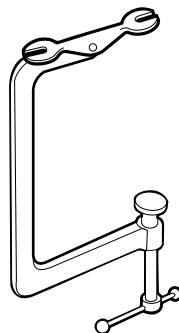

60

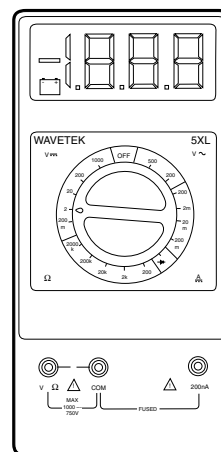

61

MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC	16 G E
		1 2 3 4			
46	102061201	Steering Wheel Puller Tool	1	1	
47	AM10753	Tachometer (includes gasoline engine pick up lead only)	1		
48	101997201	Paint, Touch-Up – Beige*	1	1	
48	101997202	Paint, Touch-Up – White*	1	1	
48	101997203	Paint, Touch-Up – Red*	1	1	
48	101997204	Paint, Touch-Up – Gray*	1	1	
48	101997205	Paint, Touch-Up – Dark Gray*	1	1	
48	101997206	Paint, Touch-Up – Royal Blue (Pacific Blue)*	1	1	
48	101997207	Paint, Touch-Up – Black*	1	1	
48	101997209	Paint, Touch-Up – Dark Green*	1	1	
48	101997211	Paint, Touch-Up – Classic Blue (Navy)*	1	1	
48	101997212	Paint, Touch-Up – Burgundy*	1	1	
49	102562301	Paint, Touch-Up, Underbody (for Precedent vehicles only)	1	1	
50	1014115	Transmission Tool Kit	1		
51	1014161	Transaxle Pinion Seal Tool	1		
52	1014162	Transaxle Axle Seal Tool	1		
53	1016413	Valve Clearance Adjuster Screw Holder (for FE290 engines only)	1		
54	101641201	Valve Guide Reamer	1		
55	101641202	Arbor	1		
56	1016551	Valve Seat Cutter T-Wrench	1		
57	1016552	Valve Seat Cutter Guide	1		
58	1016553	Valve Seat Cutter, 45° (32 mm diameter) (for FE290 engines only)	1		
59	1016554	Valve Seat Cutter, 45°/30° (35 mm diameter)	1		
60	101641101	Valve Spring Compressor	1		
61	1011480	Volt Ohm Meter	1	1	
62	101611003	Tune-Up Kit, All OHV (includes air filter, spark plug, oil filter, fuel filters) (not shown)	1		
63	102562401	Charger Bezel Tool (not shown)	1	1	
64	102555501	Brake Cable Release Tool (not shown)	1	1	
Please refer to the maintenance and service manual for proper tool application. * Item 48 is not for use on with the Surlyn® body material on Precedent vehicles.					

16

G

E

INDEX

Part Number and Page

AM10079	6-5	1012295	6-11, 12-5	1013772	11-7, 14-5
AM10080	11-5	1012328	6-11	1013773	11-7, 14-5
AM10081	11-5	1012431	6-3	1013774	11-7, 14-5
AM10419	10-5	1012505	6-5, 12-3	1013775	14-5
AM10753	16-7	1012528	9-3, 12-11	1013779	14-5
AM10079	12-3	1012549	16-5	1013780	14-5
CCX8506	15-3, 15-5	1012560	16-5	1013781	14-5
183	10-3, 11-3	1012565	5-3	1013782	14-5
332	9-3	1012566	5-3	1013785	14-5
357	10-3	1012571	7-15	1013786	14-5
451	9-3, 13-3	1012594	6-3	1013787	11-7, 14-5
706	5-9	1012649	8-3	1013790	11-7, 14-5
808	10-3, 12-9	1012710	14-5	1013791	11-7, 14-5
1241	6-9	1012711	11-3, 14-5	1013792	14-5
1242	4-5, 6-9, 6-11	1012714	11-5	1013794	11-7, 14-3, 14-5
1624	6-9	1012740	11-5	1013924	4-3, 7-15
7174	6-9, 8-9, 9-3, 13-3	1012741	11-5	1014007	11-3
7310	2-3	1012747	11-5	1014049	10-3
7330	11-7, 14-3, 14-5	1012748	11-5	1014050	10-3
7335	11-5, 14-3, 14-5	1012752	11-3	1014051	10-3
7336	14-3, 14-5	1012809	16-5	1014052	10-3
7577	15-3, 15-5, 15-7, 15-9	1012811	16-3	1014055	10-3
7847	9-3	1012812	16-3	1014056	10-3
7893	6-11	1012830	6-9, 8-9, 9-3	1014057	10-3
8057	6-3	1012981	7-5	1014058	10-3
8058	6-3	1012987	6-3	1014059	10-3
8233	11-3	1013001	6-7	1014062	10-3
8450	10-3	1013003	6-7	1014065	6-3
8717	6-3, 11-3	1013005	6-7	1014070	10-5
8745	5-9	101301102	6-7	1014072	10-5
8754	6-9, 12-9	1013061	11-3	1014078	10-5
1010145	5-11	1013164	5-11	1014080	10-5
1010434	1-7, 1-9, 1-15	1013582	16-3	1014115	16-7
1010545	1-9	1013584	6-3	1014145	6-3
1010829	4-3	1013589	6-3	1014153	4-3
1010850	4-3	1013590	6-3	1014161	16-7
1010934	13-3	1013591	6-3	1014162	16-7
1010954	6-3	1013593	16-5	1014193	11-7, 14-5
1010984	2-3	1013609	6-11	1014201	13-3
1011273	16-5	1013687	8-3	1014207	11-7, 14-5
1011291	11-7, 14-5	1013692	8-3	1014236	5-11
1011411	13-3	1013700	8-9	1014259	16-5
1011415	5-11	1013734	9-3, 12-11	1014264	16-5
1011466	4-3	1013746	8-3, 8-7	1014287	10-3
1011478	16-5	1013756	14-5	1014289	6-7
1011480	16-7	1013757	14-5	1014304	12-9
1011697	8-7, 8-9	1013758	14-5	1014305	16-3
1011767	16-3	1013759	11-3, 14-5	1014375	6-11
1012030	5-9	1013763	14-5	1014413	1-13, 8-11
1012098	15-3, 15-5, 15-7, 15-9	1013764	14-5	1014453	10-3
1012101	15-3, 15-7, 15-9	1013765	14-5	1014454	10-5
1012151	16-5	1013766	14-5	1014496	16-3
1012180	5-11	1013767	14-5	1014497	16-3
1012181	5-11	1013768	11-7, 14-5	1014498	16-3
1012182	5-11	1013769	11-7, 14-5	1014507	16-3
1012285	8-9	1013770	11-7, 14-5	1014508	16-3
		1013771	11-7, 14-5	1014510	16-3

INDEX

1014523	8-3	1016440	8-7	1016516	7-13
1014555	5-11	1016441	8-7	1016517	7-9
1014727	6-3	1016442	7-9	1016519	7-9
1014807	6-3	1016443	7-3	1016520	7-11
1015064	6-3	1016444	8-7	1016521	7-11
1015075	9-3	1016445	7-5	1016523	7-9
1015137	8-3, 8-7	1016446	7-11	1016524	7-3
1015139	8-3	1016447	7-9	1016525	7-3
1015143	8-3	1016448	7-9	1016526	7-3
1015188	8-3	1016449	7-9	1016531	7-3
101524001	6-9	1016450	7-9	1016532	7-13
1015330	9-3	1016451	7-9	1016533	7-13
1015332	7-3	1016452	7-9	1016535	7-11
1015524	16-3	1016453	7-11	1016536	7-3
1015649	7-3	1016454	7-11	1016537	7-7
101570508	2-3	1016455	7-5	1016538	7-11
1015707	2-3	1016456	7-3, 7-5, 7-11	1016539	7-3
1015814	9-3	1016457	7-7	1016541	7-13
101584502	8-9	1016458	7-9, 7-11	1016542	7-9
1015914	15-3, 15-7, 15-9	101645901	7-13	1016544	7-5, 7-9, 7-11
1015917	15-3, 15-7	101645902	7-13	1016545	7-9
1015932	6-9	101645903	7-13	1016546	8-9
1015969	7-3	1016460	7-13	1016547	7-3, 7-13, 8-7
1016074	6-9	101646101	7-13	1016548	7-5
101611003	16-7	101646102	7-13	1016549	7-9
1016154	5-3	101646103	7-13	101655001	7-13
101615602	5-3	1016467	7-7	101655002	7-13
1016203	10-3, 10-5	1016469	7-13	101655003	7-13
1016214	5-3	1016470	7-13	101655004	7-13
1016219	5-3	1016471	7-9	101655005	7-13
1016289	10-3	1016472	7-11	101655006	7-13
1016337	11-5	1016473	7-7	101655007	7-13
1016338	11-5	1016474	7-9	101655008	7-13
101641002	16-3	101647501	7-13	101655009	7-13
101641101	16-7	101647502	7-13	1016551	16-7
101641201	16-7	1016479	7-9	1016552	16-7
101641202	16-7	1016480	8-7	1016553	16-7
1016413	16-7	101648102	8-7	1016554	16-7
1016414	16-5	101648203	7-7	1016558	7-13
1016415	16-5	1016483	7-9	1016559	7-13
1016416	16-3	1016484	7-7	1016560	7-9
1016417	16-3	1016486	8-5	1016561	7-5
1016418	16-5	1016489	7-9	1016562	7-5, 7-13
101642572	8-5	101649002	8-7	1016563	7-9
101642575	8-5	1016493	7-5	1016564	7-11
101642578	8-5	1016494	7-11	1016565	7-11
101642580	8-5	1016496	7-11	1016566	7-9
101642582	8-5	1016497	7-5	1016567	7-11
1016429	7-7	1016499	8-5	1016568	7-13
1016430	7-9	1016501	8-5	1016569	7-9
1016431	7-9	1016502	7-7	1016570	7-7
1016432	7-7, 11-3	1016505	7-5	1016571	7-13
1016435	7-7	1016506	7-11	1016572	8-7
1016436	7-9	1016507	7-3	1016576	7-7
1016437	8-5	1016509	7-13	1016578	7-5
1016438	8-7	1016510	7-11	1016579	7-5
1016439	8-7	1016513	11-3	1016580	7-13

INDEX

1016581	7-7	101823201	4-3	101869302	6-7
1016582	8-7	101823301	4-3	101871001	16-3
1016583	7-9	101823302	4-3	101874901	6-7
1016584	7-11	101823801	4-3	101875001	6-7
1016585	8-5	101823901	4-3	101875101	6-7
1016586	7-5	101824001	4-3	101875201	6-7
1016587	7-5	101824002	4-3	101875301	6-7
1016588	7-5	101824401	8-3	101875401	6-7
1016627	16-5	101825101	3-3, 3-5	101875501	6-7
1016630	6-5	101827101	7-15	101875601	6-7
1016663	5-3	101828301	15-3	101875701	6-7
1016672	11-7, 14-5	101828501	15-3, 15-7	101875802	6-7
1016801	10-3	101828601	15-3, 15-5	101876001	6-7
1016849	6-5, 12-3	101828801	15-3, 15-5	101876202	6-7
1016851	6-5, 12-3	101828802	15-3, 15-5	101876301	6-7
1016883	6-9	101828901	15-3, 15-7, 15-9	101876402	6-7
1017082	11-3	101828902	15-3, 15-7, 15-9	101876501	6-7
1017221	7-3	101828903	15-3, 15-7, 15-9	101877601	6-7
1017231	11-3	101828904	15-5	101877701	6-7
1017327	10-5	101828905	15-5	101878101	6-7
1017448	7-5	101828906	15-5	101879001	6-7
1017455	7-5	101830701	6-5, 12-3	101881101	7-5
1017456	7-7	101831101	15-3	101884801	7-15
1017461	8-5	101831503	15-7	101886101	11-3
1017466	8-7	101831504	15-7	101887101	16-3
1017507	7-7	101831701	15-7	101887601	7-3, 8-7
1017653	6-7	101831702	15-7	101889401	11-5
1017686	10-5	101831801	16-3	101889901	11-5
1017689	9-3	101831901	16-3	101890001	11-5
101769302	2-3	101832101	7-15	101890101	11-3
1017703	14-5	101832202	8-9	101890201	11-3
1017704	14-5	101832302	8-9	101890601	11-3
101791101	4-3	101832701	7-15	101890901	11-7
1017944	13-3	101832901	7-15	101891001	11-7
1017947	13-3	101833001	7-15	101891301	11-3
1017948	13-3	101833201	7-15	101891401	11-7
1017949	13-3	101833301	7-15	101891501	11-7
1017950	13-3	101833401	10-5	101891601	11-5
1017953	13-3	101833601	11-3	101891901	11-5
101802201	15-3	101833701	6-7, 6-9	101892001	11-5
101802202	15-3	101833902	10-3	101892201	11-5
101802203	15-3	101834001	10-5	101892301	11-5
101802204	15-5	101834502	6-5, 12-3	101892401	11-5
101802205	15-5	101834601	7-15	101892501	11-5
101802206	15-5	101834801	11-3	101892601	11-5
101808401	16-3	101836201	10-5	101892701	11-7
101809101	16-3	101837301	6-9	101892901	11-3
101811401	1-13, 8-11	101838201	15-7	101893201	11-5
101813202	16-3	101838301	15-7	101895401	14-3
101815501	4-3	101838401	15-7, 15-9	101895501	14-3
101815502	4-3	101838501	15-7	101895601	14-3
101816301	4-3	101838601	15-7, 15-9	101895701	14-3
101816501	4-3	101838701	15-7	101895801	14-3
101816502	4-3	101851101	6-5, 12-3	101895901	14-3
101819701	15-3	101855901	7-15	101896001	14-3
101820201	8-7	101856001	12-7	101896501	6-7
101823101	16-5	101856201	1-13, 8-11	101897001	14-3

INDEX

101897201	14-3	101960501	3-3	102287101	5-7
101897401	14-3	101972001	16-7	102287201	5-9
101897601	14-3	101972002	16-7	102287301	5-7
101897901	14-3	101972003	16-7	102287401	5-9
101898001	6-11	101972004	16-7	102287801	5-9
101903601	14-3	101972005	16-7	102287901	5-9
101903701	14-3	101972006	16-7	102288101	5-9
101905601	8-5, 8-7	101972007	16-7	102288301	5-5
101906201	14-3	101972009	16-7	102288401	5-9
101906901	14-3	101972011	16-7	102288501	5-7
101908401	12-7	101972012	16-7	102288601	5-5
101908701	12-11	101972101	14-3	102288901	5-7
101909201	7-5	101972201	14-3	102289001	5-5
101909301	7-5	101972401	14-3	102289101	5-9
101909401	7-5	101973101	8-5	102289201	5-5, 5-9
101909501	7-5	101973201	8-5	102289301	5-5, 5-9
101909701	7-3	101973501	15-9	102289401	5-7
101910501	11-7, 14-5	101976001	14-3	102289501	5-7, 5-9
101914401	15-3, 15-7	101976601	15-9	102289601	5-7
101915401	7-11	101979101	6-3	102289701	5-7
101915501	7-13	101980801	11-5	102289801	5-9
101915601	7-3	101980901	11-5	102289901	5-7
101915701	7-5	101981001	11-5	102290120	5-3
101915801	7-5	101987501	15-9	102292201	4-5
101916501	10-3	101990802	4-5	102292356	1-15
101916701	6-9, 10-3	102003201	8-3	102292701	1-9, 1-13
101920101	13-3	102025701	1-9	102292801	4-3
101922101	14-3	102061201	16-7	102293512	12-9
101922201	14-3	102169401	16-5	102295830	1-9, 8-11
101922301	7-13	102235201	13-3	102296020	1-3, 1-9, 5-3, 6-11, 8-3, 8-11
101923001	14-3	102240102	13-3	102296040	6-3, 6-11
101923201	14-3	102240501	12-11	102296140	1-17
101923501	14-3	102241502	16-5	102296401	1-17
101923601	14-3	102242101	10-5	102296530	1-7
101923701	14-3	102243402	16-5	102296601	1-9, 1-13
101923901	14-3	102248803	16-5	102296716	12-7, 12-11
101927101	11-3	102249901	16-3	102296819	1-15
101927201	11-3	102251501	16-5	102296920	1-13, 6-3, 12-7
101927301	11-3	102251901	13-3	102297125	1-7, 8-11
101927501	11-5	102265501	13-3	102297901	4-5
101927601	11-5	102265601	13-3	102298020	1-7, 1-13
101927901	11-5	102265701	13-3	102298030	1-9, 1-13, 4-5
101928001	11-5	102265901	13-3	102298116	5-3
101928101	11-5	102266001	13-3	102298130	5-3
101928301	11-7	102266101	13-3	102298170	5-11
101928601	11-3	102267001	13-3	102298185	5-11
101928701	11-3, 14-3, 14-5, 16-5	102273201	15-5	102298240	1-7, 1-9
101929801	10-3	102273301	15-5	102298401	1-11, 1-17, 5-11
101933101	16-5	102273401	15-5	102298580	1-9
101939901	6-7	102273501	15-5	102298601	1-9
101942301	13-3	102273601	15-5	102298713	1-11
101953901	7-3	102273701	15-5	102298716	1-9
101956201	15-9	102273801	15-5	102298770	12-9
101956202	15-9	102273901	15-5	102299055	1-17
101956501	12-11	102274001	15-5	102299065	1-17
101958201	15-9	102279101	1-9	102299360	1-17
101958301	15-9	102279401	1-13	102302501	1-13

INDEX

102302601	1-13	102508201	1-13	102521301	8-11
102304701	7-9	102508401	12-7	102521401	8-11
102327801	13-3	102508601	12-3	102521901	1-11
102330901	16-5	102508701	12-3	102522301	9-3
102336001	8-9	102508901	1-17	102522604	2-3
102352801	5-9	102508902	1-17	102522605	2-3
102353201	5-9	102509301	5-11	102522701	12-11
102353301	5-9	102509501	12-5	102522901	1-15, 6-5, 12-3
102353401	5-9	102509601	12-5	102523101	1-15
102355301	6-11	102509701	12-5, 12-9	102523901	1-13
102357701	5-9	102509801	12-5, 12-9	102526201	11-3
102380401	1-15	102510001	12-3, 12-5	102526401	12-9
102400001	1-17	102510101	12-5	102526801	12-9
102400101	1-17	102510201	12-9	102527501	3-5
102410606	8-9	102510901	12-7	102528501	4-7
102500001	4-7	102511001	12-11	102528601	4-7
102500101	4-7	102511101	12-7	102534001	12-9
102500501	1-9	102511301	12-9	102534201	1-11
102500601	1-9	102511302	12-9	102534401	1-3
102500801	4-5	102511601	1-17	102537801	5-3
102501401	1-9	102511602	1-17	102538101	3-3
102501501	1-3	102511701	1-13	102538201	3-5
102502301	1-9	102512001	6-3	102538601	12-7
102502302	1-9	102512401	1-17	102540301	7-15
102502304	1-9	102513001	5-11	102540701	2-3
102502305	1-9	102513102	4-5, 8-9	102540801	5-3
102502306	1-9	102513301	1-17	102540901	3-3, 3-5, 5-3
102502307	1-9	102513402	8-3	102543901	1-17
102502308	1-9	102513501	1-17	102544201	1-17
102502309	1-9	102513701	8-3	102545601	1-9
102502401	1-3	102514201	8-3	102545602	1-9
102502402	1-3	102514301	8-11	102551901	4-5
102502404	1-3	102514401	1-13, 8-11	102552001	4-5
102502405	1-3	102514601	6-3	102552501	1-5
102502406	1-3	102515001	6-5, 6-13	102553901	1-9
102502407	1-3	102515101	6-5	102554601	1-5
102502408	1-3	102515301	6-3	102554901	6-3
102502409	1-3	102515401	11-3	102555501	16-7
102502501	1-3	102515501	6-3	102555901	3-5
102502601	1-3	102515601	6-3	102556701	2-3
102502901	1-9, 1-17	102515901	6-11	102557201	1-15
102503001	1-9, 1-17	102516001	6-3	102557501	4-3
102503201	1-7	102516301	1-17	102557502	4-3
102503202	1-7	102516901	1-13	102557801	2-3
102504001	1-7	102517001	1-7	102558201	8-11
102504201	1-7	102517801	3-3	102558301	8-11
102504301	1-7	102517901	3-3	102558401	8-11
102504501	1-7	102518001	3-5	102558501	8-11
102504601	1-11	102518101	3-5	102558601	8-11
102504801	1-13	102518201	3-5	102558701	8-11
102506201	5-11	102518301	3-5	102558801	4-7
102506301	5-11	102519201	3-3	102558901	4-7
102506401	5-11	102519301	3-3, 3-5	102559001	4-7
102506601	5-11	102519401	3-5	102559101	4-7
102507001	4-5	102520001	12-7	102559201	4-7
102507101	5-3	102520701	1-17	102559301	4-7
102507601	6-13	102520702	1-17	102559401	4-7

INDEX

102559501 4-7
 102559601 4-7
 102559701 4-7
 102560101 1-9
 102560102 1-9
 102562101 1-9
 102562301 16-7
 102562401 16-7
 102562701 1-5
 102562801 1-5
 102562901 1-5
 102563001 4-7
 102563101 4-7
 102564001 5-7
 102564101 5-7
 102564901 5-5
 102565001 5-5
 102565101 5-5
 102565201 5-5
 102565301 5-5
 102565401 5-5
 102565701 5-5
 102565801 5-5
 102565901 5-5
 102566001 5-5
 102566101 5-5
 102569001 5-3
 102569304 2-3
 102571301 5-3
 102575801 1-13
 102579301 1-7

A

ac voltage suppressor 15-9
 accelerator (throttle) cable 4-5, 8-9
 accelerator pedal adjustment tool 16-3
 accelerator pedal pad 4-7
 accelerator pedal return spring 4-7
 a-connector (starter/generator) 6-7
 adapter, cable (IQDM) 16-5
 adhesive, guide ring 16-3
 adjuster, hydraulic brake 16-5
 air intake 8-11
 ammeter 15-3, 15-5, 15-7, 15-9
 arbor 16-7
 arm
 control 5-7
 governor lever 11-3
 pivot 11-3
 rocker 7-9
 armature 6-7, 13-3
 assembly
 ac voltage suppressor 15-9
 accelerator pedal return spring 4-7
 air intake 8-11
 armature 6-7
 axle 11-7, 14-3, 14-5

axle tube 14-3, 14-5
 backrest 1-7
 bag hoop 1-7
 body intake 8-11
 bolt (float chamber) 8-5
 brush rigging 13-3
 bumper 1-11
 carburetor 8-5
 charger case 15-3, 15-5, 15-7, 15-9
 control arm 5-7
 current limiter 15-9
 cylinder head 7-9
 dash 1-15
 diode with heatsink film 15-5
 drive hub 10-3
 driven clutch 10-5
 end shield 13-3
 float (carburetor) 8-5
 float chamber 8-5
 floor mat retainer 1-13
 forward/reverse shifter 6-3
 front structure 5-7
 fuel tank vent 8-3
 heatsink 15-3, 15-7, 15-9
 hub and ball bearing 5-9
 idle screw 8-5
 king pin 5-9
 lever (brake) 4-3
 pawl lock 4-7
 pedal box 4-7
 pilot air screw 8-5
 receptacle 12-9
 resistor 12-11
 rod (counterbalance) 7-13
 scorecard plate 5-3
 screw (float chamber) 8-5
 spindle bushing 5-9
 stator shell 13-3
 steering gear box 5-5
 transformer 15-3, 15-5, 15-7, 15-9
 voltage regulator 6-11
 voltage suppressor 15-3, 15-7
 wheel and tire 2-3
 wire 6-9, 7-3, 15-5, 15-7, 15-9

axle 11-7, 14-3, 14-5
 axle shaft seal 14-3
 axle tube 11-7, 14-3, 14-5
 axle tube oil seal 14-5

B

back plate, scorecard 5-3
 backing plate (brake) 4-3
 backrest 1-7
 bag hoop 1-7
 bag strap 1-7
 bagwell liner 1-9
 ball bearing, output shaft 6-7

ball joint, inner 5-5
 ball stud 6-3
 ball stud (shifter lever) 11-3
 ball, steel (shift fork retainer) 11-5
 ball, steel, pressure relief 7-7
 band, rpm limiter mount 7-5
 base, forward/reverse shifter 6-3
 battery charger, PowerDrive 15-3, 15-7, 15-9
 battery charger, PowerDrive 2 15-5
 battery clamp 6-11, 12-9
 battery discharge machine 16-3
 battery terminal protector spray 16-3
 battery thermometer 16-3
 battery warning light 12-3
 battery, 12-volt 6-11, 12-9
 bearing
 ball (crankshaft) 7-11
 ball (motor) 13-3
 ball, input shaft 11-5
 ball, output shaft 6-7
 differential 14-3
 idler (drive clutch) 10-3
 inner axle tube 11-7, 14-5
 input gear 14-3, 14-5
 intermediate gear 14-3, 14-5
 needle 5-5, 11-5
 outer axle tube 11-7, 14-5
 plain (counterbalance rod) 7-13
 bearing and oil seal remover 16-3
 bearing driver set 16-3
 bearing puller 16-3
 bearing puller wedge 16-3
 bearing retainer 13-3
 bearing retainer (starter/generator) 6-7
 bell crank, forward/reverse 6-3
 bellows 5-5
 belt, drive 10-3, 10-5
 belt, starter/generator 6-9, 10-3
 bezel, forward/reverse 6-3
 body intake 8-11
 bolt, brake cluster mounting 4-3
 boot, tow/run switch 12-7
 brace, PowerShield™ 8-11
 bracket
 accelerator cable 8-9
 adjusting (starter/generator) 6-9
 canopy support 1-9, 1-17
 clamshell 1-11
 engine shroud 7-3
 fe290 mounting 6-9
 governor cable 8-9
 governor cable, rear 8-9
 muffler mounting 9-3
 oil filter 7-7
 oil level switch 7-11
 power relay mounting 15-7

INDEX

rpm limiter 7-5
snubber 7-15
throttle 8-7
tow/run switch 12-7
brake adjusting mechanism 4-3
brake adjustment tool 16-3
brake cable 4-3
brake cable release tool 16-7
brake cluster 4-3
brake cluster mounting bolt 4-3
brake drum 4-3
brake pedal adjustment tool 16-3
brake pedal pad 4-7
brake pedal tension tool 16-3
brake return spring 4-7
brake rod 4-7
brake shoe 4-3
brake spring 4-3
breaker, circuit, 10-amp 15-7, 15-9
breaker, circuit, 15-amp 15-3, 15-5
breather 14-3, 14-5
breather, transaxle case 11-3
bronze bushing 6-3
brow 1-3
brow cap 1-3
brush 6-7, 13-3
brush connector 6-7
brush holder 6-7
brush inspection port cover 6-7
brush spring 6-7, 13-3
buckle, bag strap 1-7
bumper 1-11
bumper, motor 13-3
bushing 14-5
bronze 6-3
drive clutch 10-3
insulator 13-3
stain relief 15-7
strain relief 15-3, 15-5, 15-9
urethane 5-11
buzzer, reverse 6-5, 12-3

C

cable
accelerator (throttle) 4-5, 8-9
brake 4-3
governor, snap-in 8-9
IQDM 16-5
transmission 6-3
calibration test module 16-3
cam (driven clutch) 10-5
cam installation tool 16-3
cam, neutral lockout 6-3
camshaft 7-11
canopy 1-17
cap
brow 1-3
fuel 8-3
hub 5-9
key switch 6-5, 12-3
carburetor 8-5, 8-7
carburetor insulator 8-7
card, safety first 16-5
case
charger 15-3, 15-5, 15-7, 15-9
gear carrier 11-7
rocker arm 7-9
case gasket 14-5
charger bezel tool 16-7
charger case 15-3, 15-5, 15-7, 15-9
charger receptacle 12-9
charger, PowerDrive 2 battery 15-5
charger, PowerDrive battery 15-3, 15-7, 15-9
choke 1-13, 8-11
circuit breaker (15-amp) 15-3, 15-5
clamp
battery 6-11, 12-9
cable retaining 8-9
hose 8-7
muffler 9-3
clamp screw 13-3
clevis 5-7
clip, scorecard 5-3
cluster, brake 4-3
clutch alignment tool 16-3
clutch tool kit 16-3
clutch, drive 10-3
clutch, driven 10-5
coil, field 6-7
coil, ignition 7-5
collar (axle shaft) 11-7
collar, steering column 5-3
collet 7-9
communication display module 16-3
component mounting plate 12-11
compression gauge 16-3
compressor, piston ring 16-5
compressor, valve spring 16-7
computer, onboard 12-11
connecting rod 7-13
connector, cord 7-11
continuity tester 16-5
control arm 5-7
control harness, instrument panel 6-5, 6-13, 12-3, 12-5
controller, IQ 12-11
cord connector 7-11
cordset, ac 15-3, 15-5, 15-7, 15-9
cordset, dc 15-3, 15-5, 15-7, 15-9
counterbalance guide shaft 7-13
counterbalance weight 7-13
cover
brush inspection port 6-7

canopy support 1-17
crankcase 7-11
drain 1-17
dust 4-3
electronic module 12-7
fuseholder 6-11
gear case 11-7
oil pump 7-7
crankcase 7-13
crankcase cover 7-11
crankshaft 7-13
crankshaft seal 7-11
crankshaft shim 7-13
current limiter 15-9
cutter, valve seat 16-7
cylinder head 7-9

D

damper, rpm limiter 7-5
dash 1-15
debris shield 4-7
decal
battery terminal warning, 3-5
battery weight warning 3-5
caution 3-5
Club Car clip 3-3, 3-5, 5-3
driver/passenger warning 3-3, 3-5
frame ground and governor warning 3-3
gasoline warning 3-3
key switch 3-3, 3-5
operating instructions 3-3, 3-5
private speed 3-5
rotating parts and hot manifold warning 3-3
run/tow safety 3-5
run/tow with storage area 3-5
differential bearing 14-3
differential gear 11-7, 14-3, 14-5
differential gear case 11-7, 14-5
differential housing 14-3
differential idler gear 11-7, 14-3, 14-5
differential pin 11-7, 14-3
dipstick 7-3
drain cover 1-17
drain plug (crankcase) 7-7
drive belt 10-3, 10-5
drive clutch 10-3
drive clutch button 10-3
drive clutch holder tool 16-3
drive clutch hub puller 16-3
drive clutch puller 16-3
drive hub 10-3
driven clutch 10-5
driven clutch cam puller 16-3
driven clutch puller plug 16-3
driver, drive clutch 10-3
drum, brake 4-3

INDEX

dry moly lubricant 16-5
dust cover 4-3

E

end bell, commutator 6-7
end bell, output shaft 6-7
end shield 13-3
engine shroud 7-3
engine valve spring 7-9
engine, fe290 ohv gasoline 7-3
exhaust gasket 9-3
exhaust system 9-3
exhaust valve 7-9

F

15-amp fuse 12-7
48-volt motor, 3.20-hp 13-3
48-volt solenoid 12-11
fan housing 7-3
fan shroud 7-3
fan, flywheel 7-5
fascia 1-3
fe290 ohv gasoline engine 7-3
field coil 6-7
fill plug 14-3
fill plug with gasket 14-5
filter, fuel 8-3
filter, oil 7-7
fixed face 10-3, 10-5
float (carburetor) 8-5
float chamber 8-5
floor cover plate 4-5
floor mat 1-13
flywheel 7-5
flywheel fan 7-5
flywheel puller 16-5
fork, shift 11-5
forward/reverse bell crank 6-3
forward/reverse bezel 6-3
forward/reverse handle 6-3
forward/reverse shifter 6-3
forward/reverse shifter base 6-3
forward/reverse switch 12-7
front panel 1-3
front structure 5-7
f-terminal insulator 6-7
fuel filter 8-3
fuel pickup tube (valve) 8-3
fuel tank 8-3
fuse
 10-amp 6-11, 12-5
 15-amp 12-7
 30-amp 15-5
 charger 15-3, 15-7, 15-9

G

gasket
 carburetor insulator 8-7
 case 14-5
 crankcase cover 7-11
 drain plug 7-7, 11-3
 exhaust 9-3
 fe290 7-9
 float chamber 8-5
 head 7-9
 insulator 8-7
 intake pipe 8-7
 liquid 14-3, 14-5, 16-5
 liquid (transaxle case) 11-3
 oil pump 7-7
 plug 14-3
 rocker arm case 7-9
 throttle bracket 8-7
gauge, compression 16-3
gcor 4-7
gear
 cluster idler 11-5
 differential 11-7, 14-3, 14-5
 differential idler 11-7, 14-3, 14-5
 helical (crankshaft) 7-13
 input 11-5
 intermediate 14-3, 14-5
 output 11-7, 14-3, 14-5
 spur (crankshaft) 7-13
 spur (transaxle) 11-5
gear case 11-3, 14-3, 14-5
gear yoke 16-5
governor 11-5
governor cable 8-9
governor guard 8-7
governor lever arm 11-3
governor shaft installation tool 16-5
grip, pencil 5-3
grommet 7-5
guard, governor 8-7
guide
 oil (transaxle) 11-5
 valve 7-9
 valve seat cutter 16-7
guide ring adhesive 16-3

H

handle
 canopy 1-17
 forward/reverse 6-3
 PowerDrive 2 battery charger 15-5
hardware, terminal (starter/generator) 6-7
harness, control, instrument panel 6-5,
 6-13, 12-3, 12-5
harness, wire 6-13, 12-5
head gasket 7-9

heatsink 15-3, 15-5, 15-7, 15-9
helical gear (crankshaft) 7-13
hip restraint 1-5
hold down, tank 8-3
hose clamp 8-7
housing
 differential 14-3
 fan 7-3
 female 3-wire (motor) 13-3
 field coil (starter/generator) 6-7
 pinion 5-5
hub 5-9
hub cap 5-9
hub, drive 10-3
hub, synchronizer clutch 11-5
hydraulic brake adjuster 16-5
hydrometer 16-5

I

idle screw 8-5
ignition coil 7-5
inner axle tube bearing 14-5
input gear bearing 14-3, 14-5
input shaft 14-3, 14-5
input shaft oil seal 14-3, 14-5
insert, synchronizer 11-5
instrument panel 1-15, 6-5, 12-3
insulator gasket 8-7
insulator, carburetor 8-7
insulator, f-terminal 6-7
intake pipe 8-7
intake valve 7-9
intermediate gear 14-3, 14-5
intermediate gear bearing 14-5
internal retaining ring pliers 16-5
IQ display module (IQDM) 16-5

J

jet, main 8-5
jet, pilot 8-5
joint, inner ball 5-5

K

key
 crankshaft 7-13
 driven clutch 10-5
 flywheel 7-5
 square 10-5
 sunk 14-5
 transmission shaft 11-5
 vehicle 6-5, 12-3
 woodruff 6-7, 11-3
key switch 6-5, 12-3
key switch nut 12-3
king pin assembly 5-9
kit

INDEX

3-pin plug and wedge lock 13-3
bearing and magnet 13-3
brake pedal adjustment tool 16-3
bushing 5-7
canopy 1-17
differential gear case 11-7
drive clutch weight 10-3
driven clutch button 10-5
front hub replacement 5-9
gasket 7-9
IQ display module (IQDM) 16-5
pulley nut and screw 6-7
shock absorber cushion 5-11
shock absorber, rear 5-11
tune-up 16-7
underbody cover 1-17

L

lead wire 7-5
leaf spring 5-11
lever
 brake 4-3
 choke 1-13, 8-11
 shifter 11-3
 transmission shifter 11-3
light, battery warning 12-3
light, low oil warning 6-5
limit switch 6-3
limiter, rpm 7-5
line, fuel 8-3
line, vent (fuel) 8-7
liner, bagwell 1-9
liner, rear underbody 1-9
liquid gasket 14-3, 14-5, 16-5
lock plate 14-5
low oil warning light 6-5
lubricant, dry moly 16-5
lubricant, moly-teflon 16-5
lug nut 2-3
lug stud 11-7, 14-3, 14-5

M

magnet 13-3
magnetic plug 14-3
main jet 8-5
mat, floor 1-13
mcor 4-7
mechanism, brake adjusting 4-3
meter, volt ohm 16-7
module
 calibration test 16-3
 communication display 16-3
 structural accessory 1-7
module cover, electronic 12-7
moly-teflon lubricant 16-5
motor, 48-volt IQ 13-3

mounting plate (engine) 7-15
movable face 10-3, 10-5
muffler clamp 9-3

N

nameplate 1-3
needle bearing 5-5
neutral lockout cam 6-3
nozzle, main 8-5
nut, adjusting hex (turnbuckle) 4-5
nut, key switch 6-5, 12-3
nut, lug 2-3

O

oil filler tube 7-3
oil filter 7-7
oil filter screen 7-11
oil level sensor 7-11
oil pump and rotor 7-7
oil seal (crankshaft) 7-13
o-ring
 counterbalance shaft 7-13
 oil filter mount 7-7
 oil sending connector 7-11
 rocker case hardware 7-9
outer axle tube bearing 14-5
output gear 14-3, 14-5

P

package, brush 6-7
pad
 accelerator pedal 4-7
 brake pedal 4-7
 park pedal 4-7
 spring 5-11
paint, touch-up 16-7
panel
 access 1-9
 front 1-3
 instrument 1-15, 6-5, 12-3
 rear beauty 1-9
 structural accessory module 1-7
park pedal pad 4-7
pawl lock 4-7
pedal box 4-7
pencil grip 5-3
pilot air screw 8-5
pilot jet 8-5
pin
 crankcase cover locating 7-11
 differential 11-7, 14-3, 14-5
 head locating 7-9
 piston 7-13
 roll (shifter lever) 11-3
pinion housing 5-5
pinion, steering 5-5

pipe, intake 8-7
piston 7-13
piston pin 7-13
piston pin retaining ring 7-13
piston ring compressor 16-5
piston ring pliers 16-5
piston ring set 7-13
pivot arm 11-3
plate

 backing (brake) 4-3
 component mounting 12-11
 floor cover 4-5
 flywheel fan 7-5
 heatsink 15-5
 kick 1-13
 lock 14-5
 mounting (engine) 7-15
 oil filter screen 7-11
 oil pump 7-7
 oil valve 7-9
 scorecard 5-3
 spring clamp 5-9
 thrust 11-5, 11-7, 14-5
 thrust (idler gear) 14-3

pliers

 internal retaining ring 16-5
 piston ring 16-5
 retaining ring 16-5

plug

 3-pin 13-3
 cap 7-5
 drain (crankcase) 7-7
 drain (transaxle) 11-3
 drive clutch 10-3
 driven clutch puller 16-3
 fill 14-3
 fill with gasket 14-5
 filter bracket 7-7
 magnetic 14-3
 spark 7-5

plug gasket 14-3

pole set (starter/generator) 6-7
power relay 15-3, 15-5, 15-7
PowerDrive 2 battery charger 15-5
PowerDrive battery charger 15-3, 15-7, 15-9

press weldment 16-3

pressure relief ball 7-7
protector spray, battery terminal 16-3
puller

 bearing 16-3
 drive clutch 16-3
 drive clutch hub 16-3
 driven clutch cam 16-3
 flywheel 16-5
 seal 16-5
 pulley (starter/generator) 6-7

INDEX

pulley nut and screw (starter/generator) 6-7
pump, fuel impulse 8-3
push rod 7-9

R

rack, steering 5-5
reamer, valve guide 16-7
rear spring shackle 5-11
receptacle, ac cord 15-9
receptacle, charger 12-9
regulator, voltage 6-11
relay, 48-vdc power 15-3, 15-5, 15-7, 15-9
remover, bearing and oil seal 16-3
resistor 12-11
restraint, hip 1-5
retainer
 bearing 13-3
 bearing (starter/generator) 6-7
 floor mat 1-13
 shock absorber cushion 5-11
 spiral ring 10-3
 spring 10-3
 valve spring 7-9
retaining ring (driven clutch) 10-5
retaining ring pliers 16-5
reverse buzzer 6-5, 12-3
rigging, brush 13-3
ring
 c-type 5-5
 piston (set) 7-13
 piston pin retaining 7-13
 retaining (driven clutch) 10-5
 snap 11-3
 spiral back-up 10-3
 stop 5-5
 synchronizer 11-5
rocker arm 7-9
rod
 battery clamp 12-9
 brake 4-7
 choke button 8-11
 connecting 7-13
 counterbalance 7-13
 push 7-9
 shift 11-5
rpm limiter 7-5

S

safety first card 16-5
scorecard plate 5-3
screen, oil filter 7-11
screw
 bearing retainer 13-3
 clamp 13-3
 idle 8-5
 pilot air 8-5

pole piece (starter/generator) 6-7
valve clearance adjuster 16-7
seal
 axle tube oil 14-5
 crankshaft 7-11
 dust, steering pinion 5-5
 input shaft oil 14-5
 oil (axle shaft) 11-7
 oil (crankshaft) 7-13
 oil (governor pivot) 11-3
 oil (shifter shaft) 11-3
 oil, axle shaft 14-3
 oil, input shaft 11-5, 14-3
 valve 7-9
seal puller 16-5
seat 1-5
 spring 7-9
 valve 7-7
sensor, motor speed 13-3
sensor, oil level 7-11
set, pole 6-7
shackle, rear spring 5-11
shaft
 counterbalance guide 7-13
 input 11-5, 14-3, 14-5
 rocker arm 7-9
 shifter 11-3
shield, debris 4-7
shield, end 13-3
shift fork 11-5
shift rod 11-5
shifter lever 11-3
shifter shaft 11-3
shifter, forward/reverse 6-3
shim (axle) 14-5
shim, crankshaft 7-13
shock absorber 5-7
shock absorber cushion 5-11
shock absorber cushion retainer 5-11
shock absorber, rear 5-11
shoe retainer 4-3
shoe, brake 4-3
shroud
 engine 7-3
 fan 7-3
 steering column 5-3
sleeve
 shackle upper 5-11
 spring eye mount 5-11
 synchronizer 11-5
 transaxle 11-5
slide switch, 4-position 15-7, 15-9
snubber 7-15
solenoid, 12 volt 6-11
solenoid, 48-volt 12-11
spacer
 crankshaft 7-13

engine 7-15
 fixed face shaft 10-3
spanner wrench 16-5
spindle bushing assembly 5-9
spray, battery terminal protector 16-3
spring
 accelerator pedal return 4-7
 brake return 4-7
 brake shoe 4-3
 brush 6-7, 13-3
 drive button 10-3
 drive clutch 10-3
 engine valve 7-9
 forward/reverse cam 6-3
 leaf 5-11
 oil pressure relief 7-7
 shift fork retainer 11-5
 synchronizer 11-5
 tapered compression 5-3
 throttle return 8-7
 yoke 5-5
spring clamp plate 5-9
spring eye mount sleeve 5-11
spring seat 7-9
spur gear (crankshaft) 7-13
starter/generator 6-7, 6-9
stator shell 13-3
steering column 5-3
steering column bearing press tool 16-5
steering column retaining ring tool 16-5
steering gear 5-5
steering wheel 5-3
steering wheel puller tool 16-7
stem, valve 2-3
stiffener, flywheel side 7-15
stop 5-5
strap, bag 1-7
structural accessory module 1-7
structure, front 5-7
stud
 ball 6-3, 11-3
 engine mounting 7-15
 lug 5-9, 11-7, 14-3, 14-5
sunk key 14-5
support
 battery clamp 12-9
 canopy 1-17
 liner 1-9
 PowerShield 8-11
 underbody 1-9
support yoke 5-5
switch
 4-position slide 15-7, 15-9
 forward/reverse 12-7
 key 6-5, 12-3
 limit 6-3
 tow/run 12-7

INDEX

synchronizer clutch hub 11-5
synchronizer ring 11-5
system, exhaust 9-3

T

10-amp fuse 12-5
12-volt battery 6-11, 12-9
12-volt solenoid 6-11
3-pin plug and wedge lock 13-3
30-amp fuse 15-5
tachometer 16-7
tank, fuel 8-3
tape, foam 1-9
tapered compression spring 5-3
tappet 7-11
terminal hardware (starter/generator) 6-7
tester, continuity 16-5
thermometer, battery 16-3
throttle (accelerator) cable 4-5, 8-9
throttle bracket 8-7
throttle return spring 8-7
thrust plate (differential) 14-5
tie rod end 5-5
tire 2-3
tool
 accelerator pedal adjustment 16-3
 brake adjustment 16-3
 brake cable release 16-7
 brake pedal adjustment 16-3
 brake pedal tension 16-3
 cam installation 16-3
 charger bezel 16-7
 clutch alignment 16-3
 drive clutch holder 16-3
 governor shaft installation 16-5
 steering column bearing press 16-5
 steering column retaining ring 16-5
 steering wheel puller 16-7
 transaxle axle seal 16-7
 transaxle pinion seal 16-7
 transmission 16-7
tool kit, clutch 16-3
touch-up paint 16-7
tow/run switch 12-7
transaxle 14-3, 14-5
transaxle axle seal tool 16-7
transaxle pinion seal tool 16-7
transaxle, unitized 11-3
transformer 15-3, 15-5, 15-7, 15-9
transmission cable 6-3
transmission tool 16-7
tray, dash 1-15
tube
 axle 11-7
 crankcase vent 8-7
 oil filler 7-3
tune-up kit 16-7

turnbuckle 4-5

U

u-bolt 5-11
underbody cover kit 1-17
underbody, front 1-13
underbody, rear 1-9
unitized transaxle 11-3
urethane bushing 5-11

V

valve
 exhaust 7-9
 fuel pickup tube 8-3
 intake 7-9
 oil 7-9
valve clearance adjuster screw 16-7
valve guide 7-9
valve guide reamer 16-7
valve seal 7-9
valve seat 7-7
valve seat cutter 16-7
valve seat cutter guide 16-7
valve seat t-wrench 16-7
valve spring compressor 16-7
valve spring retainer 7-9
valve spring, engine 7-9
valve, stem 2-3
vent line (fuel) 8-7
vent, fuel tank 8-3
volt ohm meter 16-7
voltage regulator 6-11
voltage suppressor 15-3, 15-7

W

warning light, low oil 6-5
washer
 key switch 12-3
 mounting 10-5
 spring 11-5
 thrust (transaxle) 11-5
wedge, bearing puller 16-3
weight, counterbalance 7-13
weight, drive clutch 10-3
weldment, press 16-3
wheel 2-3
wheel, steering 5-3
wire assembly 6-9, 7-3, 15-3, 15-5, 15-7, 15-9
wire harness 6-13, 12-5
wire, jumper 15-9
wire, lead 7-5
woodruff key 6-7, 11-3
wrench, spanner 16-5

Y

yoke spring 5-5
yoke, gear 16-5
yoke, support 5-5

Your Comments Are Appreciated

Please select your category:

- ☐ Distributor/Dealer
 ☐ Technician
☐ Individual Owner
 ☐ Golf Course Superintendent
☐ Club Car Associate/Representative
 ☐ Other: _____

In order to help us better serve you, please rate this publication in the following categories:

	Poor	Fair	Average	Good	Excellent
1. Ease of Understanding	☐	☐	☐	☐	☐
2. Ease of Finding Information	☐	☐	☐	☐	☐
3. Clarity of Illustrations	☐	☐	☐	☐	☐
4. Index Usability	☐	☐	☐	☐	☐

Comments/Suggestions

This image shows a single sheet of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page. There are approximately 20 lines visible. The paper has a slightly textured appearance and is set against a dark background.

Please fax a copy of this page to (706) 228-2662.

Thank You!

Club Car Technical Publication Department



Club Car, Inc.
P.O. Box 204658
Augusta, GA 30917-4658
USA

Web	www.clubcar.com
Phone	1.706.863.3000
	1.800.ClubCar
Int'l	+1 706.863.3000
Fax	1.706.863.5808