



User Instruction Manual

REX, REX-KT, REX-P

REX-FA, BA, REX-IBEX

Read this entire manual before filling, loading or shooting your gun

! WARNING:

Not a toy. Adult supervise on required. Misuse or careless use may cause serious injury or death. May be dangerous up to 1,000 yards

Note : Your air rifle does not come with open sights. You must mount an optical sight before use. Use a good quality mount for best accuracy and proper alignment.

MAX Fill pressure: 250 bar (approximately 3,625 psi)

Contents

Rules of safe shooting	2~5
Filling your rifle	6~8
Loading pellets	9~10
Operating Safety	11
Adjustable trigger	12
Changeable air cylinder	13
Maintenance tips	14
Warranty	15~18

Rules of Safe Shooting

- **Never point a gun at anyone or anything, even if you think the gun is unloaded.**
- **Wear shooting/safety glasses where appropriate and ensure those around you do too.**
- **Always keep your gun on SAFE until you are ready to shoot safely.**
- **Always use a safe backstop in a safe location in case the backstop should fail or any pellets pass through it.**
- **Never load your gun until you are ready to shoot and it is safe to do so.**
- **Never shoot at hard surfaces, water or anything else that may cause a ricochet.**
- **Always ensure a gun is on SAFE and unloaded when receiving a gun or giving a gun to someone else. Many accidents are caused by people handling guns that they thought were unloaded and safe!**
- **Never put a gun away loaded or cocked.**
- **Always be sure of your target and what lies beyond it in case you miss.**
- **Never re-use ammunition.**
- **Ensure you always use the correct caliber ammunition that is suitable for your gun.**
- **Never rely solely on the safety; the most important safety feature is you!**
- **Always treat a gun as if it is loaded and with the respect any loaded gun commands.**
- **Always read and follow the manufacturer's manual and instructions.**
- **Always make sure you understand how to use any gun before using it.**

- **Always keep your finger off the trigger and clear of the trigger guard until you are ready to shoot and it is safe to do so.**
- **Always store the gun in a safe place, unloaded and uncocked, and out of reach of children and unauthorized users.**
- **Always store ammunition separately from the gun.**
- **Always abide by laws and regulations that apply to airguns.**
- **Always use the correct and recommended lubricants, failure to do so may cause injury or damage.**

Shooting is one of the safest sports in the world, but misuse and careless use of guns can cause serious injury or death.

ASK, LISTEN, THINK—IF IN DOUBT—DON'T!

Using high – pressure air



Use only compressed air in your Evanix airgun. Use no other gases including oxygen, which can cause a fire or explosion that may result in serious injury or death. Disconnecting the fill hose from the airgun without **FIRST bleeding the air may result in injury from hose whip as a result of pressure in the fill hose.**

Do not attempt to repair the airgun or to disassemble to correct an overfill or valve lock. Parts can fly from the airgun at dangerous speeds when it is disassembled while pressurized.

Slowly fill your rifle to a **MAXIMUM of 250 bar (approximately 3,625 psi).**

Filling the rifle too fast is unsafe and creates excess heat that may result in a low or inaccurate fill pressure.

Do not overfill, as this will damage your gun and result in low power. Such damage is not covered under warranty.

When filling is complete, bleed the excess air using the bleed screw on your fill device. Only then can you safely remove the adapter from the rifle.

Filling your rifles

REX-FA, REX-IBEX



The REX-FA uses a fill adapter (included). Do not use any other type of adapter other than the one included with the gun!



Attach the hose from your fill device to the Rex-FA adapter.

Slowly fill the gun to 3,625 psi approx. 250 bar).



When you reach 2900 psi, turn off the valve from your fill device and exhaust the moisture and air from the hose. Disconnect the hose and fill adapter from the gun.

You can also attach the adapter to the hose for the fill device and then attach it to the gun's nipple.

WARNING:

Do NOT let the pressure in your reservoir drop below 75 bar (approx.

1,087 psi) because there may not be enough pressure to close the bolt valve, and all remaining air will leak out. The gun will have to be sent in for repair.

REX, REX-KT, REX-P



REX, REX-KT



REX-P

- 1. REX, REX-KT : Release the screw on the back stock of gun's air tank to be taken out and Insert the probe in the hole.
REX-P : Take the cap out on the back of air tank and insert the probe in the hole**
- 2. Do not use any other type of adapter other than the one supplied with the rifle.**
- 3. Slowly fill the rifle to a MAXIMUM of 250 bar (approximately 3,625 psi) pressure.**
- 4. Filling the rifle too fast creates excess heat, and the gauge may temporarily show an artificially high pressure level. After the reservoir has cooled, the gauge may show a lower pressure level.**
- 5. Do not overfill, as this will damage the gun and result in low power. Such damage is not covered under warranty.**
- 6. When charging is complete, bleed the excess air using the bleed**


screw on your fill device and remove the adapter from the rifle

WARNING:

Do NOT let the pressure in your reservoir drop below 100 bar (approx. 1450 psi) because there may not be enough pressure to close the bolt valve, and all remaining air will leak out. The gun will have to be sent in for repair.

Loading pellet

(First activate the safety catch)

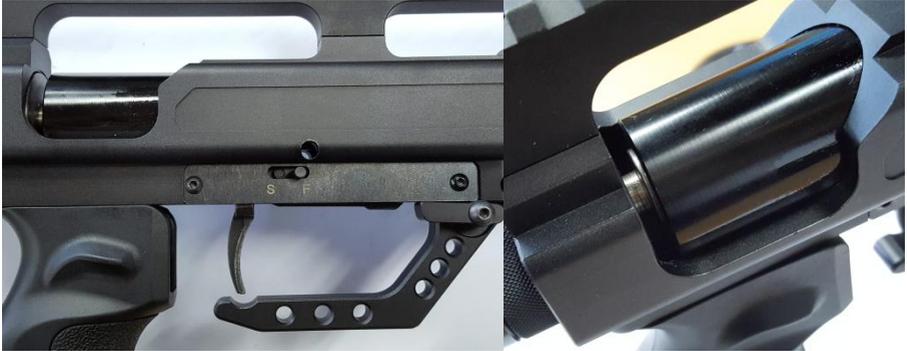

Stage before cocking




Stage after cocking (push under lever forward)

This is high power when requiring low power only cock the trigger guard half way



Insert pellet and push pellets to breeze of barrel & properly seat pellet. If the pellets skirt is not flush with the barrel the accuracy will be poor.

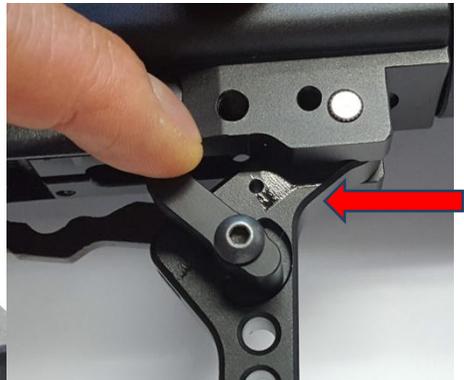

It has automatic safety lock on the under lever. So, pull the safety lock for releasing when under lever return to shot position..

WARNING:

Keep your finger off the trigger while cocking the air rifle.

Operating the safety

To activate the safety, push the safety catch lever rearward to the "S"(SAFE) position. When the safety is engaged, the trigger is locked and the rifle cannot be fired. To disengage the safety and fire the rifle, push the safety lever forward to the "F" (FIRE) position.



F : Fire, S : Safety

CAUTION! When decocking the rifle, a pellet may still be in the breech.

In addition to the safety, a loaded and cocked rifle can be made safe by decocking (uncocking). To decock the rifle, first pull the lever down and push. While holding the cocking lever, squeeze the trigger and let the lever return forward under your control. The rifle is now decocked.

When not in use, the rifle should be unloaded and uncocked. Leave the bolt closed and uncocked when not in use

To prevent unauthorized use, store pellets separate from the rifle

WARNING:

Keep the air rifle on SAFE until you're ready to shoot, then push the safety OFF

Adjusting the trigger

Trigger adjustments or done under your own risk.

Make sure the rifle is unloaded by removing pellet ensure there are no pellets in the breech. Put the gun on SAFE



Using a 0.89 mm Allen key, turn the screw clockwise to decrease trigger pull weight and counter-clockwise to increase trigger pull weight.

Trigger adjustments or done under your own risk

Changing cylinder of REX-FA, REX-IBEX



Take out mounts with releasing two screw



Put & turn cylinder in and keep 0.5mm~ 1mm gap between barrel and valve.



Fix it and install mount

Maintenance tips

Clean your rifle's exterior with a good-quality silicone product. Apply the silicone to a lint-free cloth and then wipe down the rifle's exterior.

Do NOT leave the air filler hole exposed. Always rotate the protective cover when not filling the gun with air.

Do NOT rely solely on the safety to provide guaranteed safety. *YOU are the ultimate safety for your gun.*

Do NOT leave pellets loaded in the breech of the rifle. Always remove the magazine from the rifle when you are done shooting.

Do NOT fill the rifle quickly with air. If it is charged too quickly, it can dislodge the valve from its seat, cause excess heat buildup and give inaccurate fill pressure readings.

Do NOT overfill the rifle beyond the fill pressure stated on the front of this manual.

Overfilling the gun could be dangerous, damage the rifle, deliver substandard performance and cause it to malfunction.

Do NOT use mineral-based oils or greases.

Do NOT use petroleum-based oils or greases.

Troubleshooting

Do not use this rifle until you have read and understood this owner's manual.

In the unlikely event your rifle malfunctions or exhibits reduced performance, DONOT attempt to fix the problem yourself. Please call shop you bought,so we can address any issues or have you return the gun for repair

Warranty

One-year limited warranty

This product is warranted to the retail consumer for one year from date of retail purchase against defects in material and workmanship and is transferable.

What is covered:

Replacement parts and labor. Transportation charges to consumer for repaired product.

What is NOT covered:

- **Transportation charges to customers for defective products.**
- **Damages caused by abuse or failure to perform normal maintenance.**
- **Any other expense.**
- **Parts subject to normal wear and tear.**
- **Consequential damages, incidental damages or incidental expenses including to property.**

NOTE: Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Warranty claims:

Warranty claims Customers:

Please return product to before returning any product.

Implied warranties:

Any implied warranties, including the implied warranties of merchantability and fitness for a particular purpose, are limited in duration to one year from date of retail purchase.

NOTE: Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

To the extent any provision of this warranty is prohibited by federal, state or municipal law which cannot be preempted, it shall not be applicable. This

warranty gives you specific legal rights, and you may also have other

rights which vary from state to state and country to country.

Illustrations and photographs are for information purposes only and may not show the exact model purchased.

Evanix rifles are manufactured to the highest possible standards, using the finest materials to give a lifetime of service. In the unlikely event there are any defects in materials or workmanship in the first twelve (12) months after retail purchase, we will repair or replace the rifle under warranty.

Note—The warranty will be invalid if:

- **The rifle has been disassembled and incorrectly reassembled.**
- **The rifle is found to have lubrication not recommended by GAMO OR WINCHESTER.**
- **The rifle has been fitted with non-GAMO AND WINCHSTER parts.**
- **The rifle has been misused or abused**
- **The original purchase receipt cannot be presented.**

Note—The warranty does NOT cover:

- **Any damage or faults caused by owner misuse or action.**
- **Shipment damage of the rifle to or from.**

This warranty is in addition to your statutory rights. Retain your sales

WARNING:

Not a toy. Adult supervision required. Misuse or careless use may cause serious injury or death. May be dangerous up to 1,000 yards.

This airgun is intended for use by those 18 years of age or older

Do not inhale dust from lead pellets or put lead pellets in the mouth. Wash hands after handling lead. Lead pellets contain lead, a chemical known to the State of California to cause cancer and birth defects (or other reproductive harm).

Use only dry, filtered compressed air in this gun. Use no other gas, including oxygen, which can cause a fire or explosion that may result

in serious injury or death.

Keep the air rifle on SAFE until you're ready to shoot, then push the safety OFF.

Keep your finger off the trigger while cocking the air rifle.

Keep your fingers out of the magazine notch in the receiver.

Use the correct pellet size for your Evanix rifle model. Never reuse pellets.

The use of any other kind of ammunition can cause injury to you or damage to your rifle.

Do not assume your gun is unloaded if it fails to fire properly!

Never leave your airgun loaded.

When filling the compressed air cylinder, the compressed air must NOT contain oil, water or any other contaminant.

Compressed air cylinders must NEVER be opened or modified mechanically by unauthorized specialists

The compressed air cylinder must be protected from forceful impacts.

Compressed air cylinders are NOT intended for transport of other gases.

Disconnecting the fill hose from the airgun without bleeding the air first may result in injury from hose whip as a result of pressure in the fill hose.

Do not attempt to repair the airgun or to disassemble to correct an

over-fill or valve lock. Parts can fly from the airgun at dangerous speeds when it is disassembled while pressurized

Warranty registration

Evanix rifles are manufactured to the highest possible standards, using the finest materials to give a lifetime of service. In the unlikely event of there being any defects in materials or workmanship in the first twelve (12) months after retail

purchase, we will repair or replace the rifle under warranty.

Note The warranty will be invalid if:

The rifle has been disassembled and/or incorrectly reassembled.

The rifle is found to have lubrication not recommended by Evanix.

The rifle has been fitted with non-Evanix parts.

The rifle has been misused or abused

The warranty card was not returned within 28 days of retail purchase and/or the original purchase receipt cannot be presented.

Note The warranty does NOT cover:

Any damage or faults caused by owner misuse or action.

Shipment damage of the rifle to or from

This warranty is in addition to your statutory rights. To register your warranty, the card below must be completed and returned to within 28 days of purchase. Retain your sales receipt as proof of purchase.

Complete the following warranty card and mail

