


Smart Thermostat

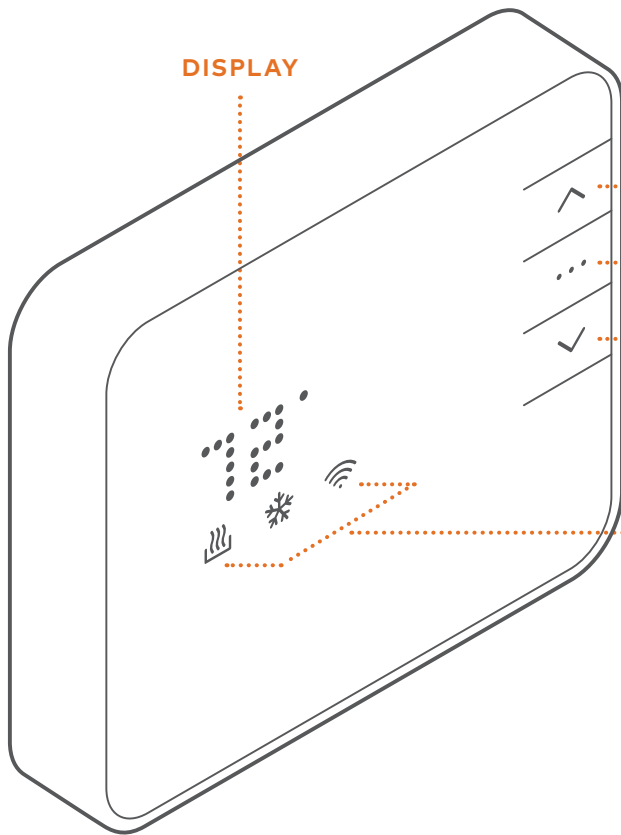

Buttons

- UP** ^ Adjust target temperature up
- MODE** ... Toggle between modes (described below)
- DOWN** v Adjust target temperature down

Modes

- HEAT** Activates heating system
- COOL** Activates cooling system
- AUTO** Brighter icon indicates which mode has currently been selected

-
- OFF** System will not heat or cool
 - EMER** For use with heat pumps only
 - RADIO** Illuminates only during wireless configuration

PLEASE NOTE:

After 5 seconds the display will return to the current room temperature. The mode icon will become solid to indicate this. After 5 more seconds the display will turn off to conserve energy. The thermostat will continue to operate while the display is off.

Instructions

1. Press any button to wake the thermostat up.
2. After waking, the display will show the current mode and room temperature.
3. Press the **UP** ^ or **DOWN** v button once to display the current set point. The mode icon **HEAT** or **COOL** will begin to pulse.
4. Press the **UP** ^ or **DOWN** v button again to adjust to the desired set point.
5. Press the **MODE** button ... at any time to change the mode.