

Bare Naked Wood Company Ltd
Unit 4 Edison Court
Edison Close
Park Farm Ind Est
Wellingborough
NN8 6AH



www.barenakedwoodcompany.com

Company Number: 12825667

VAT Number 355649172

Our Authorised European
Representative in Europe is:-
**Clever Representatives AB, Box 1898,
116 74 Stockholm, Sweden**

Email: barenakedwoodco@gmail.com

A note from Ness!

Thank you for purchasing our Commercial Decorative Open Frame. I hope you get many years of satisfactory use from it for your business.

Please read all of these instructions before you start building your frame as damage could occur if these instructions are not followed.

It is critical you follow these instructions and warnings to assemble your Decorative Open Frame correctly to ensure it is safe when used as intended for decorative purposes. Failure to follow these instructions and warnings could lead to the equipment becoming unsafe or damaged or injury being caused. The Bare Naked Wood Company Ltd will not take any responsibility for any injury or damage caused because these instructions have not been followed.

Please follow the warnings on the next page and remember to communicate these warnings to your customer to avoid damage to the equipment or serious injury to a person.

I have included some simple use and maintenance advice at the bottom of these instructions which I hope you will find helpful.

Please be mindful, wood is a living material, even in its driest state. It can still respond to its environment and be affected by temperature and humidity. Fine hairline cracks may appear over time. Likewise the length of the timber means on occasions, there may be some minor bowing along the length of the grain. This is normal and does not make the open frame unsafe. Naturally if a bow develops which is severe, please contact us for a replacement part. All frames are checked thoroughly before they leave. Please check out the use and maintenance details below for more information.

We love feedback. If you feel we have missed something from these instructions or we could improve them, let us know.

I hope you enjoy using your Decorative Open Frame, and remember, she is a Royalty, treat her well!

Thank you

Ness x

WARNINGS

It is vitally important you bring these warnings to the attention of your customers as part of your risk management.

WARNING THIS ITEM IS NOT A TOY: This decorative open frame is not a toy. No play value has been added to this frame. It is merely for decorative purposes. Do not allow children (or adults) to climb on any part of the frame or hang off any of the poles. This would cause damage to the frame and the risk of serious injury to the person.

WARNING RISK OF FIRE: Our decorative open frame has a cover on it which has been tested in a laboratory to ensure it has a burn rate which is slow enough to allow persons to exit the open frame quickly. Although the frame is not a toy, the fabric has been flammability tested using the test described under EN71 Part 2 +2020.

We advise both you and your customers keep the play tent away from any naked flames such as candles or open fires, bbq's, sources of heat, or electrical fittings such as mains operated fairy lights or other electrical equipment.

We also advise no mains operated electronic equipment is used inside the decorative open frame at any time due to the risk of an electrical fire. If you do, please conduct a risk assessment and record your actions.

We advise you do not drape your own fabrics or affix any decorations to the decorative open frame which could accelerate the speed of the burning flame in the event of a fire. It is important your customers are aware of this fact should the play tents be set up by them as part of a 'DIY' package.

RISK OF SUFFOCATION: Please dispose of any plastic bags or packaging and keep them out of the reach of children as they can cause suffocation.

WARNING CHOKER HAZARD: When not assembled, this decorative open frame has several small parts which can cause a child to choke should they place them in their mouth. Therefore, please keep the small parts away from children and store them in a safe place. It is important your customers are aware of this fact should the decorative open frame be set up by them as part of a 'DIY' package.

INSTRUCTIONS & WARNINGS FOR ASSEMBLING YOUR DECORATIVE OPEN FRAME




PACK CONTENTS

- 4 X frame legs (2 x inside, 2 x outside)
- 2 x poles
- 2 x cross braces
- 1 X packet fixings

CONTENTS OF FIXINGS


- 1 x allen key
- 1 x spanner.
- 12 x washers
- 4 x long gold coloured bolts
- 4 x long silver coloured bolts
- 4 x dome nuts

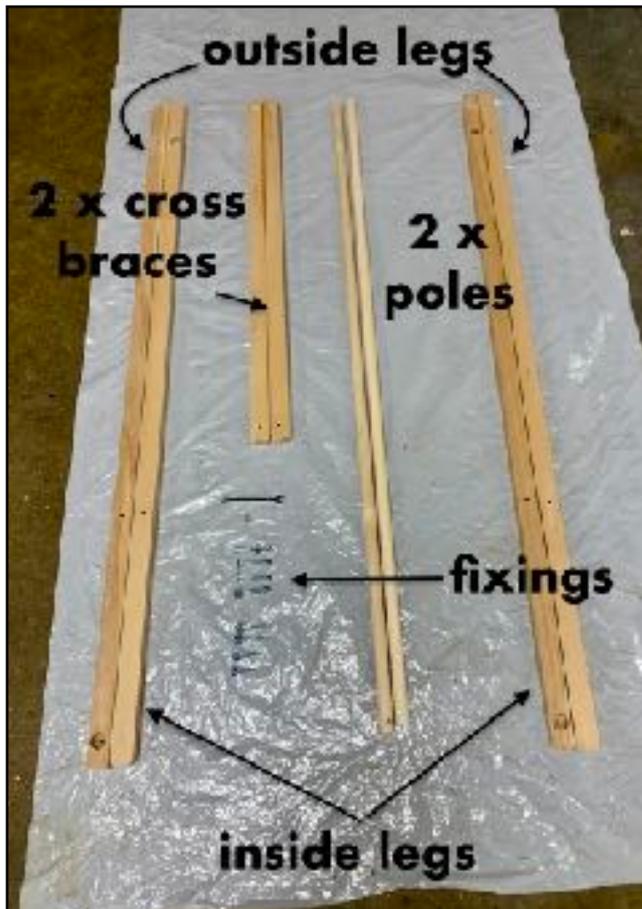

1. Check all the contents of your package to ensure all parts are present. In the event any parts are missing or damaged please advise us immediately so we can rectify the problem quickly. You can drop us an email and if relevant, send us a photograph which makes it easier to identify the problem.


2. Find a clear large space which is clean. If necessary, place a sheet on the surface to keep the frame clean

3. Take the 4 legs and place them in the same position as pictured. Work with the top of the frame furthest away from you. Note the position of the large pole holes on each corner. This is critical for attaching the poles in the correct position shortly.

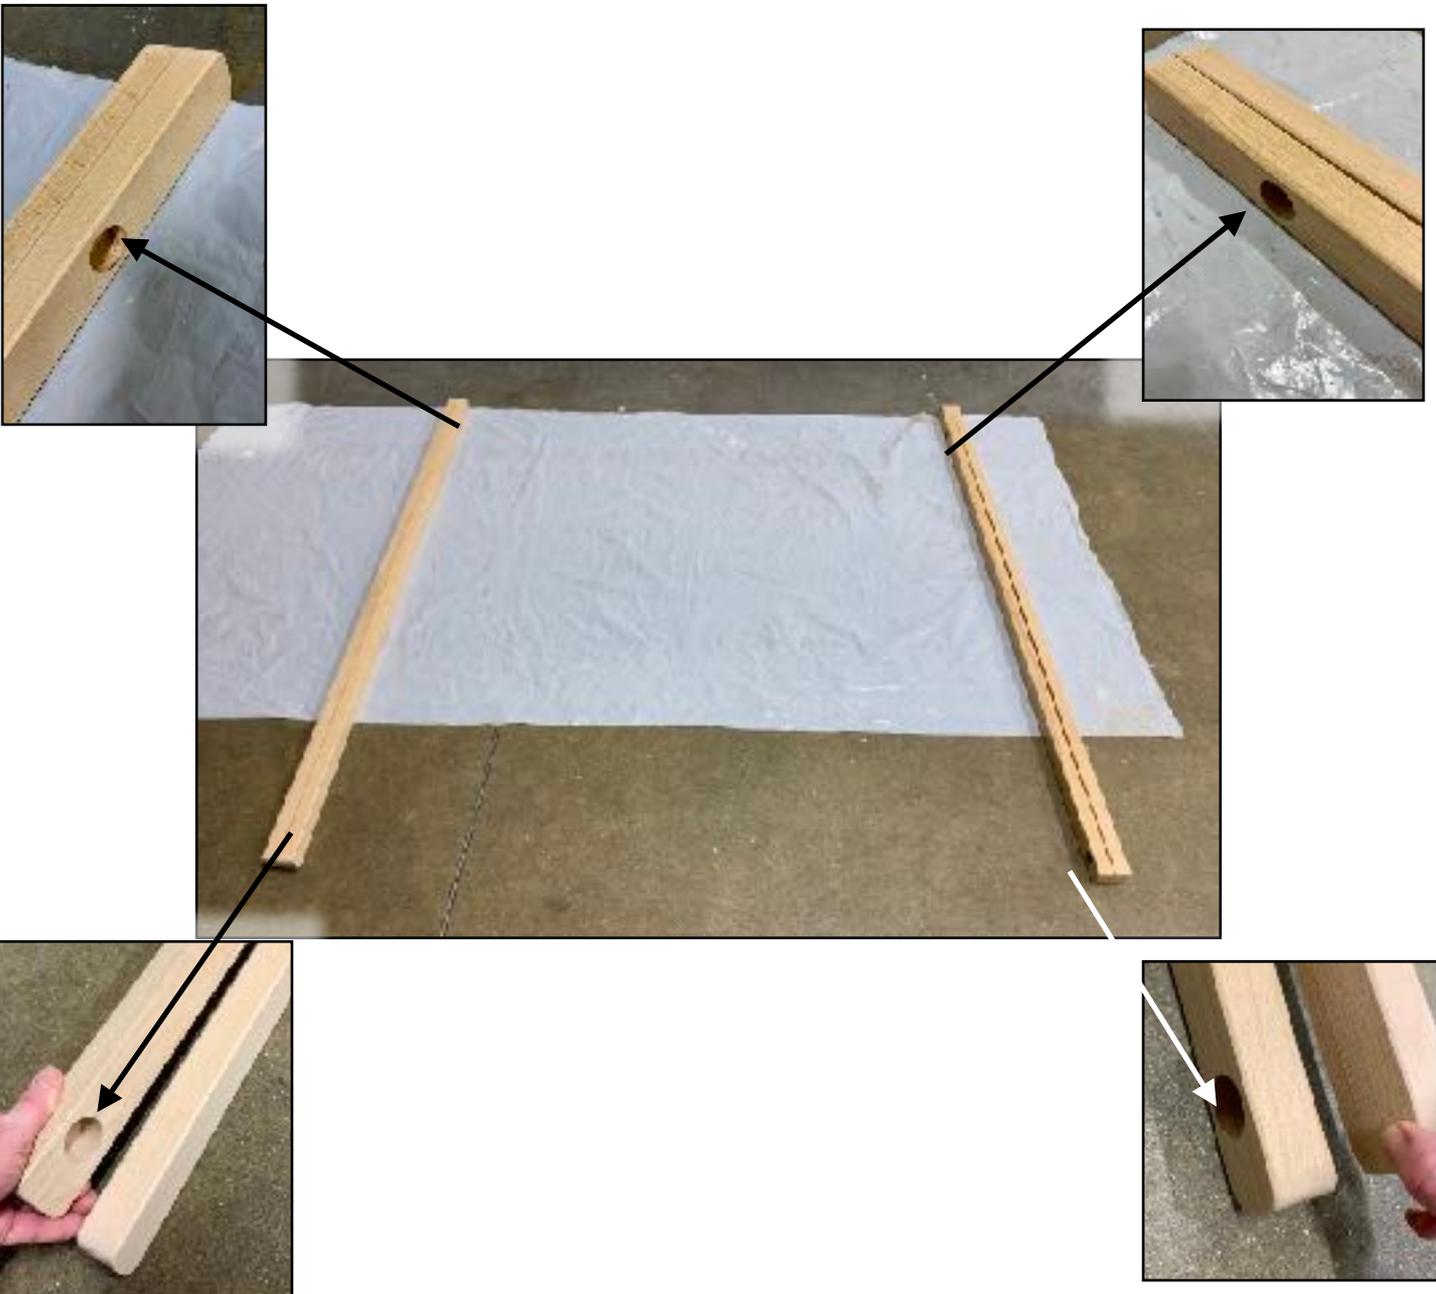

4. You are now going to fit the top bar between the legs. Take a long yellow coloured bolt, place a washer over the end of it and insert the bolt into the top right hand hole and feed it through both frames, you will see it come out the other side. Feed it into the hole in the end of the pole. Use the Allen key and turn the bolt in a clockwise direction to secure the bolt. You will see the end of the pole disappear into the hole in the frame. Do not over tighten the bolt at this point.

Repeat on the left side.

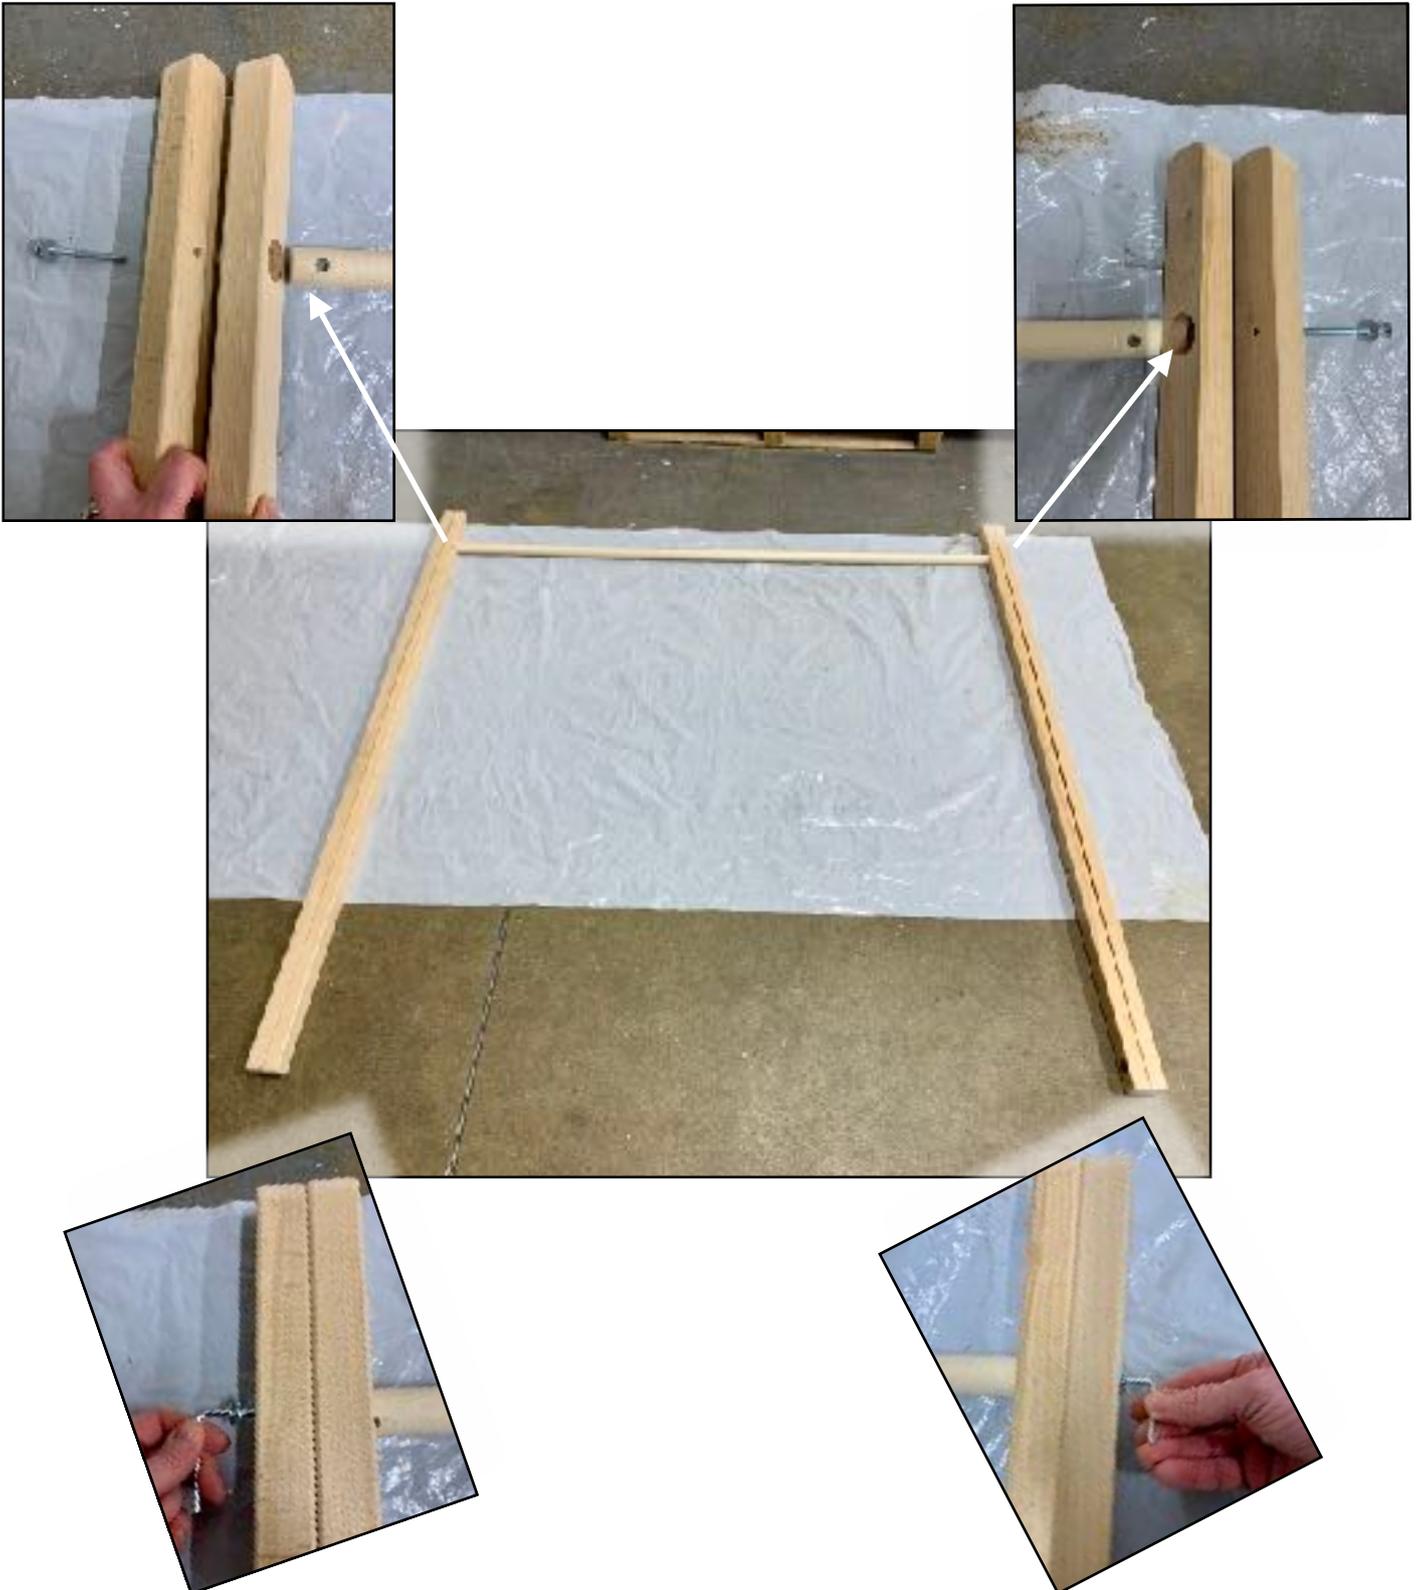

5. Next, take the second pole and fix it to the bottom of the frame with the remaining 2 remaining yellow coloured bolts and 2 washers. (See picture below). At this point this second pole adds some rigidity to the structure while you pick it up and place it in it's upright position.

With a second person, you are now going to carefully pick up the entire frame to stand it up into the upright position. Please do not rush. This part of the assembly requires you to be gentle and careful with the frame.

See the photos below. Move the frame slowly and carefully to the place where it is being sited.

Open the legs of the frame on each side, ensuring the lower pole is positioned at the back of the tent. Later the fabric will be attached to this lower pole at the rear.




6. With the frame upright and the legs opened, we are now going to fit the side cross braces on the outside of the frame. See the photos below starting from left to right.

Take one of the short bolts, place a washer over it and insert it through one end of the cross brace as pictured and pass the bolt through the small hole approximately halfway down either of the front legs. Once you have passed the bolt through the cross brace and the leg, you will see the bolt appear on the other side. Place another washer over the bolt. Take a dome nut and screw it onto the end of the bolt and finger tighten it.

Now take the spanner and position it over the dome nut and hold the dome nut and spanner still whilst tightening the bolt on the other side with the Allen key.

Repeat on the other end of the cross brace to complete it being fitted to the main frame.

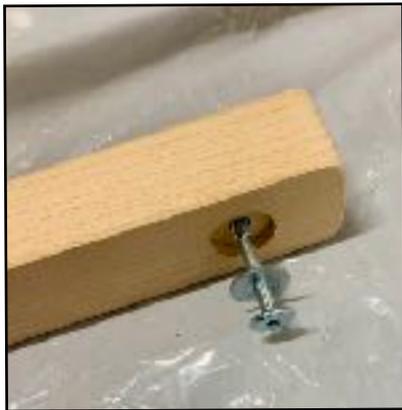

7. Now fit the other cross brace on the other side of the frame.



8. Your frame should now look like the photograph below.



9. Take your lace cover and hang it over the top pole with the sewn hem at the back of the frame. Ensure the correct side of the fabric is facing outwards. The wrong side of the fabric will be seen inside the frame.



10. We are now going to fit the lace cover. Carefully unbolt the bottom pole on each side and remove it gently from the holes. Take one end of the pole and thread it through the sewn hem at the bottom of the lace cover at the rear. See the photos below. Thread all the cover onto the pole but don't spread it along the pole just yet.



11. (See photos below). Take a short bolt, place a washer over the end of it. Thread the bolt through the hole at the bottom of the leg and into the end of the pole until the pole is fixed in position. The pole will disappear into the hole in the leg.

Repeat this on the opposite end of the pole. Now spread your cover out equally along the pole, then dress your open frame as desired (see photos below).

Finally, go and tighten all the bolts around the frame. Do not over tighten them.



USE & MAINTENANCE OF YOUR DECORATIVE OPEN FRAME

Your frame is made from a hardwood called beech. Hardwoods tend to be more durable than most softwoods. However you still need to care for hardwoods. Please be mindful, all wood is a living material. Even in its driest state, it can still respond to its environment and can be affected by temperature and humidity.

Fine hairline cracks may appear over time. You can use a simple wood filler to fill these cracks. Simply apply a fine layer, leave to dry and sand using some 120 grit sandpaper.

Likewise the length of the timber means on occasions, there may be some minor bowing along the length of the grain. We cannot prevent this. Each piece of wood is unique. This is normal and does not make the open frame unsafe. Naturally if a bow develops which is severe, please contact us for a replacement part.

Do not store the frames near any source of heat such as radiators as this will cause the wood to warp. Likewise, keeping the frames in a damp environment such as a garage or outhouse will cause the wood to warp or produce mould on the surface. The best place to store your open frame is somewhere dry with no excess of cold or heat.

Wood by its very nature can develop a splinter if damaged. If this occurs you can gently sand the affected area with a piece of 120 grit sand paper. The wood may go darker with age. This is entirely natural. If you get marks on the wood, take a warm damp cloth and gently wipe the frame and allow it to dry. Stubborn marks can be sanded away with 120 grit sandpaper.

We recommend covers are washed on 30 degrees in a washing machine using non-biological detergent to avoid any allergies before they are used. A measure of anti bacterial agent can be added to kill any bacteria or viruses to prevent the spread of infections each time the covers are washed. Covers should be dried naturally and not in a tumble drier as this can cause the covers to shrink.

Please note the use of a steam cleaner on the covers fitted to the frame, may cause the frame to warp.