

No.	Description	Part Number	Platform
1	ANTI- ICE MODULATING VALVE	3214072-3 /-4	S70
2	HYDRAULIC STARTER	407711	S70
3	TAIL ROTOR SERVO ASSEMBLY	2227000-13	S70
		2227000-17	S70
4	ROTARY WING HEAD SERVO ASSEMBLY	274000-1027/-1031	S70
5	AFT LONGITUDE SERVO BELLCRANK ASSEMBLY	70400-08102-044/-045	S70
6	COLLECTIVE BOOST SERVO ASSY	274600-1033	S70
7	YAW BOOST SERVO ASSY.	274600-1045/-1047	S70
8	AXIAL FAN	70361-03005-XXX SERIES	S70
9	AXIAL FAN	70361-03700-101	S70
10	STARTER ENGINE AIR	3505300-4-1/ 4-2/8-1/9-1	S70
11	PRIMARY SERVO TRANSFER MODULE	60900-3/60900-11	S70
12	PRIMARY SERVO TRANSFER MODULE	70652-02415-042	S70
13	PRIMARY SERVO TRANSFER MODULE	70652-22455-044	S70
14	SPINDLE ASSEMBLY	70102-08200-XXX Series	S70
	SERVO, PRIMARY	412-076-005-XX SERIES	H-1
	SERVO, PRIMARY	212-076-005-XX SERIES	H-1
	BELL 205, 212, 412 SKID TUBES	205-050-400-XX SERIES	H-1
		412-320-123 LH	H-1
		412-320-124 RH	H-1
	BELL 205, 212, 412 CROSS TUBES	212-320-103 FWD	H-1
		212-320-104 AFT	H-1
		70070-10030-046	S70
15	OUTBOARD RETENTION PLATE	70102-11101-043	S70
16	SWASHPLATE CONTROL LINK AND	70400-08100-049	S70

17	<b>PUSH ROD ASSEMBLIES</b>	70400-08100-050	S70	
18	<b>BELLCRANK SUPPORT ASSEMBLY</b>	70400-08100-053/054	S70	
19	<b>SUPPORT ASSEMBLIES</b>	70400-08100-060/061/	S70	
20	<b>PUSH ROD ASSEMBLIES</b>	70400-08151-048/051/061	S70	
		70400-08155-053/054/055/056	S70	
21	<b>ROTARY HUB ASSEMBLY</b>	70103-08010-048/050	S70	
22	<b>EYE ROTATING BRACKET</b>	70103-08103-041/045	S70	
23	<b>HUB PRESSURE PLATE</b>	70103-08112-041/047	S70	
24	<b>ROTARY WING HEAD HUB ASSY PART</b>	70103-28100-041/042/043/044/	S70	
		70103-28100-045/046/048	S70	
		70070-10046-050/051/052/053	S70	
		70070-10046-054	S70	
		70103-28100-041/048/050/054	S70	
25	<b>SWASHPLATE AND ROTATING SCISSORS ASSEMBLIES</b>	70104-08000-044/046/050	S70	
		70104-08020-045	S70	
26	<b>DAMPER ASSEMBLY</b>	70106-08100-042/043/044/046	S70	
27	<b>MAIN ROTOR HEAD 65.125 DAMPER</b>	330A31-1001-xx series	Puma	
28	<b>MAIN ROTOR HEAD DAMPER ASSEMBLY</b>	70106-28000-045	S70	
		70106-28000-046	S70	
		70106-28000-047	S70	
		70106-28000-048	S70	
		70106-08100-xxx series	S70	
29	<b>MAIN ROTOR HEAD BIFILAR ASSEMBLY</b>	70107-08400-043	S70	
		70107-08400-044	S70	
		70107-08400-045	S70	
		70107-08400-046	S70	
30	<b>STABILATOR ASSEMBLY</b>	70200-07050-043/044/045/046	S70	
		70200-07050-047/048/049/051	S70	
		70200-07050-043/051	S70	
		70200-27000-XXX SERIES	S70	
		70200-27001-XXX SERIES	S70	

31	MAIN LANDING GEAR	70250-12051-042/043	S70	
32	SHOCK STRUT ASSEMBLY	70250-12051-044/045	S70	
33	MAIN LANDING GEAR DRAG BEAM/AXLE ASSEMBLY	70250-12057-045/046	S70	
		70250-12057-047/048/049	S70	
		70250-12105-041/042	S70	
34	TAIL LANDING GEAR SHOCK STRUT ASSY.	70250-13101-XXX SERIES	S70	
35	MAIN LANDIN GEAR SHOCK STRUT	70250-32101-XXX SERIES	S70	
36	MAIN GEARBOX INPUT MODULE ASSEMBLY	70351-08001-XXX SERIES	S70	
37	ENGINE OUTPUT SHAFT ASSEMBLY,	70351-08042-041	S70	
38	MAIN GEARBOX ACCESSORY MODULE	70351-08080-043/045	S70	
39	MAIN EXTENSION ASSY.	70351-08186-XXX SERIES	S70	
40	MAIN MODULE ASSEMBLY	70351-38100-XXX SERIES	S70	
41	MAIN MODULE ASSEMBLY	70351-08100-XXXSERIES	S70	
42	MAIN MODULE ASSEMBLY	70351-48100-XXX SERIES	S70	
43	MAIN MODULE ASSEMBLY	70351-58100-XXX SERIES	S70	
44	LUBE AND SCAVENGE PUMP	70351-38800-101	S70	
45	INTERMEDIATE GEAR BOX ASSY	70357-06300-SERIES	S70	
46	BEAM ASSY	70219-02133-xxx SERIES	S70	
47	FAN EXIT DRIVES SHAFT ASSY	70361-03001-045	S70	
		70361-03009-045/047	S70	
		70361-05001-045/051	S70	
		70361-05002-045	S70	
48	SUPPORT	70361-05060-XXX SERIES	S70	
49	SUPPORT	70361-08004--XXX SERIES	S70	
50	YOKE AND HOUSING ASSEMBLY	70400-01201-XXX SERIES	S70	
51	PILOT'S/ CO-PILOT'S PEDAL ADJUSTER LEVER ASSY	70400-01613-051	S70	
		70400-01613-052	S70	
		70400-21613-043	S70	
		70400-21613-044	S70	
52	FLIGHT CONTROL MIXER ASSY	70400-02300-XXX SERIES	S70	
53	SERVO COPUPLING ASSEMBLY	70400-06100-042	S70	

54	SERVO COUPLING ASSEMBLY	70400-26100-042	S70	
55	BELL CRANK SUPPORT ASSY	70400-08162-041/042/043/044	S70	
56	SAS ACTUATOR ASSEMBLY	704100-02500-048 /-049/-050	S70	
57	SERVO ASSY COLLECTIVE	70410-02920-053	S70	
58	ROTOR BRAKE MASTER CYLINDER	70651-21110-104	S70	
59	UTILITY PUMP MODULE ASSEMBLY	70652-02300-XXX SERIES	S70	
60	TRANSFER MODULE ASSEMBLY	70652-02455-046	S70	
		70652-02455-047	S70	
		70652-22455-043	S70	
		70652-22455-044	S70	
61	PILOT -ASSIST HYDRAULIC MODULE ASSY.	70652-02620-044	S70	
		70652-02620-046	S70	
62	LINEAR ACTUATOR	DL2155M15	S70	
		DL2155M9	S70	
63	ROTARY WING HEAD HUB ASSY	70103-28100-041/042/043/044/	S70	
		70103-28100-045/046/048	S70	
		70070-10046-050/051/052/053	S70	
		70070-10046-054	S70	
		70103-28100-041/048/050/054	S70	
64	INTERMEDIATE GEAR BOX ASSY	70357-26300-042	S70	
65	TAIL GEARBOX ASSEMBLY	70358-26600-XXX SERIES	S70	
66	TAIL GEAR BOX ASSEMBLY AND	70358-06600-042/043/044/046	S70	
67	RADIATOR ASSY	70361-03004-103	S70	
68	PITCH TRIM ACTUATOR ASSY.	A22785-1	S70	
		A22785-2	S70	
69	ROTOR BRAKE ASSY	70351-28501-104	S70	
70	STRUCTURAL COMPONENT	70200-27000-046	S70	
71	SELF-DISPLACING HYDRAULIC	3197170-2	S70	
72	ACCUMULATOR	3197170-5	S70	
73	HYDRAULIC RESERVOIR FILL PUMP	70652-02950-105	S70	
74	MAIN LANDING GEAR SHOCK STRUT	70250-32101-043	S70	

75	<b>SERVO ROLL TRIM</b>	70400-02260-120	S70	
76	<b>ACTUATOR TRIM TAB</b>	70410-02760-047	S70	
77	<b>UTILITY PUMP MODULE ASSEMBLY</b>	70654-23801-103	S70	