


HEADLINER

Figure 17

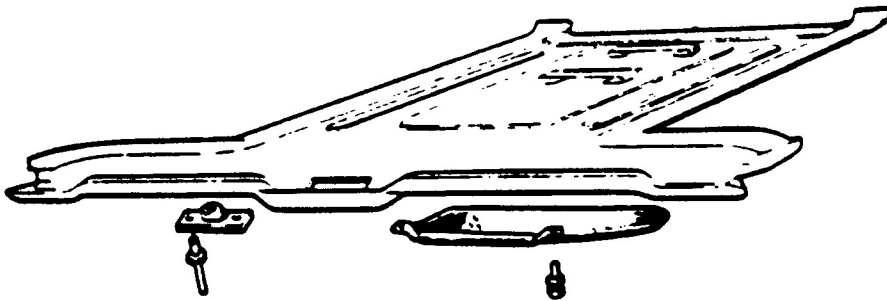

FRONT HEADLINER REMOVAL (Figure 17)

1. Remove both left and right sunvisors.
2. Working along roof panel area, partially remove the left and right inner door seals.
3. Using an X-Acto knife or equivalent tool, cut front headliner material along edge secured to roof panel with adhesive.
4. Pull headliner forward. Disengage from roof panel retaining clips, lower

headliner, disconnect courtesy lamp assembly and remove headliner.

5. Peel back and remove excess headliner material from roof panel.
6. Clean adhesive from roof panel with a general purpose adhesive cleaner

INSTALLATION

1. Position and secure courtesy lamp assembly to headliner.
2. Position and secure front headliner into roof panel retaining clips.
3. Position and secure both left and right sunvisors.


4. Spread an even coat of specified adhesive along roof panel where the headliner material will be secured.

5. Pull headliner material tight, position over roof panel and apply a firm pressure to secure material to adhesive.

NOTE: Be very careful not to create any wrinkles in headliner material.

6. Position and secure left and right inner door seals.

 Figure 18



REAR HEADLINER REMOVAL (Figure 18)

1. Working along roof panel area, partially remove left and right inner door seals.
2. Using an X-Acto knife or equivalent tool, cut front headliner material along edge secured to roof panel with adhesive.
3. Pull headliner forward, disengage from roof panel retaining clip and remove.

4. Peel back and remove excess headliner material from roof panel.
5. Clean adhesive from roof panel with a general purpose adhesive cleaner.

INSTALLATION

1. Position leading edge of rear headliner between trailing edge of front headliner and roof panel retaining clip.
2. Spread an even coat of specified adhesive along roof panel where the headliner material will be secured.

3. Pull headliner material tight, position over roof panel and apply a firm pressure to secure material to adhesive.

NOTE: Be very careful not to create any wrinkles in headliner material.

4. Position and secure left and right inner door seals.