

REMOVING HEATER- AIR CONDITIONING FAN

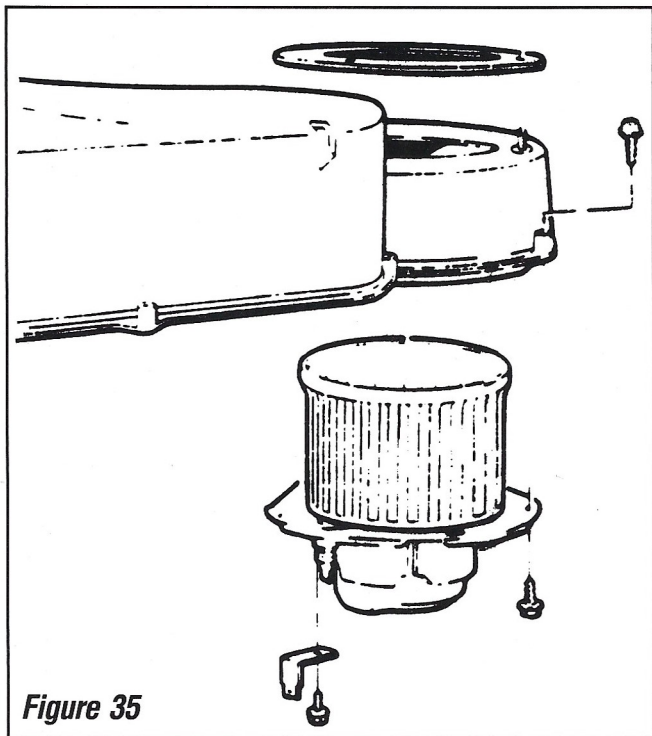



Figure 35

1. Working under right hand dash, disconnect spade terminal on fan.
2. Remove five hexagon screws attaching fan to fan housing.
TOOL — 8mm wrench
3. Drop unit, releasing rubber elbow from housing before withdrawing unit from vehicle.

INSTALLING HEATER/AIR CONDITIONING FAN

1. Refit fan to housing, connecting rubber elbow to housing and applying seal.
2. Fit five hexagon screws to secure fan in housing.
TOOL — 8mm wrench
3. Fit black ground wire to insulated spade terminal.
4. Fit pink/black wire to insulated spade terminal. 

MORE TECH NOTES PAGE 20