



Title: Removal of the binnacle
REV: 1 DATE: 2006-07-19
Author: Jordan Rubin

Frame-and-Body / Dashboard - Console
3

To remove the dash binnacle from the Delorean

Tools Required :

- 1 - Ratchet Set - 7mm socket
- 1- Phillips screw driver

By using this guide you consent to the following...


- *Neither the author of this howto or this website is responsible for any personal injury.**
- *Neither the author of this howto or this website is responsible for any damage to your car.**
- *You will use a reasonable amount of common sense and observe good safety practices.**

Step 1 - Overview of job



The dash binnacle is secured by (6) 7mm nuts, 3 on each side almost symmetrically located. These nylon/metal nuts each have a washer, The two towards the center have smaller washers.

Step 2 - Connections on the car

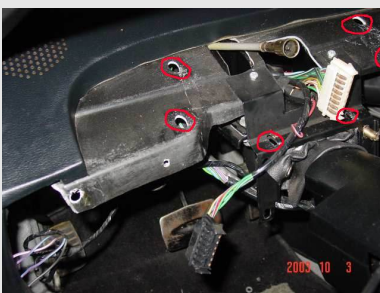

The binnacle itself has 6 threaded posts which go through the holes as shown.

Step 3 - Remove the black air pipe

To make this job alot easier, the black rectangular air pipe can be pulled frmo the car after removing the two screws on its bracket.

Step 4 - Remove the 6 binnacle bolts



Here is a view of two nuts on the center side from under the dash. These will be removed with the 7mm socket and wrench with the flex attachment. The third at the steering column is not visible in this picture.

Step 5 - lean the binnacle forward



Once all of the bolts are removed, the binnacle will move slightly up and then towards the back of the car. It will not come out too far. DO NOT USE FORCE. Just enough room to get your hands in to remove the connections.


The picture is just for demonstration and shown the binnacle further out than it would be with connections in place.

Step 6 - Remove speedometer cable




The first job is to remove the speedo cable connection. Pushing the clip back towards the rear of the dash at the same time pulling the speedo cable off. As shown in the picture.

Step 7 - Remove cable harnesses

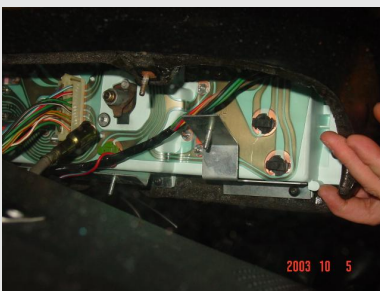

Once the speedo cable is removed, there is a bit more room to pull the binnacle out slightly further. The two cable harnesses can be removed by pressing in the ends and pulling them out.

Step 8 - Remove the binnacle

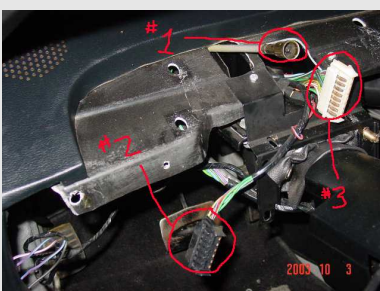

Once all three connections are removed, the binnacle can be pulled forward and off to the left out of the car.

