

RACK AND PINION TIE ROD BOOTS, ONE OR BOTH

REMOVAL

1. Remove rack and pinion assembly as previously described.
2. Loosen inner and outer boot(s) clamp screws and remove boot(s) clamps and discard.
3. Slide damaged boot(s) off tie rod(s)

INSTALLATION

1. (a) If replacing one (1) boot, add 1/3 pint of specified lubricant to steering rack assembly via the left end before proceeding.
(b) If replacing both boots, position and secure with new clamps one (1) boot invert the steering rack assembly and add *1/3 pint of specified lubricant* via the left end.

- NOTE:** In order to properly add lubricant to rack and pinion assembly, the rack and pinion assembly **MUST BE** removed and filled from LEFT side (pinion end) only.
2. Position and secure with new clamps replacement boot (or second boot).
 3. Install rack and pinion assembly as previously described. 