

# Troubleshooting

## Plow not working?

**#1:** Is your plow control illuminated?

**Yes,**

Is the solenoid clicking with control?

**Yes,**

Wiggle power/ground connections around

**No,**

Check solenoid and battery connections

**No,**

- Follow black wire with red stripe (12 gauge) and check to make sure it is connected to ignition- look at 12v supply fuse in fuse panel
- Follow small red wire (12 gauge) to battery and check connection and 10amp (red) fuse

## Plow raises slowly or not at all, plow angles slowly or not at all

**#1:** Check hydraulic-fluid level- it should be within 3/4 inch of top of the reservoir when lowered in V position

Is your reservoir full of fluid?

**Yes,**

Check connections to make sure everything is tight, check battery- especially if you have 2 batteries! (a low/dead battery will cause plow to work poorly)

**No,**

- Call before adding fluid! 616-510-2484

## Plow is leaking fluid

**#1:** Check to see if you have a broken hydraulic hose

Is there a broken hose?

**Yes,**

Call 616-510-2484

We have hoses in stock that we can swap out for you! Make sure you know the make and model of your plow before you call!

**No,**

- Is your hydraulic fluid overfilled? It should be 3/4 inch from the top of the reservoir when the plow is lowered in the V- position

**Yes,**

Fluid will spray out if it is overfilled

**No,**

Check to see if any of the hose fittings are loose

## Plow lights are not working, dim, or flickering

**#1:** Make sure to look for plow/truck light switch and make sure it's switched to plow!

Light switch is on plow and it's still not working?

**Yes,**

Look at the connections- are they damaged, loose, or corroded? Try to clean/tighten connections. Check relays to make sure they are not broken/corroded.

**We provide 24/7 plow repair during snow events!  
Call us anytime! 616-510-2484**

**Before you call, please make sure you know what make/model plow you have and troubleshoot what your problem may be!**