

Work Truck Incyte

Follow us online using the links below:



[Website](#)



[LinkedIn](#)



[Facebook](#)

Beyond the "MAP", be sure to check out our [Events](#), [Resources](#) and [Associations](#) pages.




CUBIC YARDAGE CALCULATOR

SIDE WALL HEIGHT

CONTAINER / BODY LENGTH

	2'	3'	3.5'	4'	5'	6'	7'	8'
10'	5.40	8.10	9.45	10.80	13.50	16.20	18.90	21.60
12'	6.48	9.72	11.34	12.96	16.20	19.44	22.69	25.93
14'	7.56	11.34	13.23	15.12	18.90	22.69	26.47	30.25
16'	8.64	12.96	15.12	17.28	21.60	25.93	30.25	34.57
18'	9.72	14.58	17.01	19.44	24.31	29.17	34.03	38.98
20'		16.20	18.90	21.60	27.01	32.41	37.81	43.21
22'		17.82	20.79	23.77	29.71	35.65	41.59	47.53
24'		19.44	22.69	25.93	32.41	38.89	45.37	51.85
26'			24.58	28.09	35.11	42.13	49.15	56.17
28'			26.47	30.25	37.81	45.37	52.93	60.49
30'			28.36	32.41	40.51	48.61	56.71	64.81
32'				34.57	43.21	51.85	60.49	69.14
34'				36.73	45.91	55.09	64.27	73.46
36'				38.89	48.61	58.33	68.06	77.78
38'				41.05	51.31	61.57	71.84	82.10
40'				43.21	54.01	64.81	75.62	86.42
42'					56.71	68.06	79.40	90.74


Assumes an inside width of 87.5"

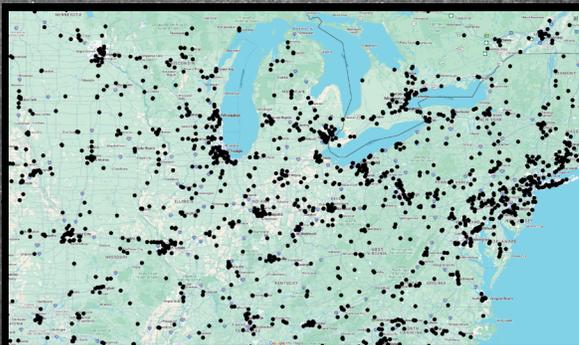

3,600 Equipment Distributor/Upfitter Locations

Mapping the U.S. & Canada

Contact us today and begin exploring **The Map** (over 6,600 locations). Discover how complete industry visibility drives smarter, faster decisions.

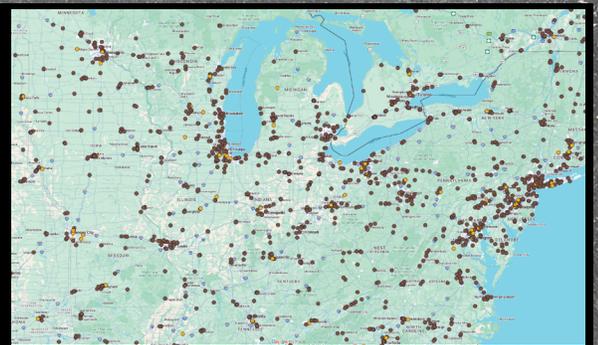

3,000 Truck/Chassis Dealer Locations

info@worktruckincyte.com • 515-564-9774

www.worktruckincyte.com