

 







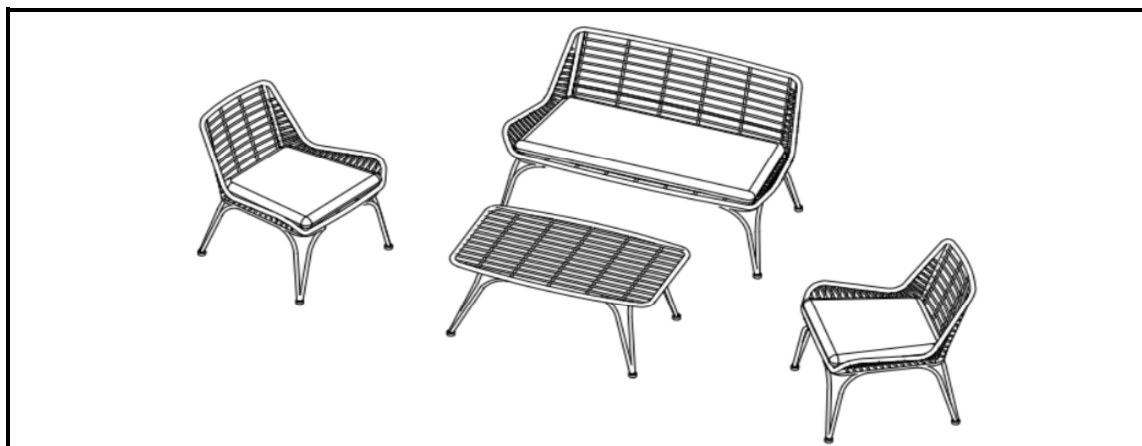


ASSEMBLY INSTRUCTIONS

Fiji 4 Pc Outdoor Set

Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.


PARTS LIST			
ITEM	DESCRIPTION	SKETCH	QUANTITY
HW1	Bolt and Washer M6*35		30 PCS
HW2	Allen Key		1 PC
A	Table Top		1 PC
B	Table Leg		2 PCS
C	Table Glass		1 PC
D	Chair		2 PCS
E	Leg		6 PCS
F	Chair Cushion		2 PCS
G	Loveseat		1 PC
H	Loveseat Cushion		1 PC




ASSEMBLY INSTRUCTIONS

Do not fully tighten bolts until assembly is complete.


STEP 1

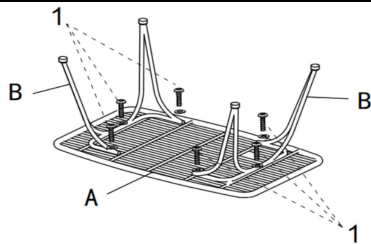


STEP 2

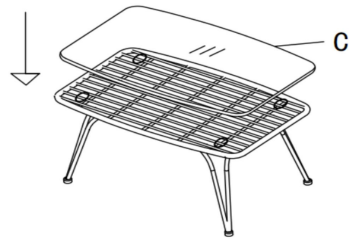


STEP 3

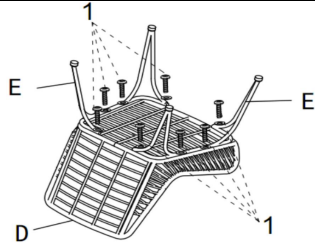


STEP 4

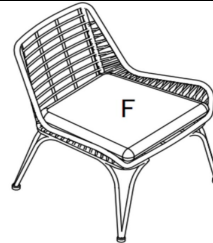

STEP 5

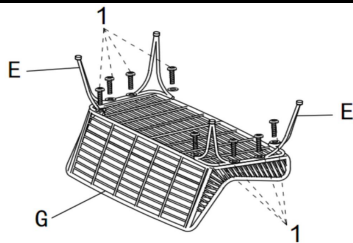

STEP 6

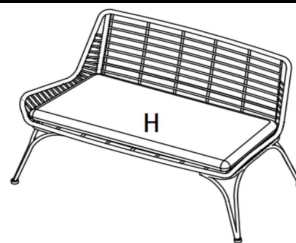

CLEANING INSTRUCTIONS: clean with a soft cloth, brush or lightly vacuum.

ADULT ASSEMBLY REQUIRED

If you are missing any parts or have any questions regarding assembly, do not return this item to the retailers store. Please call our toll-free, customer service number and have this assembly manual open to the parts list ready to provide the model name, number and part name or number.



Customer Service

1-877-864-5752

8:30 AM PST - 4:00 PM PST (Monday-Friday)

Website: www.dwellhom.com

Missing Parts: parts@dwellhom.com

Warranty Information: www.dwellhom.com/warranty