

HELPFUL TIPS

- Thank you for the purchase of this bike. Please save the box for a short period of time just in case for shipping purposes. Do not throw away or tear it down just yet.
- Your one year warranty starts from the date of your payment receipt via email. To contact us please visit tryxpro.com/contact-us
- Installing front wheel quick release: Please see PDF file at tryxpro.com/product-support
- **INSTALLING PEDALS:** Use 15mm wrench to assemble pedals (certain models may not include tool kit). Tighten the right crank arm turning clockwise (the chain side). Turn the left crank arm counter-clockwise.
- Charge the bike till the light turns green. The included charger fan automatically shuts off. Approximate time is 2-4hrs depending on how much charge is left from factory.
- (For bikes with key lock battery) If you decide to take the battery out first unfold the bike to loosen the lock mechanism. Now turn the key counter-clockwise to unlock it. You can also charge the battery through the port in the bike's frame.
- If you need to adjust the display parameter such as MPH/KM or display backlight please see other attached instruction page. You can always download these information on tryxpro.com/product-support
- The brakes and derailleurs are pre-adjusted from manufacturer. If you do need to re-adjust them please check out videos on Youtube.
- **TC480 Display:**
How to change KM to MPH. Press Power button to turn on. Now press and hold the Power button and Down button together for a few seconds.

