

Installing the quick release on the wheel



Unscrew the quick release. Notice the bigger end of spring is facing out just as pictured.



Pull out the protective cap with a little bit of force. It was there for transporting purpose.



Insert the quick release into the wheel slot making sure the bigger end of spring facing outward






Insert the smaller end of spring first as shown in the picture.



Now screw the nut to the same surface level as the end of quick release.

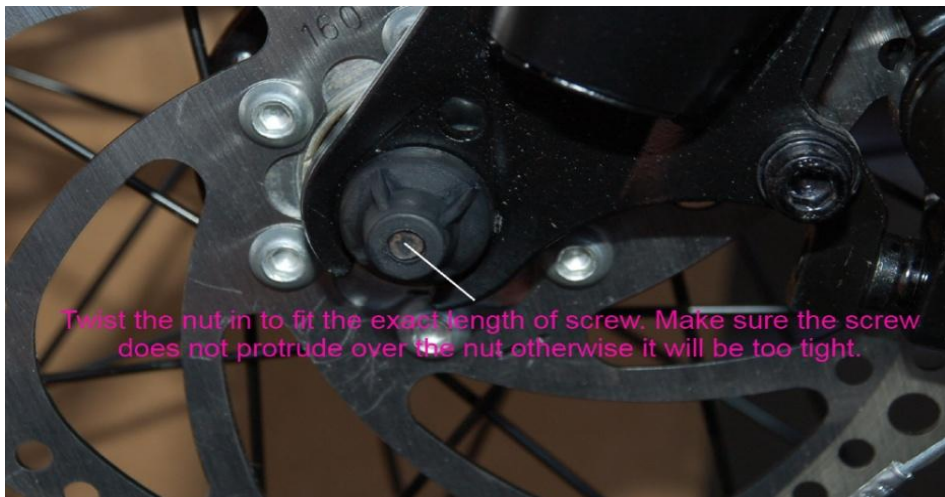

Now you can install the wheel in the dropouts.
Make sure to release the latch before putting in the wheel.