



HAPPIJAC[®]

A Division of Lippert Components Inc.

Release Lever Mechanism INSTALLATION

1. Drop in camming mechanism as shown in (Fig. 1).
2. Snap lever into right side of cam and plastic plug into left side. (Fig. 2).
3. Install drive coupler and spring as shown in (Fig. 3).



Fig. 1

4. With cam lever up, drop motor head in place and secure with washer and plastite screw provided. **Note:** It may be necessary to insert the crank handle into the drive socket and turn slowly until parts mesh and motor head drops into place.

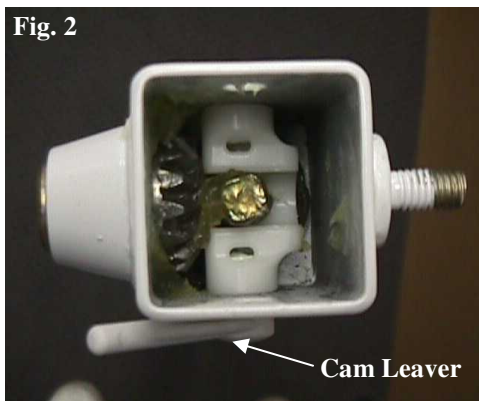


Fig. 2

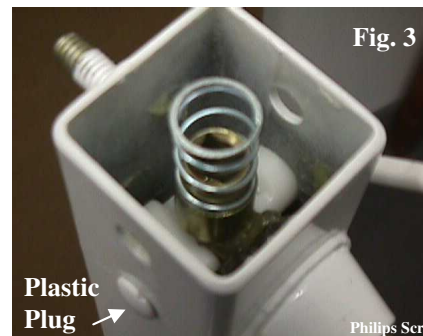


Fig. 3

Plastic
Plug →

Phillips Screw →