

## Driving Arcade:

### 31 Games –

- Batman
- Battle Gear 4
- Battle Gear 4 Tuned
- Daytona Championship USA 3
- Dirty Drivin'
- The Fast & Furious Super Bikes
- Super Bikes 2
- Fast & Furious Super Cars
- Ford Racing – Full Blown
- Race Driver Grid
- H2 Overdrive
- Initial D Arcade Stage 4
- Initial D Arcade Stage 5
- Initial D Arcade Stage 7 AAX
- Initial D Arcade Stage 8
- K.O. Drive
- MarioKart Arcade GP
- MarioKart Arcade GP 2
- MarioKart Arcade GP DX
- NickToons Nitro
- OutRun2 SP SDX
- R-Tuned Ultimate Street Racing
- SR3 Sega Rally 3
- SR Sega Racing Classic
- Sega Race TV
- Storm Racer Gravity
- Sonic & Sega All-Stars Racing Arcade
- Tokyo Cop
- Wacky Races

**Instructions:**

When the unit is just turned on, please wait 2 minutes before selecting a game so all games load properly.

After powering up, the wheel will spin back and forth around 8 times. It should be ready for play once it stops (about 2 minutes after powering).

To turn on the unit, please flip the switch – left side under the screen:



The main dashboard shows the list of all games. (Pic Above)

**hi** – scrolls up through games

**start** – starts selected game (**A** on Racing Wheel selects as well)

**lo** – scrolls down through games

**D Pad on racing wheel can scroll as well.**



Steering Wheel – Turning right and left navigates the menus within each game



Steering Wheel Back Pedals – each game utilizes these controls differently.

Driving Pedals – The right gas pedal selects options in games. (Some games utilize the **start** button in addition to the gas pedal to navigate)

**cam** – changes screen view of car (some games do not utilize this function)



The **Red Button** moves you out of a game and back to the main dashboard.

Note: Each game has different volume levels.

To turn off the unit, please do NOT flip the switch until after properly exiting the system. It can cause system issues that will prevent playing.



From the main dashboard screen above, press the red button that moves you out of games:





It will display:



Scroll to “Yes” hit start. The screen will turn off and move to a video of playing different types of fruit and food:



Now it is safe to flip the switch on the bottom left of screen to shut off.

Thank you!