

Programming the Baofeng radios

Manually, one "channel" at a time

[This is easy, only 4 steps each memory channel]

Factors to program for each memory channel (for a repeater):

- 1-Receive Frequency,
- 2-Repeater offset direction,
- 3-Repeater offset amount,
- 4-Repeater tone (CTCSS);
-
- 5-save it to a memory channel

Step - by - step

select "Frequency Mode",
enter the receive frequency,
press "menu"
enter 13 (using the keyboard)
using the up/down buttons, select the tone frequency
press "menu"
enter 25 (using the keyboard to select "Shift D")
using the up/down buttons, select the repeater offset shift direction (+ or -)
press "menu"
press the "up" key (to select menu item 26 "Offset")
enter the repeater shift amount (ex: 00600, will show as 00.600)
press "menu"
press the "up" key (to select menu item 27 to select a memory channel)
press "menu"
enter the memory channel you want to set ... ex: 030 (for memory slot 30)
press "menu"

done

[You will still be in "frequency mode", so ...
enter another receive frequency and do it again.