

 


Battery Operated Ride-On Vehicle

Assembly Manual & User's Guide

Mercedes-Benz 300SL W 198

Item No.: KL-7002F 6V

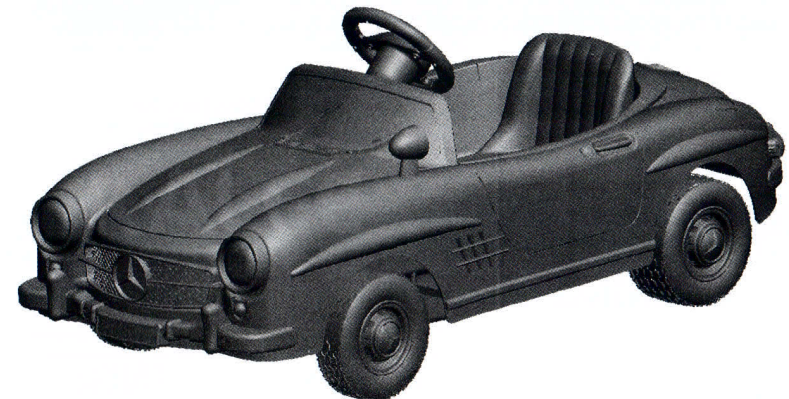

⚠ WARNING: Adult Assembly Required

Please read this manual carefully before assembly and use. This manual contains safety instructions and important information which will help you assemble the unit. Please keep this manual for future purposes.

Mercedes-Benz, Ⓜ, and the design of the enclosed product are subject to intellectual property protection owned by Daimler AG. They are used by Kalee Children's Products Co., Ltd. under license.

Vehicle / Battery Specifications:

Age: 3 and up
Maximum Capacity: 25 kg/ 55 lbs
Maximum Speed: 2.5-3.0 km/h / 1.5-1.8 mph
Battery Type: Sealed lead-acid rechargeable, 6 Volt 7Ah
Power input for Charger: A/C 100-240 Volts, 50/60Hz
Power output to Battery: DC 7.5 Volts, 1000mA

⚠️ CHARGING CAUTIONS:

- Charging the battery should only be done by adults.
- The charger is not a toy. Do not allow children to play with the charger or to recharge the battery.
- Turn the power switch to "OFF" when charging.
- Before the first use, you should charge the battery for 8-10 hours. Do not charge the battery for more than 16 hours to avoid overheating the charger.
- It is normal for the charger to feel warm during charging. If the charger feels very hot, stop charging, unplug the charger and check the battery and charger.
- Use the charger in dry locations only.
- Regularly check the charger, battery and their connectors for excessive wear or damage each time you charge the battery. If damage or excessive wear is detected, do not use the charger or the battery until you have replaced the worn or damaged part.
- Only use the charger specified by the manufacturer.

⚠️ WARNING - Risk of fire. Do not by pass fuse. Replace only with the correct amperage fuse.

⚠️ WARNING:

To reduce the risk of injury, adult supervision is required. Never use on roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water. Always wear shoes and never allow more than 1 rider.

⚠️ WARNING:

Choking Hazard! Contains small parts. Not for children under 3 years old!

⚠️ WARNING:

Contains small parts, sharp points and sharp edges. Adult assembly required.

⚠️ WARNING:

Not to be used in traffic.

⚠️ WARNING:

This toy is unsuitable for children under 3 years due to its maximum speed.

⚠️ BATTERY SAFETY WARNING:

- Only use the battery and charger supplied by the manufacturer.
- Do not connect the battery terminals directly together. This will cause the battery to short-circuit.
- Never short-circuit the battery terminals or modify the electrical system. Alterations may cause a fire resulting in serious injuries.
- Do not mix old and new batteries or batteries of different types.
- Remove batteries during long periods of non-use. Always remove batteries from the product. Dispose of batteries safely. Do not dispose of batteries in fires. The batteries may explode or leak.
- If removable, rechargeable batteries are used, they are only to be charged by adults or by children at least 8 years old.
- Recharge the battery fully before storage, then charge it every 3 months to extend the life of the battery.
- Only use the battery specified by the manufacturer.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.

⚠️ Caution:

The ride on vehicle is equipped with a built-in thermal circuit breaker. The thermal circuit breaker is a self-resetting safety device which automatically "trips" and shuts down the operation of the vehicle if it is overloaded or the driving conditions are too severe. Once the circuit breaker has tripped it will automatically reset itself after approximately 25 seconds and allow the rider to resume normal operation.

Safety Precautions:








- While riding, adult supervision is required at all times.
- Adults must teach their children about safe driving procedures.
- The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- Check the seat to ensure it has been fitted and secured with a bolt before driving.
- Inspect all wires and connections of the vehicle periodically.
- Use the toy only on flat surfaces, such as sidewalks, driveways or playgrounds. Do not ride the vehicle in dangerous places such as busy streets, roads, highways, swimming pools and other bodies of water, in a dark area, hilly muddy or sandy areas.
- To avoid suffocation of children please destroy all plastic bags after assembly of the vehicle.
- Do not use this vehicle outdoors when it is raining.
- Don't allow children to operate the charger or play with the battery.
- Do not exceed the recommended weight limit of 25kg / 55lbs. Please follow the correct weight and age limits allowed to drive this vehicle.
- It is prohibited to change the circuit or add other electric parts.
- Always wear a helmet when riding.

- It is not recommended to drive the vehicle on wet surfaces or on slopes greater than 15 degrees.
- Make sure you come to a complete stop before changing directions from forward to reverse.
- Please turn the power off when not in use.
- In order to avoid accidents, please ensure the vehicle is safe before driving.
- Do not let any child touch the wheels or be near them when the vehicle is moving.
- The charger used for the vehicle is to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, must not be used until that damage had been repaired.
- Clean the vehicle only with a damp cloth and never submerge vehicle in water or spray with water directly from a hose.


Maintaining your vehicle:

- It is a parents responsibility to check main parts of the vehicle before use. Regularly examine the vehicle for potential hazards, such as the battery, charge cable, cord and plug. Ensure screws are tightened. If there are any damages, the vehicle must not be used until these damages have been properly repaired or replaced.
- Occasionally use a lightweight oil to lubricate moving parts such as the wheels and steering linkages.
- Keep the vehicle in an upturned position, do not overturn or incline it. It is recommended to store the vehicle indoors when not in use. If stored outdoors, the vehicle needs to be covered by a tarp for protection against weather elements.
- This toy should be kept away from fire. Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt. While charging ensure all flammable liquids are well away from the vehicle.
- ADULTS ONLY to recharge the battery after each use. Recharge the battery at least once a month when the vehicle is not being used.
- Use a soft, dry cloth to clean vehicle.
- DO NOT use any chemical liquids to clean the plastic surface of the vehicle.
- DO NOT wash the vehicle with soap and water.
- DO NOT drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- When not in use all electrical sources should be turned off. Press the power switch to the "OFF" position to turn the power off. Also disconnect the battery connection under the seat.
- Please do not change the structure of this product and circuit system.
- DO NOT use the vehicle for other purposes except riding.

Part List:


Part No.	Description	Qty
1	 Body	1 pc
2	 Steering Wheel	1 pc
3	 M5 Screw (Prefixed on Steering Wheel)	1 pc
4	 M5 Nut (Prefixed on Steering Wheel)	1 pc
5	 Charger	1 pc
6	 Screwdriver (Not Included)	1 pc
7	 Remote Control	1pc

 How to Assemble the Vehicle:

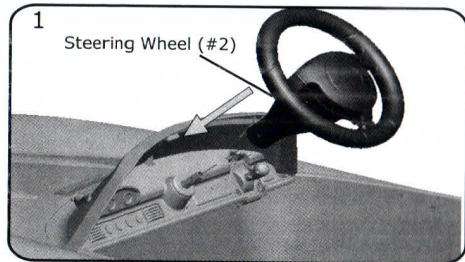



Step 1:

 - Undo the prefixed M5 Screw (#3) and M5 Nut (#4) from the steering column.
- Place the Steering Wheel (#2) onto the steering column.

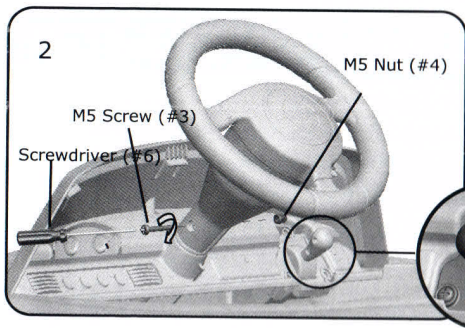


Step 2:

  - Insert the M5 Screw (#3) through the steering wheel and steering column.
- Tighten the M5 Nut (#4) with a screwdriver (#6) (not included).

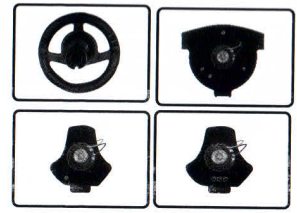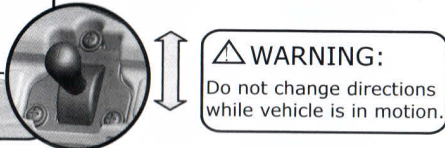

 - Undo the three screws on the backside of the steering wheel.
- The music box is inside the steering wheel.
- Unscrew the screw on the music box cover.
- Open the cover and remove the button cell batteries, then insert the new button cell batteries.
- Place the cover and secure by the screw.
- Insert the music box in the steering wheel and secure with the 3 screws.

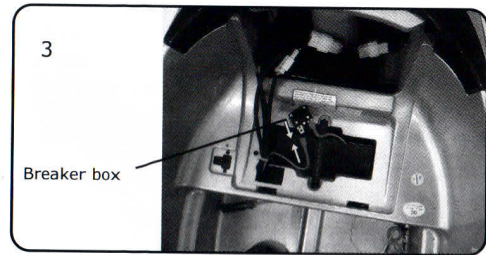

Step 3:

- Unscrew the prefixed screw on the back of the seat with a screwdriver.
- Remove the seat, connect the loose red wire plug to the terminal of the breaker box.
- Install the seat again.

Operation of the Vehicle:

 
1. Make sure the battery is fully charged and the red plug is connected to the battery plug under the seat.
2. Press the power switch when using the vehicle. Release the power switch when not using the vehicle.
3. Locate the direction switch to the right of the steering wheel. Push the direction switch to "F" and press the accelerator pedal, vehicle will move forward. Headlights come on while vehicle is moving forward.
****NOTE: Do not change directions while the vehicle is in motion****
4. Press the button in the center of the steering wheel for horn sound.
5. Press the Power switch on the vehicle to "OFF" when don't using the vehicle.
6. Before using remote controller, press the R/C/ PEDAL switch on the dashboard to the R/C position. Make sure the F/B switch is in the middle position. Switch on the remote controller. Press the arrow buttons on remote controller for going to different directions.
7. When use the remote control, Press the switch to the R/C position. Make sure the F/B switch is in the middle position. Press the left side of forward-key to go forward or backward-key to go in reverse. Press the right side of left-key to move the vehicle left or right-key to turn the vehicle right.

Charging the Battery:



- The socket for charging the battery is located near the seat.
 - Connect the charger plug into the DC jack, then plug the charger into a household outlet.
 - Charge the battery for 8-10 hours. Never charge more than 16 hours.
 - When the battery is fully charged, unplug the charger and store it in a cool and dry place.
- Note: The car can not be operated when the charger is connected to the car.**

Using the Remote Control:

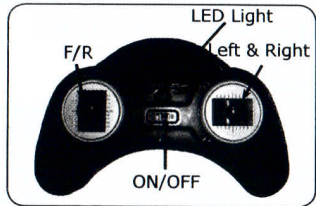


Step 1:
Switch "OFF" when the remote is not used.




Step 2:

 - Install 2 x AA batteries (not included).
- Tool required: Use Phillip screwdriver(not included)to unscrew the battery cover.
- Switch "OFF" when the remote is not used.

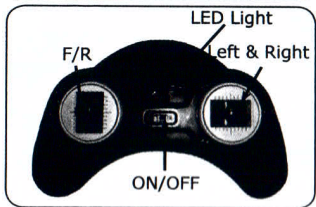

Step 3:

 - Switch "OFF" for both Remote and vehicle.
- Switch vehicle to "R/C" position.

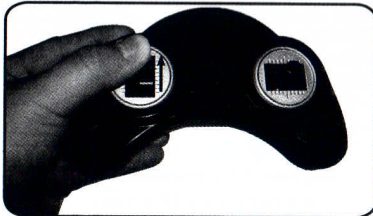

Step 4:

- Left hand press the push button to "Forward"and keep the left hand at "Forward" position.
- Switch "ON" remote control with your right hand (under a fixed frequency of 3HZ), keep your hand at "ON" position.
- Turn "ON" the power switch of the vehicle.

- If the LED light on the remote stay on W/O twinkling, the remote control is ready be used.
- If the LED light is still twinkling, please repeat the previous steps again

Trouble Shooting Tips:

Problem: The vehicle does not turn on

If the car is not functioning at all please follow these troubleshooting steps listed below. After each step, please put the car in forward gear and step on the pedal to see if the car will move.

1. **Charger:** Unplug the charger completely from the car. The car will not work if the charger is plugged into the car.
2. **Battery Connection:** There is a battery cover that goes over the battery to hide the positive and negative wires. Undo the bar that holds the battery down to release the cover. Once the cover is loose, check the positive and negative wire to see if they are properly connected. You may also pull lightly on each wire to see if they are connected.
3. **F/R Switch:** Use a Phillip screw driver and undo the screws that hold down Forward and Reverse switch. Pull the switch out and you should see wires running into the back of the switch. Use your hand and push each individual wires into the socket.
4. **Foot Pedal Switch:** Turn the car on its side, and you will see a foot pedal cover where the foot pedal switch is. There should be 4 screws holding down that cover. Once the cover is off you will see wires leading into the F/R switch. Use your hands to push each individual wires into the switch and see if it runs.
5. **Motor Connection:** Remove the seat and you will see a main wire going to the back motor. You will see a white plastic connector, please disengage that white connector and you will see 2 metal prongs and 2 metal holes. Check if the 2 metal prongs are aligned properly and reconnect the connector.

Problem: The motor turns but the car is not moving

If you can hear the motor turning but the car is not moving or you hear a grinding sound coming from the gearbox, please contact Kalee Customer Service Support.

Problem: The vehicle runs slowly:

If the car is not functioning at its normal speed, please recharge the battery for another 8 to 10 hours. If it does not resolve the issue, please contact Kalee Customer Service Support.

Customer Service:

Should you need service or assistance with your vehicle, do not return the vehicle to the store. Please contact Customer Service at 416 7493424 or email us at info@daymak.com.

Made in China

You can help protect the environment! Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.



