


DHY125KSE
Diesel Generator
50Hz 3phase Standby 125kVA



Prime Power (kVA)	112
Prime Power (kW)	90
Standby Power (kVA)	125
Standby Power (kW)	99
Power Factor	0.8
Frequency (Hz)	50
Rate Voltage (V)	400/230
Rate Current (A)	161.7
Controller	IL-NT MRS10
Control Voltage (DC/V)	DC24
Battery Capacity (Ah)	60x2
Coolant Capacity (L)	24
Fuel Tank Capacity(Base frame) (L)	245
Fuel Consumption (L/Hour)	28
Running Time (Hour)	9
Sound @7 meter (dBA)	72
Open Type Product size (mm)	2395x1000x1410
Open Type Weight net (kg)	1220
Canopy type product size (mm)	3200x1050x1760
Canopy Type Weight net (kg)	1580
Engine Model	HY6B155L-D21
Prime power (kW)	103
Structure	6 cylinder inline
Fuel type	Diesel
Fuel consumption (L/Hour)	28
Lubricant consumption (L/Hour)	0.14
Governor	Mechanical
Cooling	Water
Lubricant capacity (L)	24
Air intake flow (m³/min)	14.5
Exhaust gas flow (m³/min)	40
Exhaust gas temperature (°C)	550
Exhaust gas back pressure (Kpa)	10
Compression ratio	17.5
Aspiration	Turbo Charged Intercooled
Bore (mm)	108
Stroke	125
Displacement (L)	6.87
SAE	2/11.5
Dimension (mm)	1350x785x1130
Net weight (Kg)	660
Alternator Model	274D
Prime power (kVA)	125
Structure	1 bearing
Excitation mode	Self-excitation
Insulation class	H
Protection class	IP23
TIF	<50
THF	<2%
AVR Model	AS440

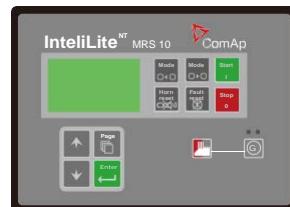

Support engine and alternator monitoring, measurement and protection. This is long-running and back-up unit to integrate the best way to control. support Modbus standard, modem,RS232,RS485,USB and internet.

Measurement, displayment	MRS10
Gensetprime power Kw	-
Powerfactor	-
Engine speed	-
Phase to neutral voltage	-
Phase to phase voltage	-
Gensetfrequency	-
Genset current	-
Mains Phase to neutral voltage	x
Mains Phase to phase voltage	x
Mains frequency	x
Engine oil pressure	-
Engine water temperature	-
Fuel level	-
Battery voltage	-
Genset power KVA	-
Gensetrunningtime	-
Genset output KWh	x
Historyfile	x
Alarm, shutdownfunction	
Low oilpressure warning,shutdown	-
High watertemperature warning,shutdown	-
Engine over and under speed shutdown	-
Low fuel level warning,shutdown	-
Battery low and high voltage warning	-
Battery chargerfailure	-
Genset low and high voltage warning, shut down	-
Alternator 3 phase voltage unbalance shut down	-
Alternator low and high frequency warning, shut down	-
Gensetoverloadshutdown	-
Alternator3 phase current unbalance shutdown	-
Mains low and high voltage warning	x
Mains low and high frequency warning	x
Optional	
Remote start and stop	-
RS232 card	O
USB card	O
RS485 card	O
Multi language display	O
GPRS communication	O
GPS communication	O

•standard O optional xNone