

HYUNDAI


DHY34KSE

Diesel Generator

50Hz 3phase Standby 34.4kVA



Prime Power (kVA)	31.3
Prime Power (kW)	25
Standby Power (KVA)	34.4
Standby Power (KW)	27.5
Power Factor	0.8
Frequency (Hz)	50
Rate Voltage (V)	400/230
Rate Current (A)	45.2
Controller	IL-NT MRS10
Control Voltage (DC/V)	12
Battery Capacity (Ah)	55
Coolant Capacity (L)	10.2
Fuel Tank Capacity(Base frame) (L)	93
Fuel Consumption (L/Hour)	9.5
Running Time (Hour)	10
Sound @7 meter (dBA)	67
Open Type Product size (mm)	1810 × 950 × 1020
Open Type Weight net (kg)	690
Canopy type product size (mm)	2200 × 950 × 1250
Canopy Type Weight net (kg)	1000
Engine Model	HY4102
Prime power (kW)	32
Structure	4 cylinder,inline
Fuel type	Diesel
Fuel consumption (L/Hour)	9.5
Lubricant consumption (L/Hour)	0.0475
Governor	Mechanical
Coolling	Water
Lubricant capacity (L)	7.5
Air intake flow (m³/min)	2.1
Exhaust gas flow (m³/min)	2.2
Exhaust gas temperature (°C)	400
Exhaust gas back pressure (Kpa)	5
Compression ratio	18
Aspiration	Natural
Bore (mm)	102
Stroke	105
Displacement (L)	3.8
SAE	3/10.0
Dimension (mm)	892 × 622 × 730
Net weight (Kg)	320
Alternator Model	184G
Prime power (kVA)	31
Structure	1 bearing
Excitation mode	Self-excitation
Insulation class	H
Protection class	IP23
TIF	<50
THF	<2%
Air flow (m³/s)	0.095
AVR Model	SX460

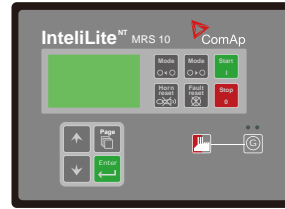

Support engine and alterantor monitoring, measurement and protection. This is long-running and back-up unit to integrate the best way to control. support Modbus standard, modem,RS232、RS485、USB and internet.

Measurement, displayment	MRS10
Genset prime power Kw	●
Power factor	●
Engine speed	●
Phase to neutral voltage	●
Phase to phase voltage	●
Genset frequency	●
Genset current	●
Mains Phase to neutral voltage	×
Mains Phase to phase voltage	×
Mains frequency	×
Engine oil pressure	●
Engine water temperature	●
Fuel level	●
Battery voltage	●
Genset power KVA	●
Genset running time	●
Genset output KWh	×
History file	×
Alarm, shutdown function	
Low oil pressure warning,shutdown	●
High water temperature warning,shutdown	●
Engine over and under speed shutdown	●
Low fuel level warning,shutdown	●
Battery low and high voltage warning	●
Battery charging failure	●
Genset low and high voltage warning, shut down	●
Alternator 3 phase voltage unbalance shut down	●
Alternator low and high frequency warning,shut down	●
Genset over load shutdown	●
Alternator3 phase current unbalance shutdown	●
Mains low and high voltage warning	×
Mains low and high frequency warning	×
Optional	
Remote start and stop	●
RS232 card	○
USB card	○
RS485 card	○
Multi language display	○
GPRS communication	○
GPS communication	○

● standard ○ Optional × None