

SEASONAL USE GUIDELINES OF WHITewater AEROBIC TREATMENT UNIT

These guidelines are for conditions as outlined below and apply for systems that are not in use for periods of time indicated. Site conditions not covered by the following must be forwarded to Delta for recommended guidelines to meet the particular site conditions.

1. System not in use for more than one month and less than three months. Electrical power is left on and there are no frost conditions.
 - Leave air pump on and system running.
2. System not in use more than three months. Electrical power is turned off and there are not frost conditions.
 - While system is operating with the air pump on, remove all material and liquid from tank.
 - Refill with clean water.
 - Turn off air pump.
3. System not in use more than three months. Electrical power is on and there are not frost conditions.
 - Leave air pump on and system running; **OR**
 - While system is operating with the air pump on, remove all material and liquid from tank.
 - Refill with clean water.
 - Turn off air pump.
4. System not in use. Electrical power is turned off and there are frost conditions.
 - While system is operating with the air pump on, remove all material and liquid from tank.
 - Turn off air pump.
 - If high ground water is present, fill with clean water.
 - If no ground water is present, leave tank empty.

**UNDER NO CIRCUMSTANCES SHOULD THE AIR PUMP BE
TURNED OFF FOR MORE THAN A FEW DAYS WITHOUT
REMOVING TANK CONTENTS.**