

# *E-Z Style*

## *FURNITURE*

### ASSEMBLY INSTRUCTIONS AND PARTS IDENTIFICATION

#### MODEL # 1911EZ-24NE

 



#### WALL SHELF

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.





#### Key Parts

No	Code	Qty	Description
1	1911EZ-24NE	1 pc	Wooden shelf
2	1911EZ-24NE	1 pc	Shelf support


#### Hardware kit (1911EZ-24NE)

No	Description	Qty
A	 Screwdriver	1 pc
B	 Screws	4 pcs
C	 Wall screws (2" long)	6 pcs
D	 Wall anchors	6 pcs

**\*NOT TO BE USED TO SUPPORT A TV**  
**WEIGHT LIMIT 20 POUNDS**

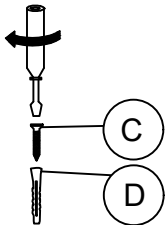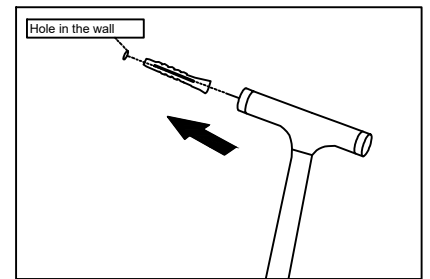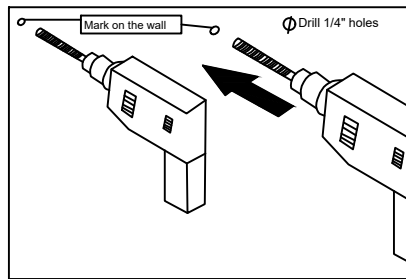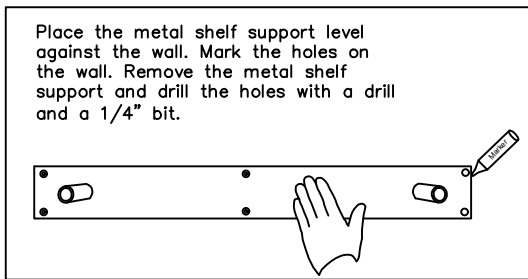

 - Insert the wall anchors into the drilled holes and tap into place.
- Secure the metal shelf bracket to the wall using long screws(C).
- Inset the screws through the bracket, into the wall anchors and full tighten by hand.



- Insert the shelf by lining up the holes to the connecting rods on the bracket.
- Make sure the holes in shelf face down.
- Secure the shelf to the bracket using the short screws(B) and hand tighten with the screwdriver.

