

E-Z Style

FURNITURE

ASSEMBLY INSTRUCTIONS AND PARTS IDENTIFICATION

 






MODEL # 1915EZ-18RW


Console Tabel

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Key Parts			
No	Code	Qty	Description
1	1915EZ-18RWP53C	1 pc	Center Leg Assembly
2	1915EZ-18RWP53	2 pcs	Side Legs Assembly

Stand the center leg upright on the ground and place side legs as shown in the picture with it. Match the holes, place the washer, bolt and nut on the other side of the bolt. Hold the nut and tighten the bolt with the help of the spanner by rotating it clockwise.

Hardware kit (1915EZ-18RWP01)			
No	Description		Qty
A		Wrench	1 pc
B		Bolts	2 pcs
C		Washer	12 pcs
D		Nuts	2 pcs
E		Allen Wrench	1 pcs
F		Hex Head Bolts	8 pcs
G		Lock Washer	10 pcs

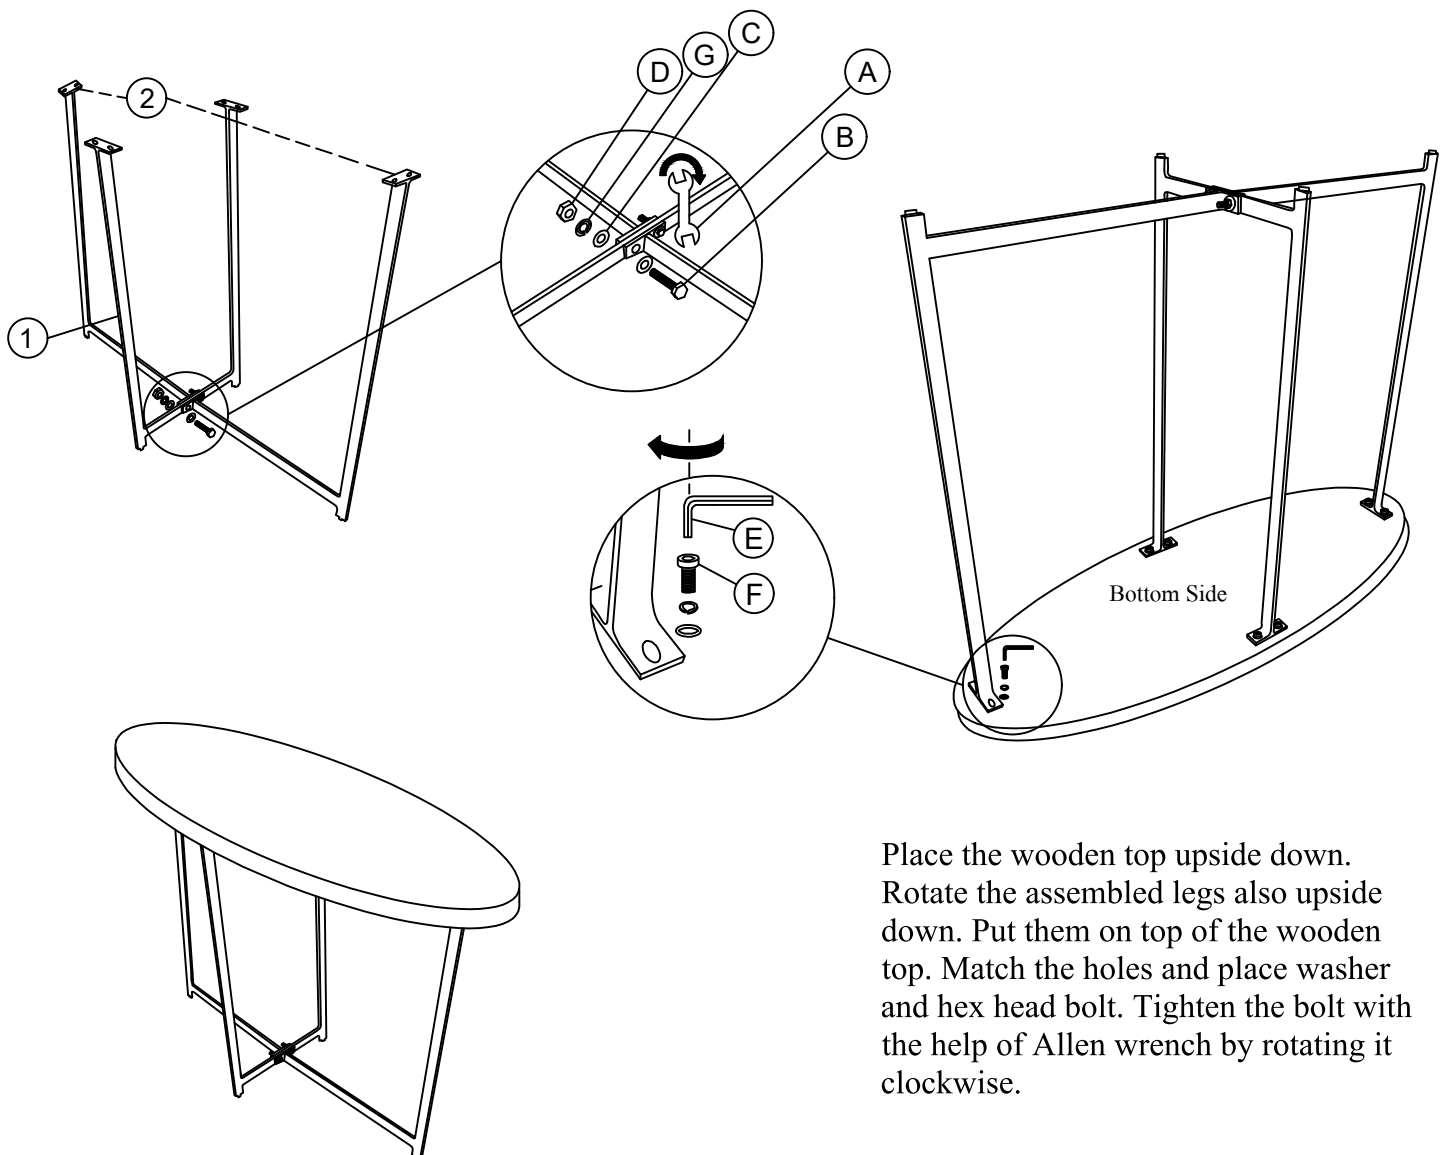

Place the wooden top upside down. Rotate the assembled legs also upside down. Put them on top of the wooden top. Match the holes and place washer and hex head bolt. Tighten the bolt with the help of Allen wrench by rotating it clockwise.