

Tomahawk Radio Practical User's Guide (Trig TX56A)

1. Startup:
 - a. Turn on the radio using the volume knob
 - b. Press the NAV button and push the volume knob twice to stop the NAV ID function (that really annoying noise on startup).
 - c. Go back to Com page by pushing COM button once
 - d. Put secondary frequency on standby using the right hand knobs (large and small), use flip-flop (the two arrows) button to switch between the two.
 - e. To tune frequencies with “xxx.x25” etc PUSH right knob for step adjustment to “25k steps”
 - f. To monitor the standby frequency press MON once. (Can be used to monitor ATIS while remaining on ATC.) Will show a “+2” indication between frequencies.
2. Intercom Adjustments
 - a. Hold MON button down for three seconds
 - b. Use large, right knob to cycle to desired intercom selection (intercom volume, squelch, music volume, music muting)
 - c. Use small right knob to adjust to desired level
 - d. to return to COM push MON button once
3. Using the Navigation Radio
 - a. Push NAV button
 - b. Tune standby frequency using the right knobs
 - c. Set to active using a flip-flop button (the two arrows)
 - d. ID Morse code by pressing the left volume button once
 - e. Listen to Morse code and verify correct
 - f. Push left button two more times to cancel the ID function (will cycle through “V” then off)
 - g. Once the station is identified the current Radial/Bearing position will be displayed with a From/To indication respectively. NOTE can be swapped by pressing the T/F button.
4. Using the OBS
 - a. Push the OBS button to pull up the CDI (course deviation indicator)
 - b. Tune desired radial by using large and small knob on the right.
 - i. To tune directly to the current radial position, press on the right knob.
 - ii. to switch from a To/From indication press the T/F button
 - iii. If out of range the CDI will be crossed out
5. Com Notes
 - a. RX means receiving
 - b. TX means transmitting