


Version:V1.1

(1CH-HT 5CH-HT 16CH-HT)

Emitter Instruction

Hi-Tech

Instruction Of Buttons

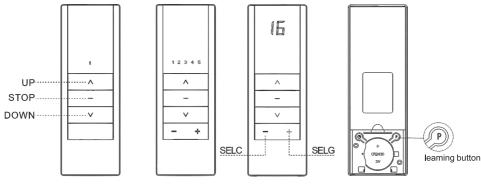

1-ch transmitter

5-ch transmitter

16-ch transmitter


16CH-HT

Back

Technical Specification

	1CH-HT	5CH-HT	16CH-HT
Power Supply	Lithium 3V(CR2430 300mAh)		
Frequency	433.92MHz		
Channels	1	5	16
Range in open field	180mt		
Max.absorption	≤8mA	≤10mA	≤15mA
Dimensions	130x45x13(mm)		
Weight	63g	63g	69g

Code Learning

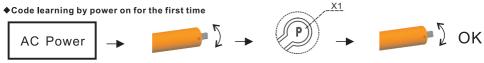

- 1. Power on
- the motor will vibrate back and forth once
- 3.press the emitter's learning button once within 10s
- The motor will vibrate
 back and forth once to confirm
 the learning is successful


◆Code Learning through copy the old emitter



- Short press the learning button at the backside of the old learnt emitter for 8 time
- 2. the motor will vibrate back and forth once
- 3. Short press the new emitter or new channel of the old emitter's learning button once within 10s
- 4. the motor will vibrate back and forth once to confirm the learning is successful


Code Deleting

◆Delete the current emitter operating

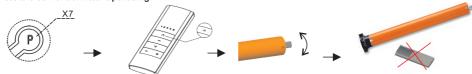

- Short press the learning button at the backside of the emitter 7 times
- 2. Press Up button on the emitter once
- 3. the motor will vibrate back and forth once
- 4. The current emitter operating could not control the motor anymore

Delete all the emitters that learnt with the motor

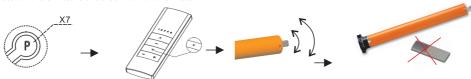

- Short press the learning button at the backside of the emitter 7 times
- 2. Press Down button on the emitter once
- 3. the motor will vibrate back and forth twice
- 4.All emitters that learnt with the motor could not control the motor anymore


Direction Change



- 1. Short press the learning button at the backside of the emitter 4 times
- 2. Press Down button on the emitter once
- the motor will vibrate back and forth once
- 4.The running direction changed

Dot Movement



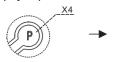

Short press the learning button at the backside of the emitter 4 times



Press Up button
 on the emitter once



- the motor will vibrate back and forth once
- 4. Dot movement /continuous running switch is successful

Warning

- 1. Emitter couldn't expose to moisture or be striked heavily, or else the emitter life will be affected.
- 2. If the emitter is not so sensitive or the radio range becomes shorter, pls check whether need to change the battery as suggested.
- 3. It's not suggested to use different type battery to avoid any dangerous risk.
- 4. Dispose of used batteries properly.