## PERFORMANCE STANDARD T R I L E N N I U M

## RILENNIUM 3000/3070/3500 PANIC RELEASE REHANDING


All Trilennium locks are handed for inswing applications when they are shipped. When being used on a outswing door, you must use the opposite hand lock and reverse the Panic Release feature.

#### 🚹 Note:

Trilennium Locks can only be re-handed from right hand inswing to left hand reverse and from left hand inswing to right hand reverse.

#### 1. Part identification.

There is one component that creates the "panic release" feature on the interior of the Trilennium<sup>M</sup> mortise lock. The long **drive arm** is for the interior, the short **drive arm** for the exterior.

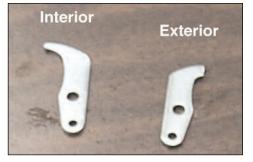

#### 2b. Twist to remove.

One edge is under the white "I" beam, so twist it to the side slightly.



#### HANDING Inswing Outswing Left Hand Left Hand Exterior INTERIOR Left Hand Exterior Right Hand

#### 2a. Remove plastic covers

The black plastic "rehanding covers" are removable. Depress the snap lock using a fingernail and lift the cover out.



#### 3. Reverse arms.

Once you have removed both plastic covers, reverse the drive arms. Reference 2nd page of correct placement. Reinstall the covers.



# PERFORMANCE STANDARD TRILENNUM®

## FRILENNIUM 3000/3070/3500 PANIC RELEASE REHANDING

#### DRIVE ARM POSITIONING REFERENCE

