



Use of Block Placement Gauge



Conigliaro Block shall provide a loaner Block Placement Gauge if requested by the installer. This gauge is useful to insure blocks, and their male knobs, are placed in proper alignment such that future blocks fit, and sit, properly.

This gauge may be used in conjunction with a level to ensure that each course of blocks remains level and true.

When blocks are placed at right angles to each other, this gauge is especially useful to ensure the proper spacing and alignment of the male knobs such that the block(s) placed above will properly fit when bridging across the lower blocks.



The gauge is loaned to you by Conigliaro Block. Upon completion of your project, please contact your sales representative or our dispatch center to arrange for pickup of the gauge.

Questions about the use of this gauge may be addressed to your sales representative, or you may simply call our dispatch center at (888) CONIG – 25 for more information.