



**MG2 G37/N**  
Capsule Filling Machine  
Replacement Spare Parts & Service

Custom Parts/Specialty Parts  
Available On Request

**INTERNATIONAL INVENTORY MANAGEMENT**

456 MANNING AVENUE  
ELON, NC 27244 USA  
TEL 001 336 584 4777

[sales@iimnc.com](mailto:sales@iimnc.com)

[www.iimnc.com](http://www.iimnc.com)

revised 12/19/2022

OEM names and part numbers are used to identify replacement parts. Our products are not affiliated with, sponsored, or approved by the original equipment manufacturer.



# TABLE OF CONTENTS

## 1. CAPSULE FEEDING AND ORIENTING UNIT

- 1.1 Product feeding
  - 1.1.1 Product main hopper
- 1.2 Hoppers and rotary parts I
- 1.3 Hoppers and rotary parts II
- 1.4 Suction mouthpiece
- 1.5 Capsule releasing cam

## 2. CAPSULE TRANSFER UNIT

- 2.1 Suction mouthpiece and rotary parts
- 2.2 Capsule presence control photocell
- 2.3 Dosage
  - 2.3.1 Rotary hopper
  - 2.3.2 Rotary hopper protection

## 3. PRODUCT FEEDING UNIT

- 3.1 Hopper
- 3.2 Hopper support
- 3.3 Chute and vibrator
- 3.4 Gear box
- 3.5 Ejection
  - 3.5.1 Ejection cam
  - 3.5.2 Ejection piston

## 4. UPPER MAIN UNIT

- 4.1 Upper support
- 4.2 Upper support and closing contrast
  - 4.2.1 Plugs and gaskets
  - 4.2.2 Chain and chain tensioner
  - 4.2.3 First column
  - 4.2.4 Second column
  - 4.2.5 Third column
  - 4.2.6 Shaft and pusher
- 4.3 Closing contrast cam
- 4.4 Dosage
  - 4.4.1 Rotary parts



- 4.4.2 Chamber adjusting parts
- 4.4.3 Dosing cams
- 4.4.4 Adjustment parts and compression cam
- 4.4.5 Ejection cam
- 4.4.6 Rotary hopper protection
- 4.4.7 Rotary hopper
- 4.2.8 Sector container
- 4.5 Dosage adjustment
- 4.6 Rotary parts
- 4.7 Main column
- 4.8 Tube
- 4.9 Head alignment control

## **5. LOWER CENTRAL UNIT**

- 5.1 Capsule separation and recombining
  - 5.1.1 Capsule opening and bush holder turntable assembly
  - 5.1.2 Rotary parts
    - 5.1.3a Transversal shaft (Old style)
    - 5.1.3b Transversal shaft (New style)
    - 5.1.4a Lower support (Old style)
    - 5.1.4b Lower support (New style)
- 5.2 Capsule closing
  - 5.2.1 Drum and cam of closing unit
  - 5.2.2 Pivot and pusher
- 5.3 Rejects ejection
  - 5.3.1 Selector
  - 5.3.2 Rejects collection
- 5.4 Capsule exit and upper central unit supports
  - 5.4.1 Chute and support
  - 5.4.2 Supports

## **6. UPPER CENTRAL UNIT LIFTING SYSTEM**

- 6.1 Gear box
- 6.2 Lifting screw and tensioners
- 6.3 Microswitches

## **7. MOVEMENT TRANSMISSION UNIT**

- 7.1 Machine motor
- 7.2 Shaft with clutch
- 7.3 Transfer and feeding gearings



- 7.4 Suction mouthpiece
- 7.5 Rotary hopper drive gear
- 7.6 Lower central unit drive shaft
- 7.7 Upper central unit gear
- 7.8 Lower central unit drive shaft
- 7.9 Lower central unit gear
- 7.10 Lower central unit gear
- 7.11 Upper central unit gear
- 7.12 "V" belt, short toothed belt and long toothed belt
- 7.13 Hand drive
- 7.14 Belt tensioner
- 7.15 Belt orienter
- 7.16 Oscillating support of the rotary hopper clutch and drive shafts
- 7.17 Clutch shaft oscillating support
- 7.18 Oscillating support of the lower central unit drive shaft
- 7.19 Oscillating support of the lower central unit drive shaft

## **8. MACHINE SIZE-PARTS**

- 8.1 Capsule feeding tube
- 8.2 Capsule orienting drum
- 8.3 Capsule transfer ring
- 8.4 Piston, spring and dosator
- 8.5 Lid-bushing and body-bushing holders
- 8.6 Rest and orienting blade and blade support

## **9. PROTECTION HOOD UNIT**

- 9.1 Protection hood
- 9.2 Sensors, gasket and connectors
- 9.3 Product and capsule charging funnels

## **10. VACUUM SYSTEM**

- 10.1 Motor and vacuum pump
- 10.2 Vacuum elements

## **11. SUCTION AND COMPRESSED AIR SYSTEM**

- 11.1 Components of the system
- 11.2 Vacuum cleaner and filter
- 11.3 Vacuum cleaner and filter (machine)
- 11.4 Product recovery mouth



## **12. LUBRICATION SYSTEM**

### **12.1 Lubrication pump and distribution frames**

## **13. ELECTRIC SYSTEM**

### **13.1 Connections**

### **13.2 Tachometer**

## **14. PARTICULAR EQUIPMENT**

### **14.1a Tool for assembling and disassembling the rotary hopper**

 
### **14.1b Tool for assembling and disassembling the rotary hopper**

### **14.2 Special tools**

## 1. CAPSULE FEEDING AND ORIENTING UNIT


### 1.1 Product feeding

#### 1.1.1 Product main hopper

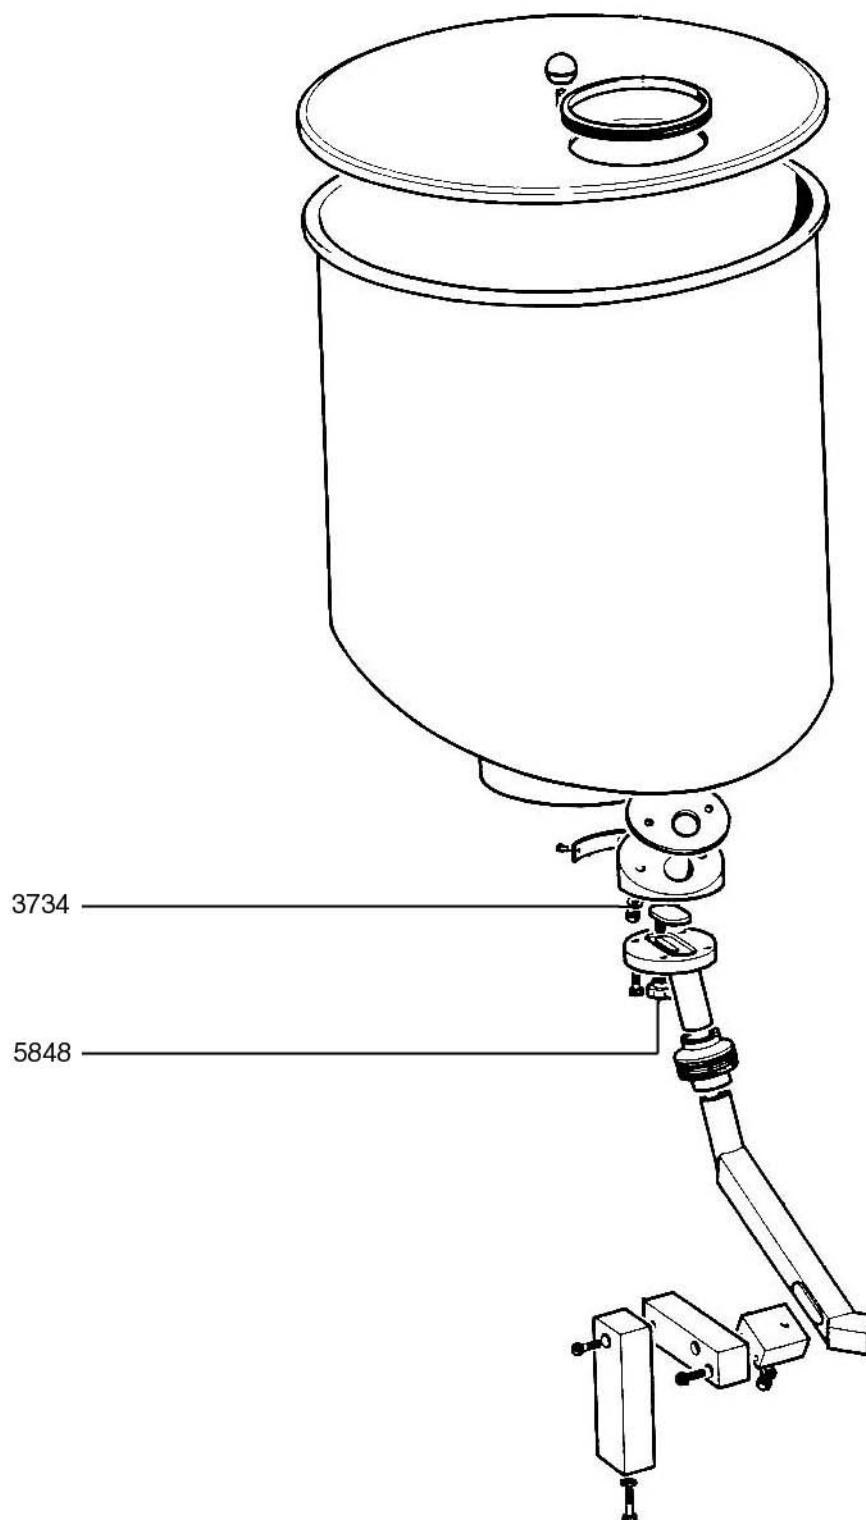


# 1. CAPSULE FEEDING AND ORIENTING UNIT
 
## 1.2 Hoppers and rotary parts I

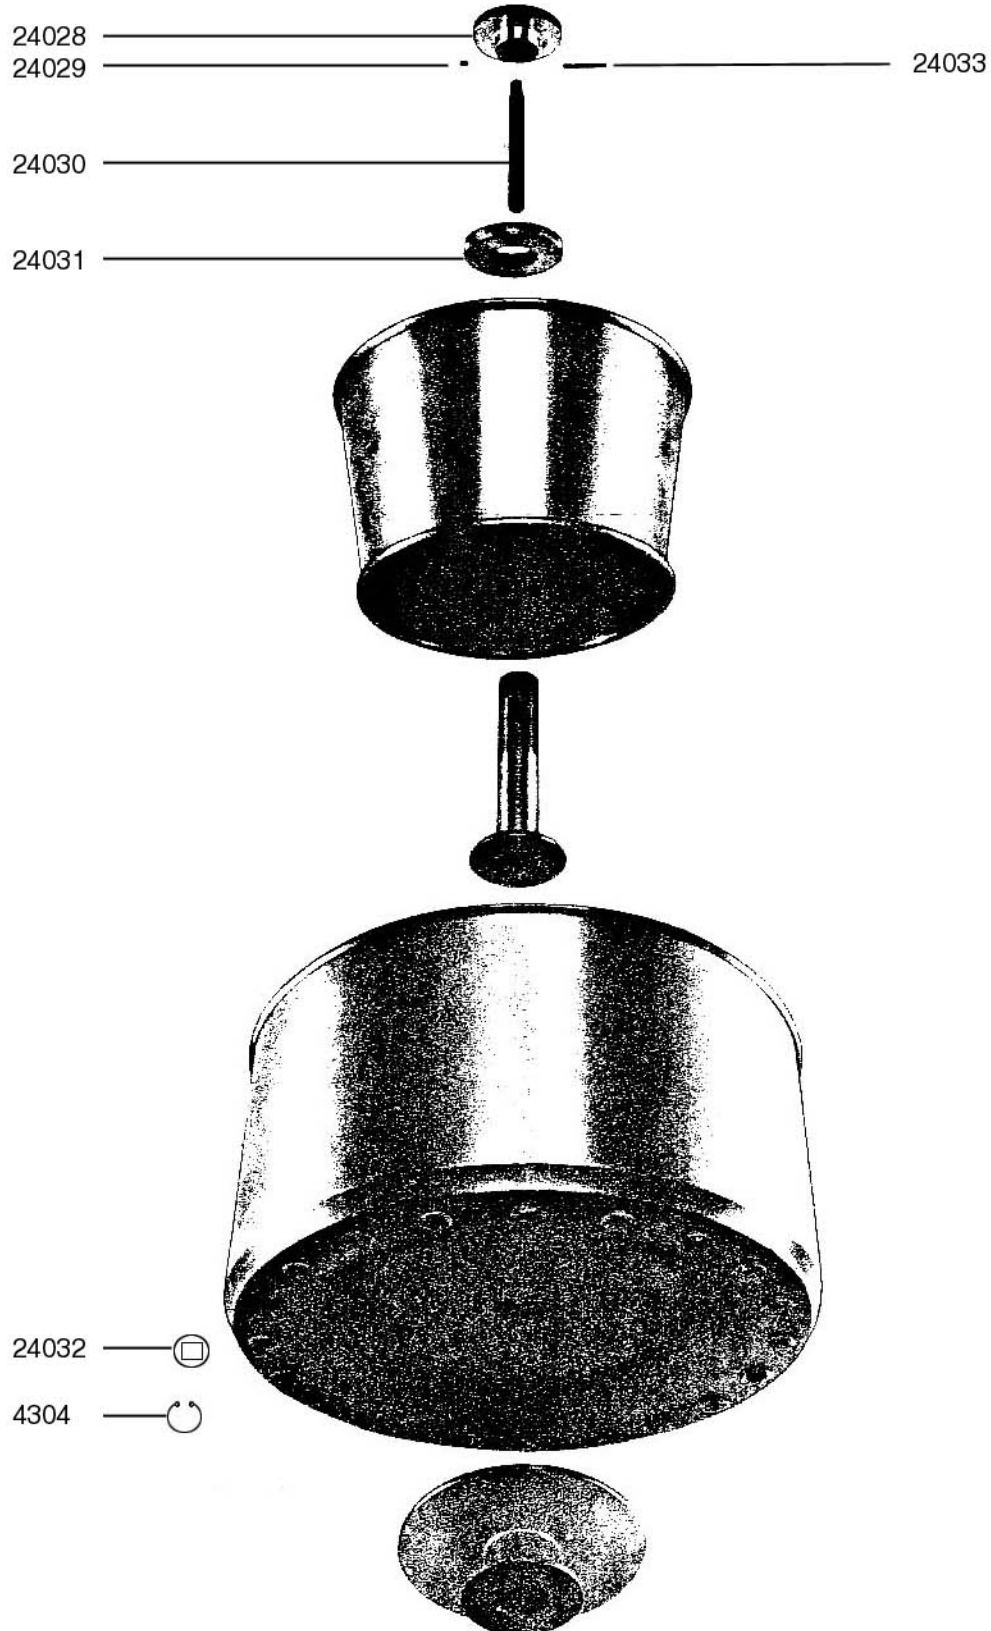

# 1. CAPSULE FEEDING AND ORIENTING UNIT

 
## 1.3 Hoppers and rotary parts II

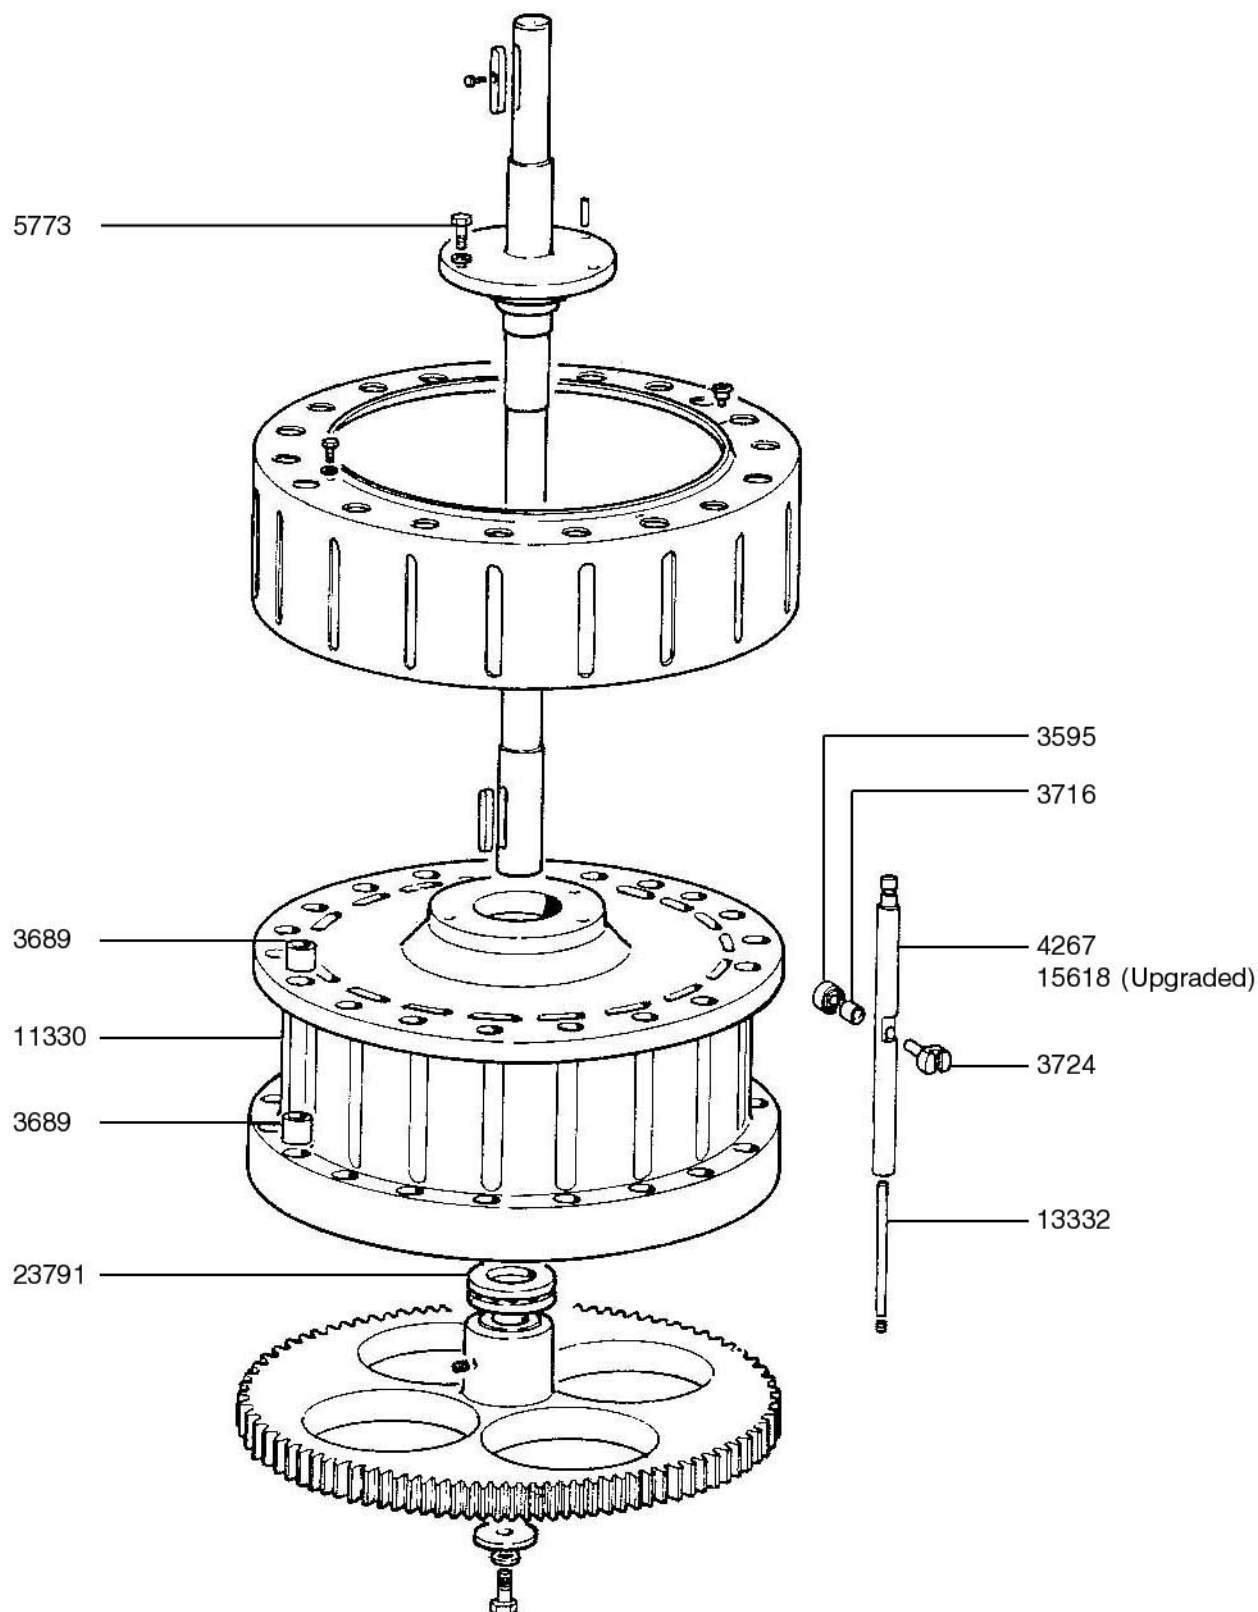




# 1. CAPSULE FEEDING AND ORIENTING UNIT
 
## 1.4 Suction mouthpiece

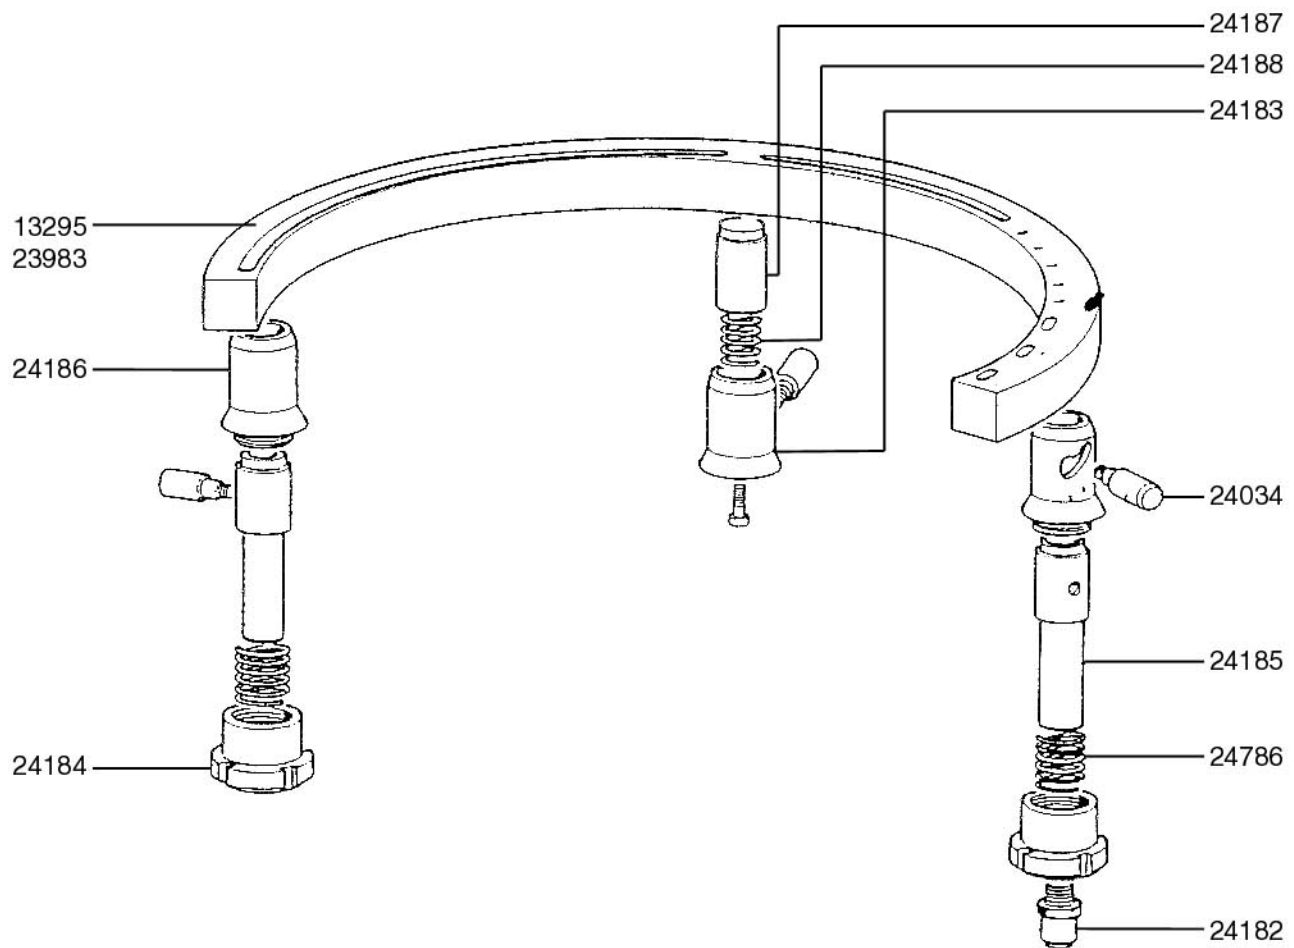

 
1. CAPSULE FEEDING AND ORIENTING UNIT  
1.5 Capsule releasing cam

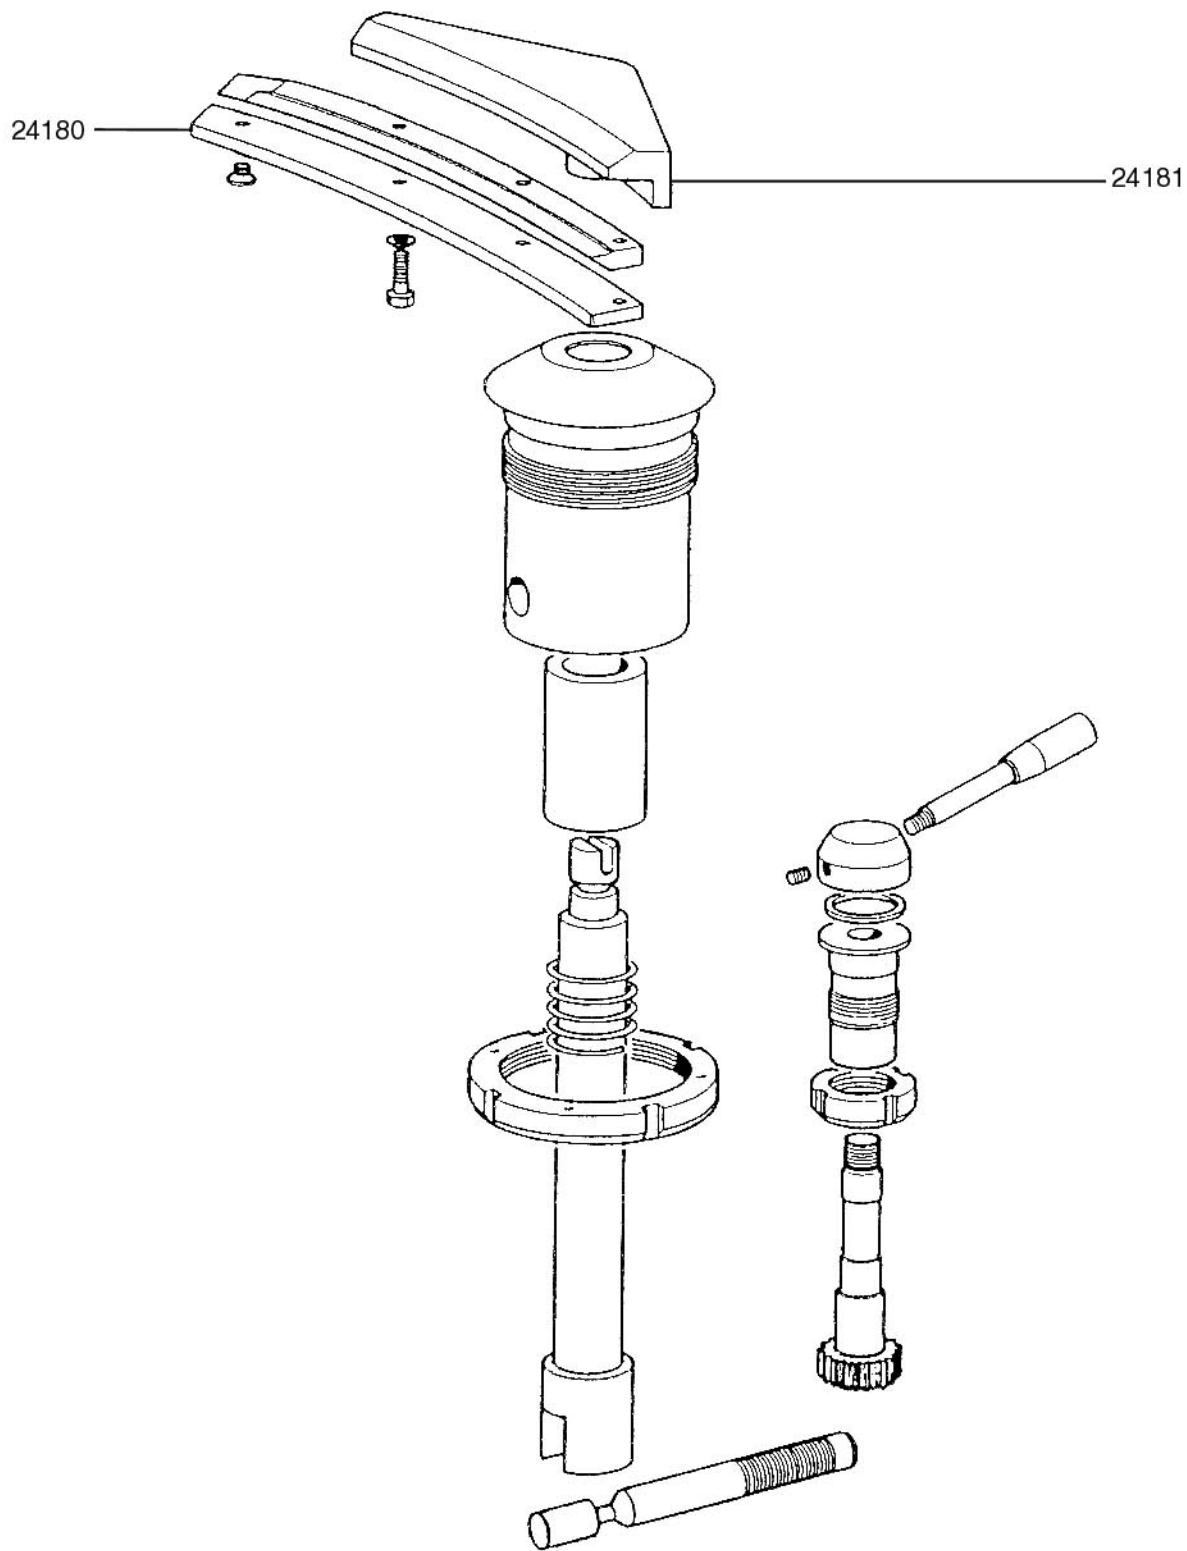

## 2. CAPSULE TRANSFER UNIT

### 2.1 Suction mouthpiece and rotay parts

 
### 2.2 Capsule presence control photocell

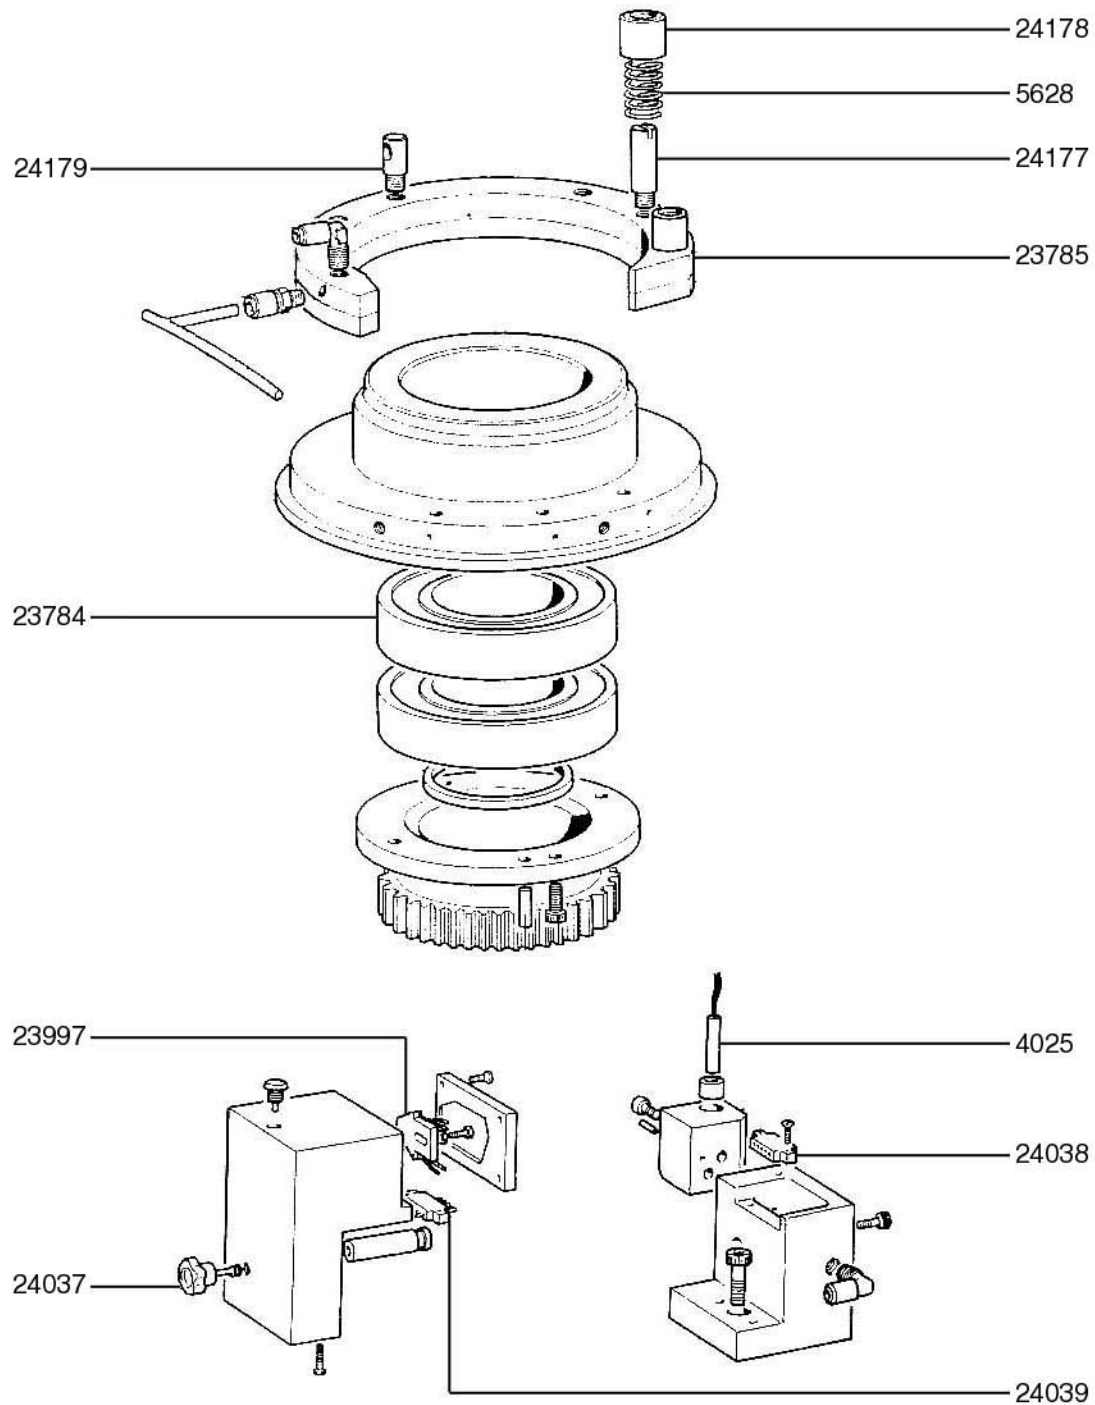

## 2. CAPSULE TRANSFER UNIT

### 2.3 Dosage

 
#### 2.3.1 Rotary hopper

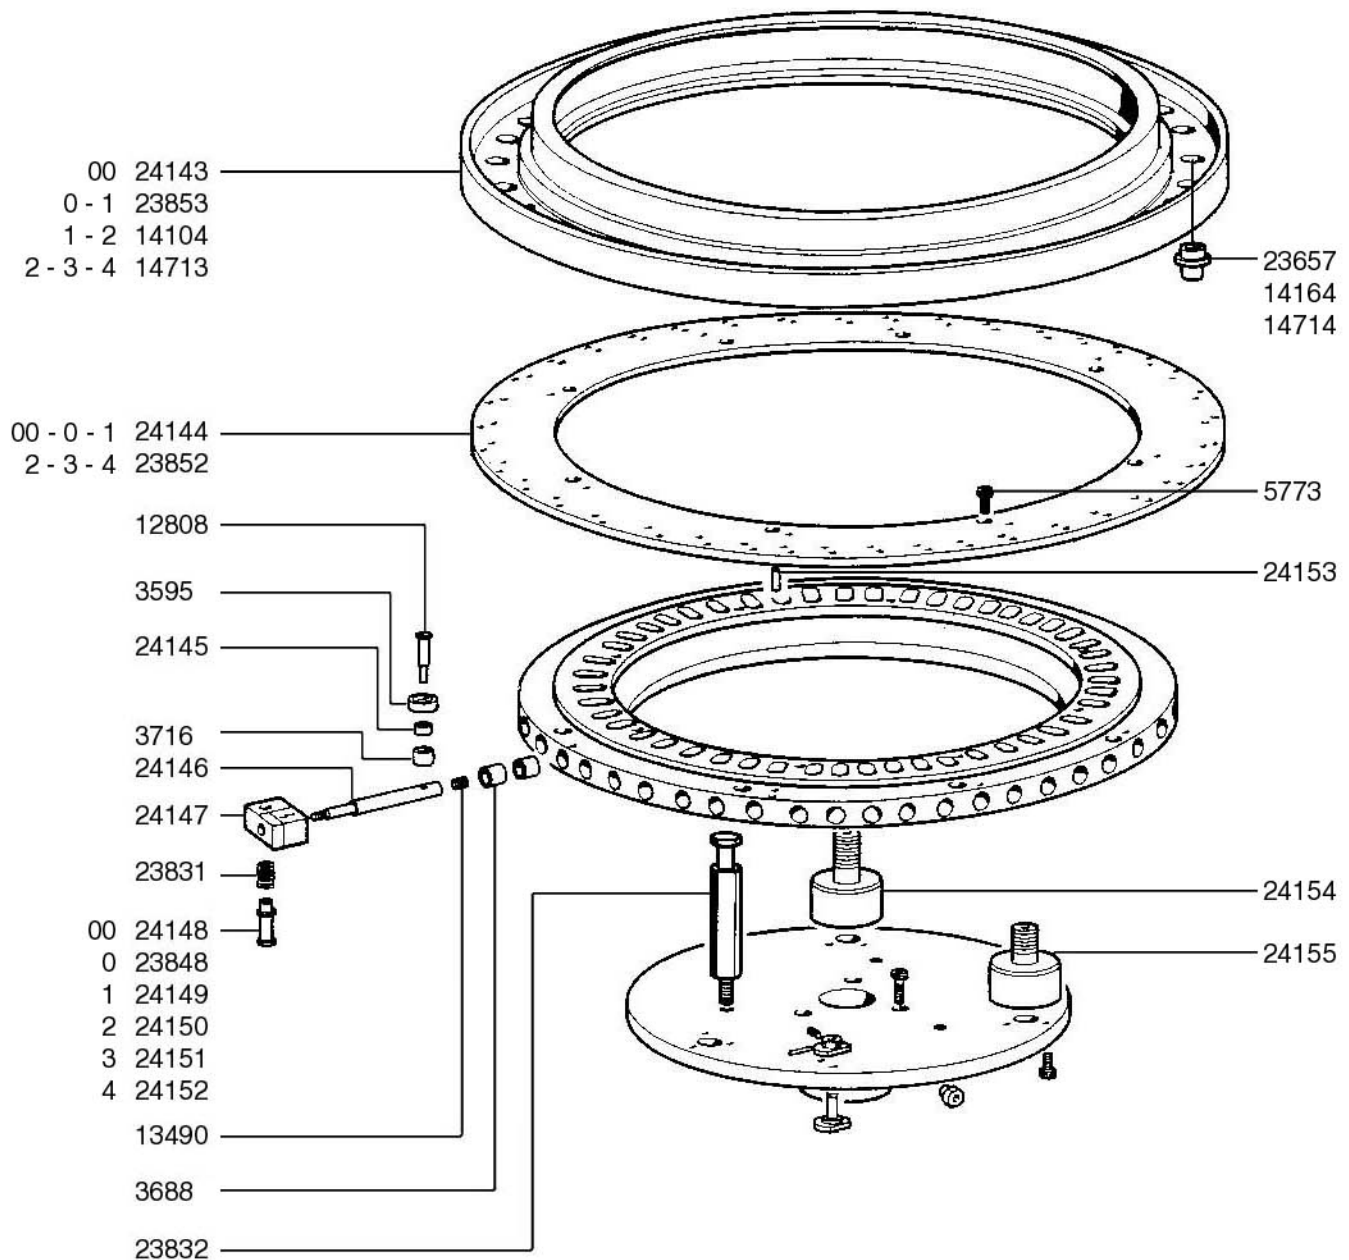

## 2. CAPSULE TRANSFER UNIT


### 2.3 Dosage
 
#### 2.3.2 Rotary hopper protection

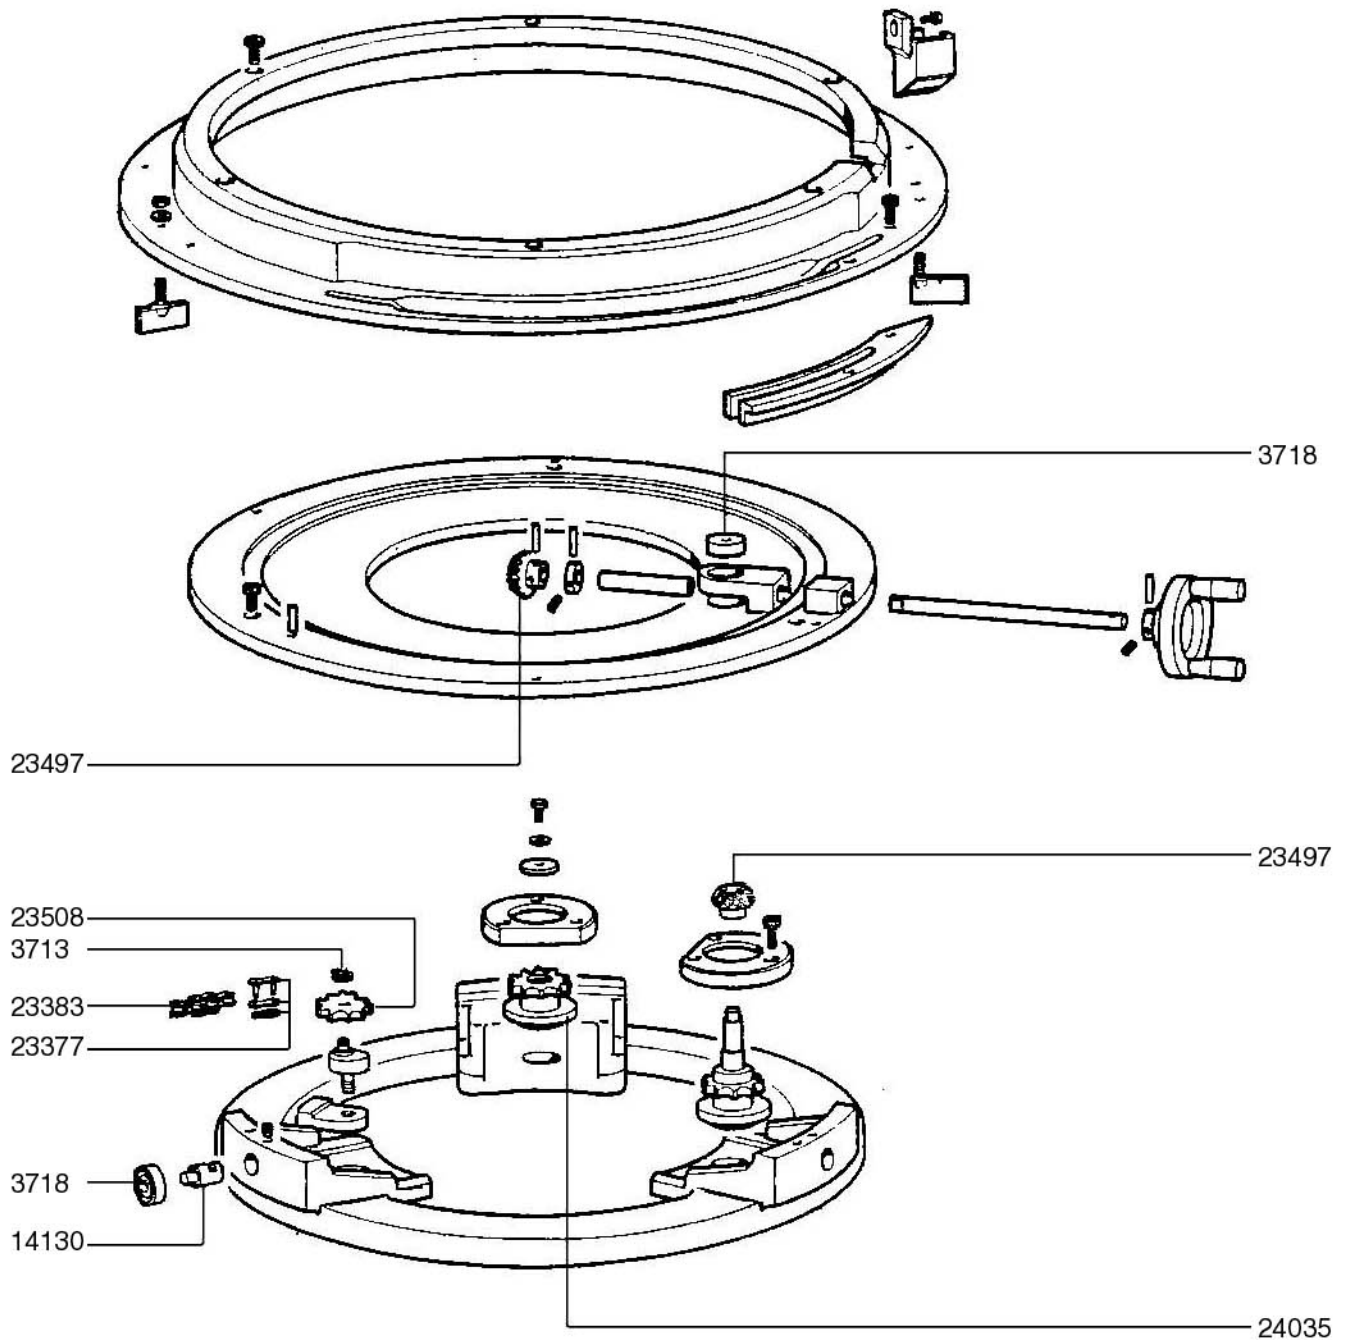


### 3. PRODUCT FEEDING UNIT
 
#### 3.1 Hopper

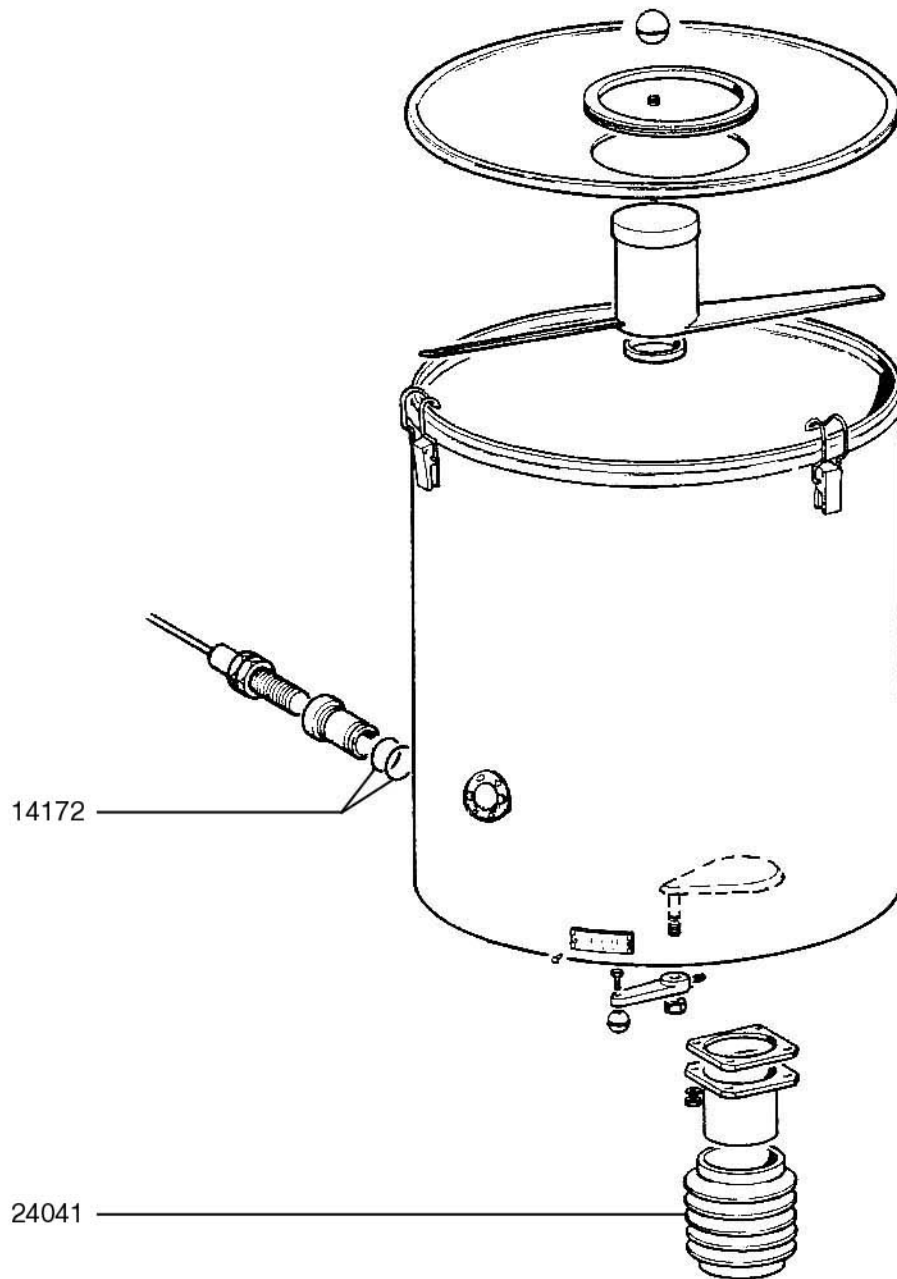

### 3. PRODUCT FEEDING UNIT
 
#### 3.2 Hopper support

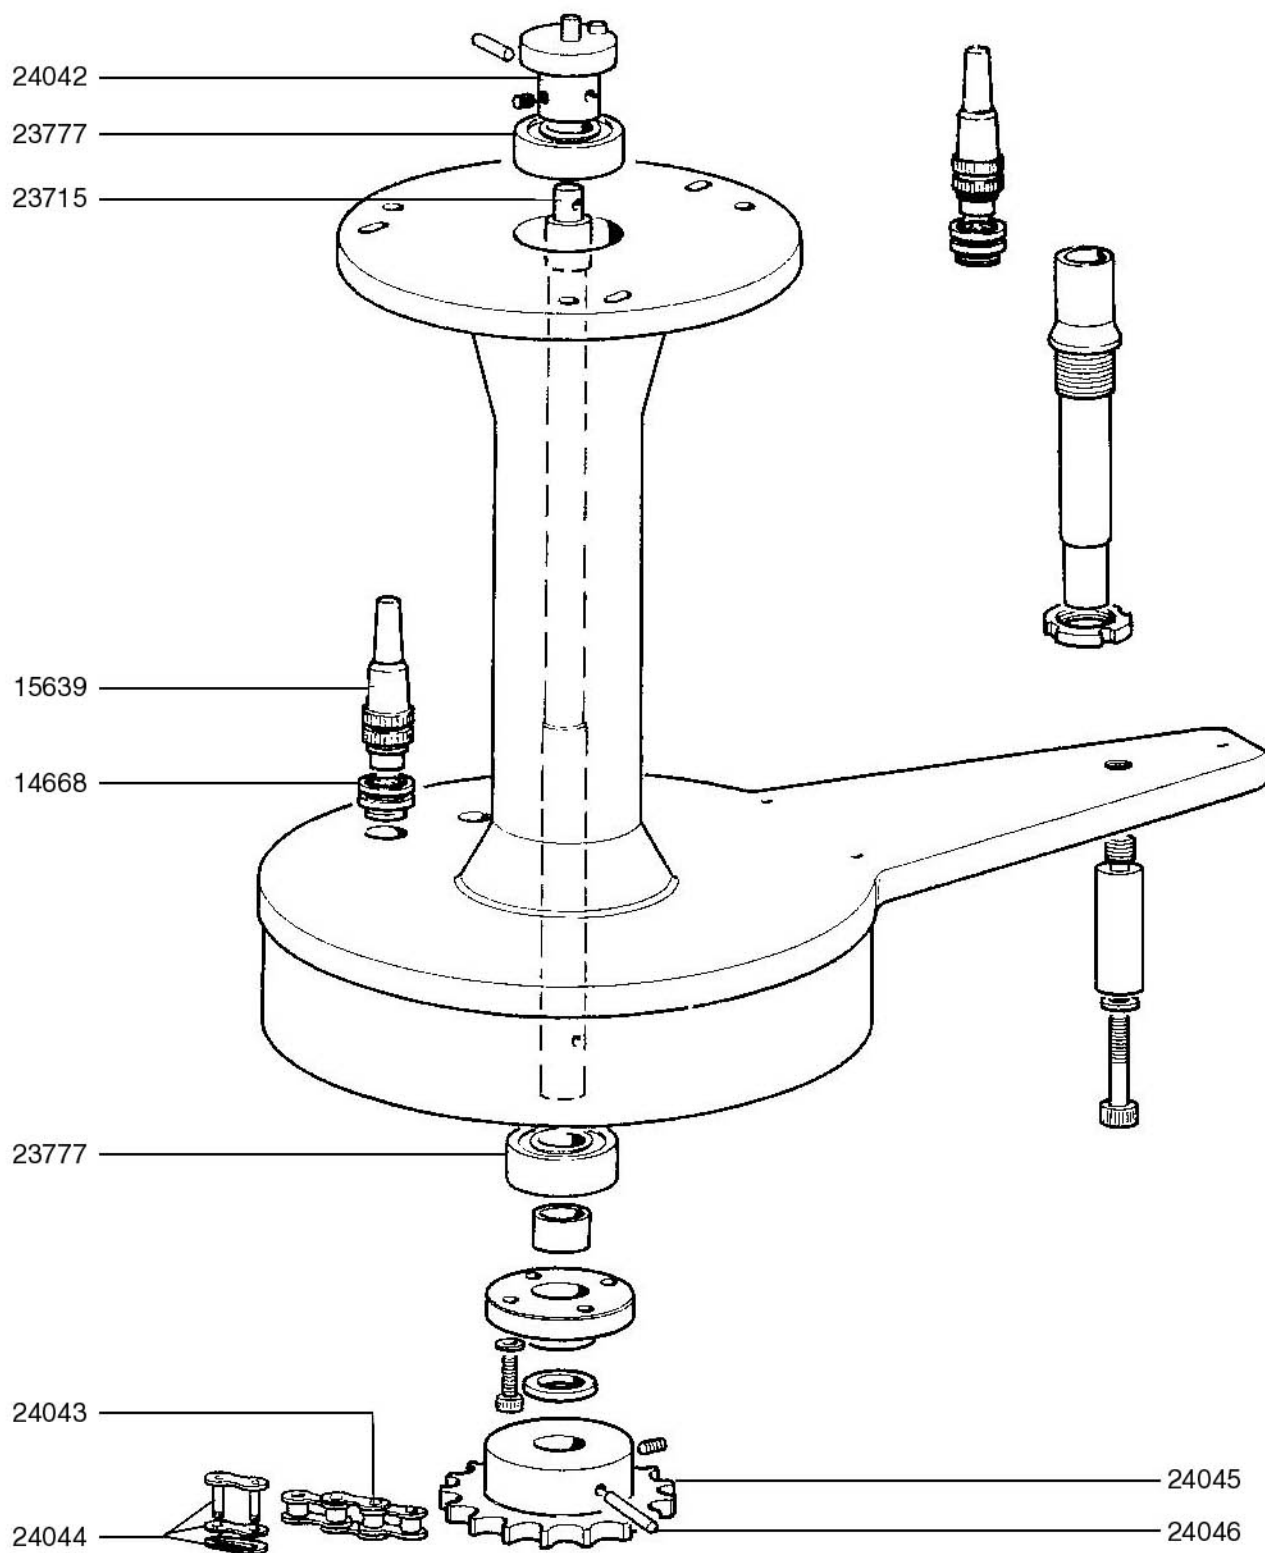




### 3. PRODUCT FEEDING UNIT

#### 3.3 Chute and vibrator
 
#### 3.4 Gear box

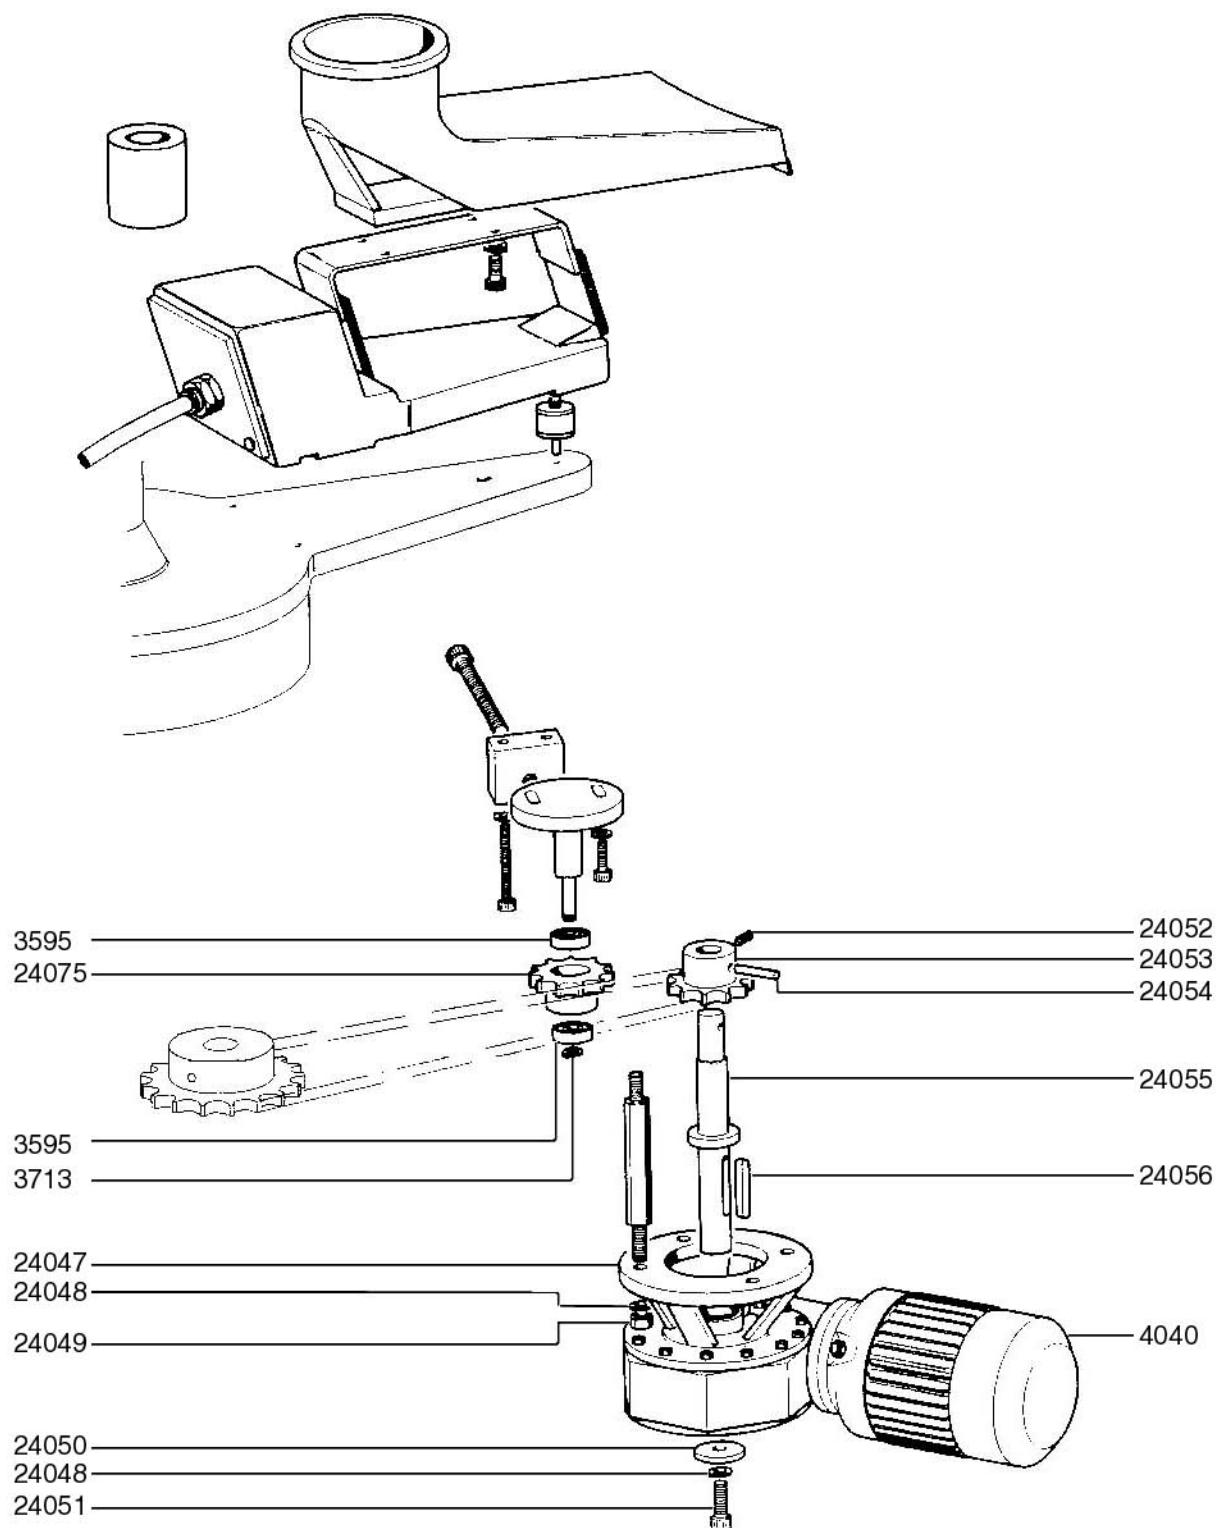





### 3. PRODUCT FEEDING UNIT

#### 3.5 Ejection



##### 3.5.1 Ejection cam
  
##### 3.5.2 Ejection piston

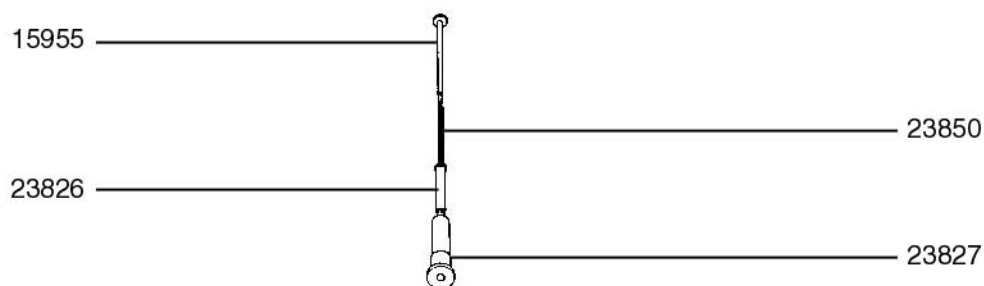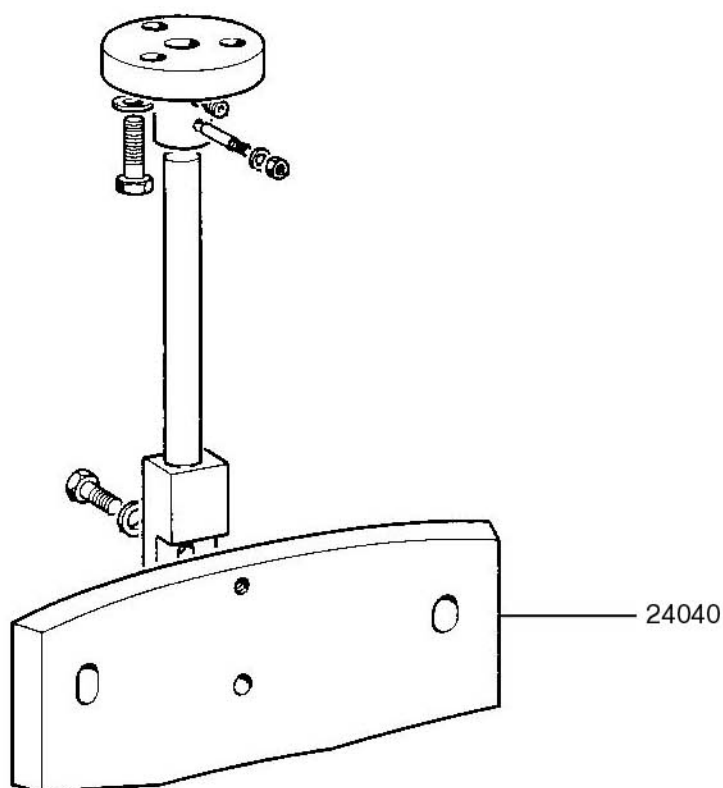

## 4. UPPER MAIN UNIT
  
### 4.1 Upper support

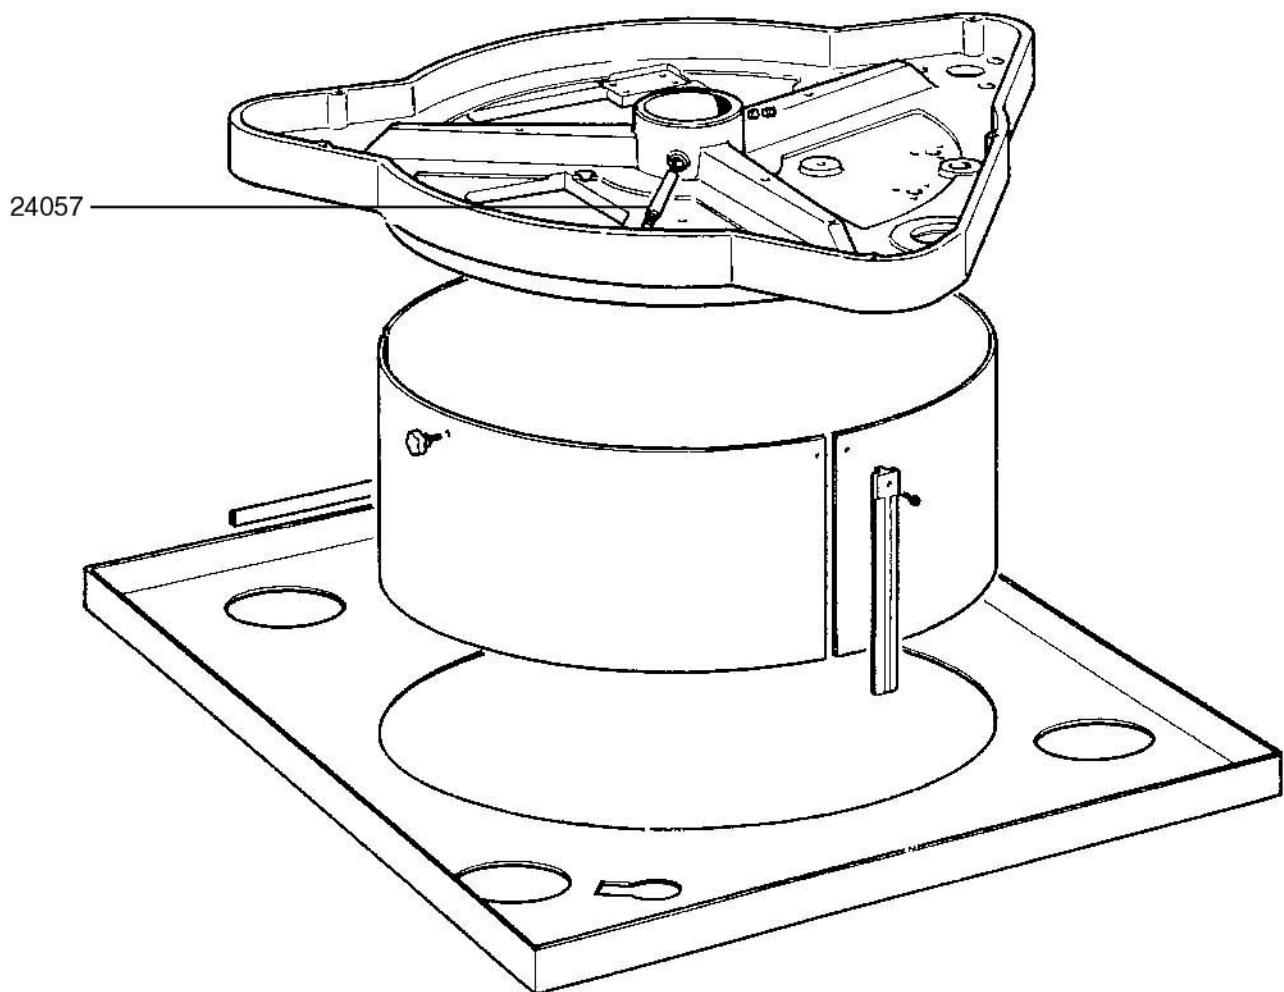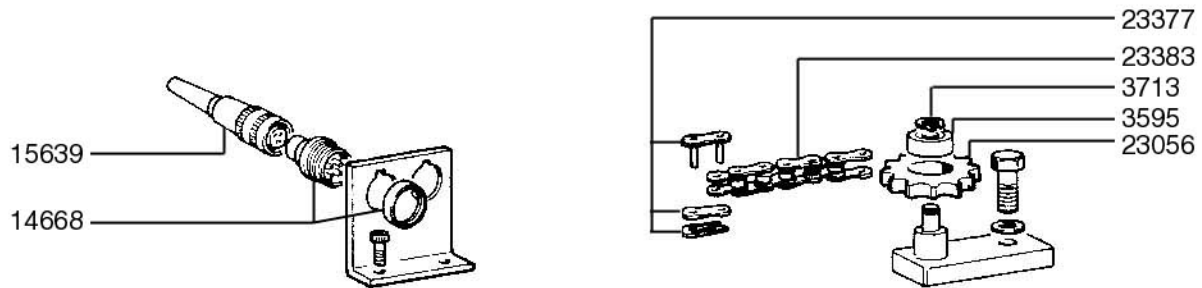


## 4. UPPER MAIN UNIT

### 4.2 Upper support and closing contrast

#### 4.2.1 Plugs and gaskets
 
#### 4.2.2 Chain and chain tensioner

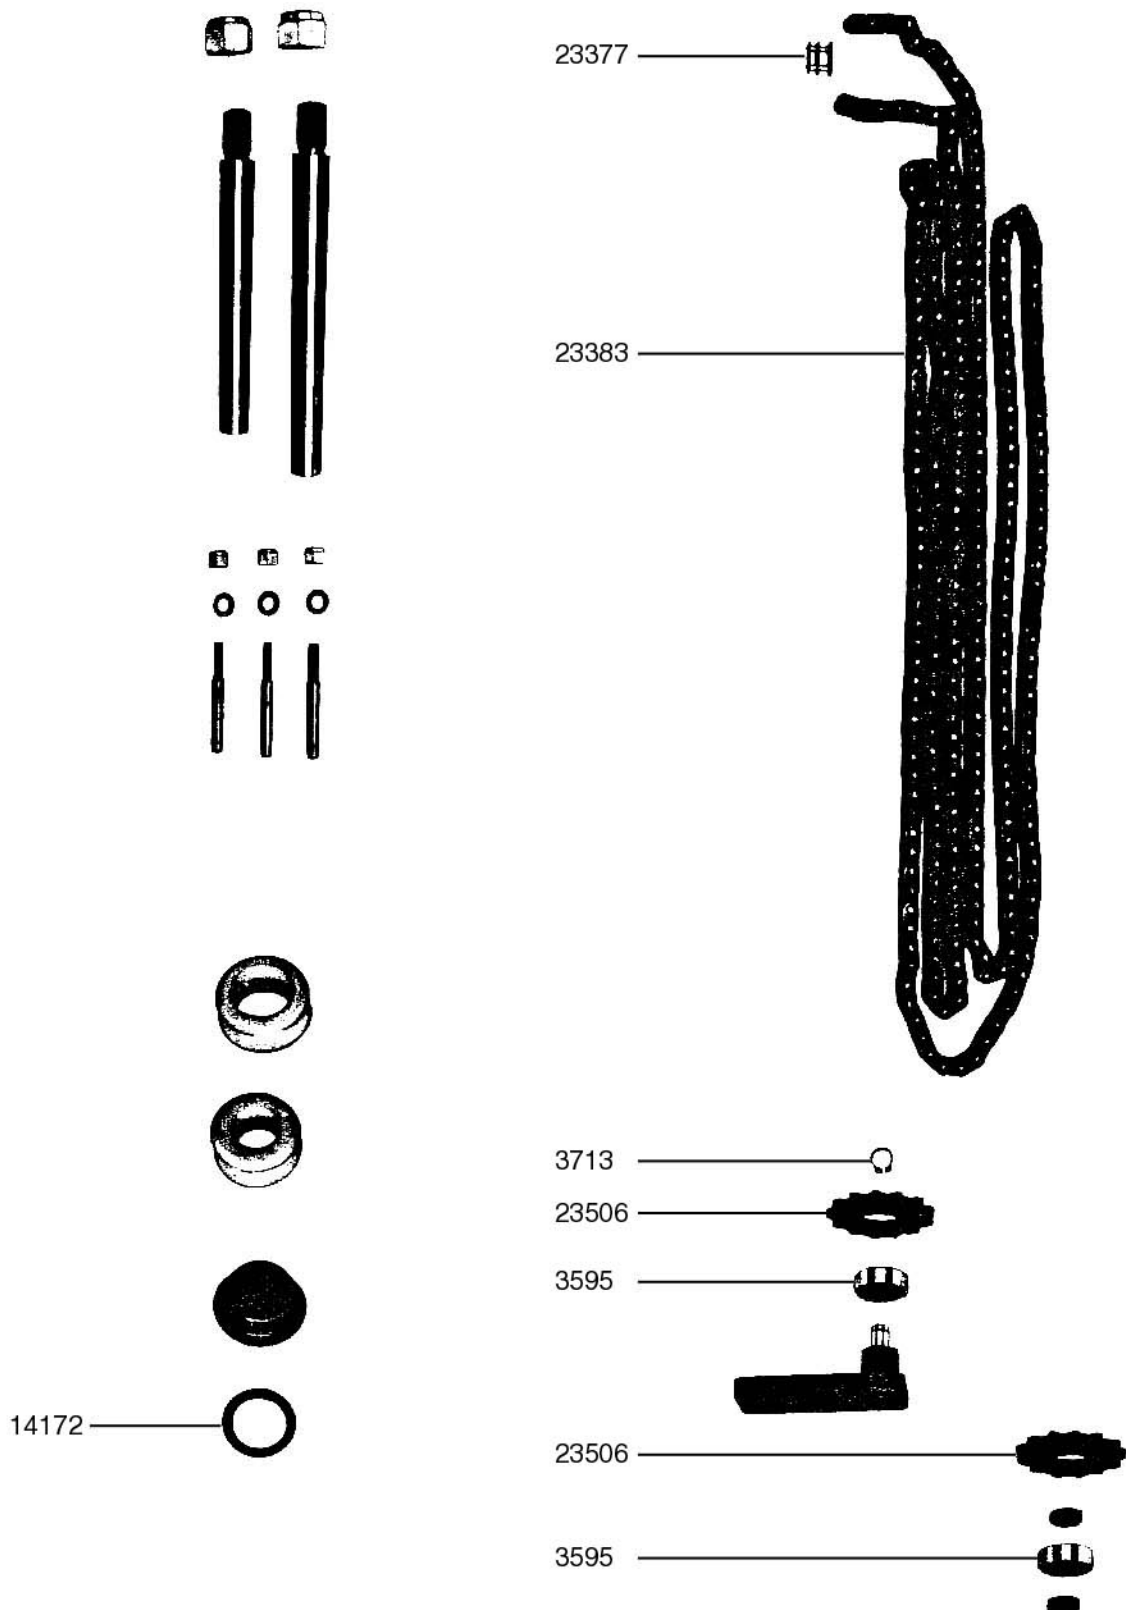




## 4. UPPER MAIN UNIT

### 4.2 Upper support and closing contrast

#### 4.2.3 First column

#### 4.2.4 Second column

   
#### 4.2.5 Third column

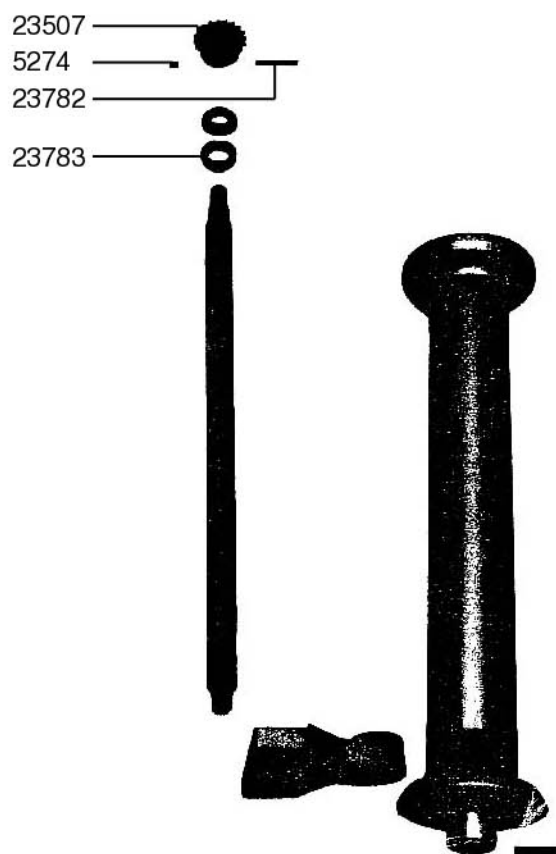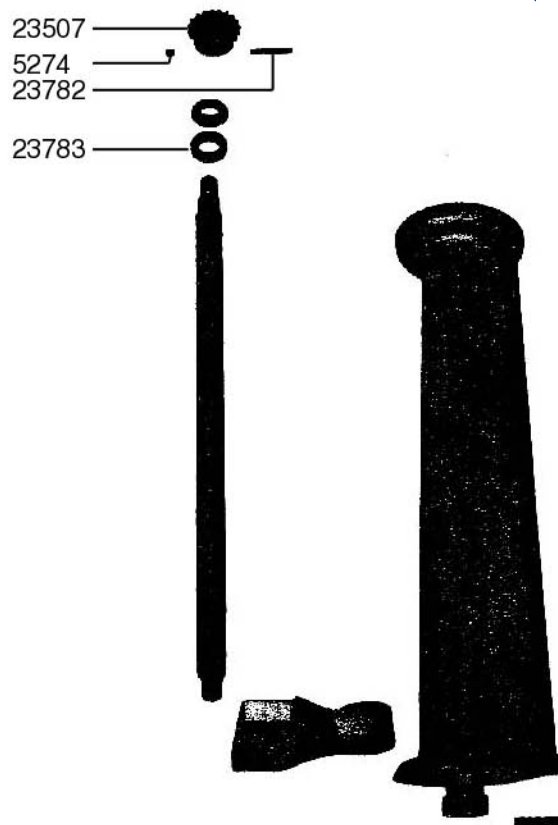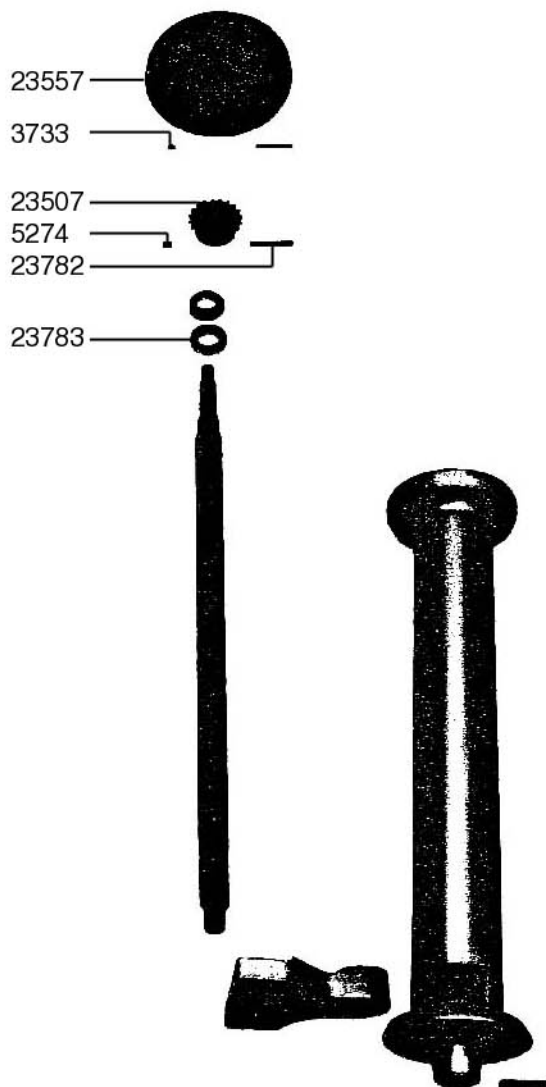


## 4. UPPER MAIN UNIT

### 4.2 Upper support and closing contrast
  
#### 4.2.6 Shaft and pusher

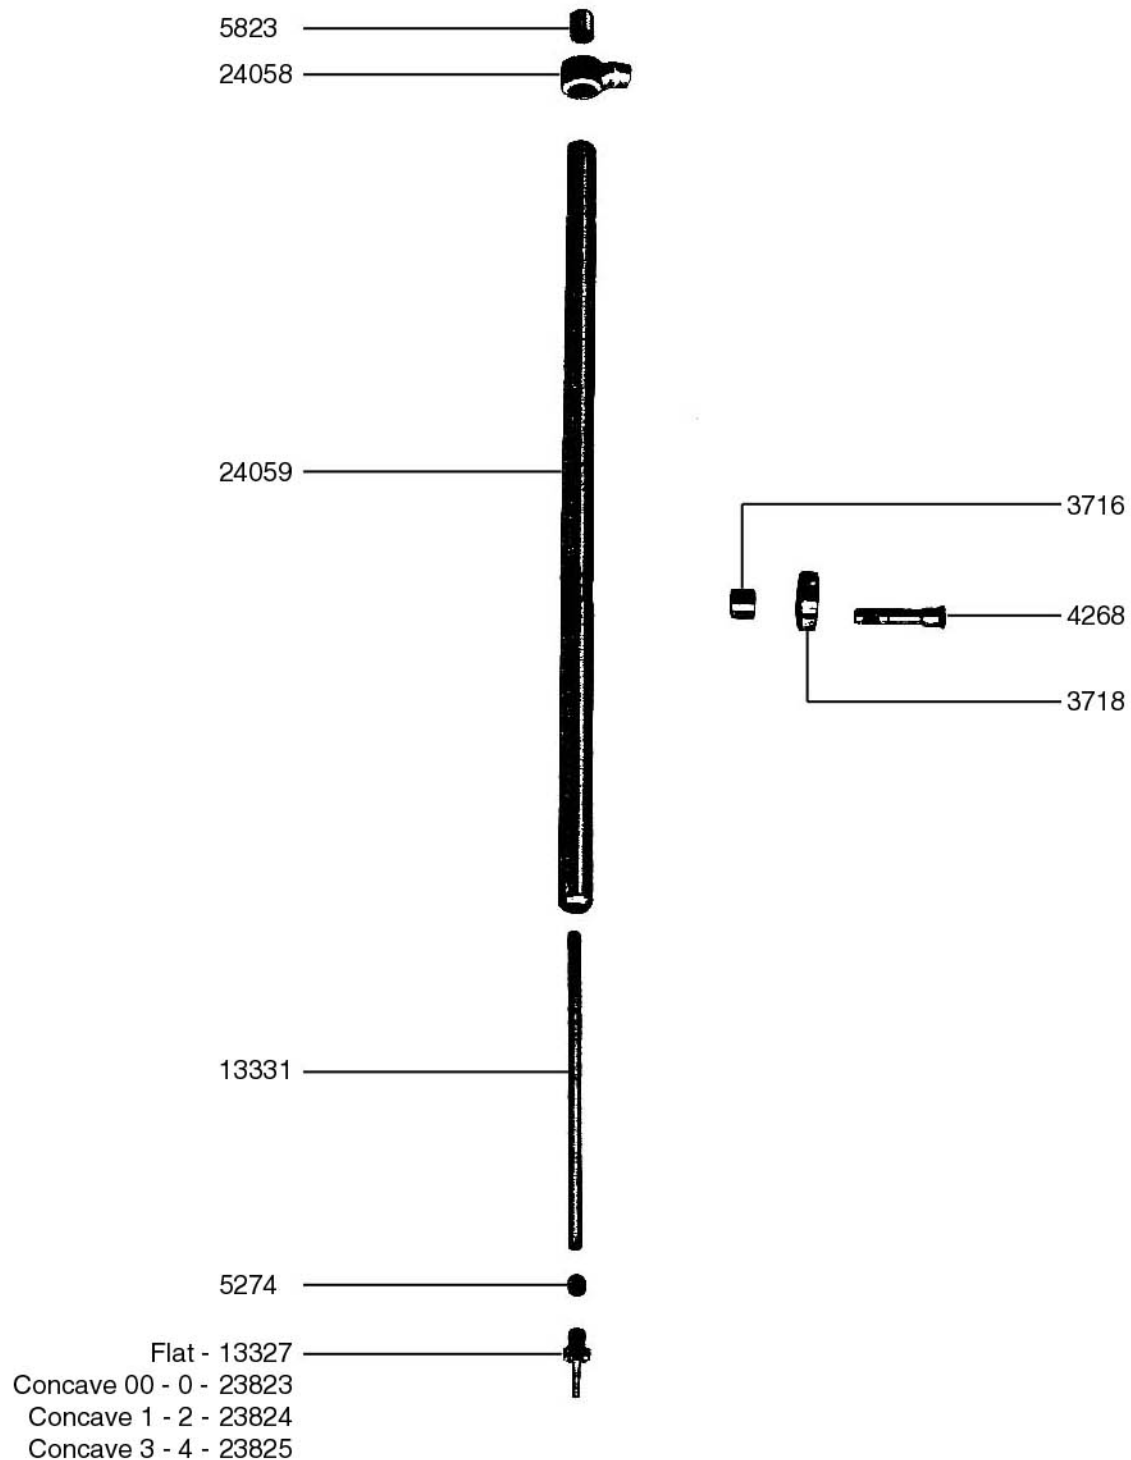


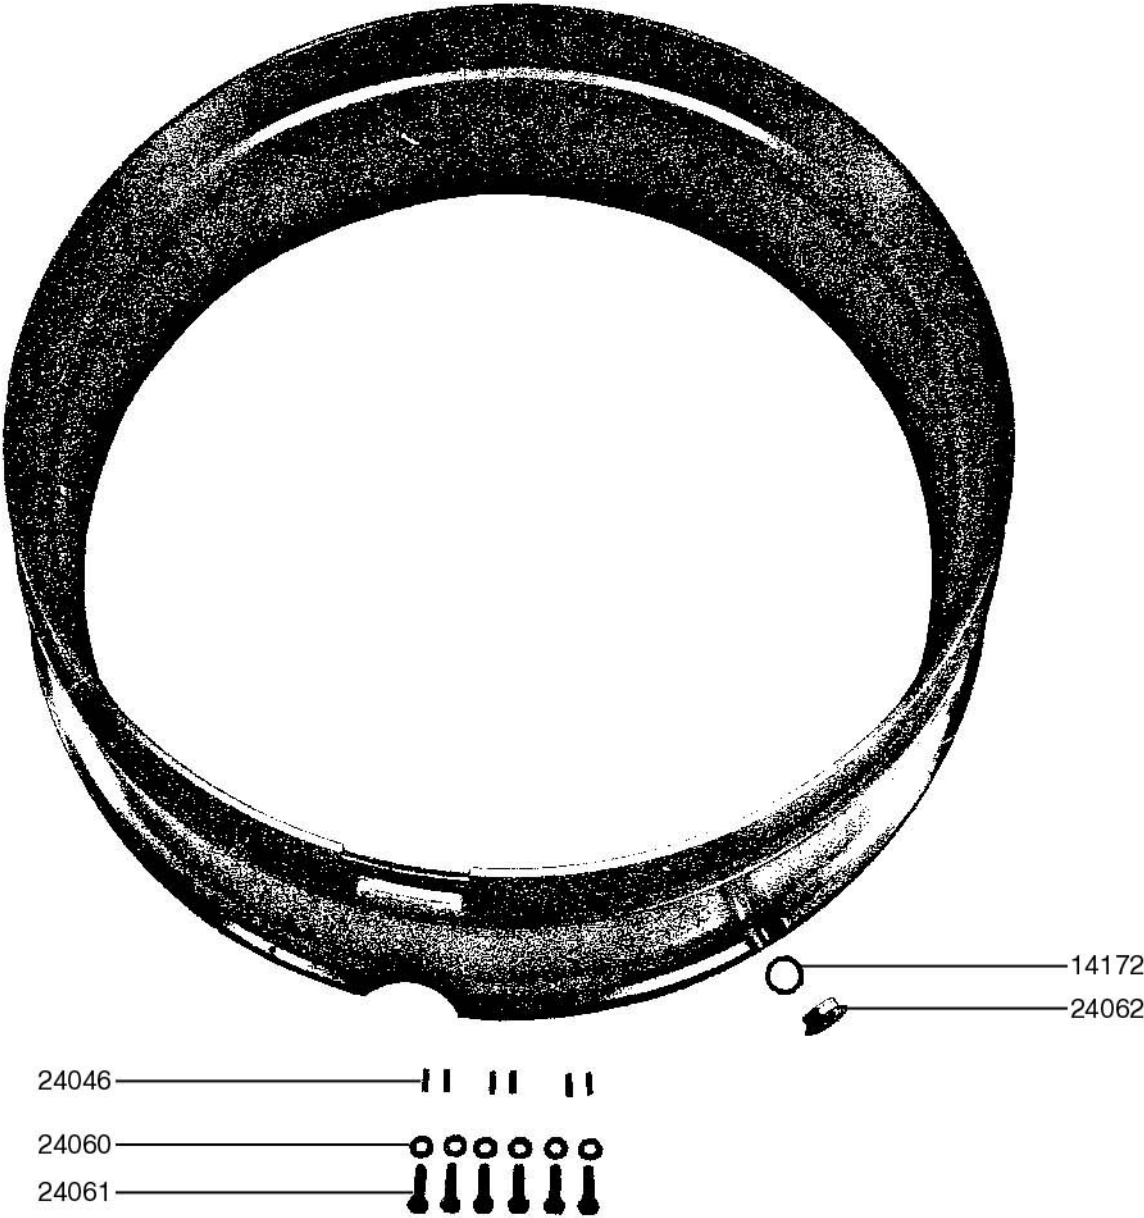

## 4. UPPER MAIN UNIT


### 4.4 Dosage
 
#### 4.4.1 Rotary parts

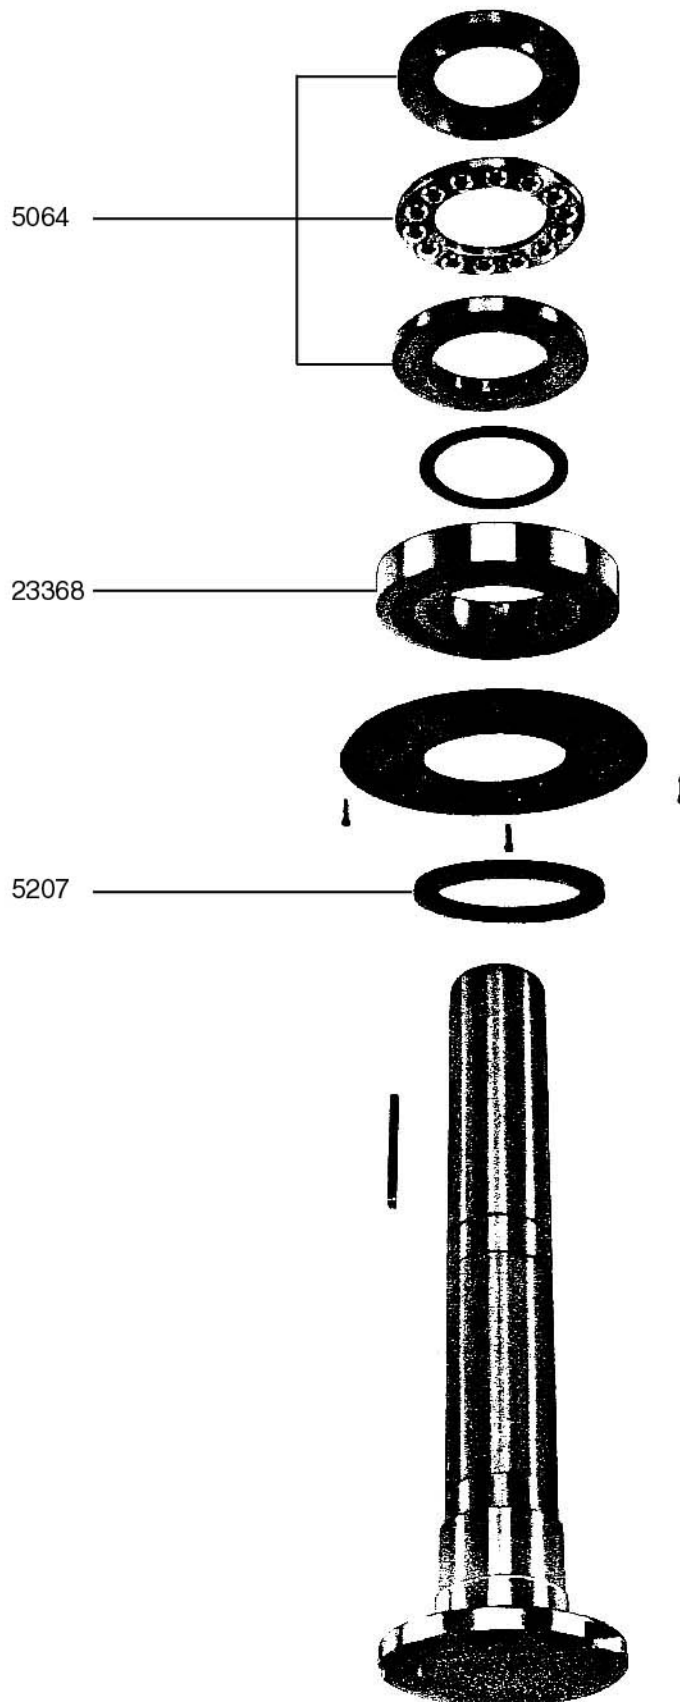

#### 4.4 Dosage
 
#### 4.4.2 Chamber adjusting parts

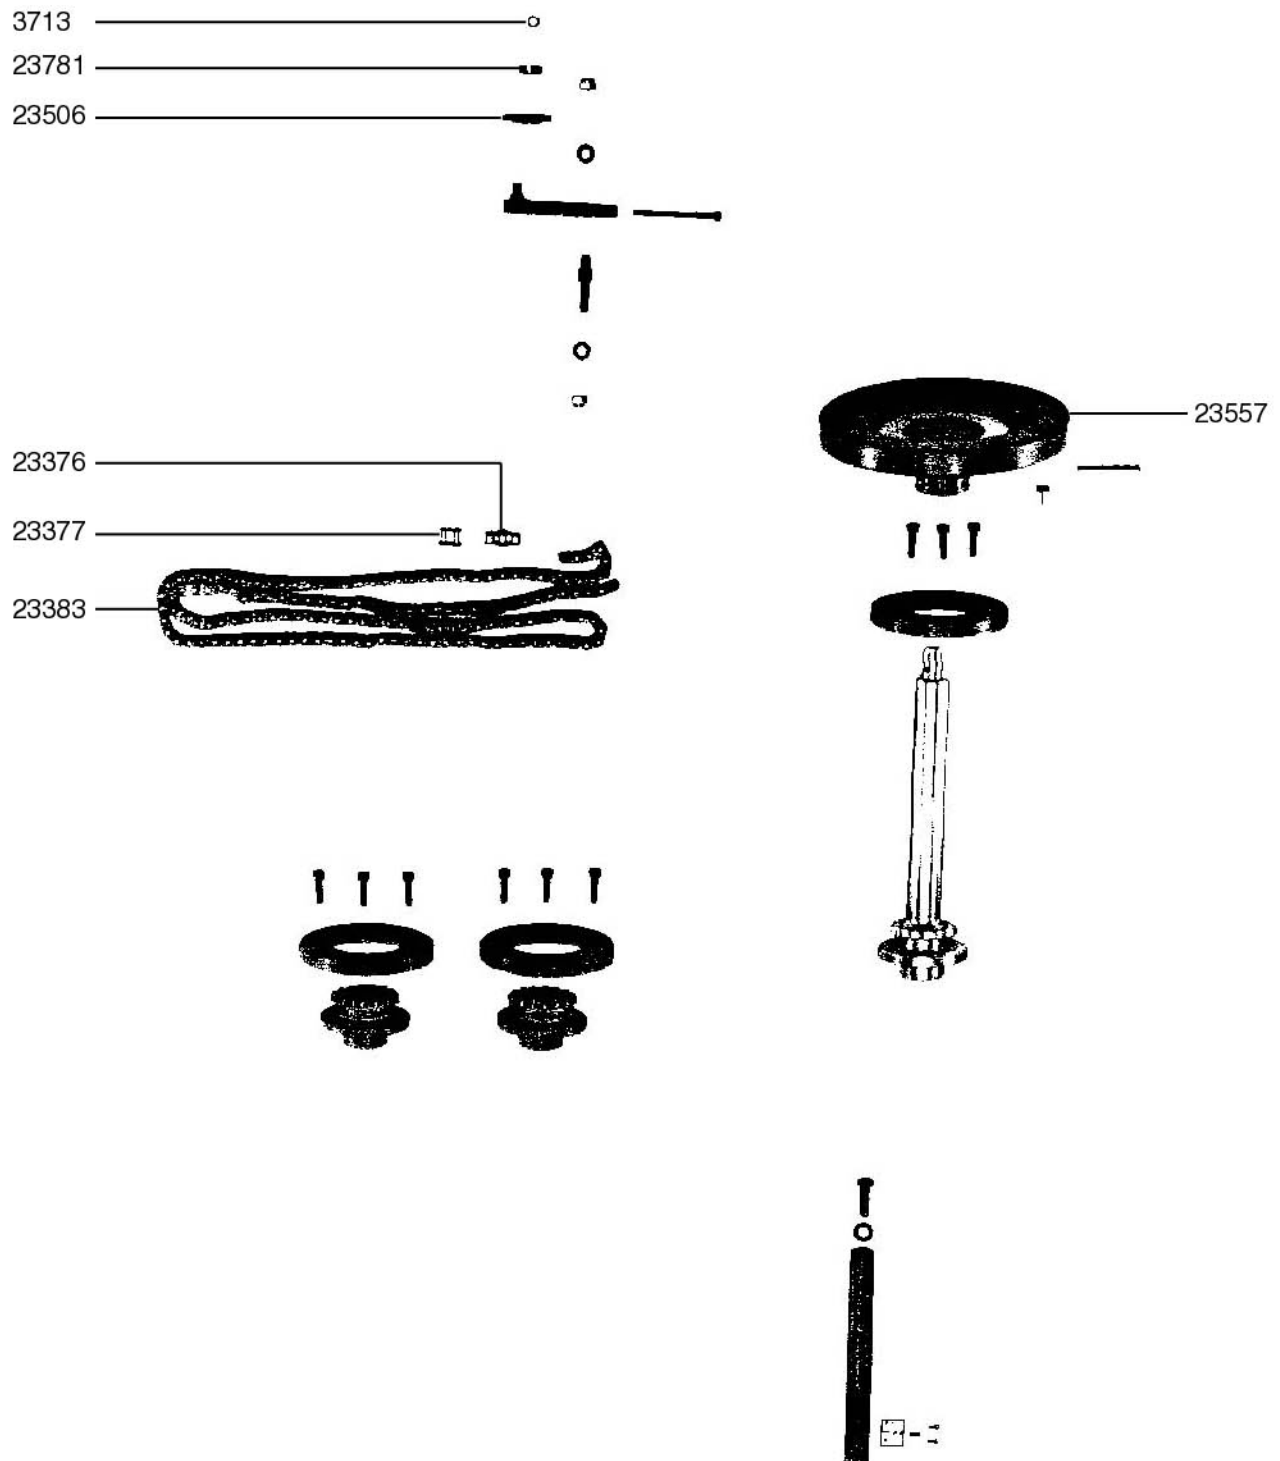




## 4. UPPER MAIN UNIT

### 4.4 Dosage

 
#### 4.4.3 Dosing cams

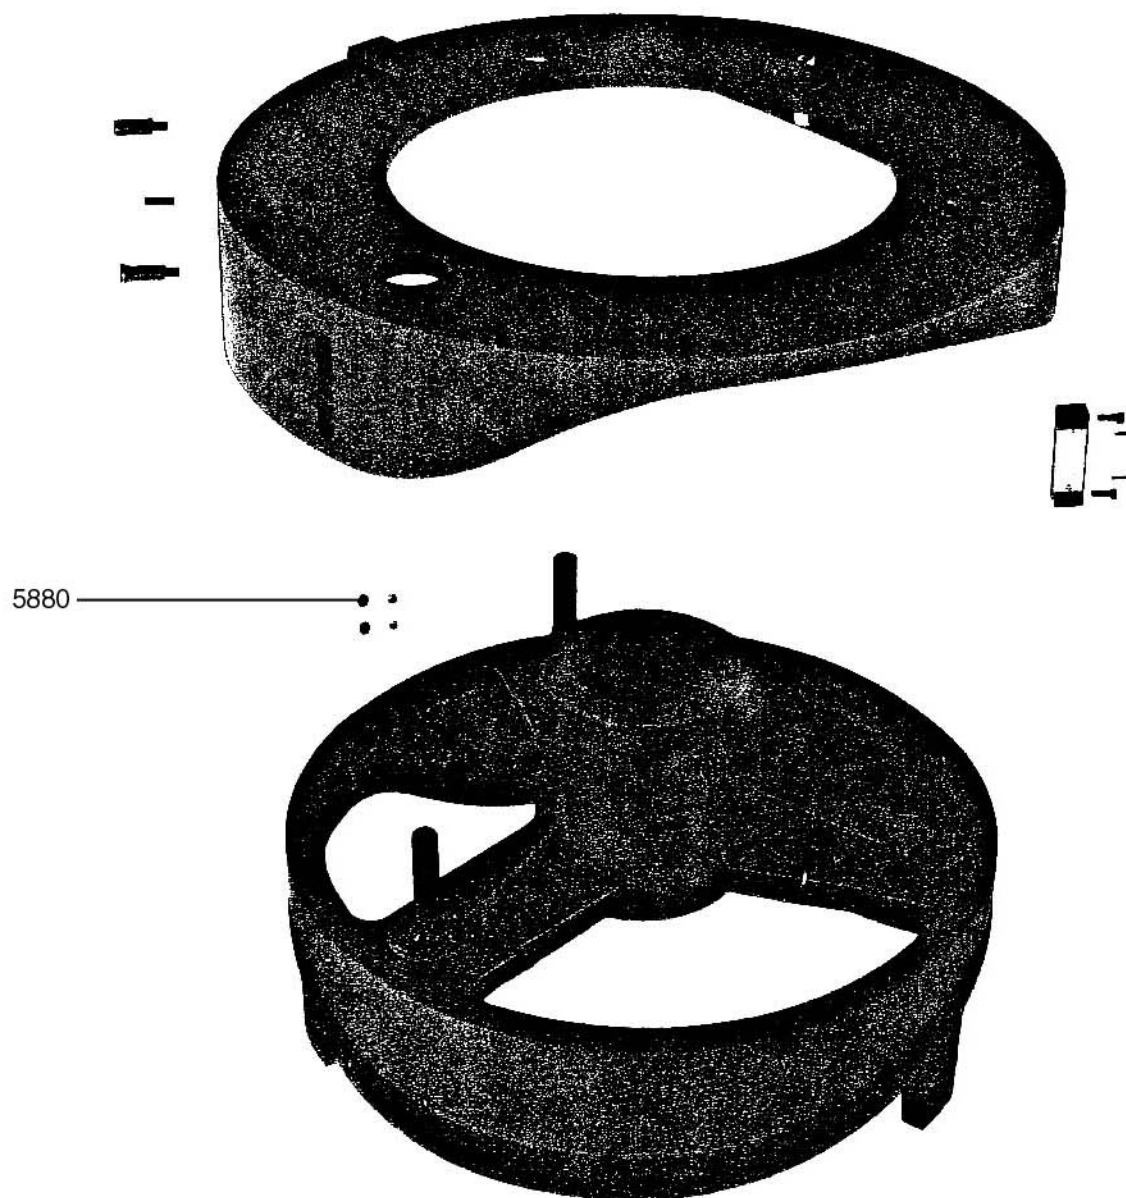

## 4. UPPER MAIN UNIT

### 4.4 Dosage

 
#### 4.4.4 Adjustment parts and compression cam

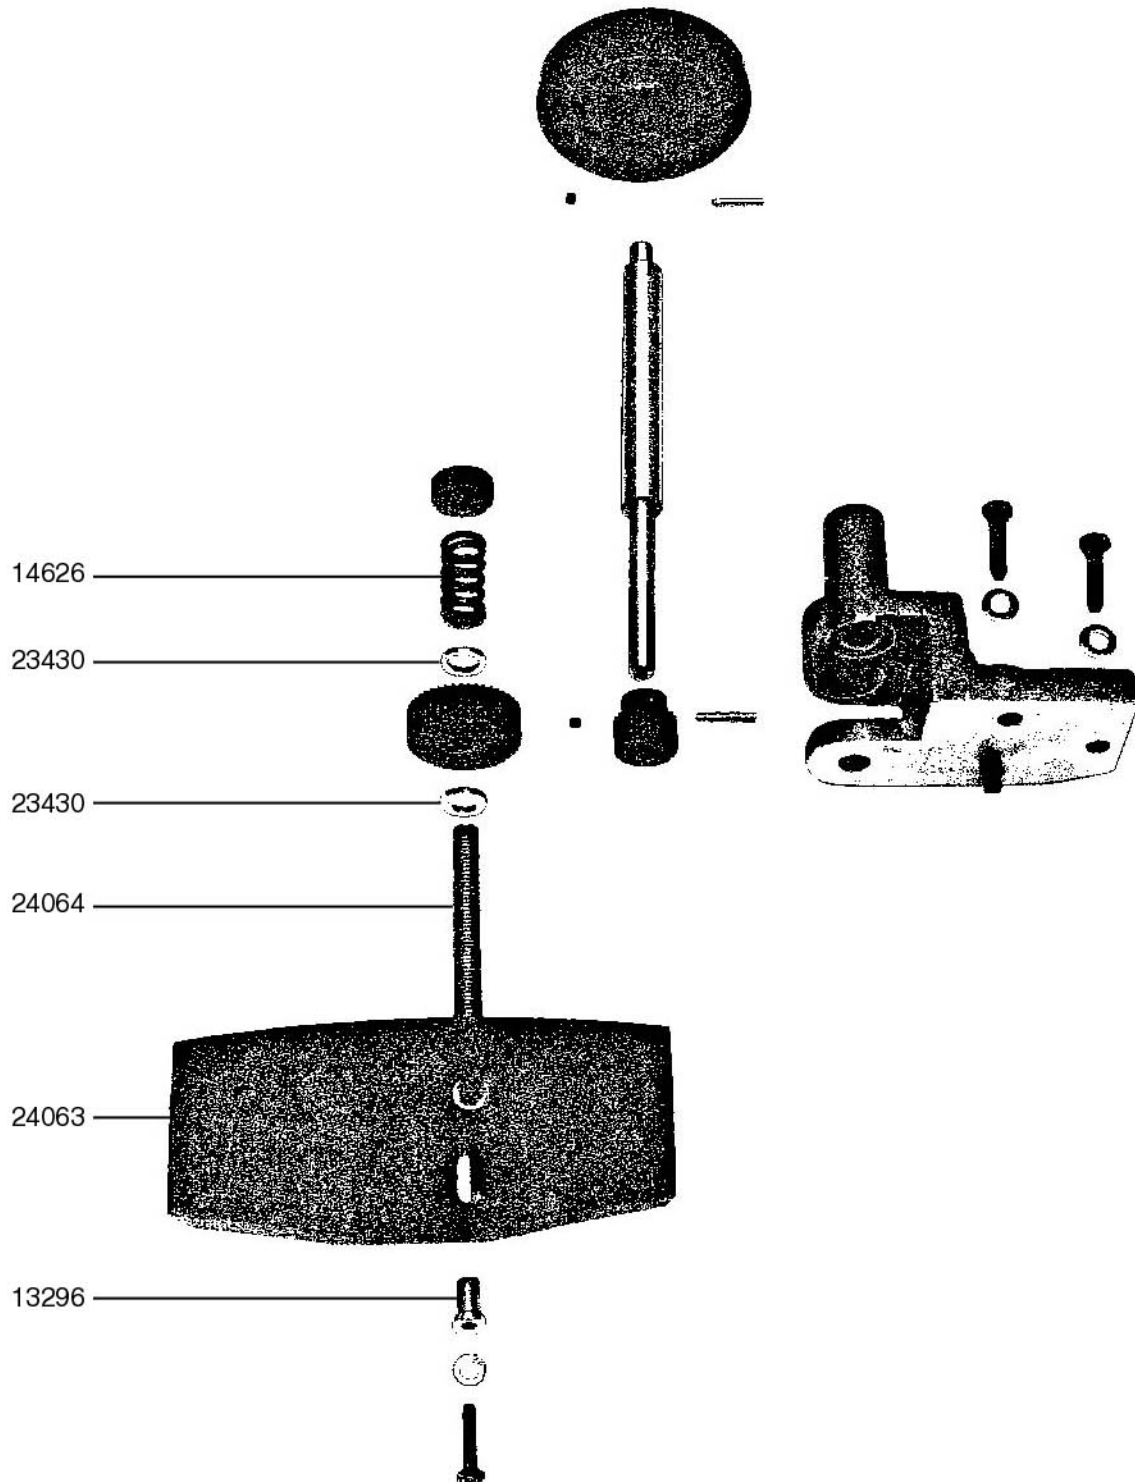

## 4. UPPER MAIN UNIT

### 4.4 Dosage

 
#### 4.4.5 Ejection cam

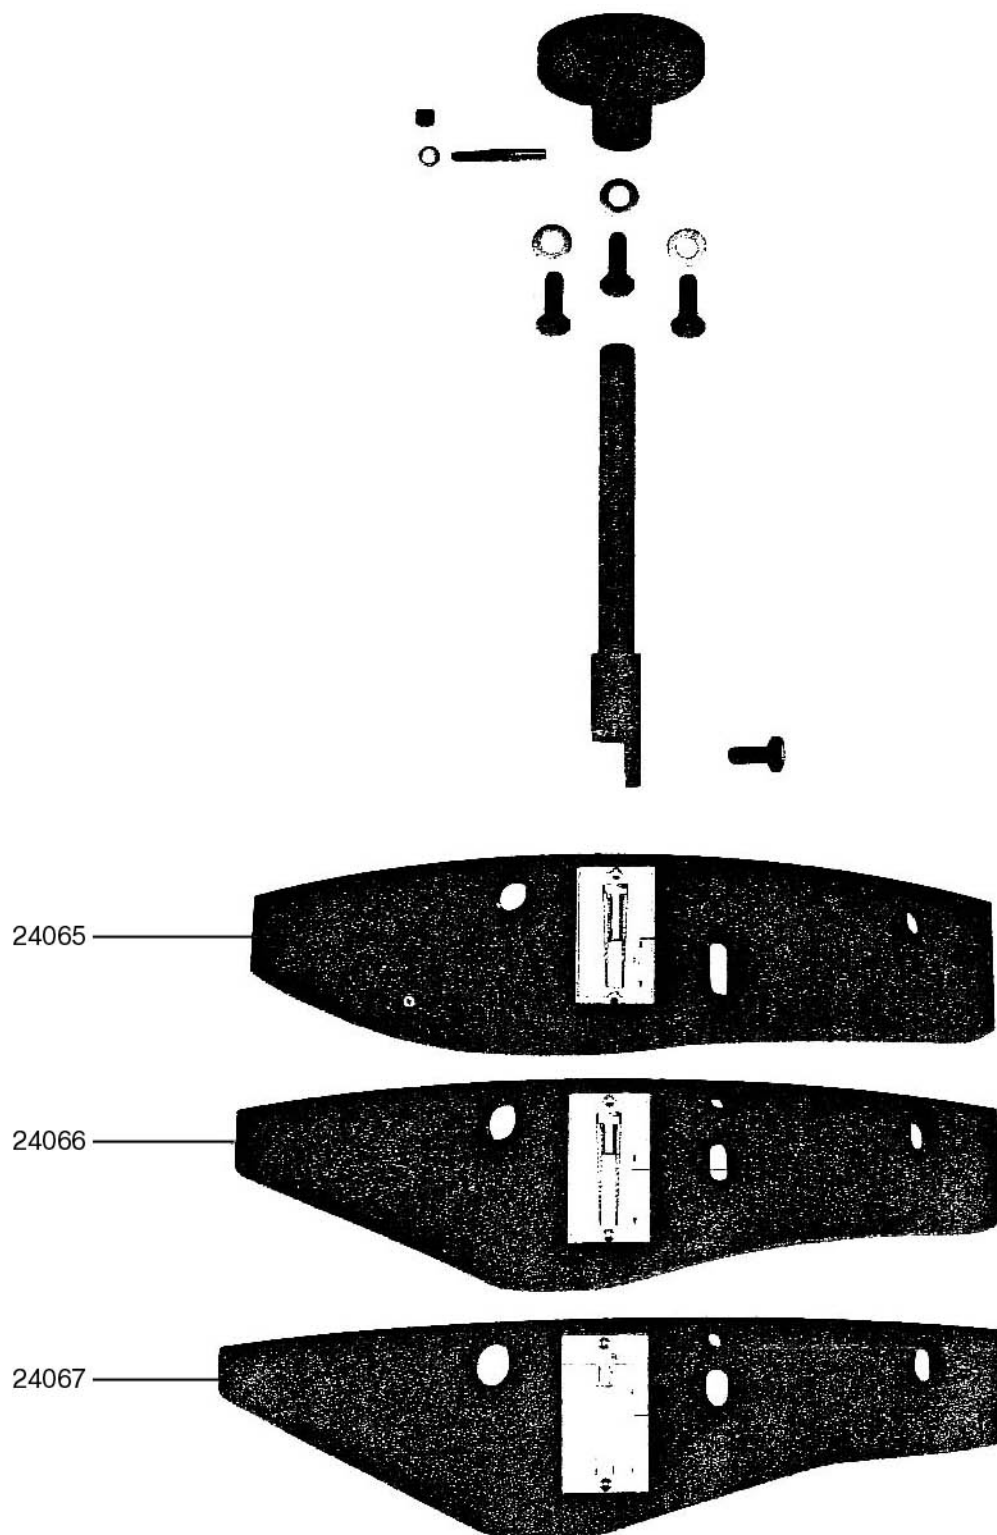

## 4. UPPER MAIN UNIT

### 4.4 Dosage

 
#### 4.4.6 Rotary hopper protection

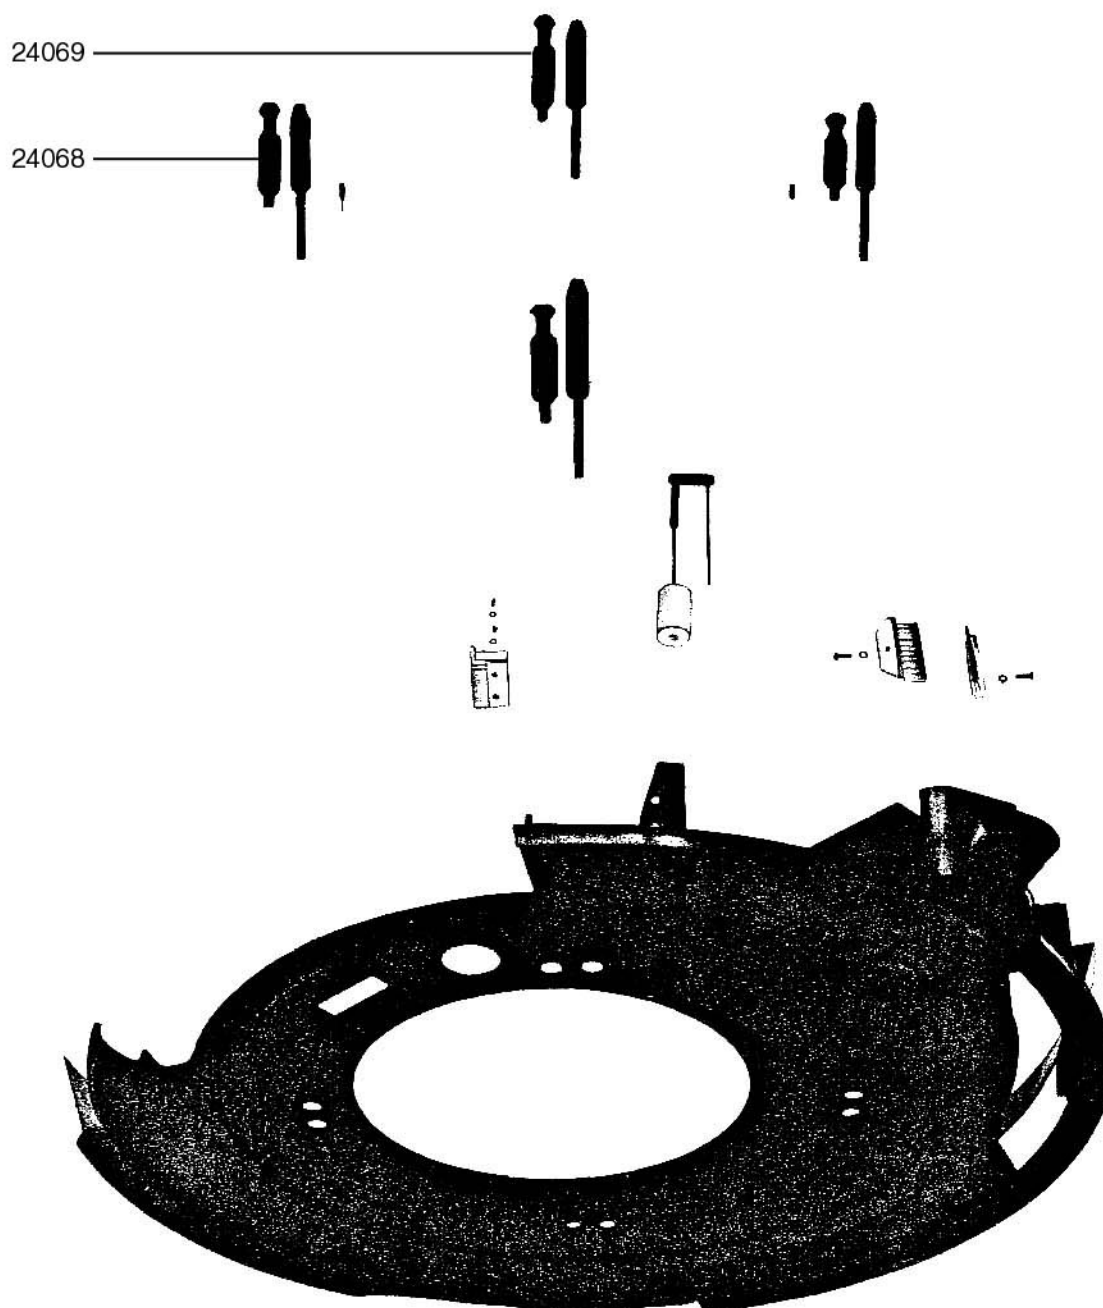

## 4. UPPER MAIN UNIT

### 4.4 Dosage
 
#### 4.4.7 Rotary hopper

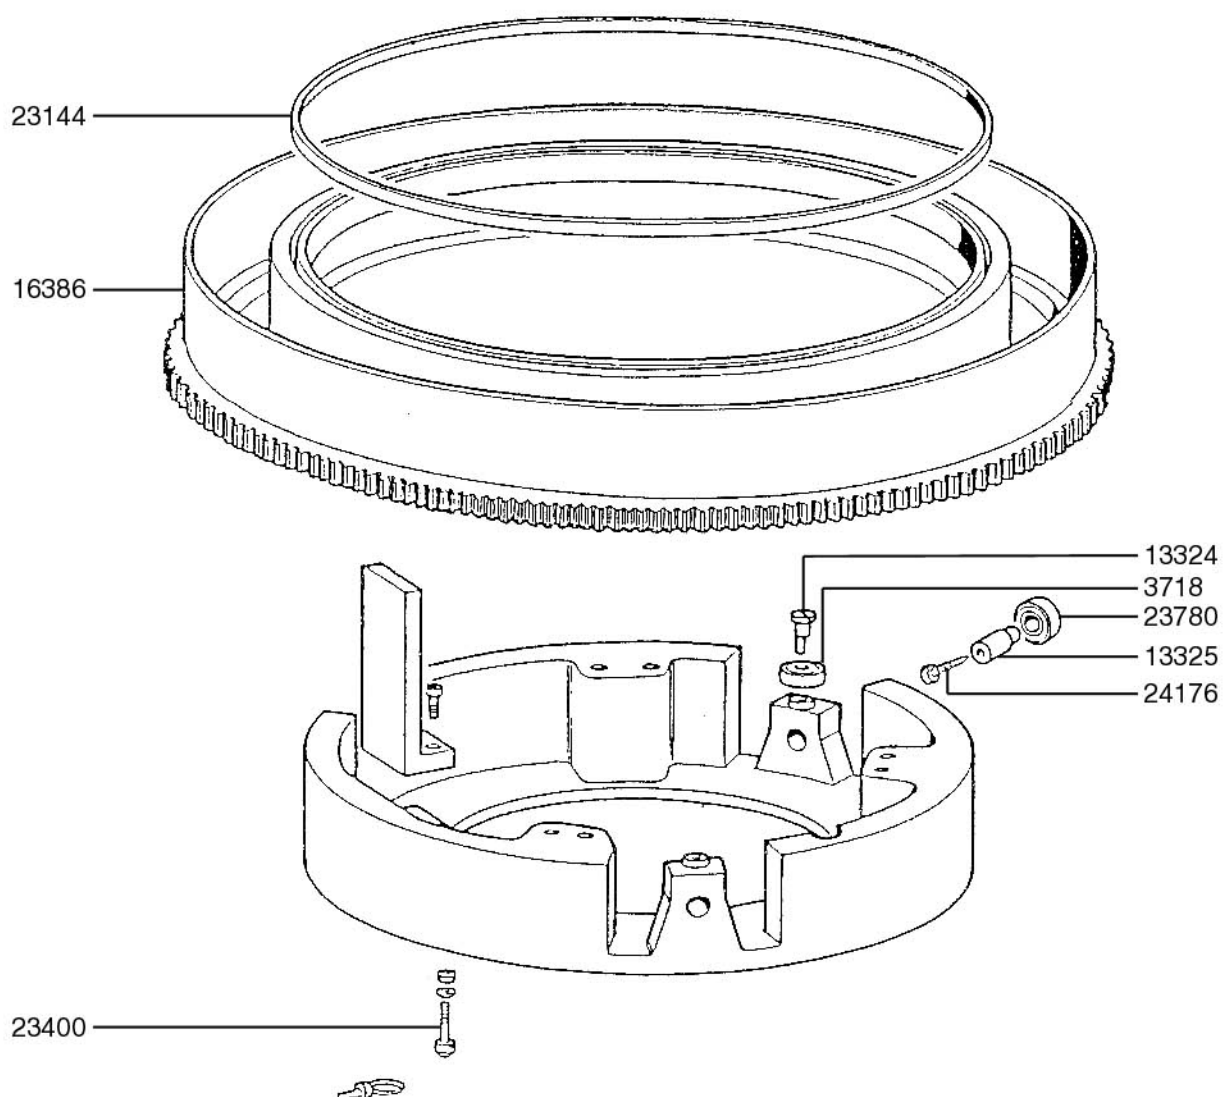





## 4. UPPER MAIN UNIT

### 4.4 Dosage

 
#### 4.4.8 Sector container

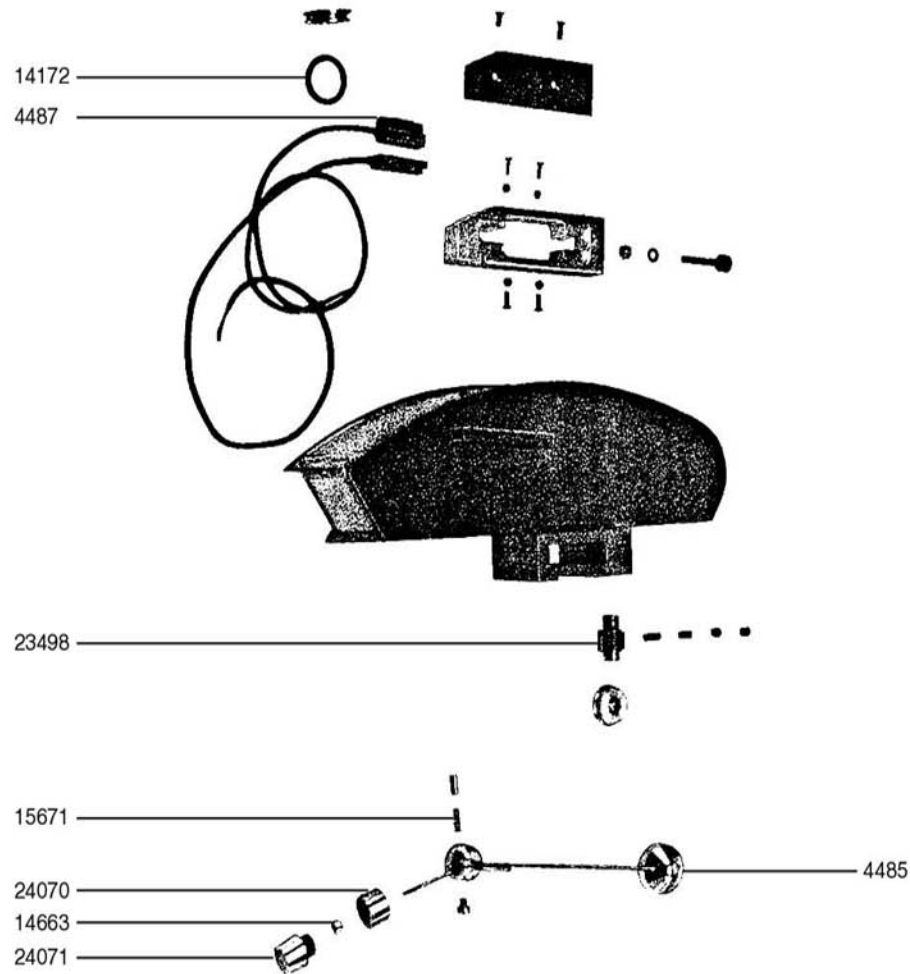

 4. UPPER MAIN UNIT  
4.5 Dosage adjustment


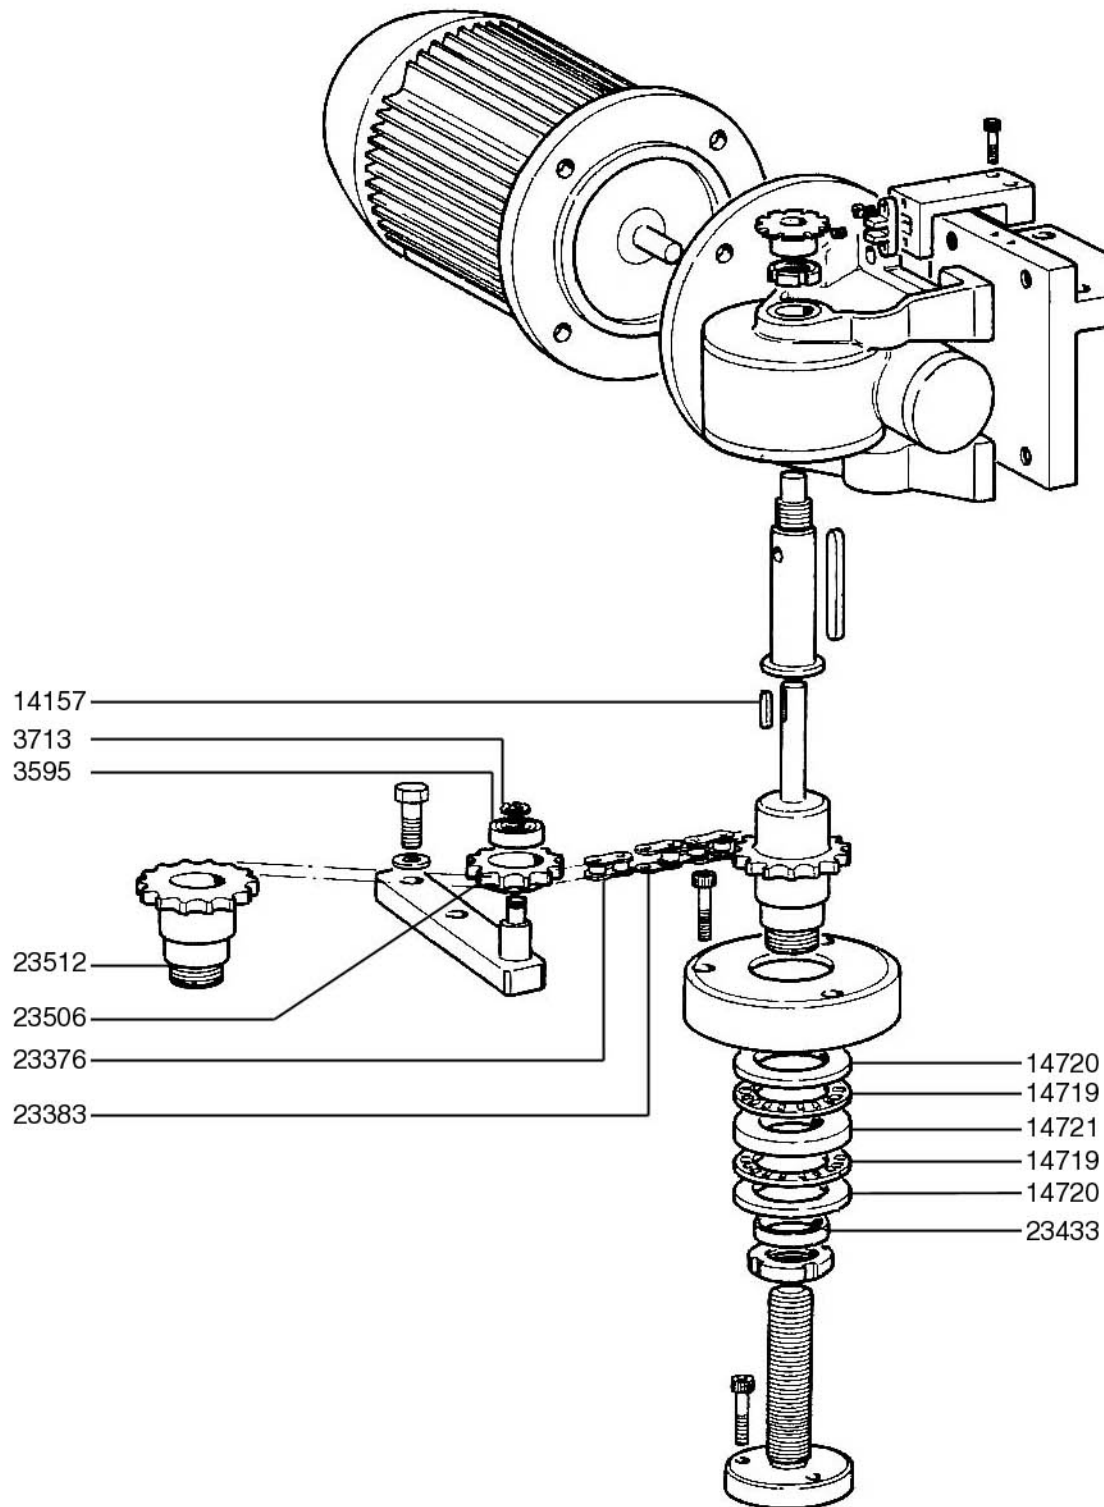


 4. UPPER MAIN UNIT  
4.6 Rotary parts

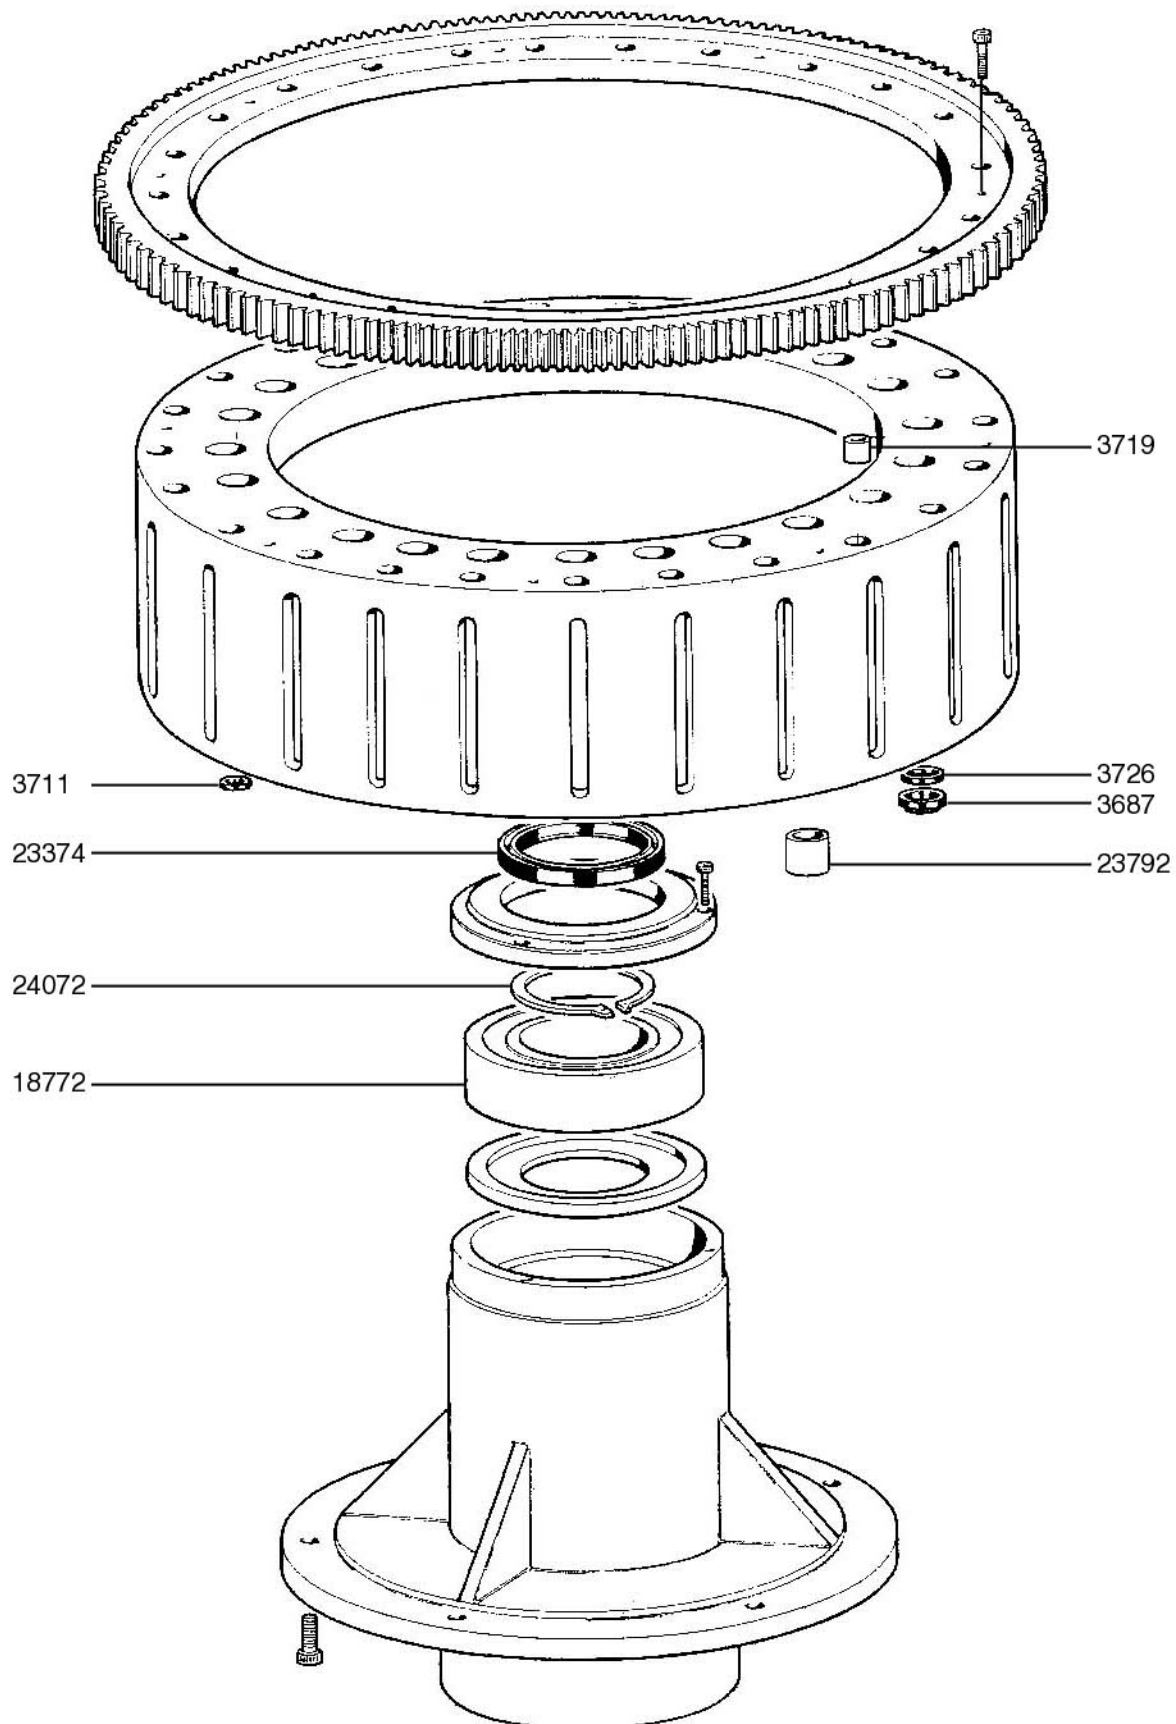




  4. UPPER MAIN UNIT  
4.7 Main column

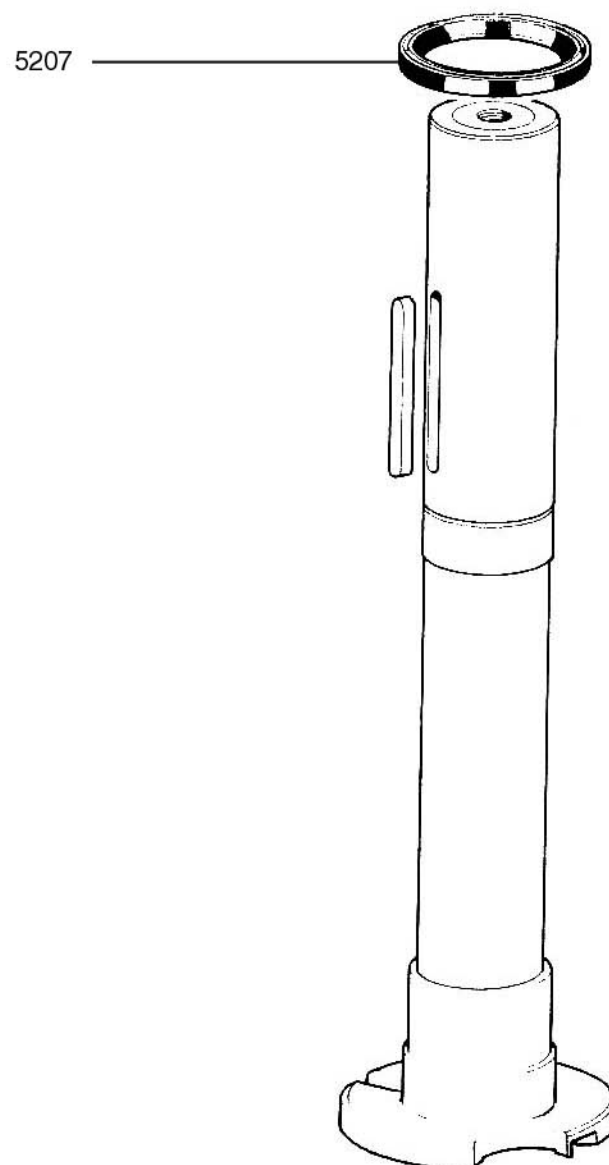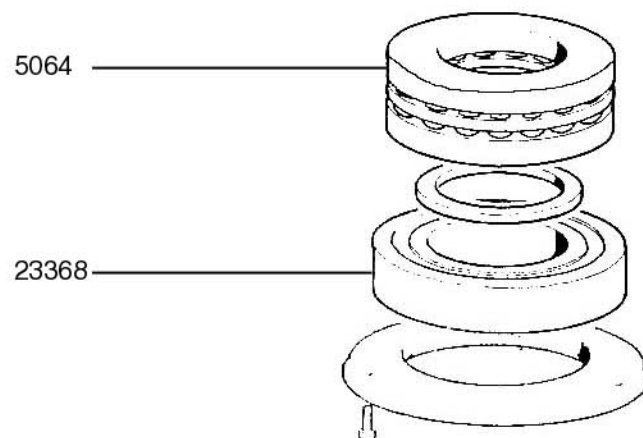


## 4. UPPER MAIN UNIT
 
### 4.8 Tube

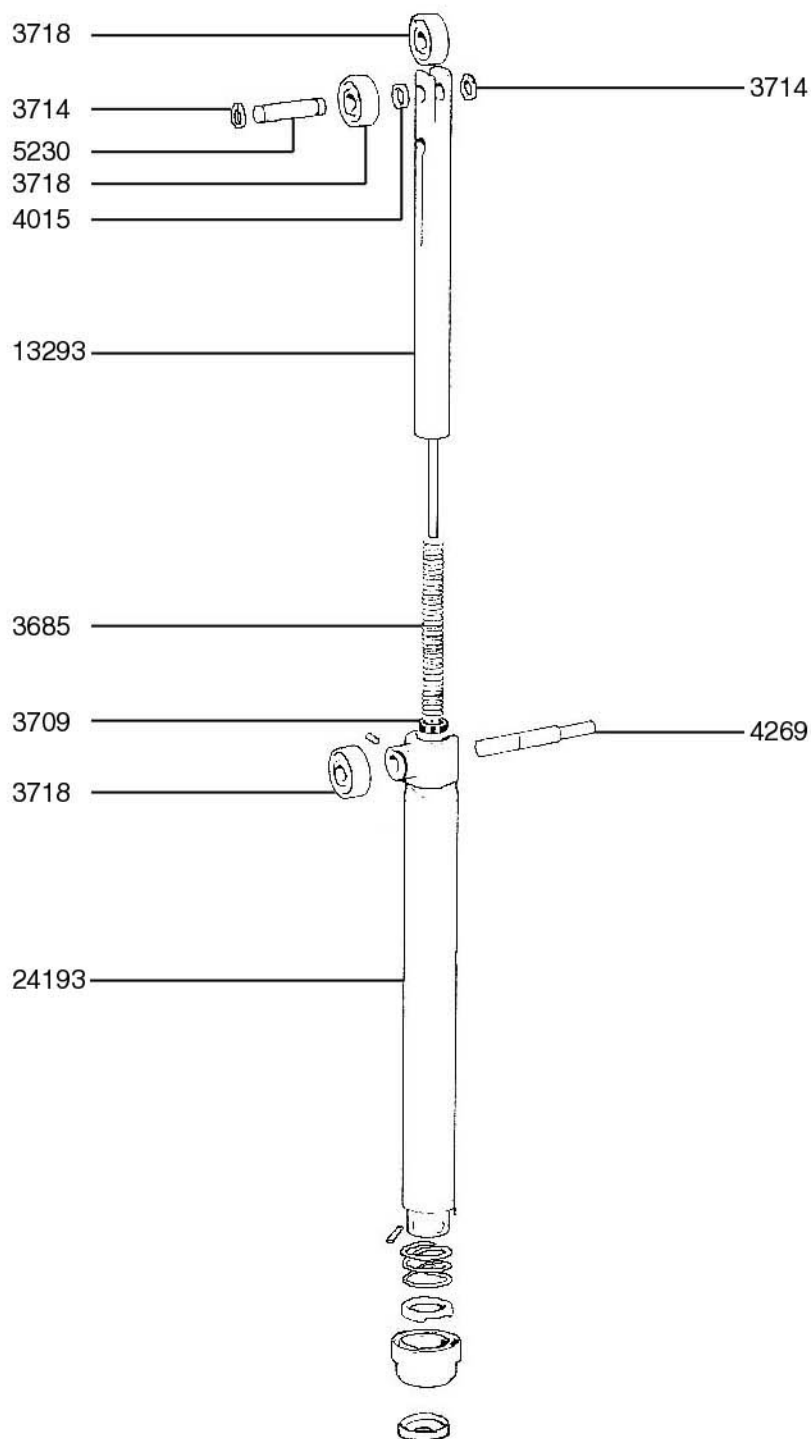

 
4. UPPER MAIN UNIT  
4.9 Head alignment control

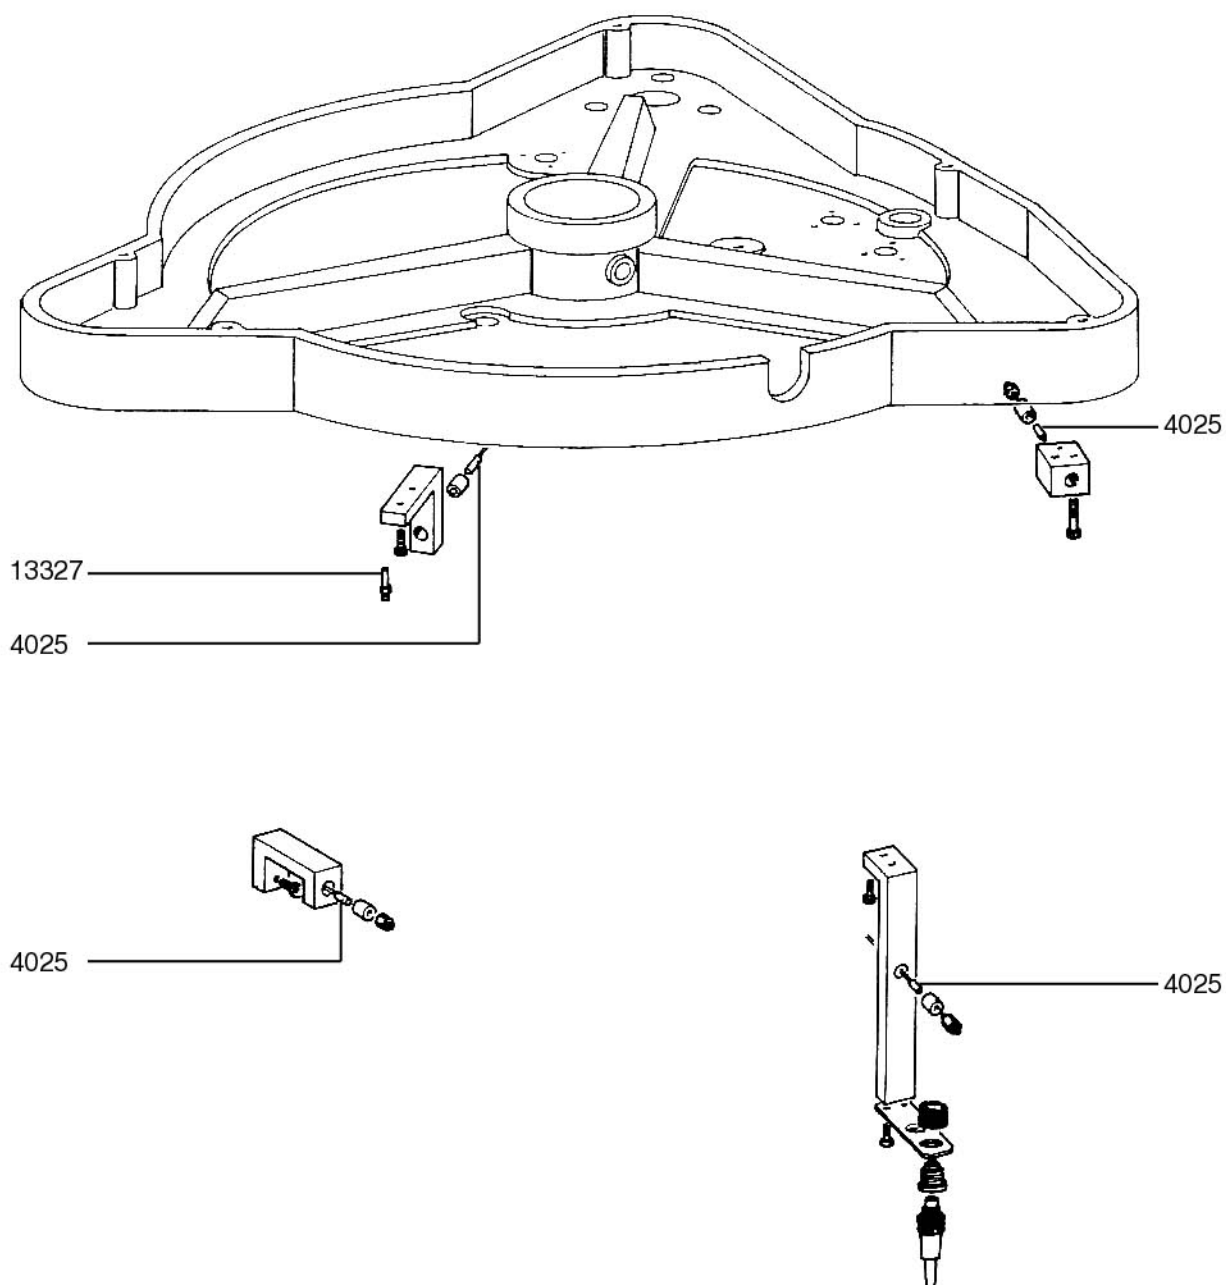

## 5. LOWER CENTRAL UNIT

### 5.1 Capsule separation and recombining

 
#### 5.1.1 Capsule opening and bush holder turntable assembly

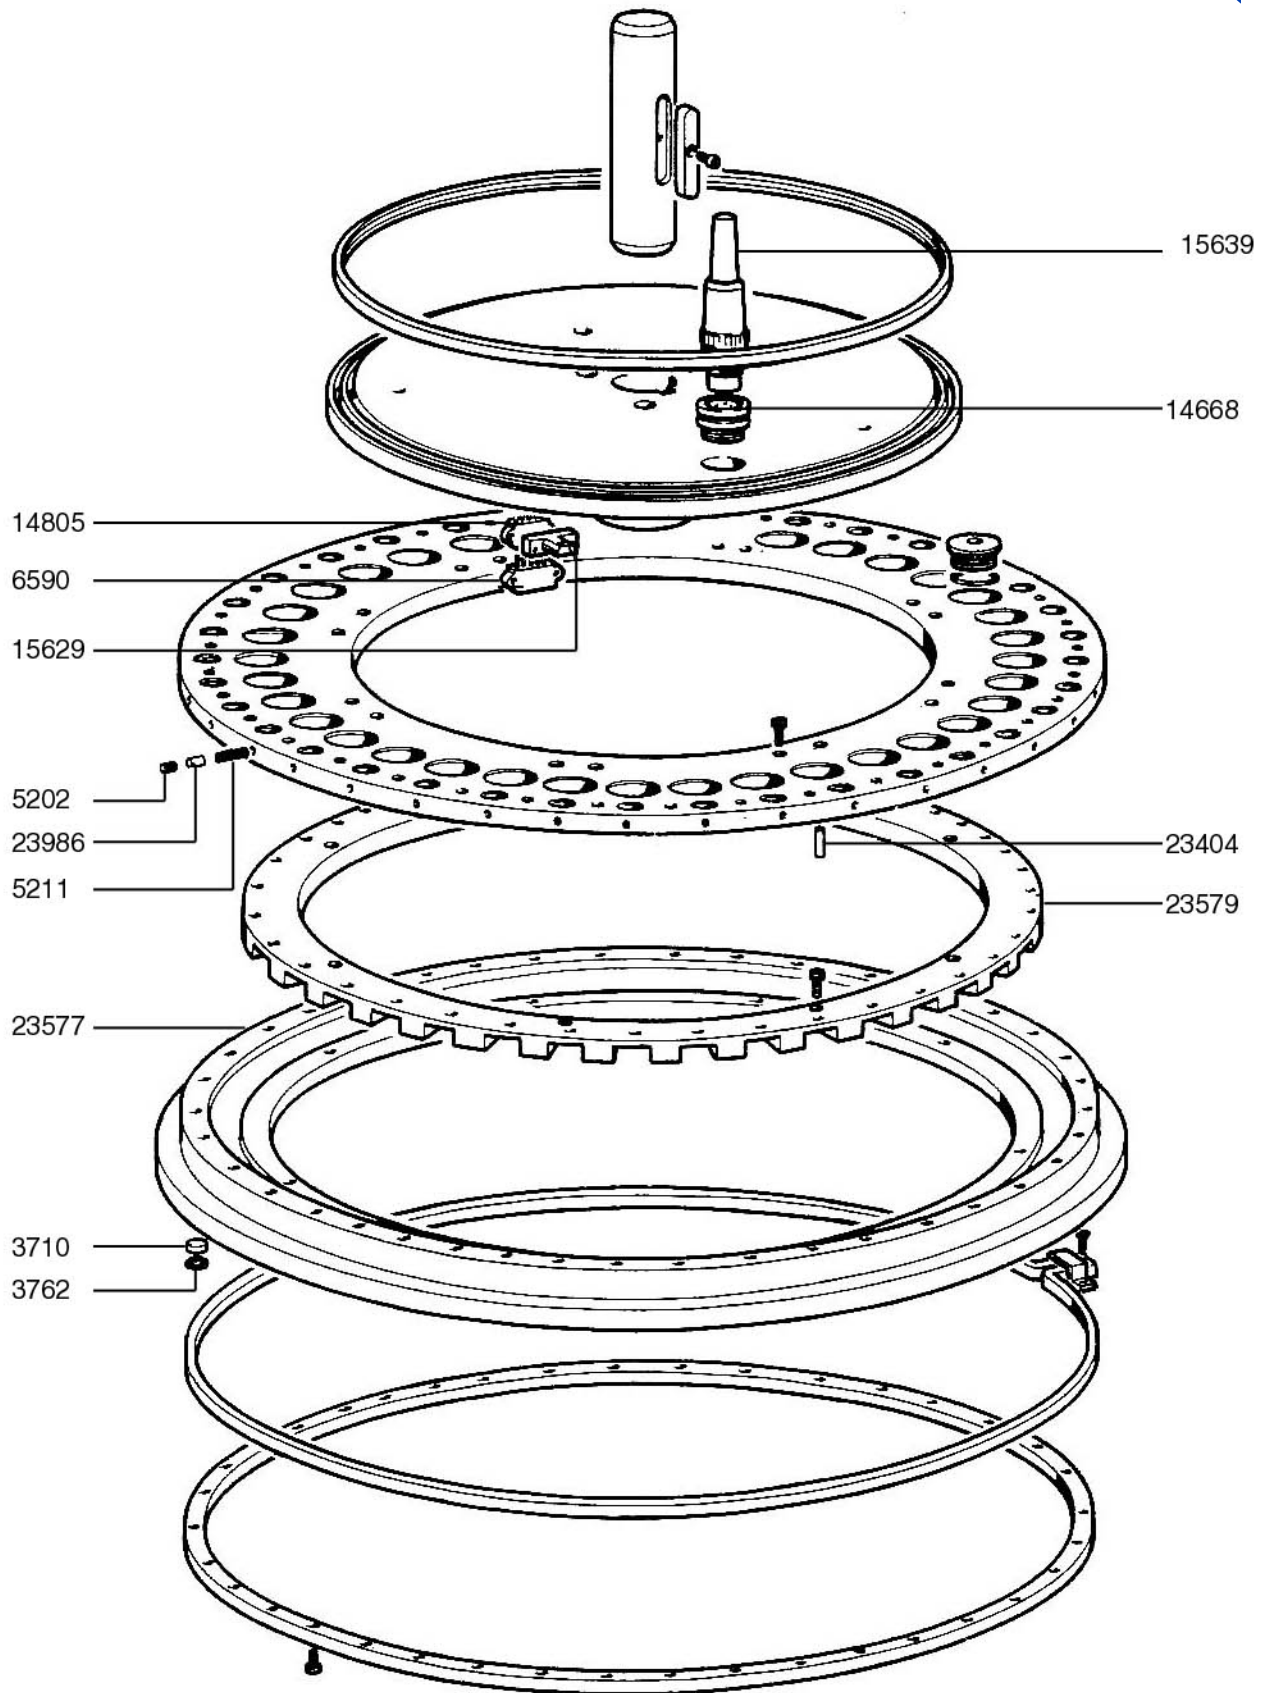

## 5. LOWER CENTRAL UNIT

### 5.1 Capsule separation and recombining
 
#### 5.1.2 Rotary parts


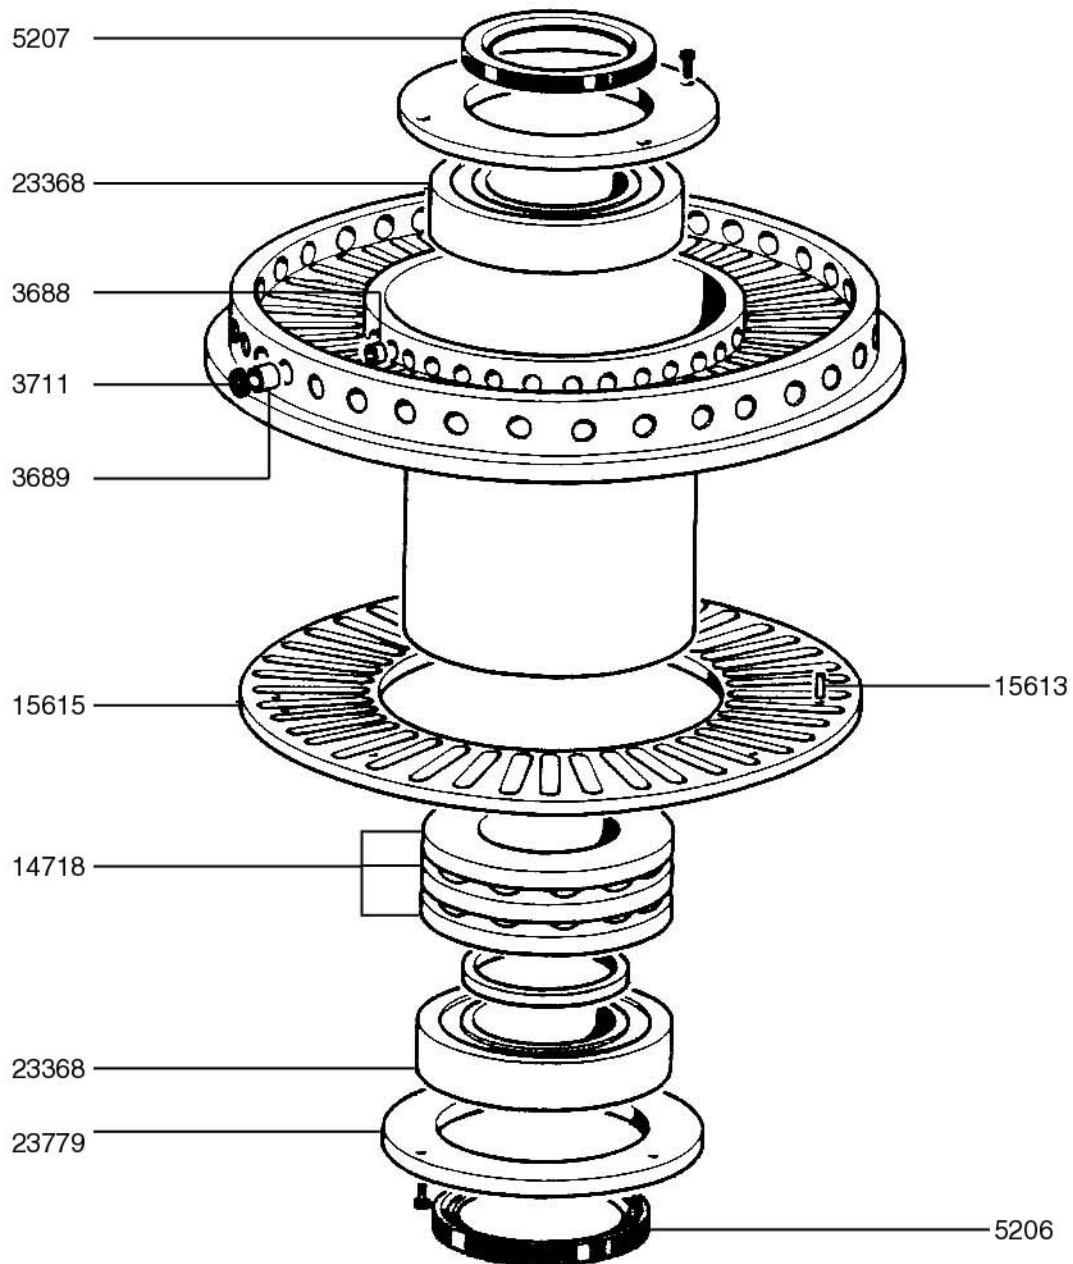


## 5. LOWER CENTRAL UNIT

### 5.1 Capsule separation and recombining

#### 5.1.3a Transversal shaft (Old style)
  
#### 5.1.4a Lower support (Old style)

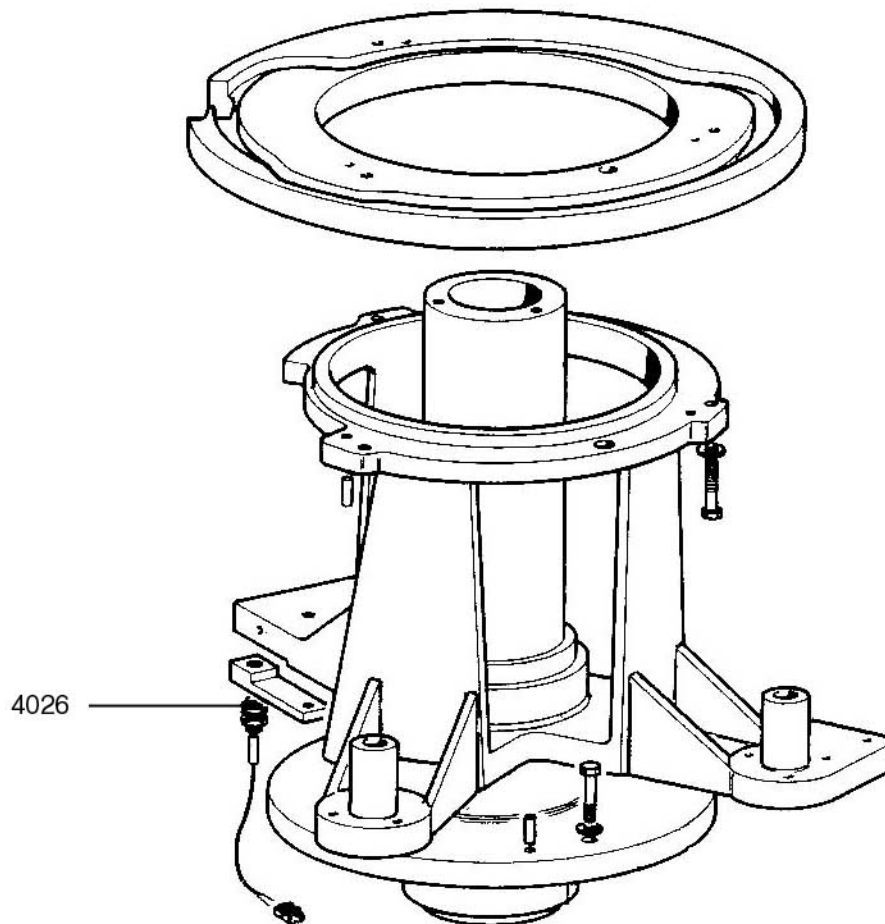
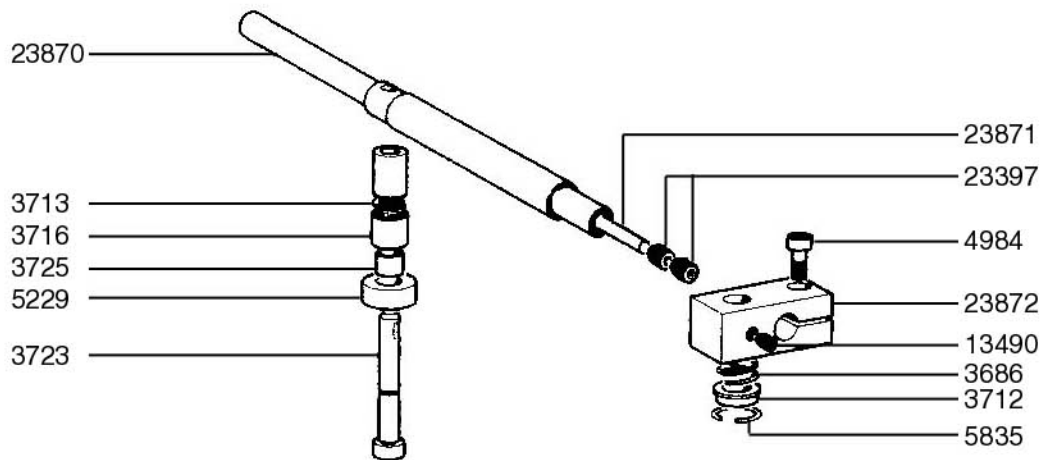


## 5. LOWER CENTRAL UNIT

### 5.1 Capsule separation and recombining

#### 5.1.3b Transversal shaft (New style)
  
#### 5.1.4b Lower support (New style)

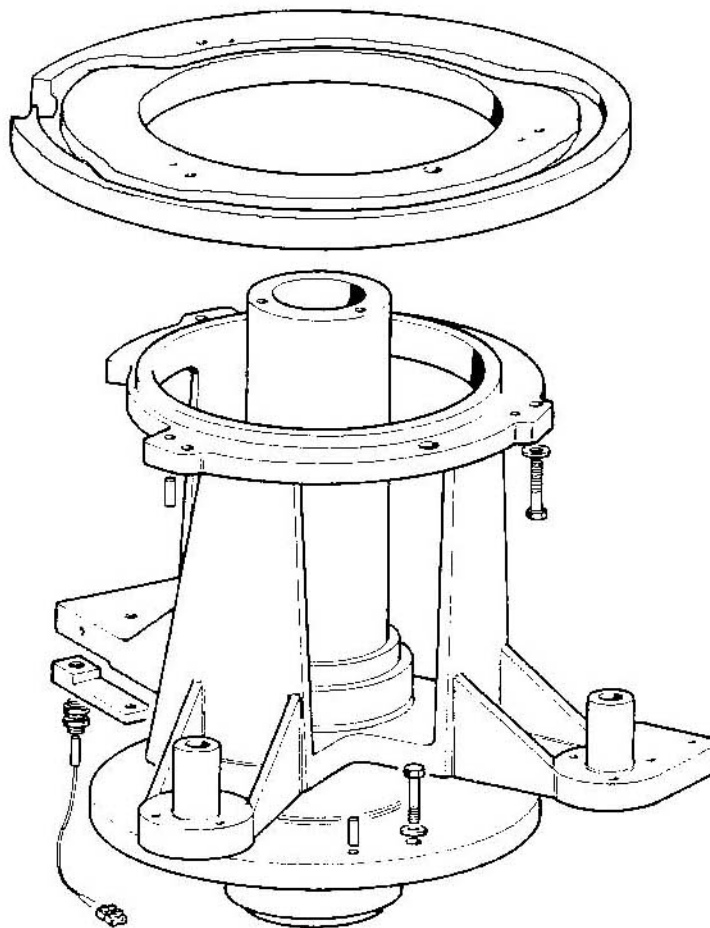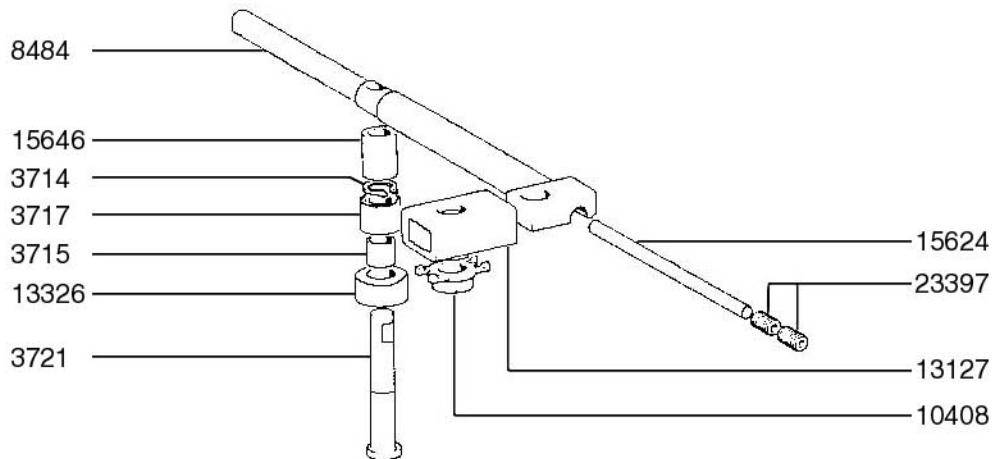




## 5. LOWER CENTRAL UNIT

### 5.2 Capsule closing

 
#### 5.2.1 Drum and cam of closing unit

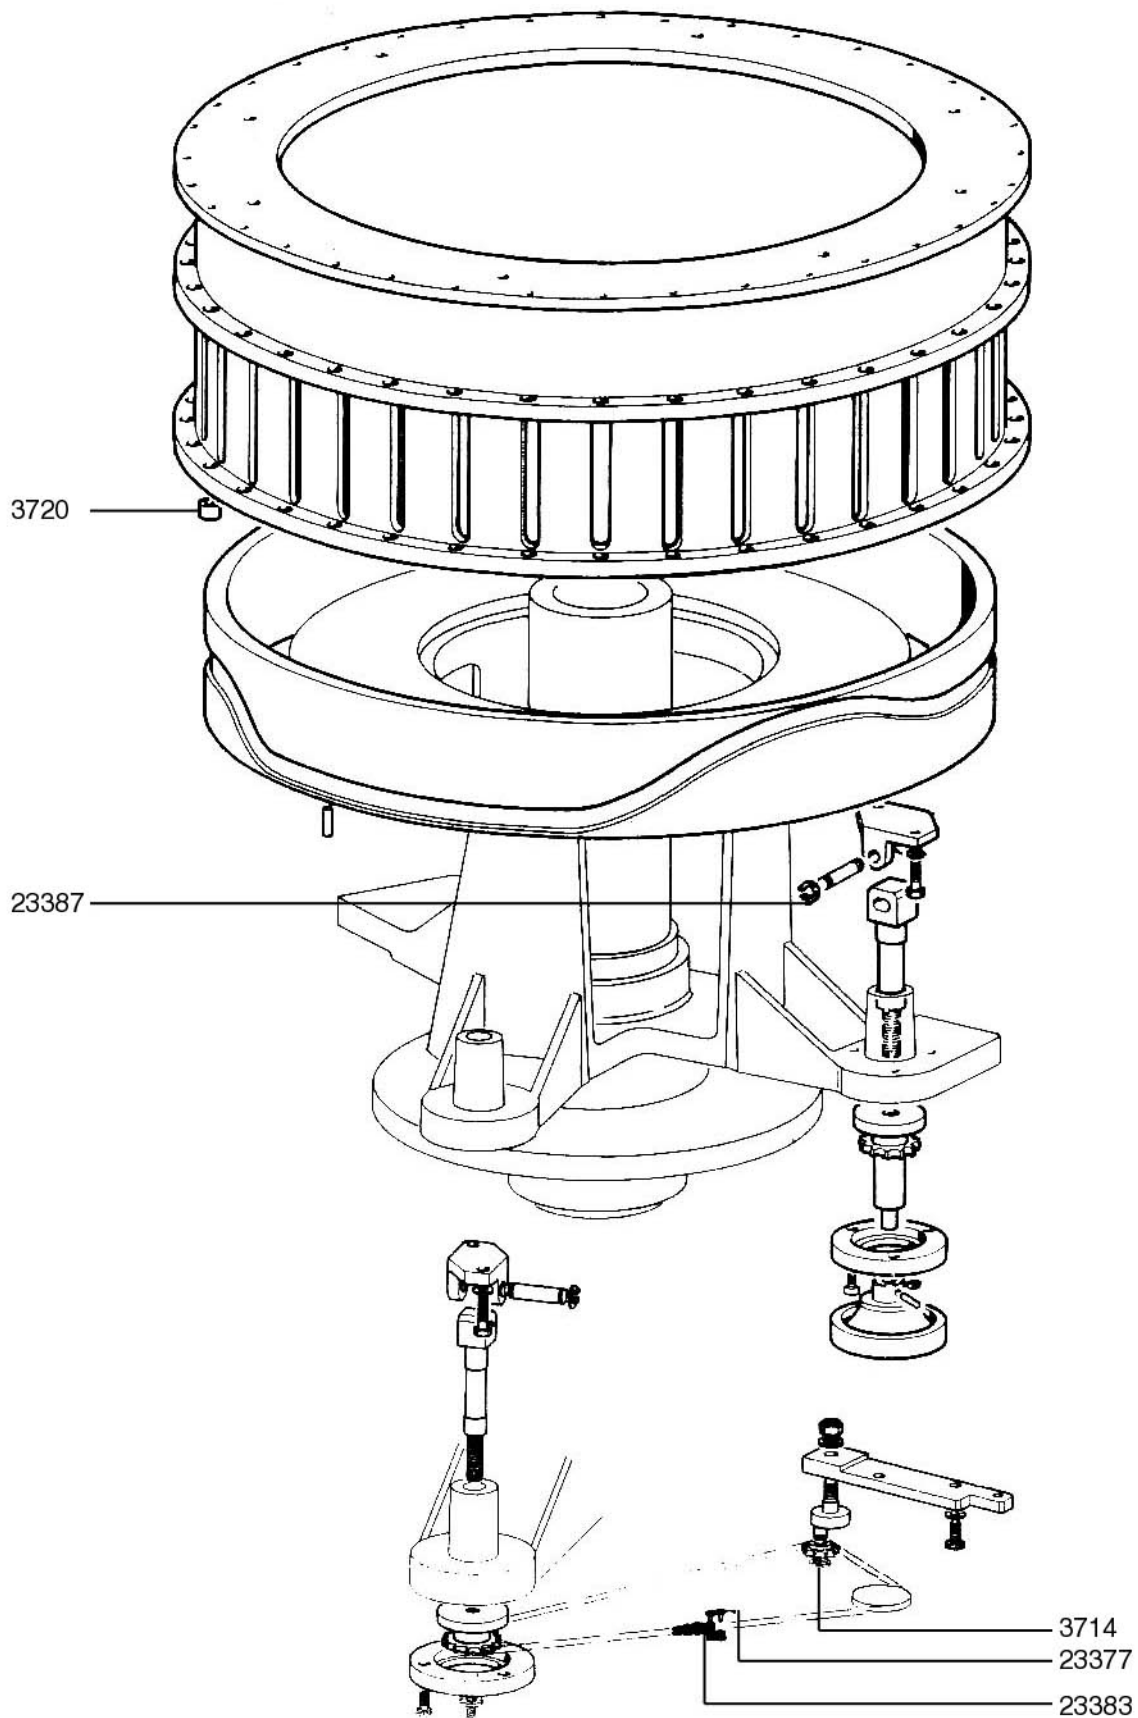

## 5. LOWER CENTRAL UNIT

### 5.2 Capsule closing
 
#### 5.2.2 Pivot and pusher

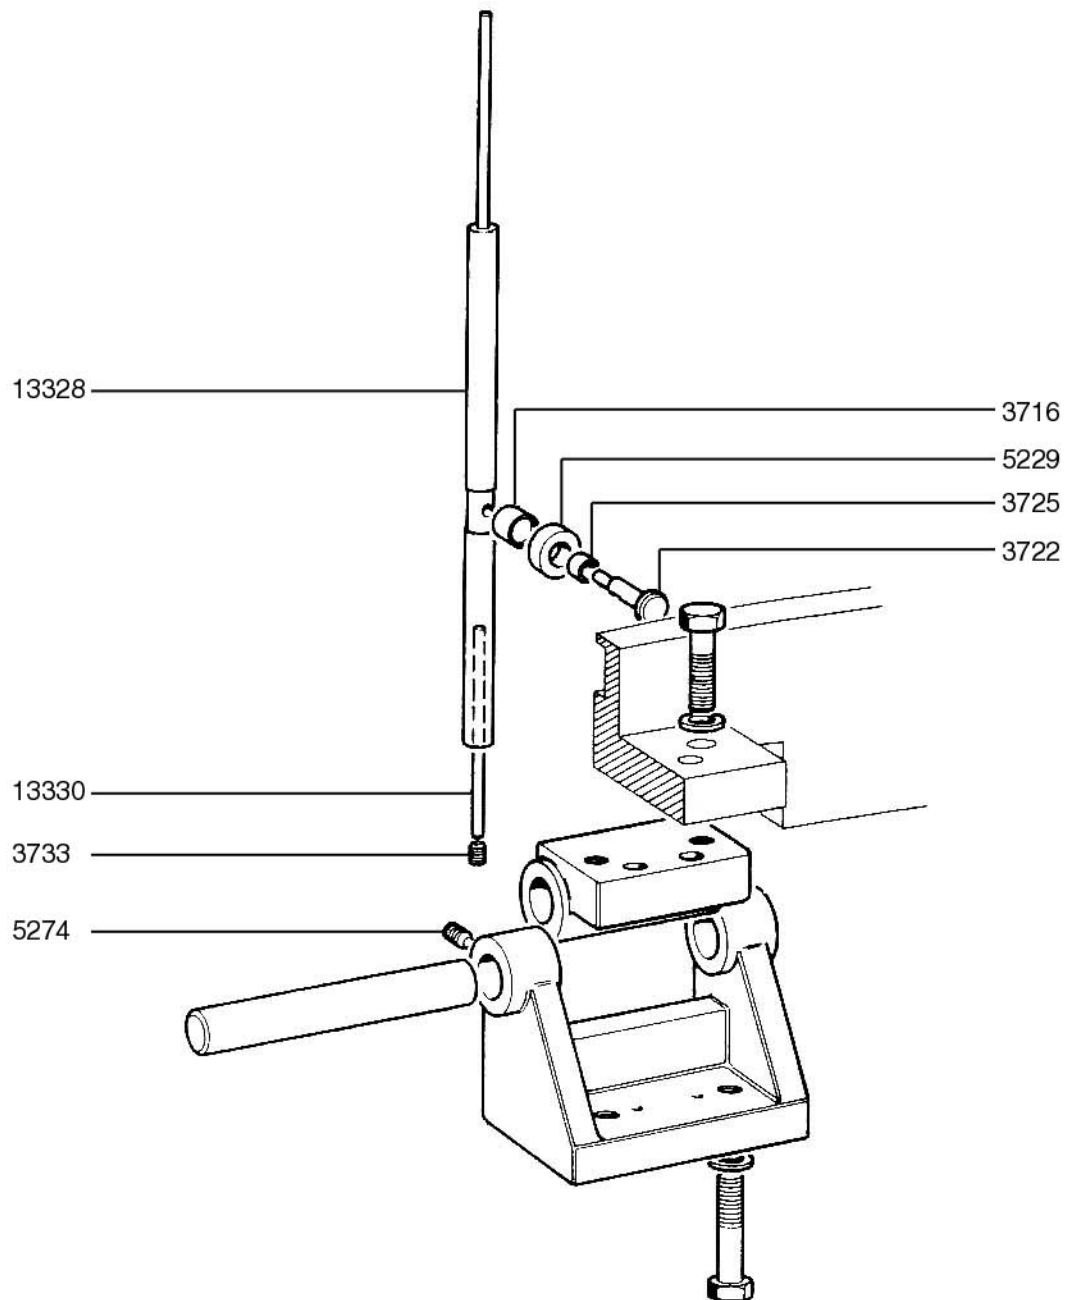


## 5. LOWER CENTRAL UNIT

### 5.3 Rejects ejection


#### 5.3.1 Selector
 
#### 5.3.2 Rejects collection

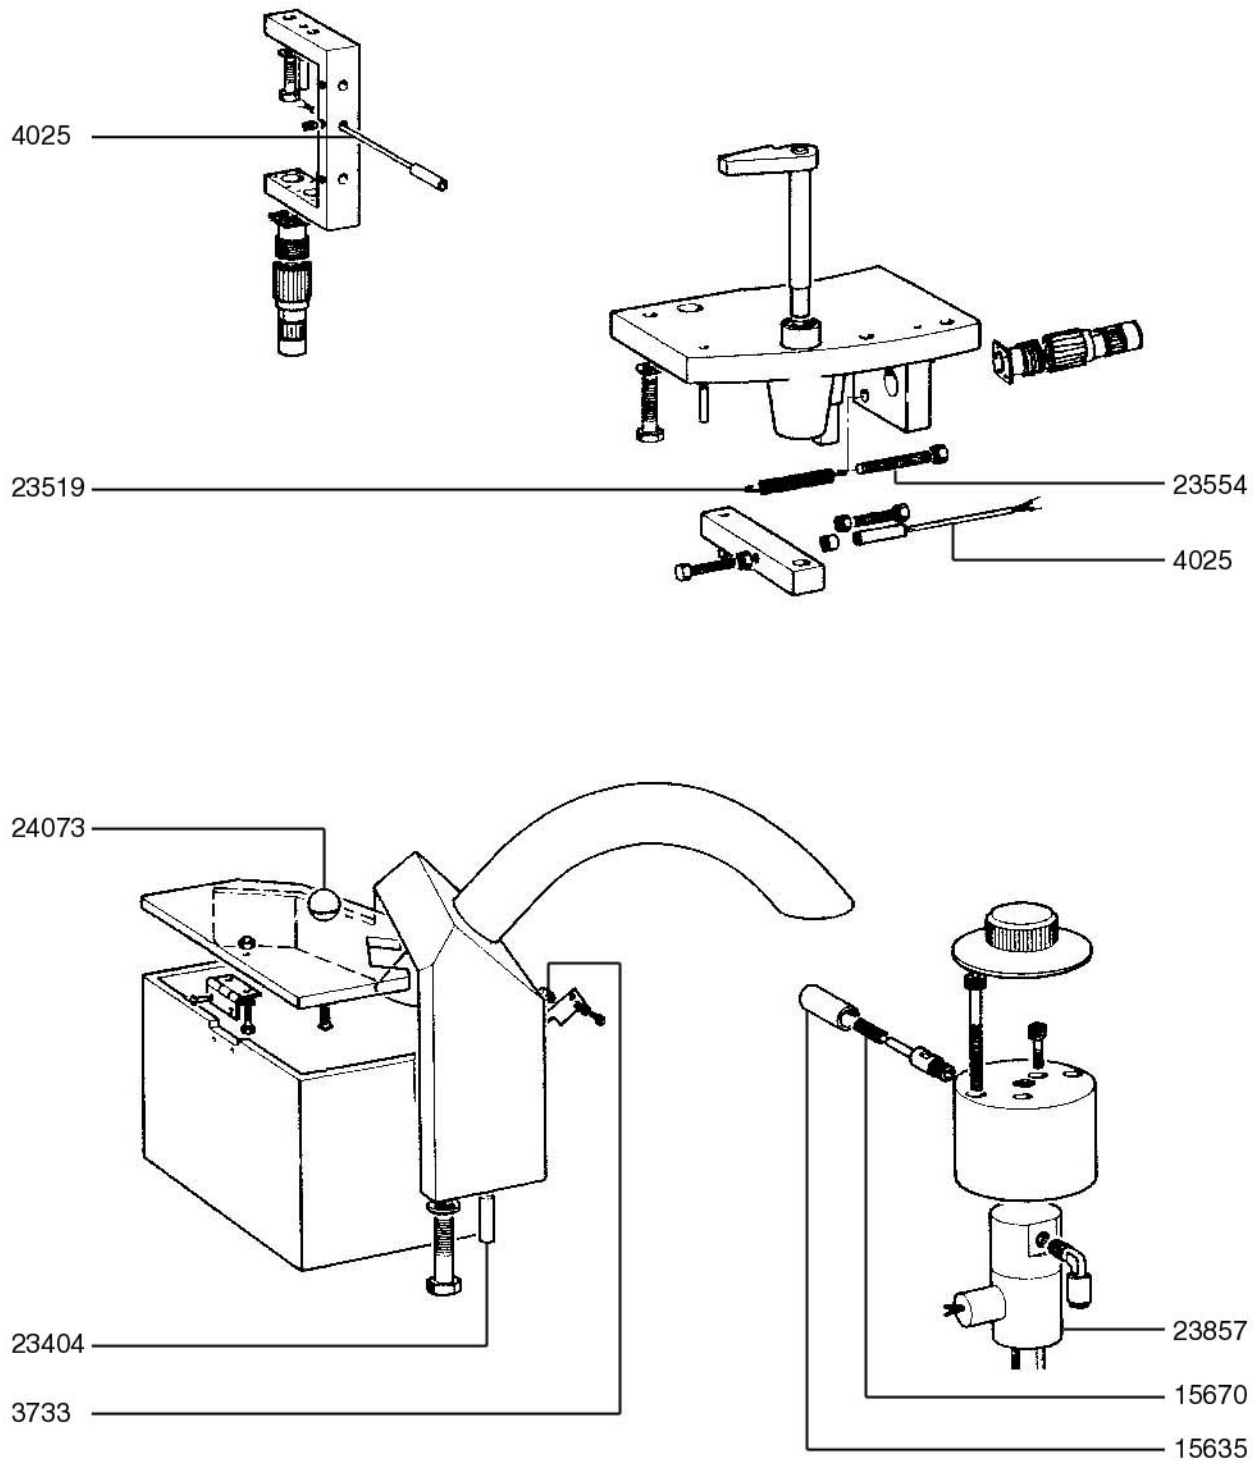

5. LOWER CENTRAL UNIT  
5.4 Capsule exit and upper central unit supports

 
5.4.1 Chute and support

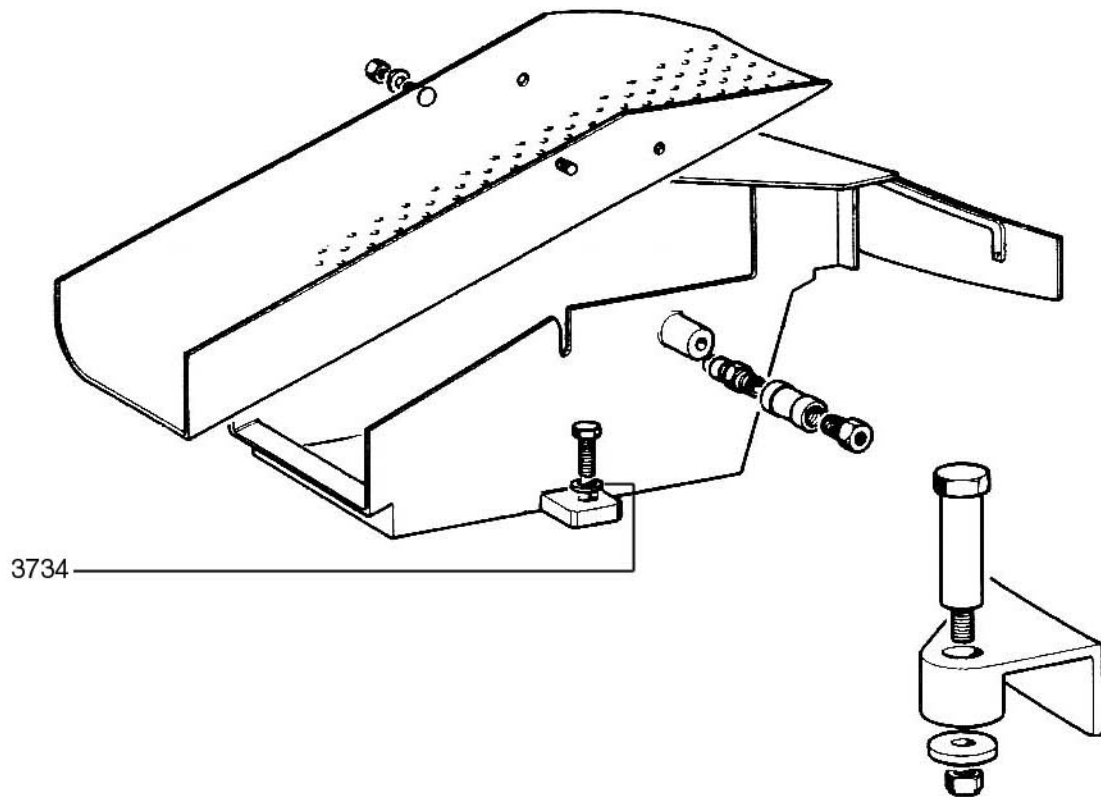

## 5. LOWER CENTRAL UNIT


### 5.4 Capsule exit and upper central unit supports
 
#### 5.4.2 Supports

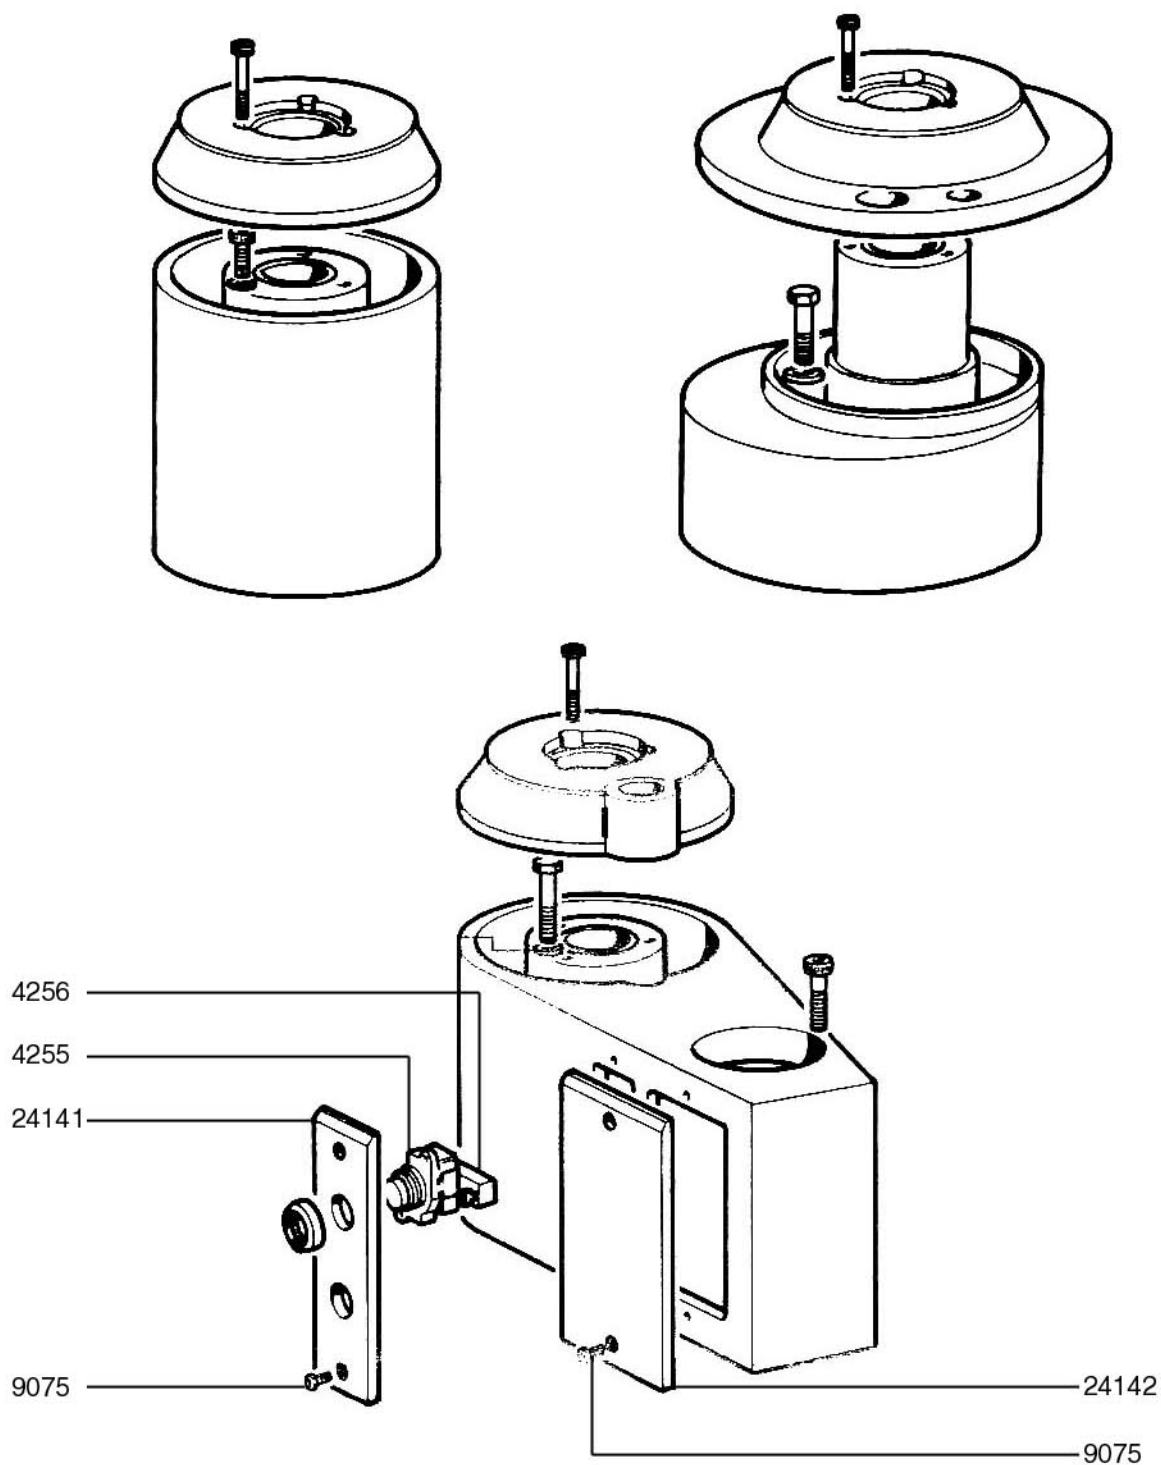


## 6. UPPER CENTRAL UNIT LIFTING SYSTEM
 
### 6.1 Gear box

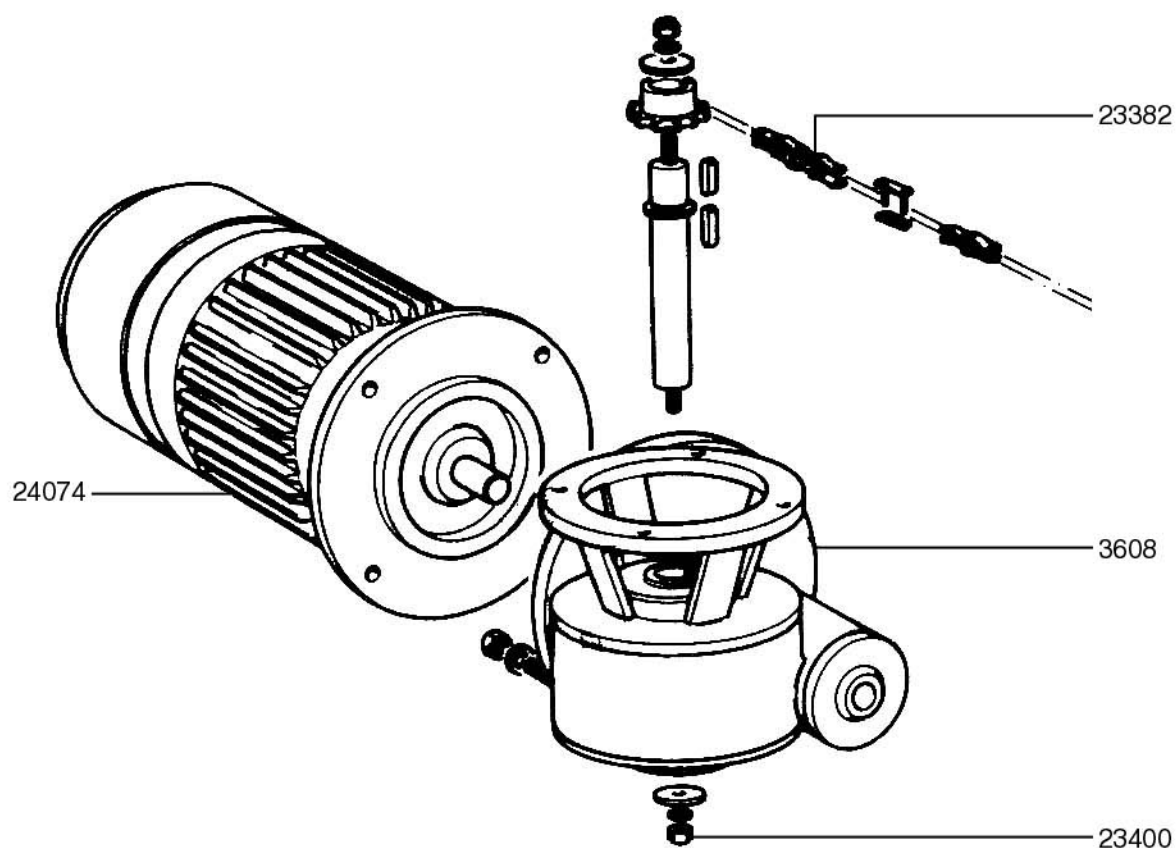

## 6. UPPER CENTRAL UNIT LIFTING SYSTEM

 
### 6.2 Lifting screw and tensioners

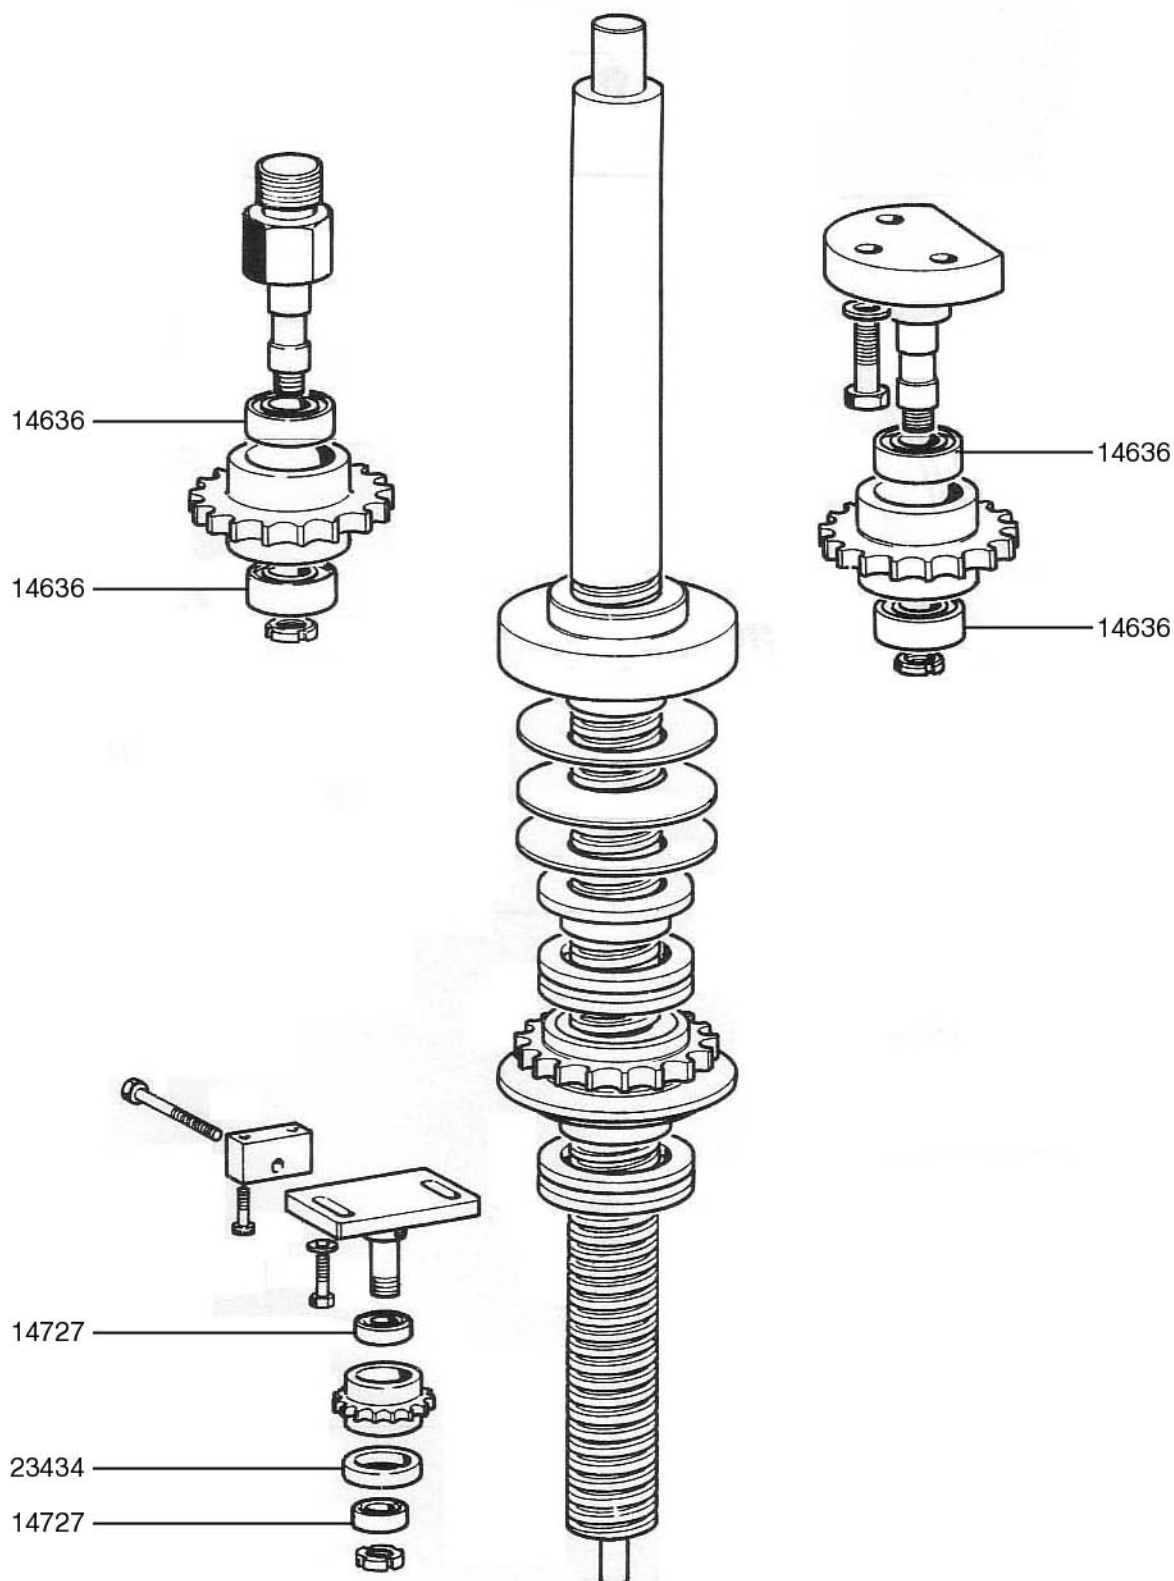




## 6. UPPER CENTRAL UNIT LIFTING SYSTEM
 
### 6.3 Microswitches

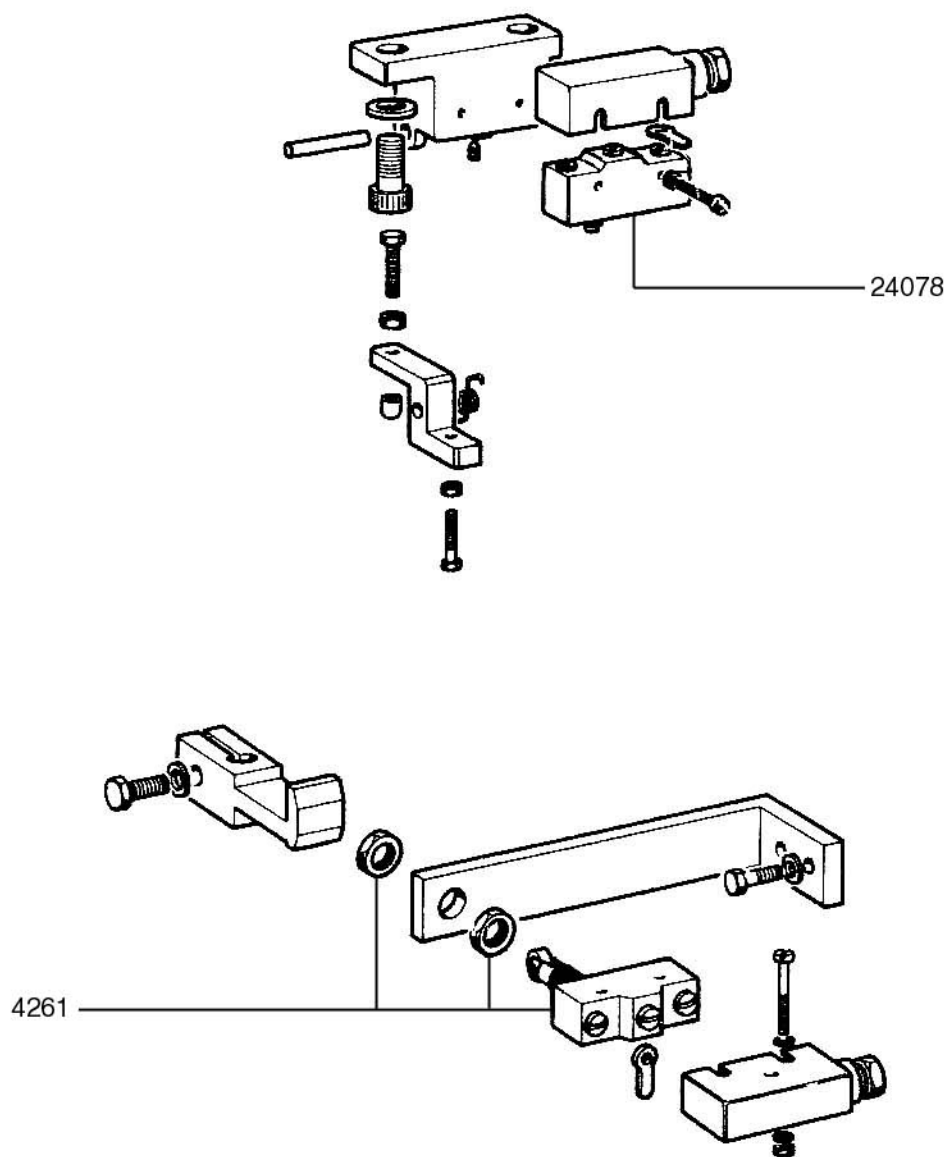


## 7. MOVEMENT TRANSMISSION UNIT
 
### 7.1 Machine motor

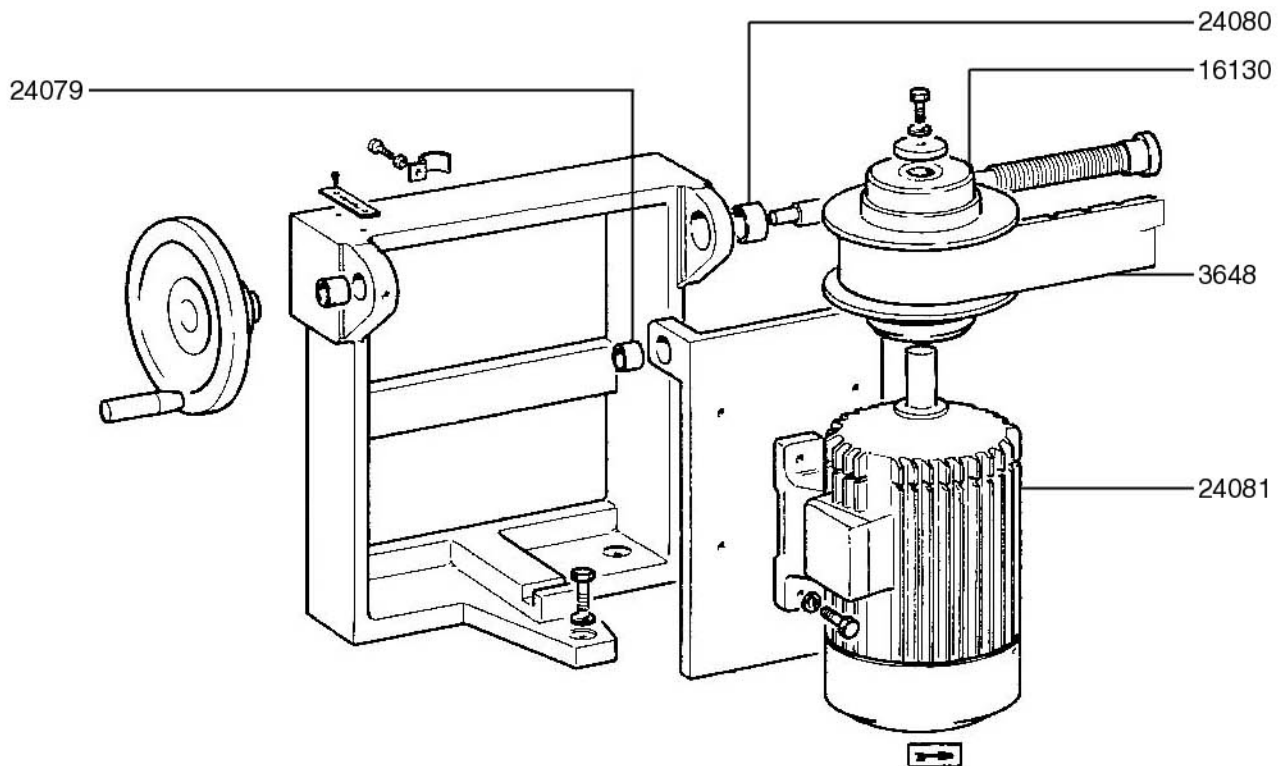


## 7. MOVEMENT TRANSMISSION UNIT
 
### 7.2 Shaft with clutch

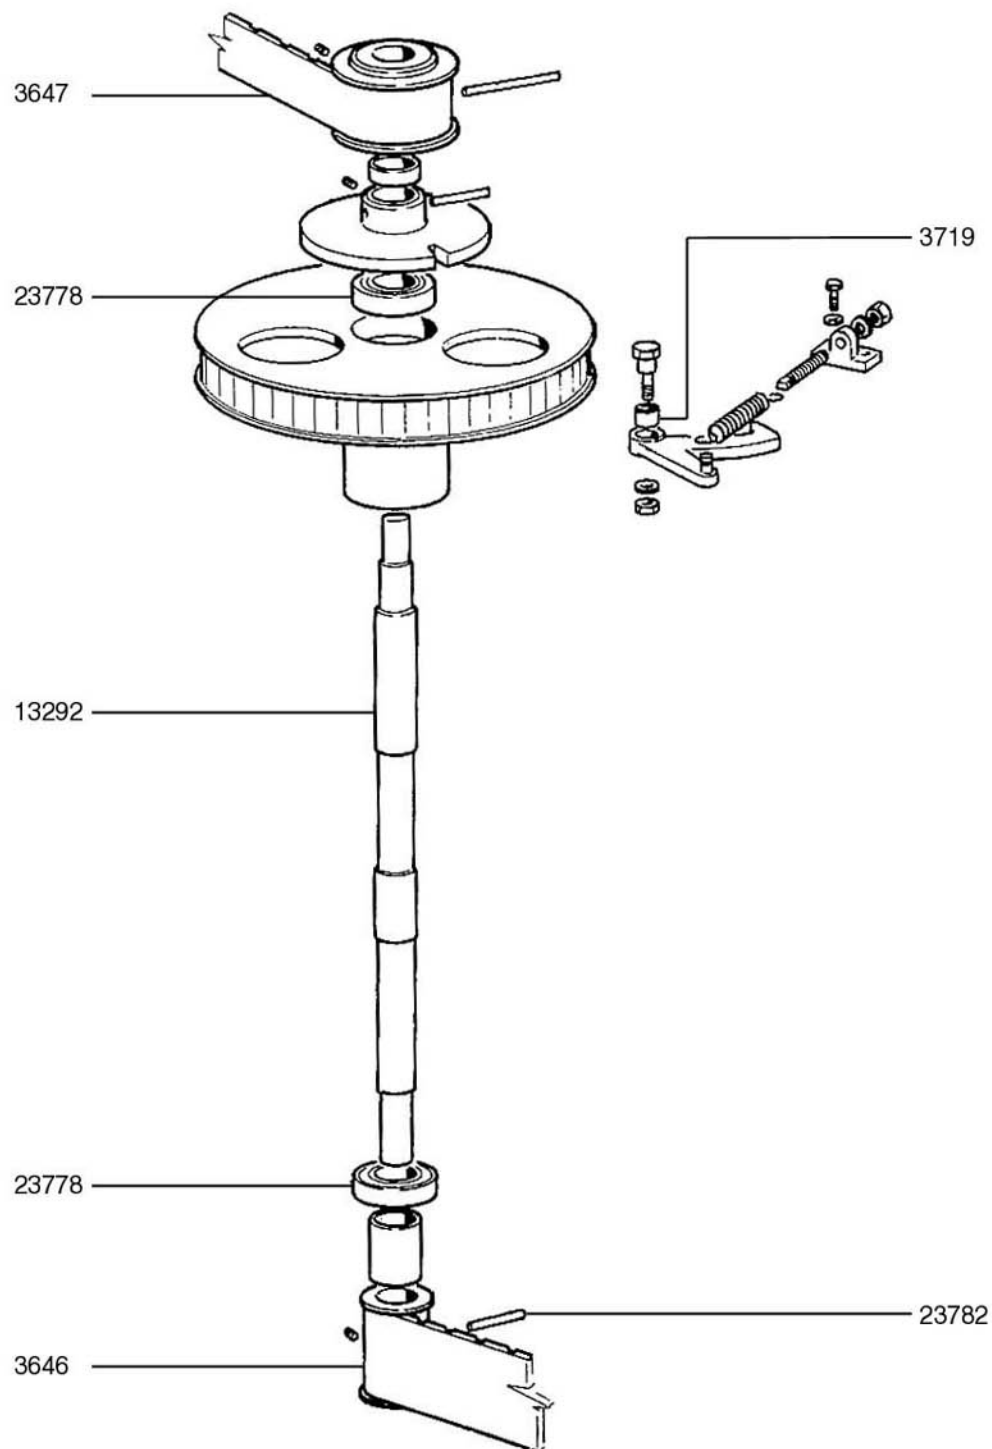

## 7. MOVEMENT TRANSMISSION UNIT

 
### 7.3 Tranfer and feeding gearings

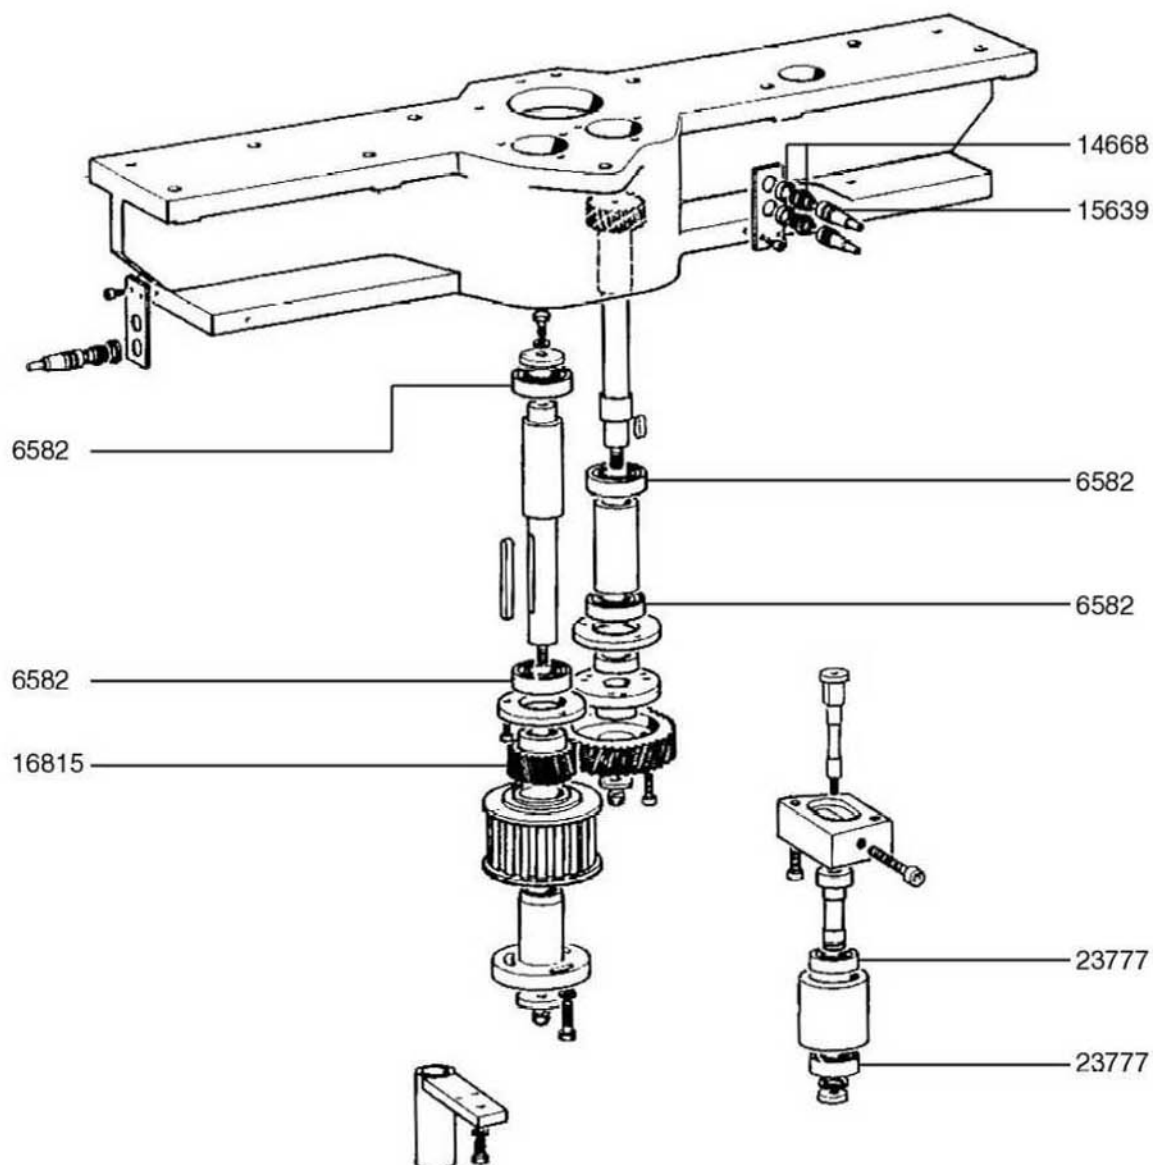


## 7. MOVEMENT TRANSMISSION UNIT

### 7.4 Suction mouthpiece

 
### 7.5 Rotary hopper drive gear

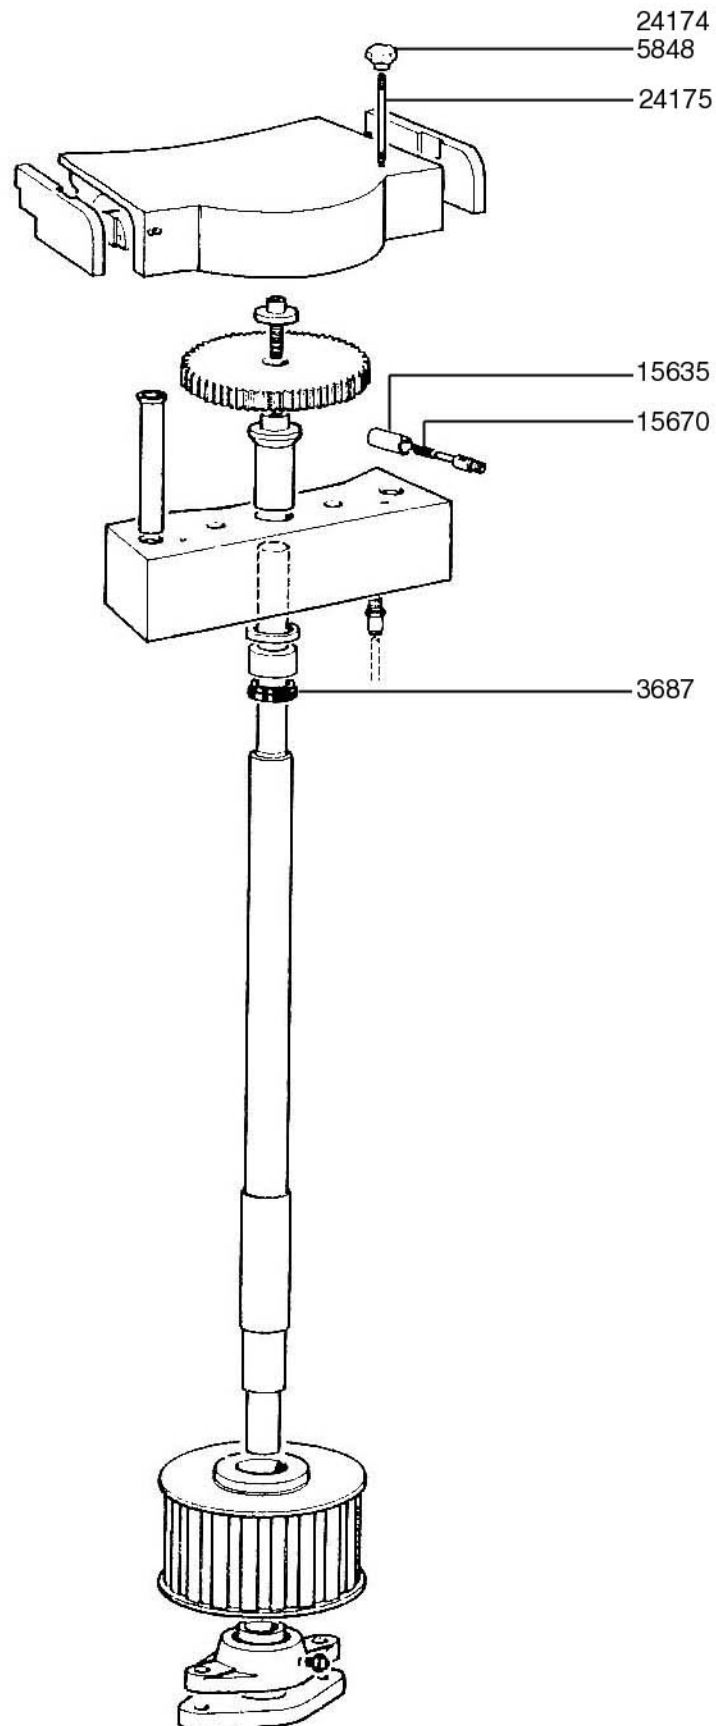

 7. MOVEMENT TRANSMISSION UNIT  
7.6 Lower central unit drive shaft

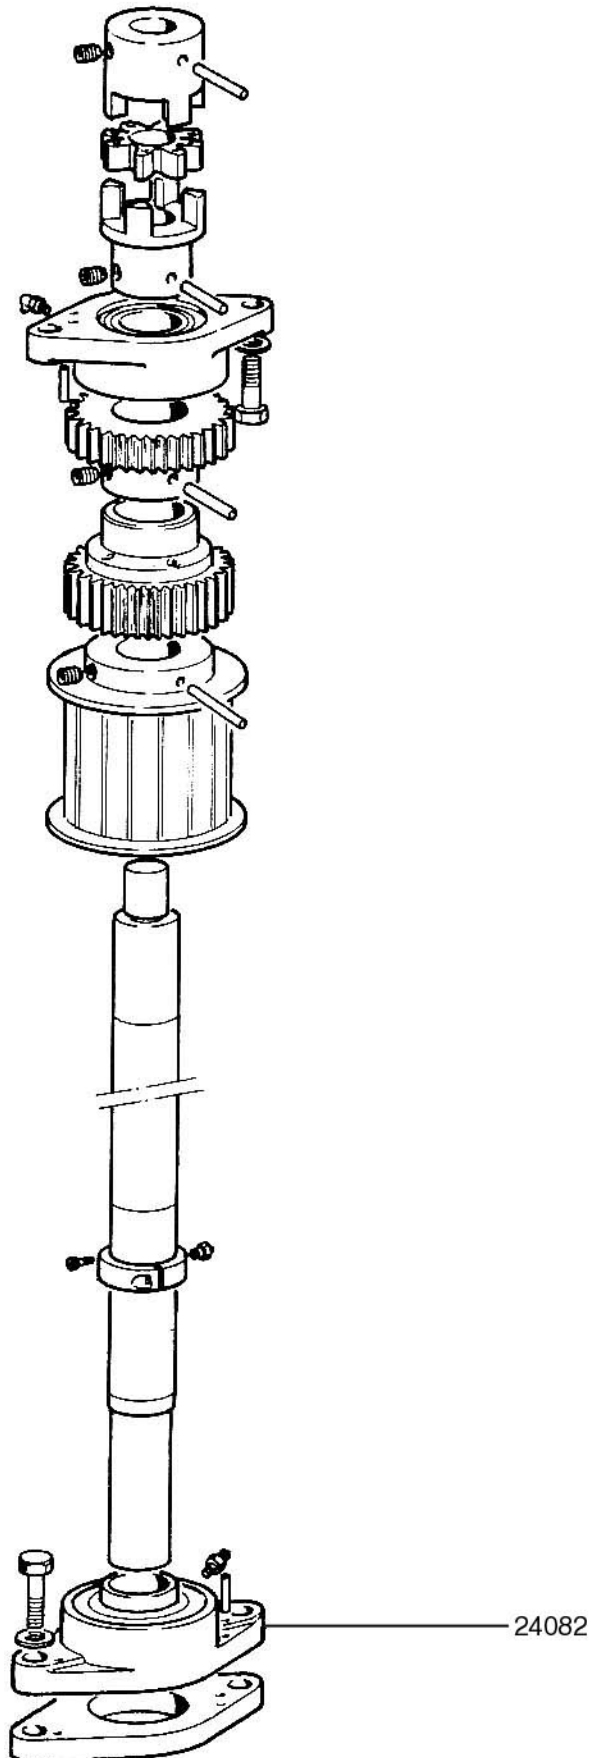

 7. MOVEMENT TRANSMISSION UNIT  
7.7 Upper central unit gear

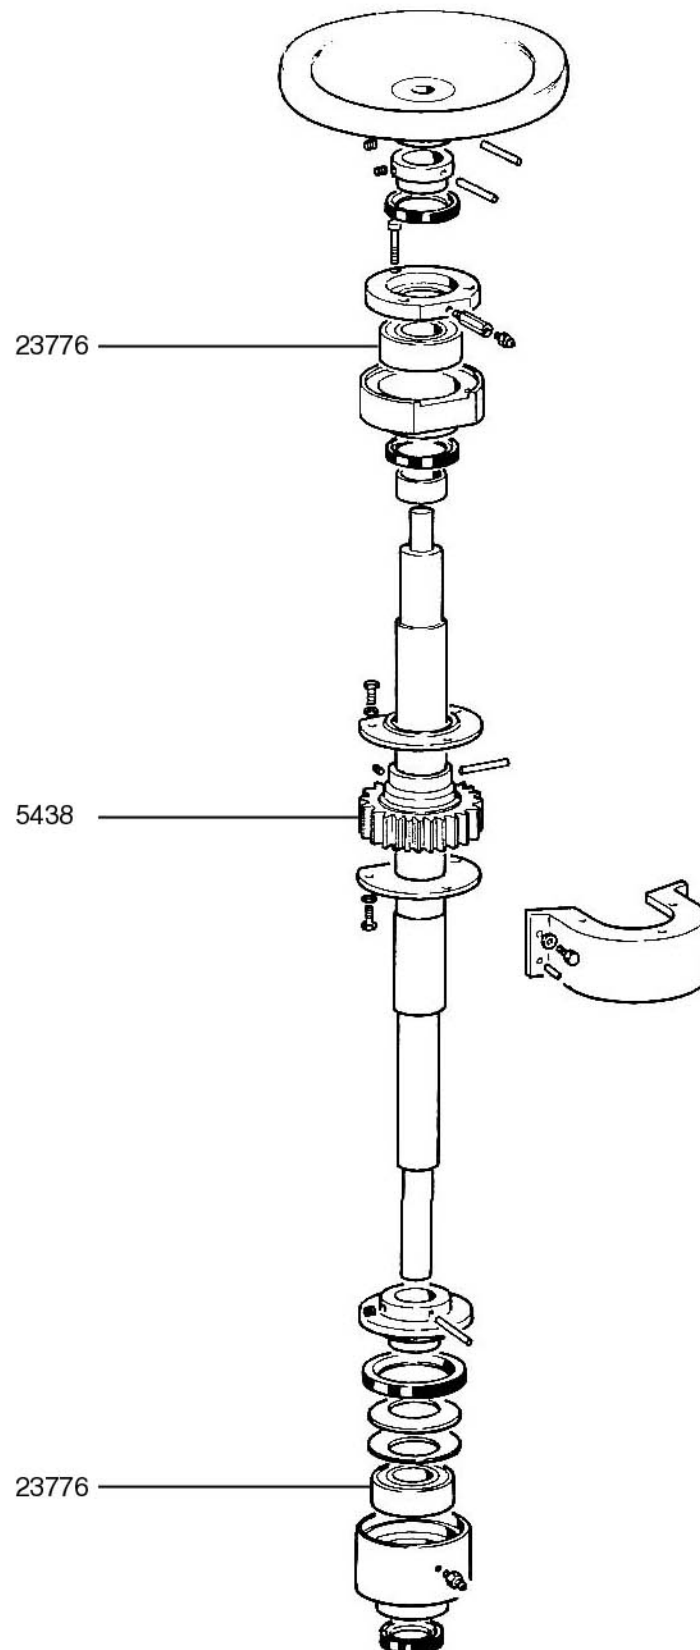




## 7. MOVEMENT TRANSMISSION UNIT

### 7.8 Lower central unit drive shaft
 
### 7.9 Lower central unit gear

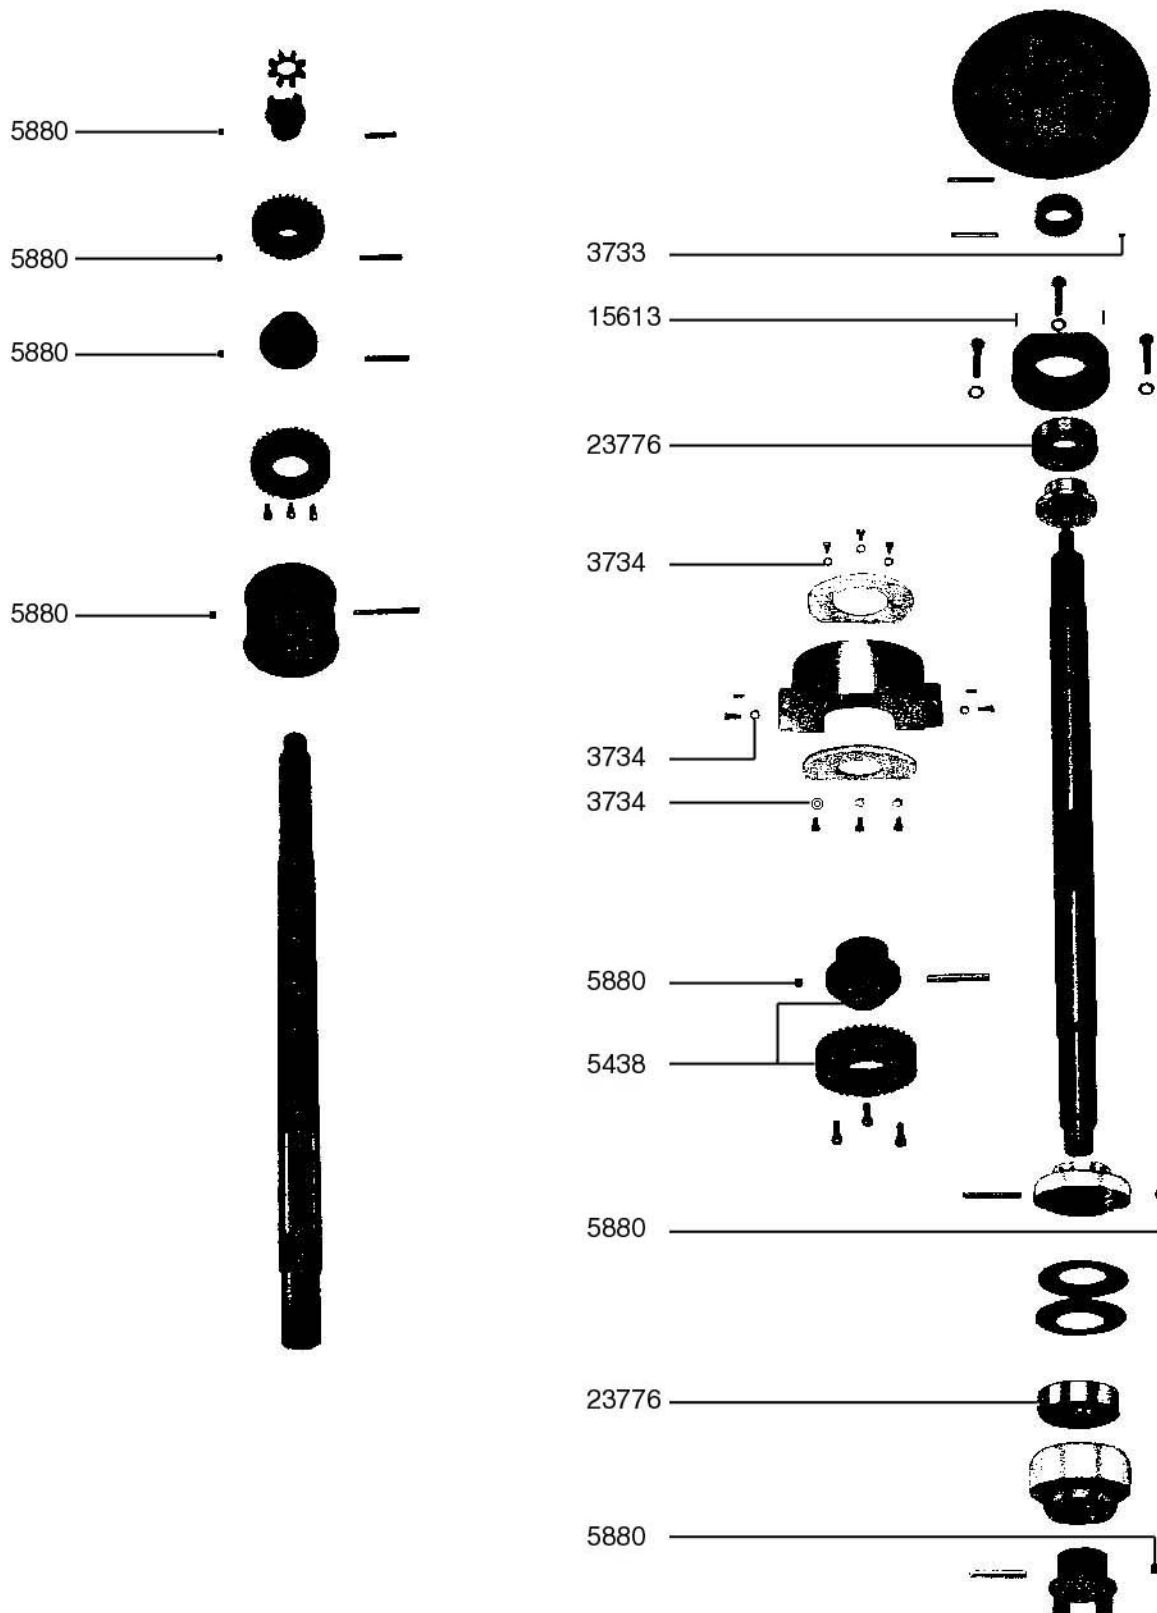



## 7. MOVEMENT TRANSMISSION UNIT

7.10 Lower central unit gear

7.11 Upper central unit gear

  7.12 "V" belt, short toothed belt and long toothed belt

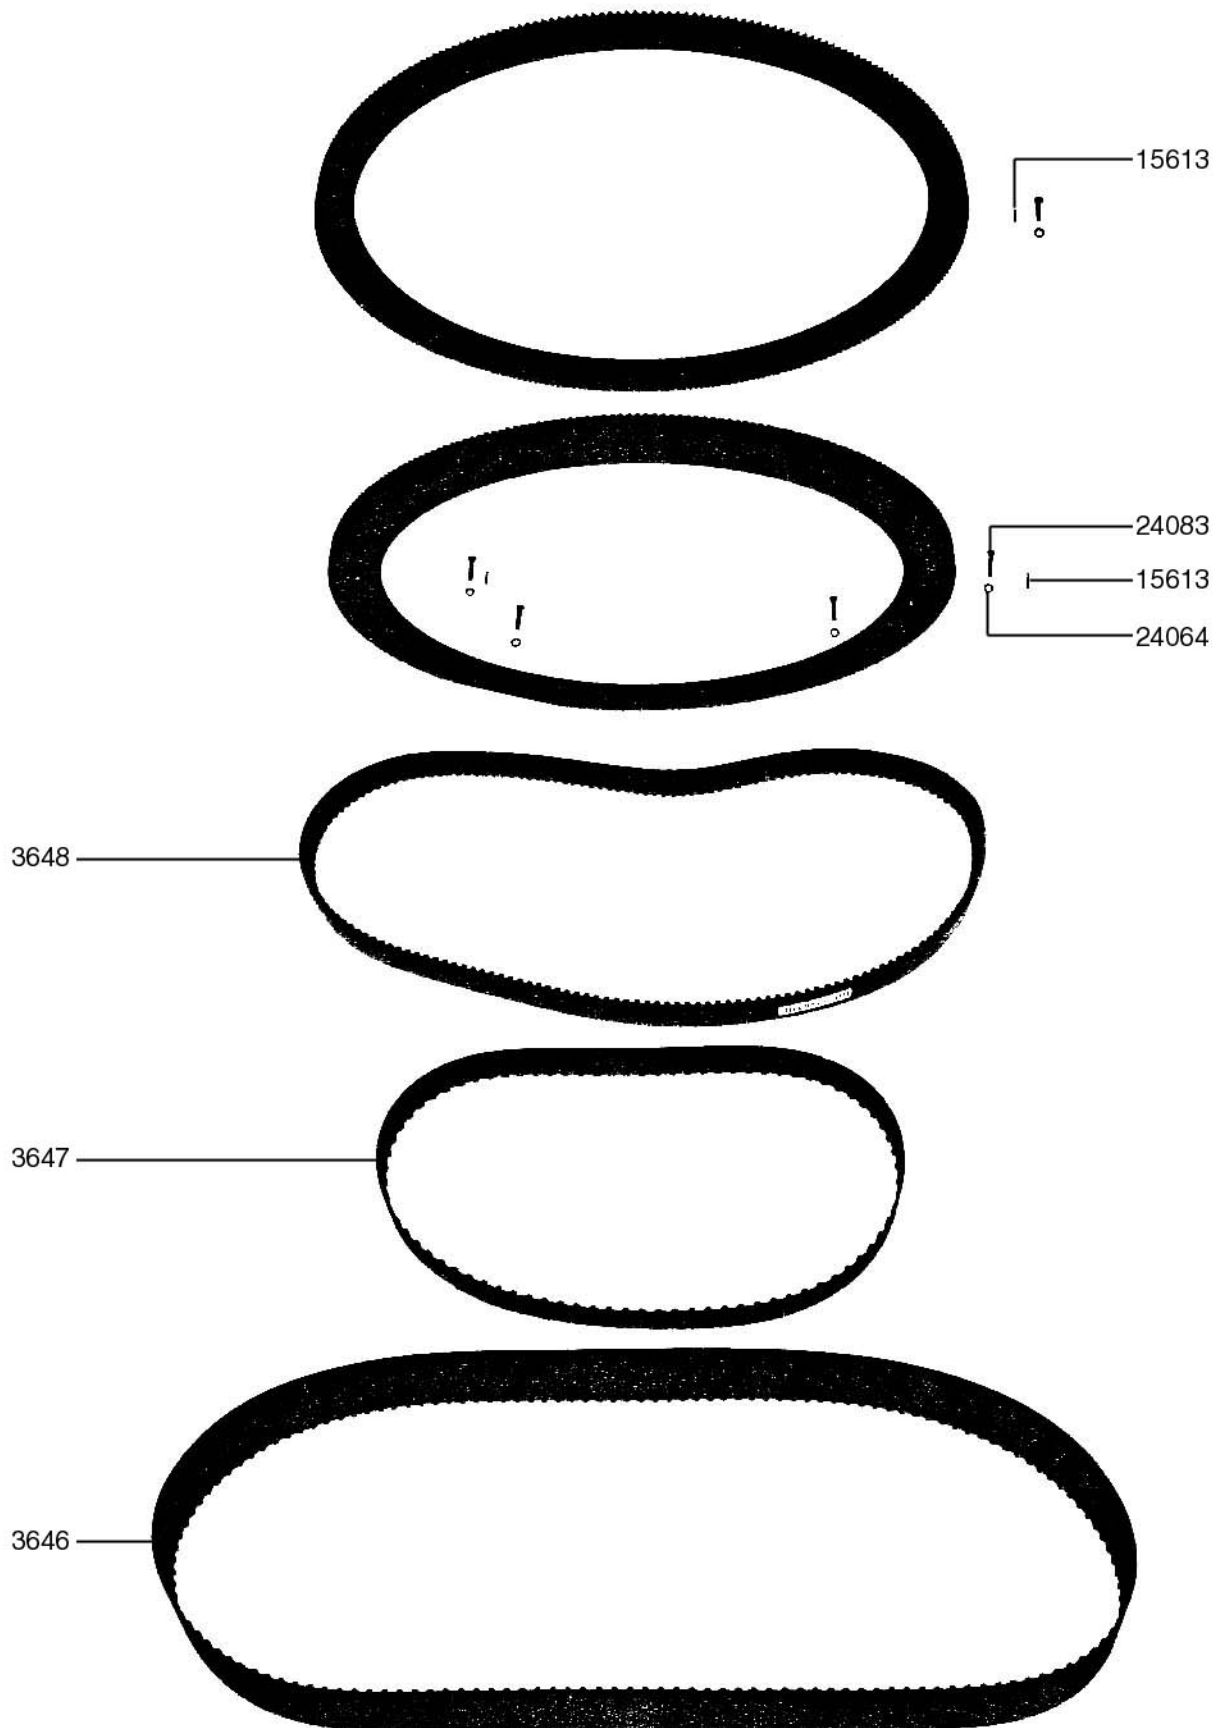


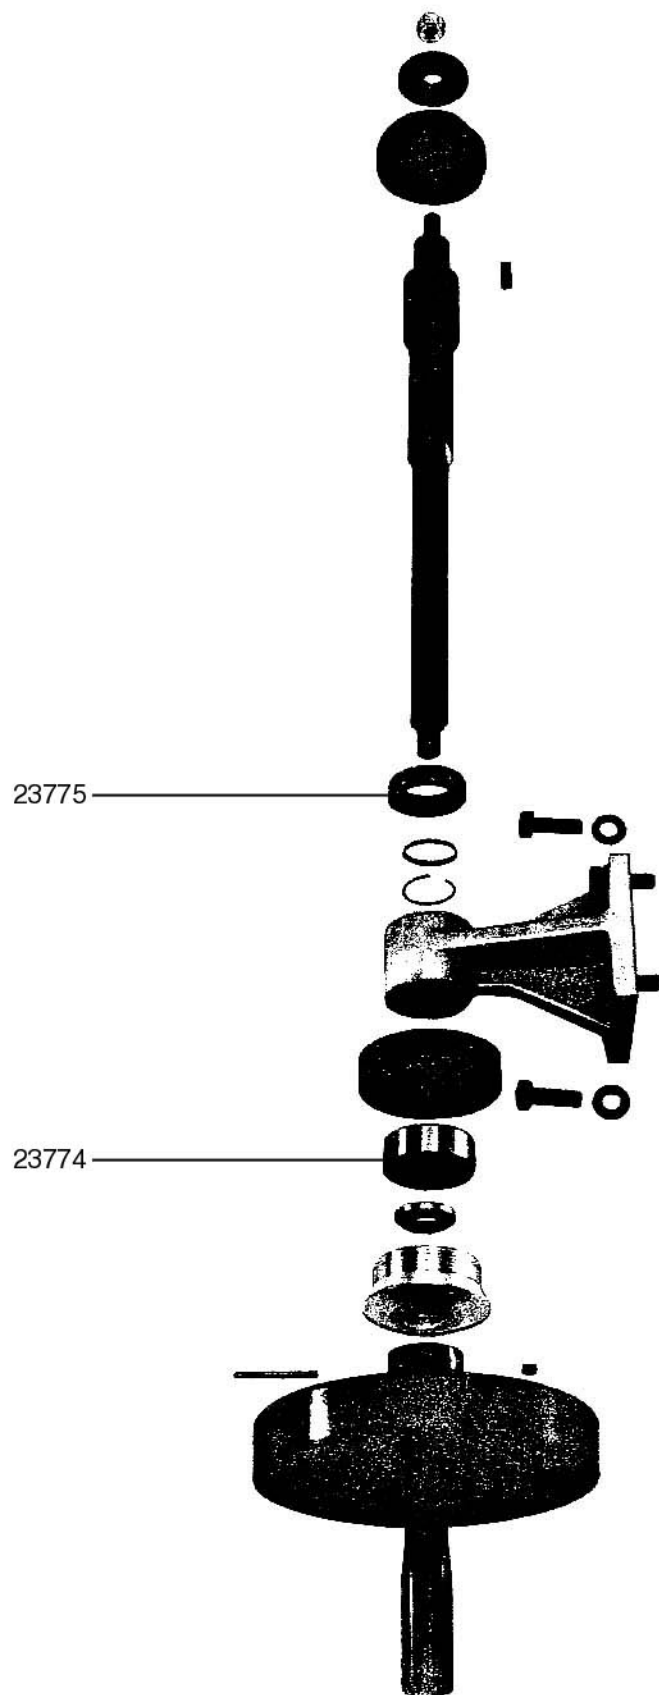

## 7. MOVEMENT TRANSMISSION UNIT

### 7.14 Belt tensioner
 
### 7.15 Belt orienrer

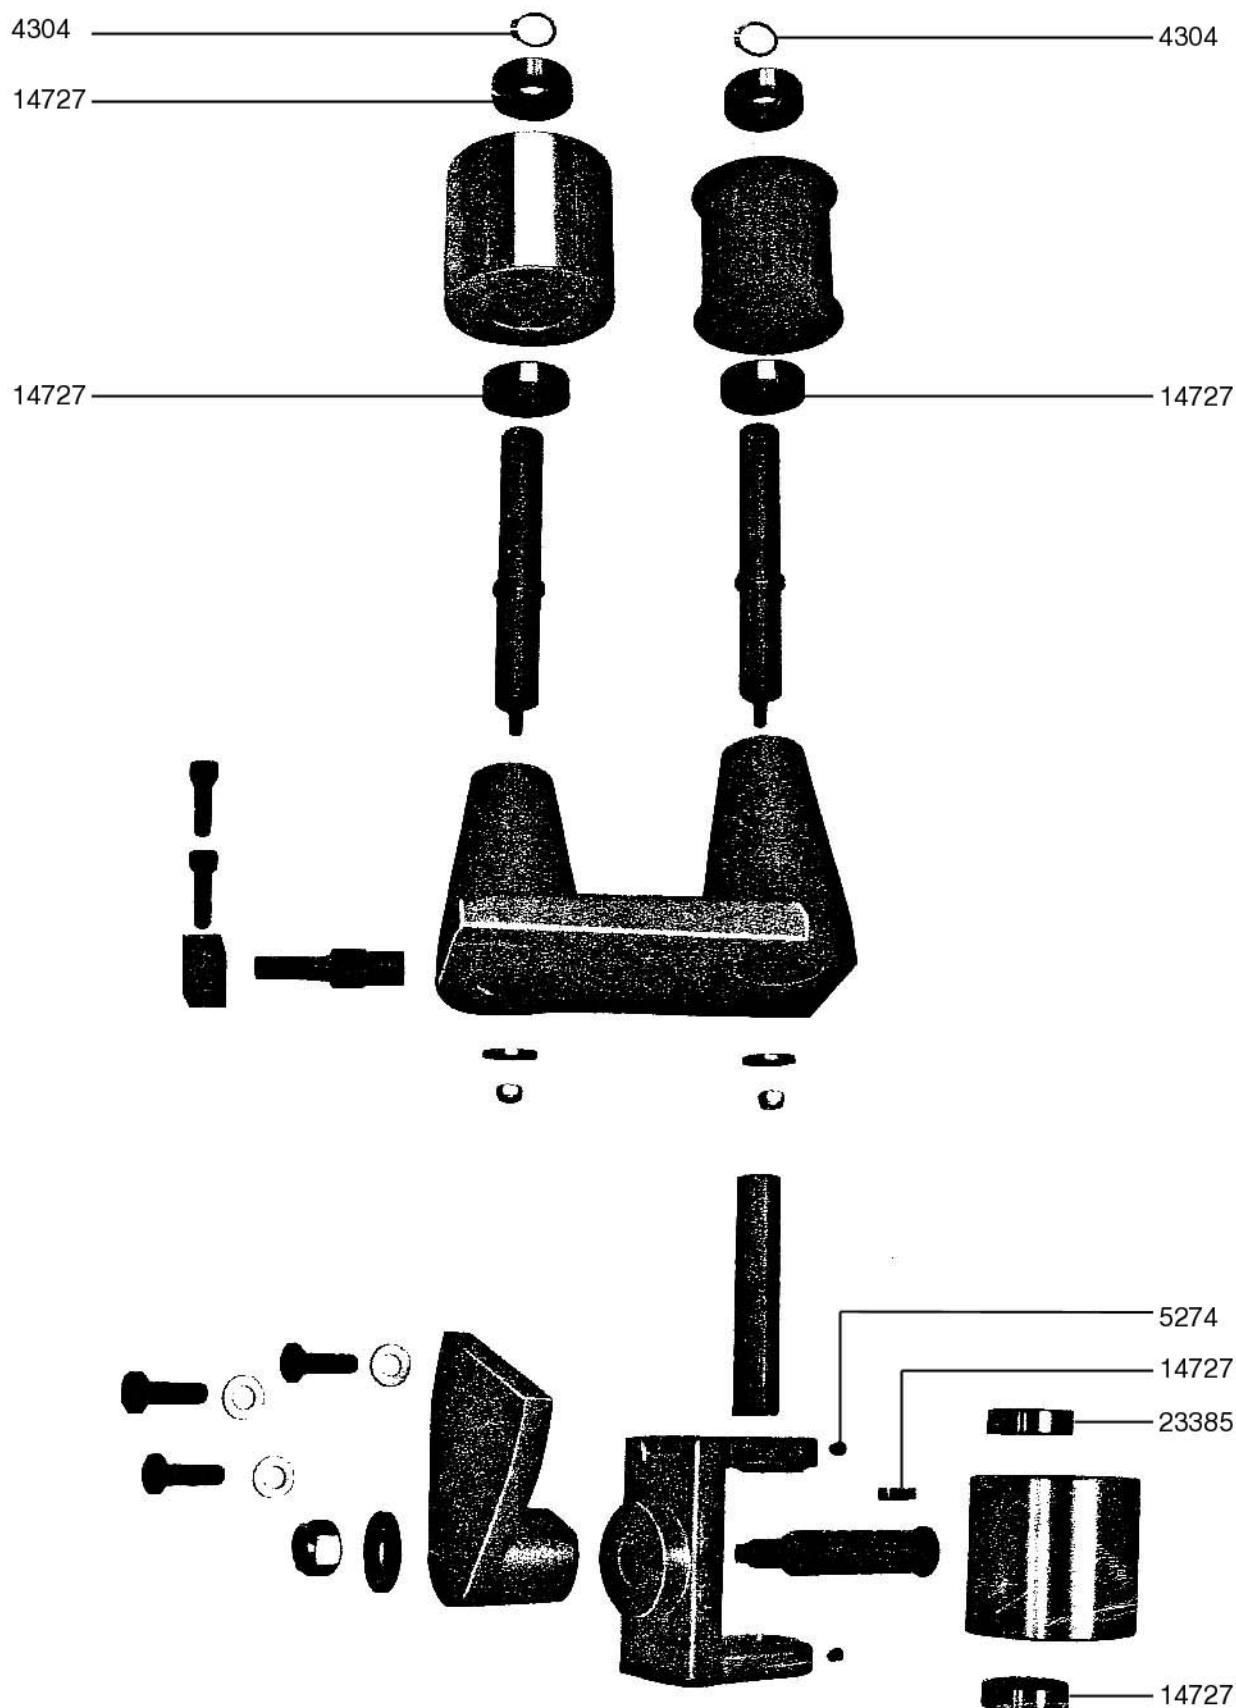


## 7. MOVEMENT TRANSMISSION UNIT

7.16 Oscillating support of the rotary hopper clutch and drive shafts

7.17 Clutch shaft oscillating support


7.18 Oscillating support of the lower central unit drive shaft

 7.19 Oscillating support of the lower central unit drive shaft

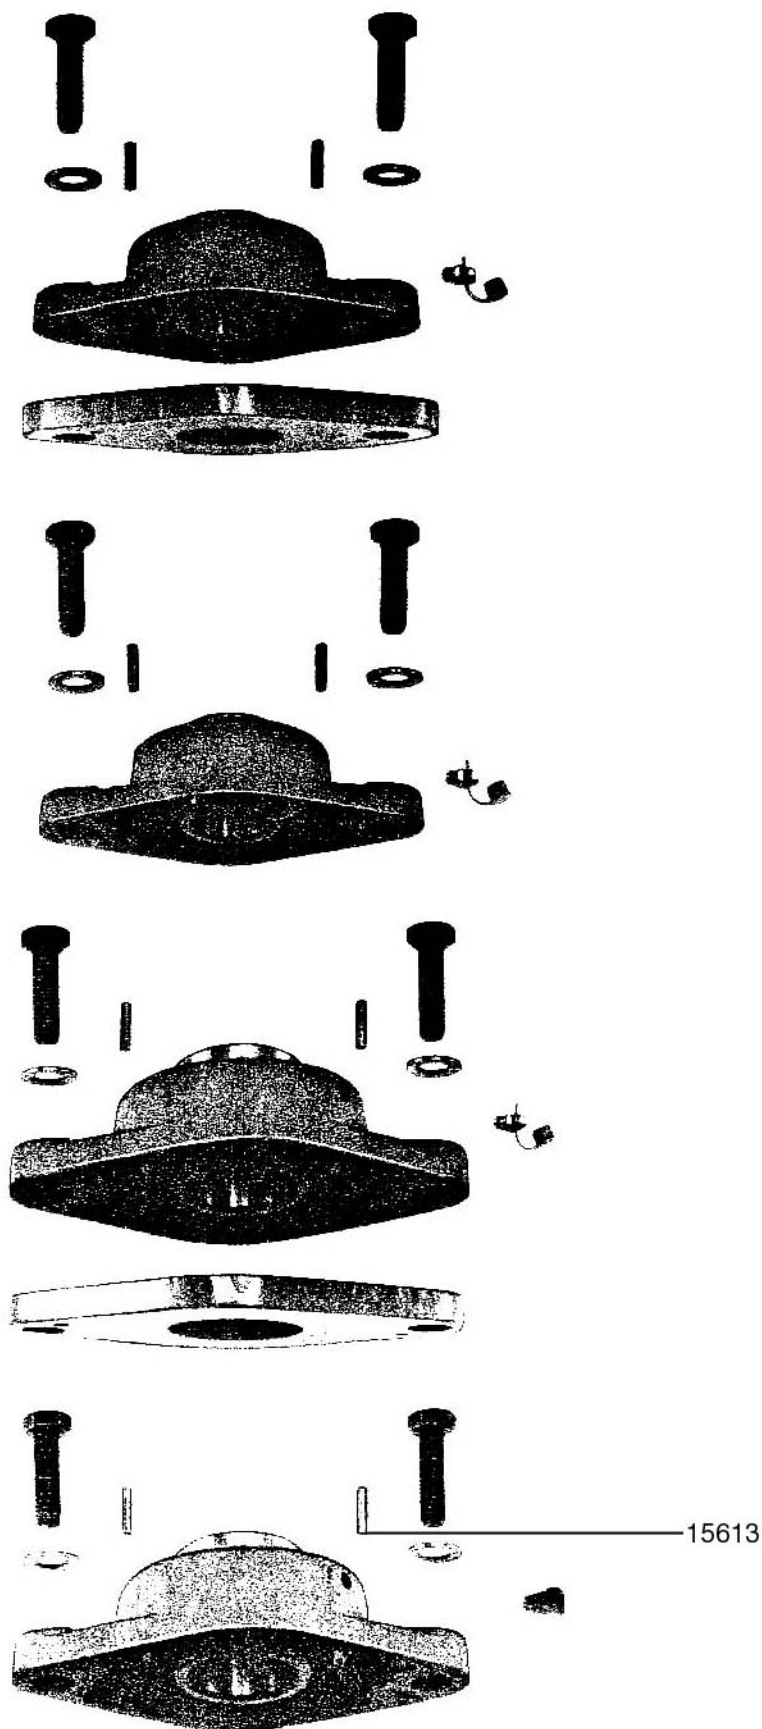


## 8. MACHINE SIZE-PARTS
 
### 8.1 Capsule feeding tube

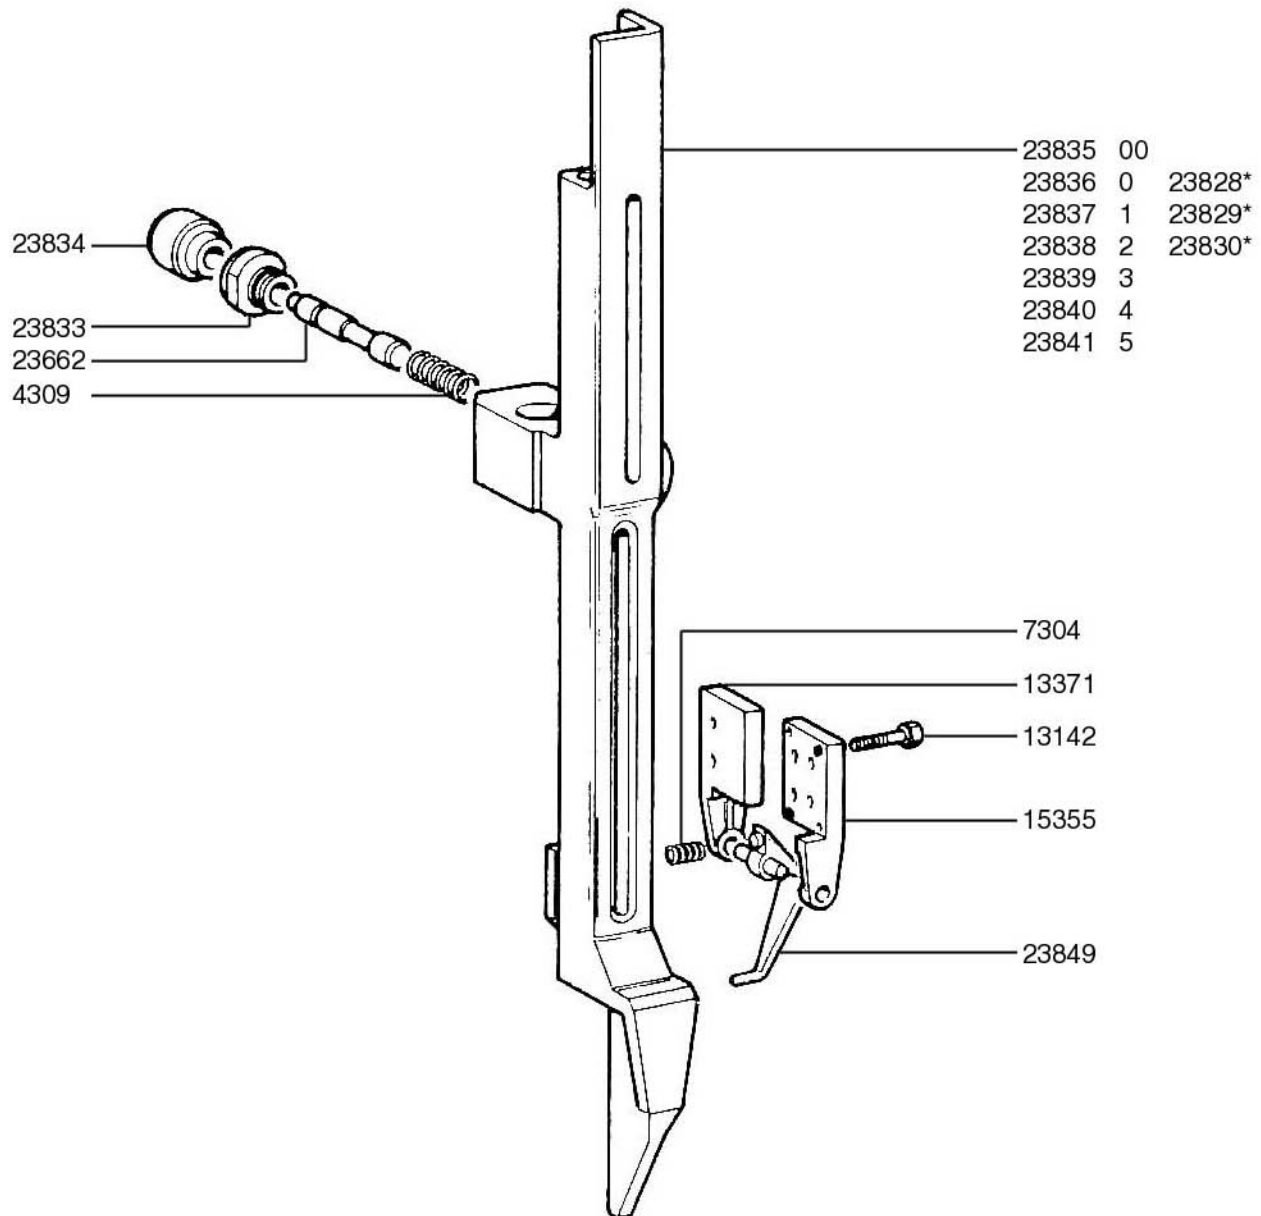

\* Indicates a complete set including 23834, 23833, 23662, 4309, 7304, 13371, 13142, 15355, and 23849.

 
8. MACHINE SIZE-PARTS  
8.2 Capsule orienting drum

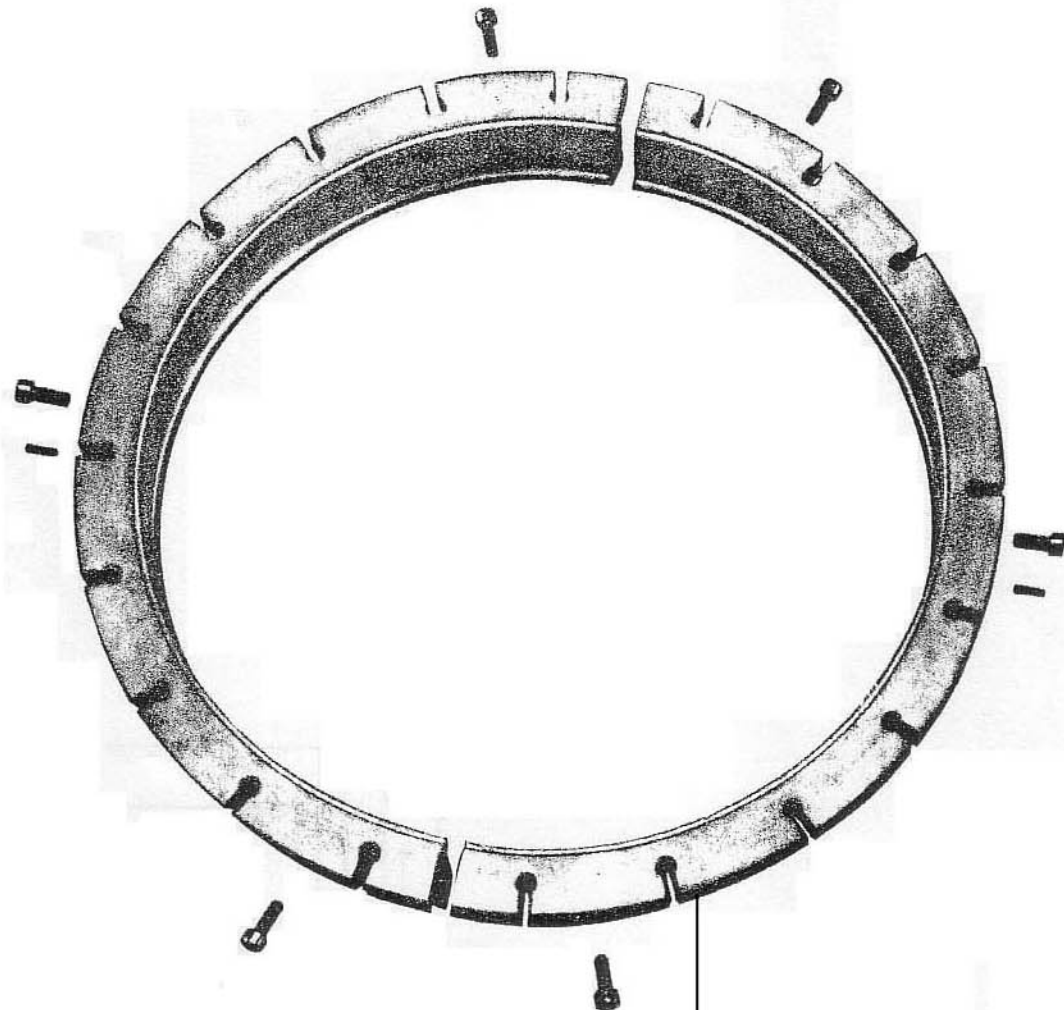

|       |    |
|-------|----|
| 24086 | 00 |
| 24087 | 0  |
| 23842 | 1  |
| 24088 | 2  |
| 24089 | 3  |
| 24090 | 4  |
| 24091 | 5  |



 
8. MACHINE SIZE-PARTS  
8.3 Capsule transfer ring

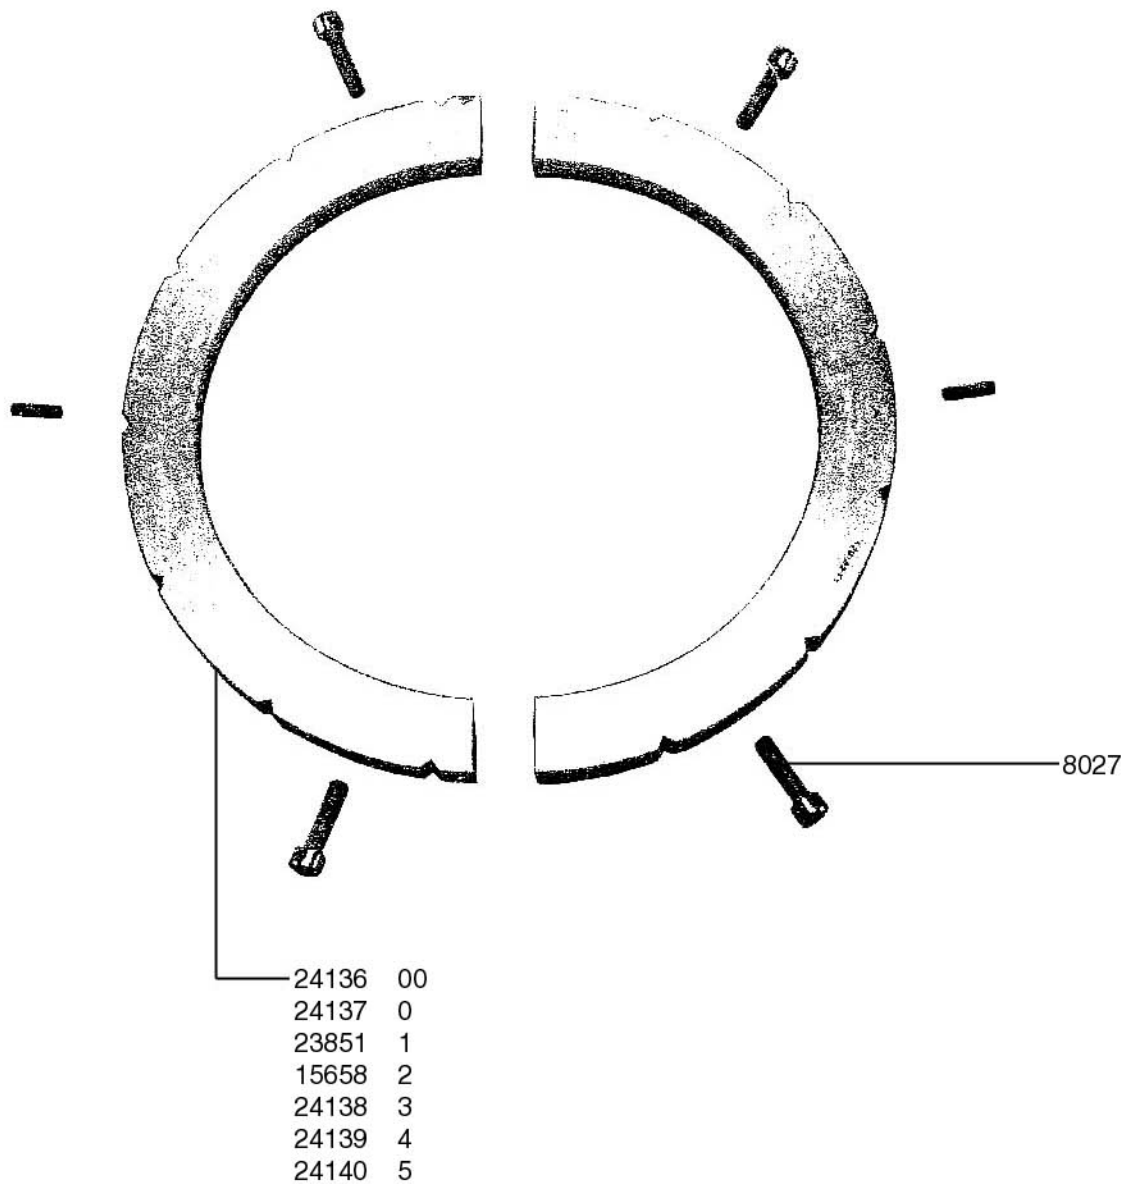


## 8. MACHINE SIZE-PARTS

### 8.4 Piston, spring and dosator
 
### 8.5 Lind-bushing and body-bushing holders

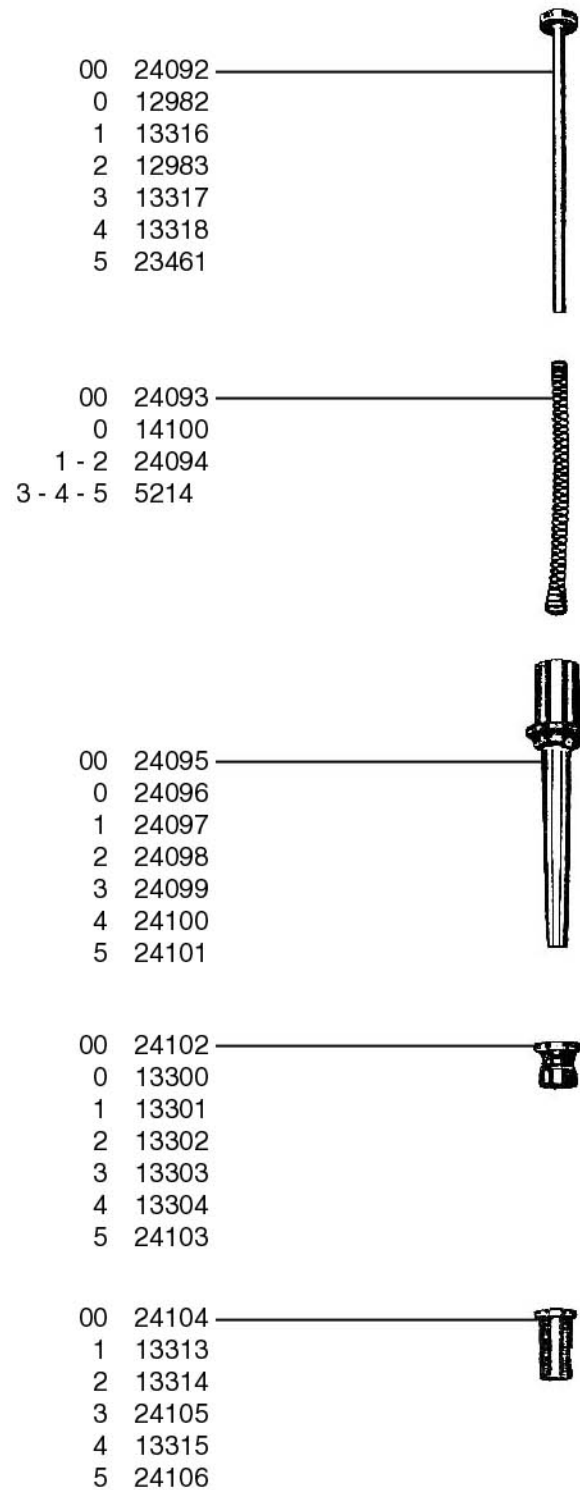

 
8. MACHINE SIZE-PARTS  
8.6 Rest and orienting blade and blade support

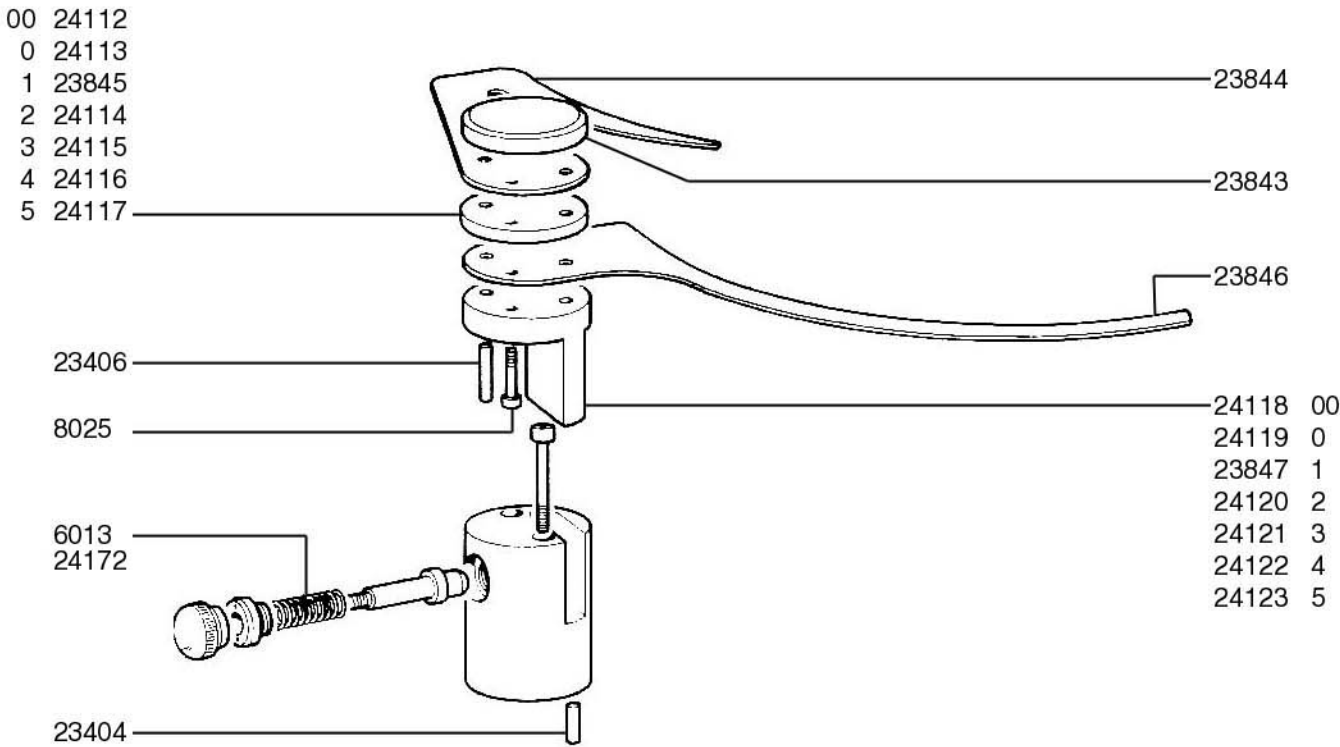



9. PROTECTION HOOD UNIT  
9.1 Protection hood




[CONTENTS](#) | [EXIT](#)

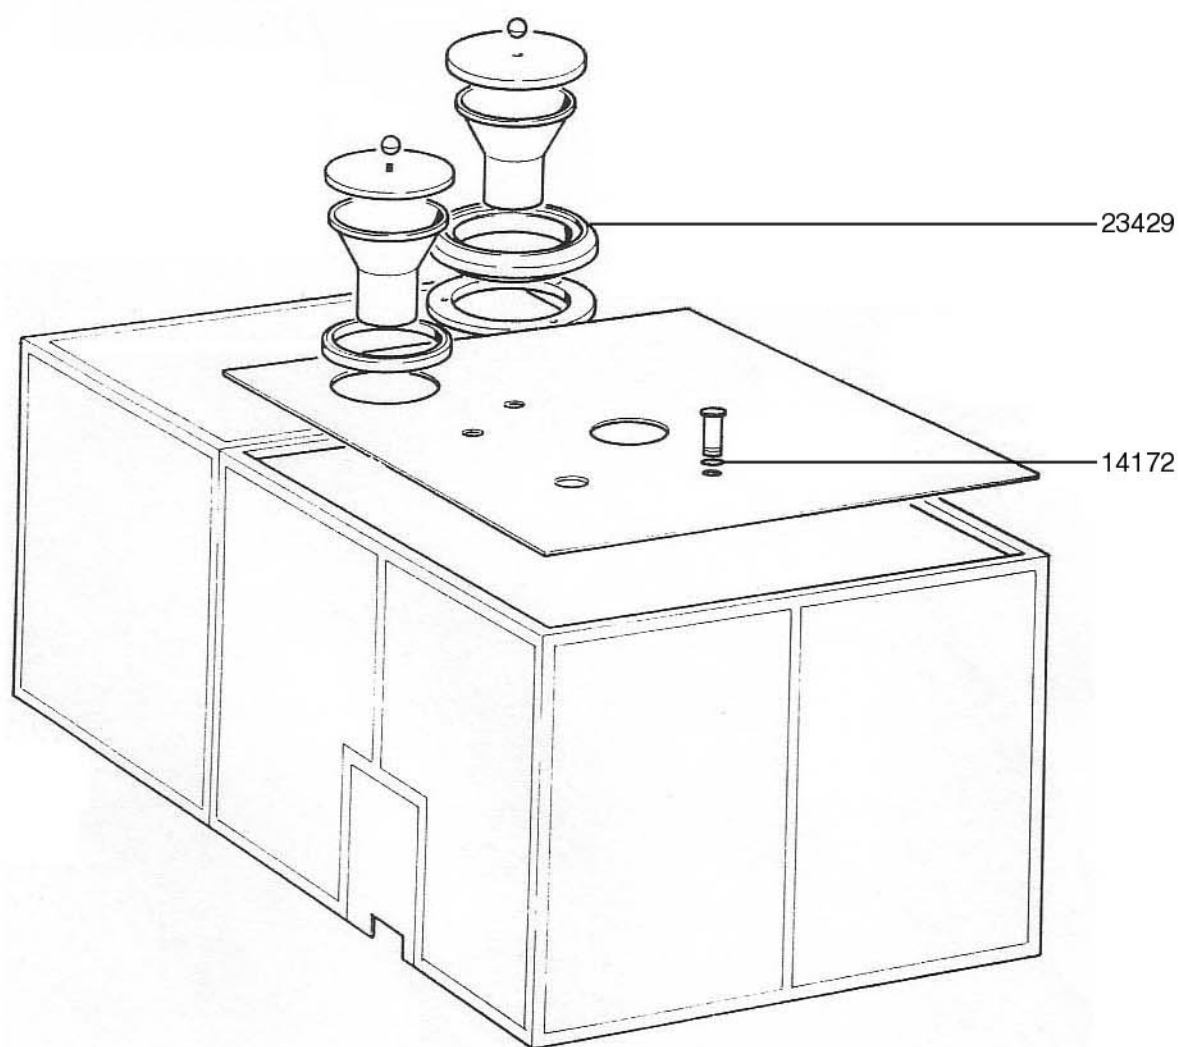 

  
9. PROTECTION HOOD UNIT  
9.2 Sensors, gasket and connectors  
9.3 Product and capsule charging funnels

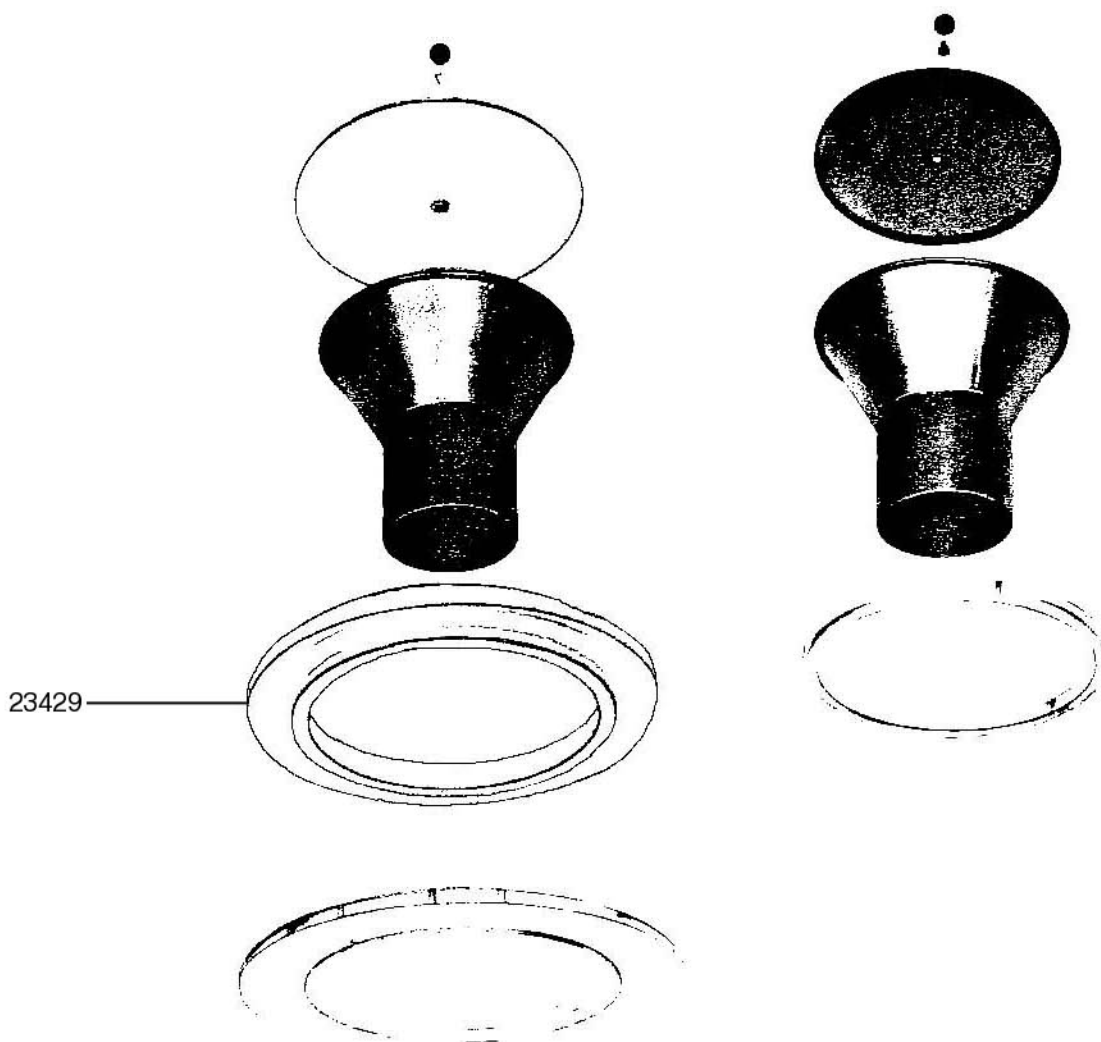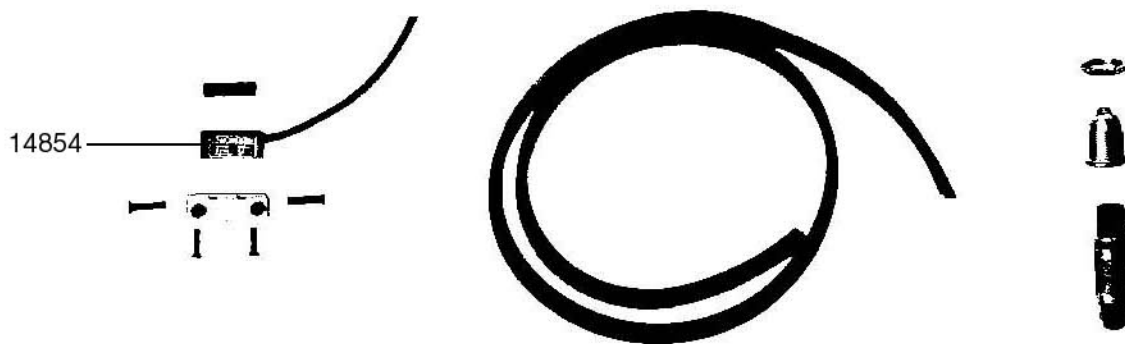

 10. VACUUM SYSTEM  
10.1 Motor and vacuum pump

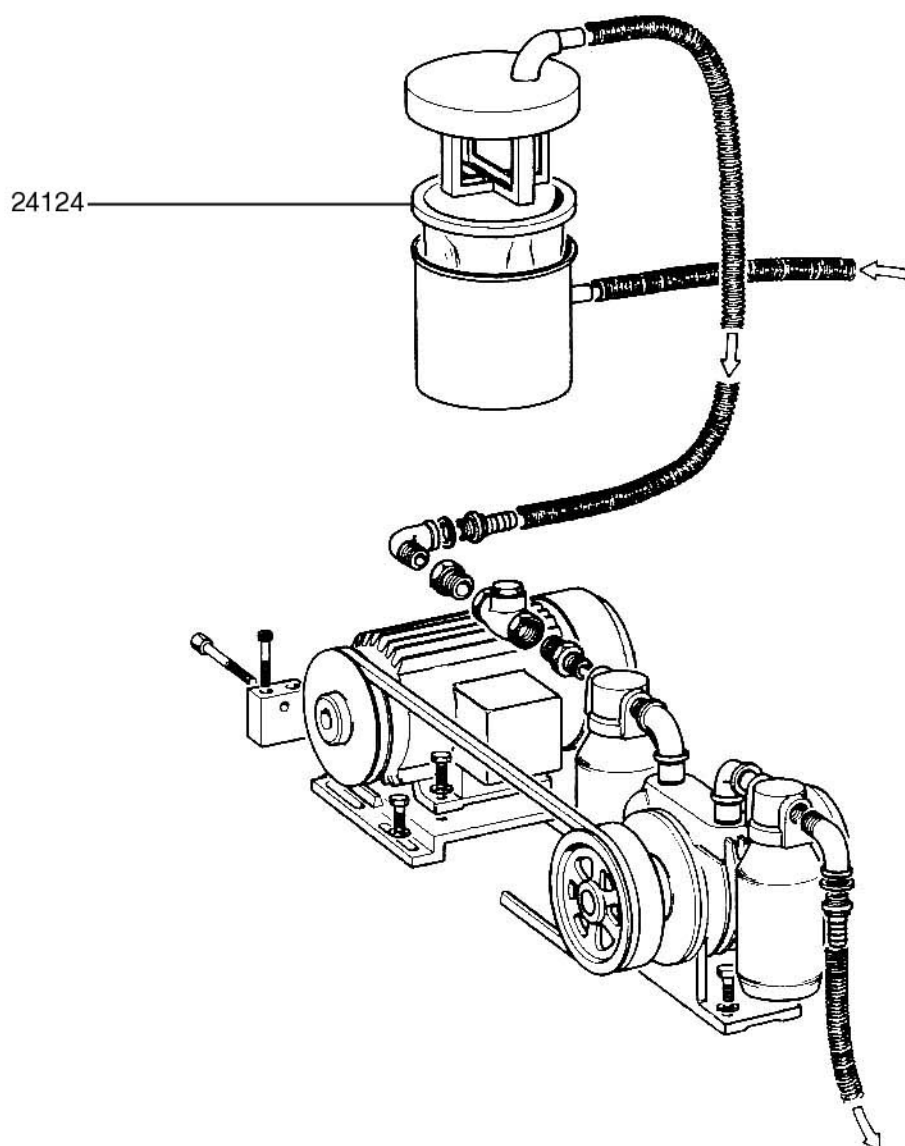

 
10. VACUUM SYSTEM  
10.2 Vacuum elements

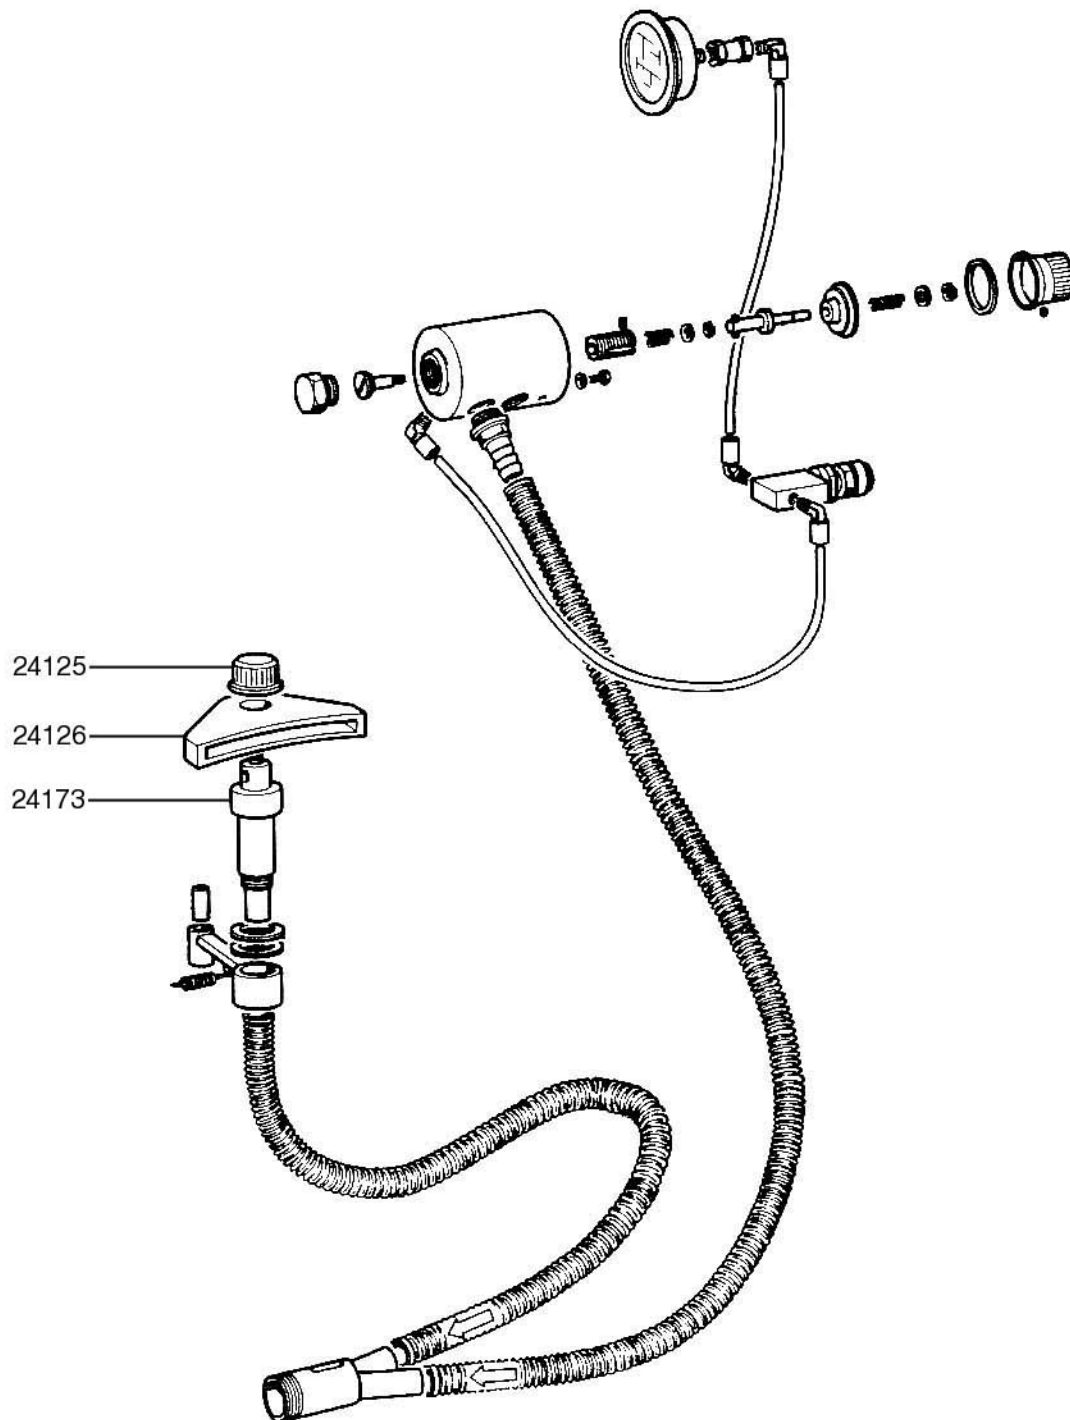




## 11. SUCTION AND COMPRESSED AIR SYSTEM
 
### 11.1 Components of the system

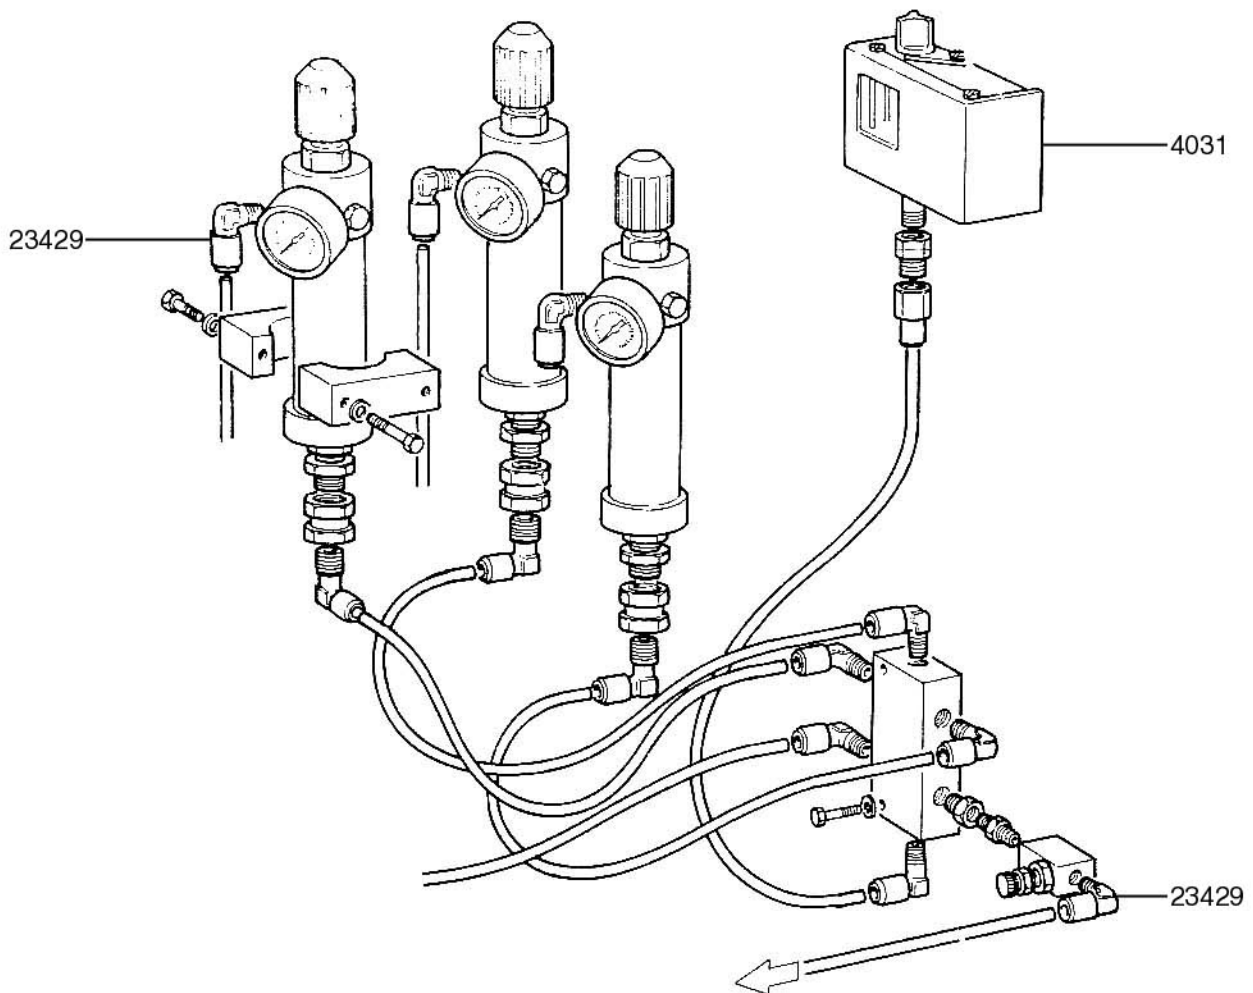


## 11. SUCTION AND COMPRESSED AIR SYSTEM
 
### 11.2 Vacuum cleaner and filter

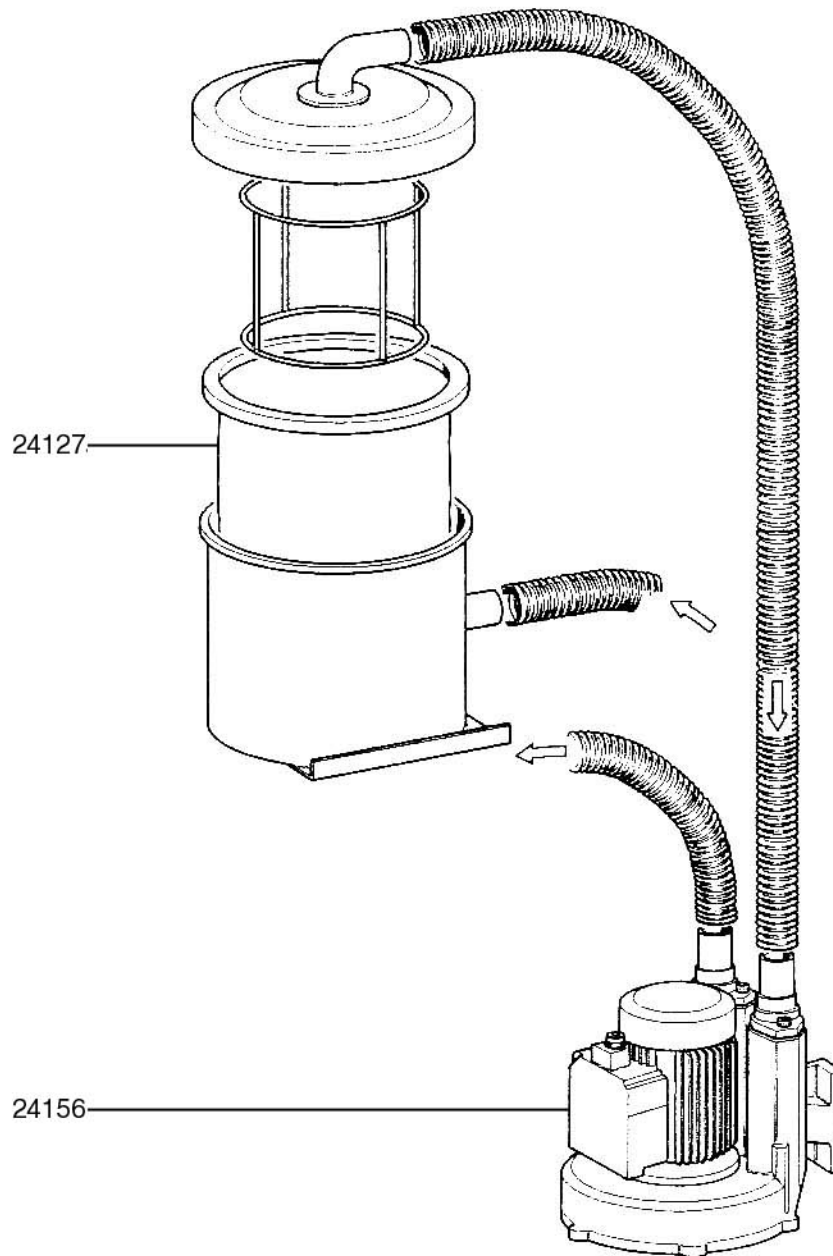


 11. SUCTION AND COMPRESSED AIR SYSTEM  
11.3 Vacuum cleaner and filter (machine)

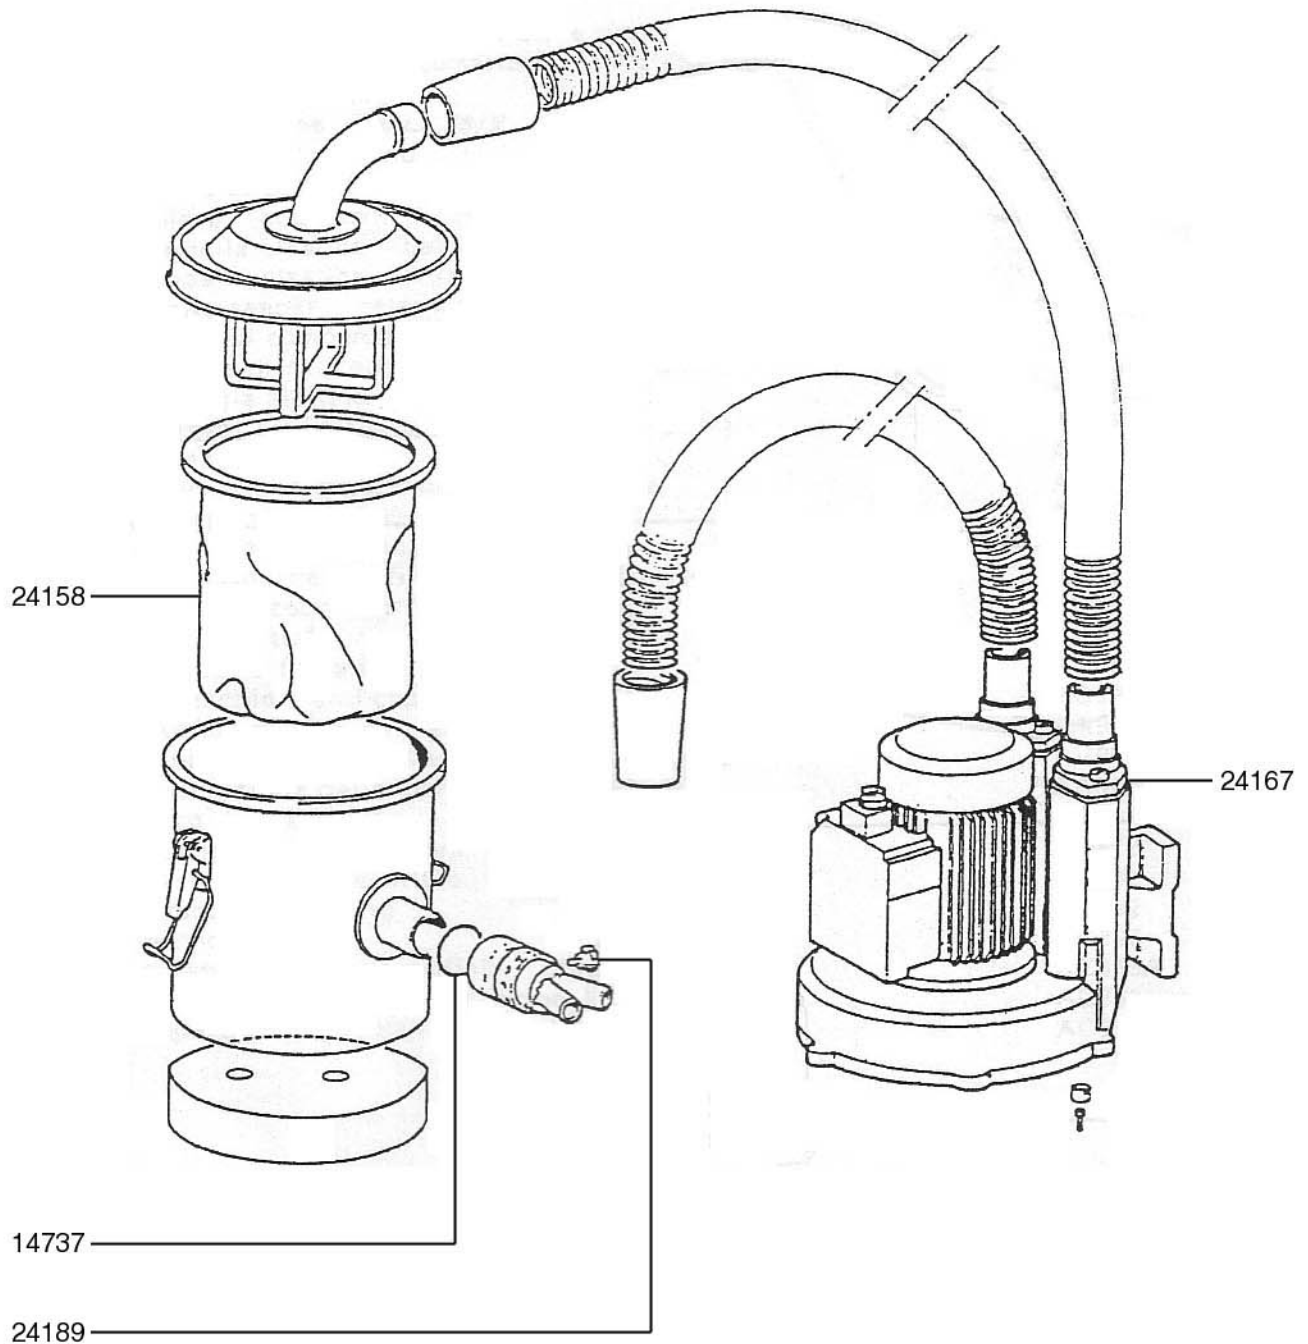


## 11. SUCTION AND COMPRESSED AIR SYSTEM
 
### 11.4 Product recovery mouth


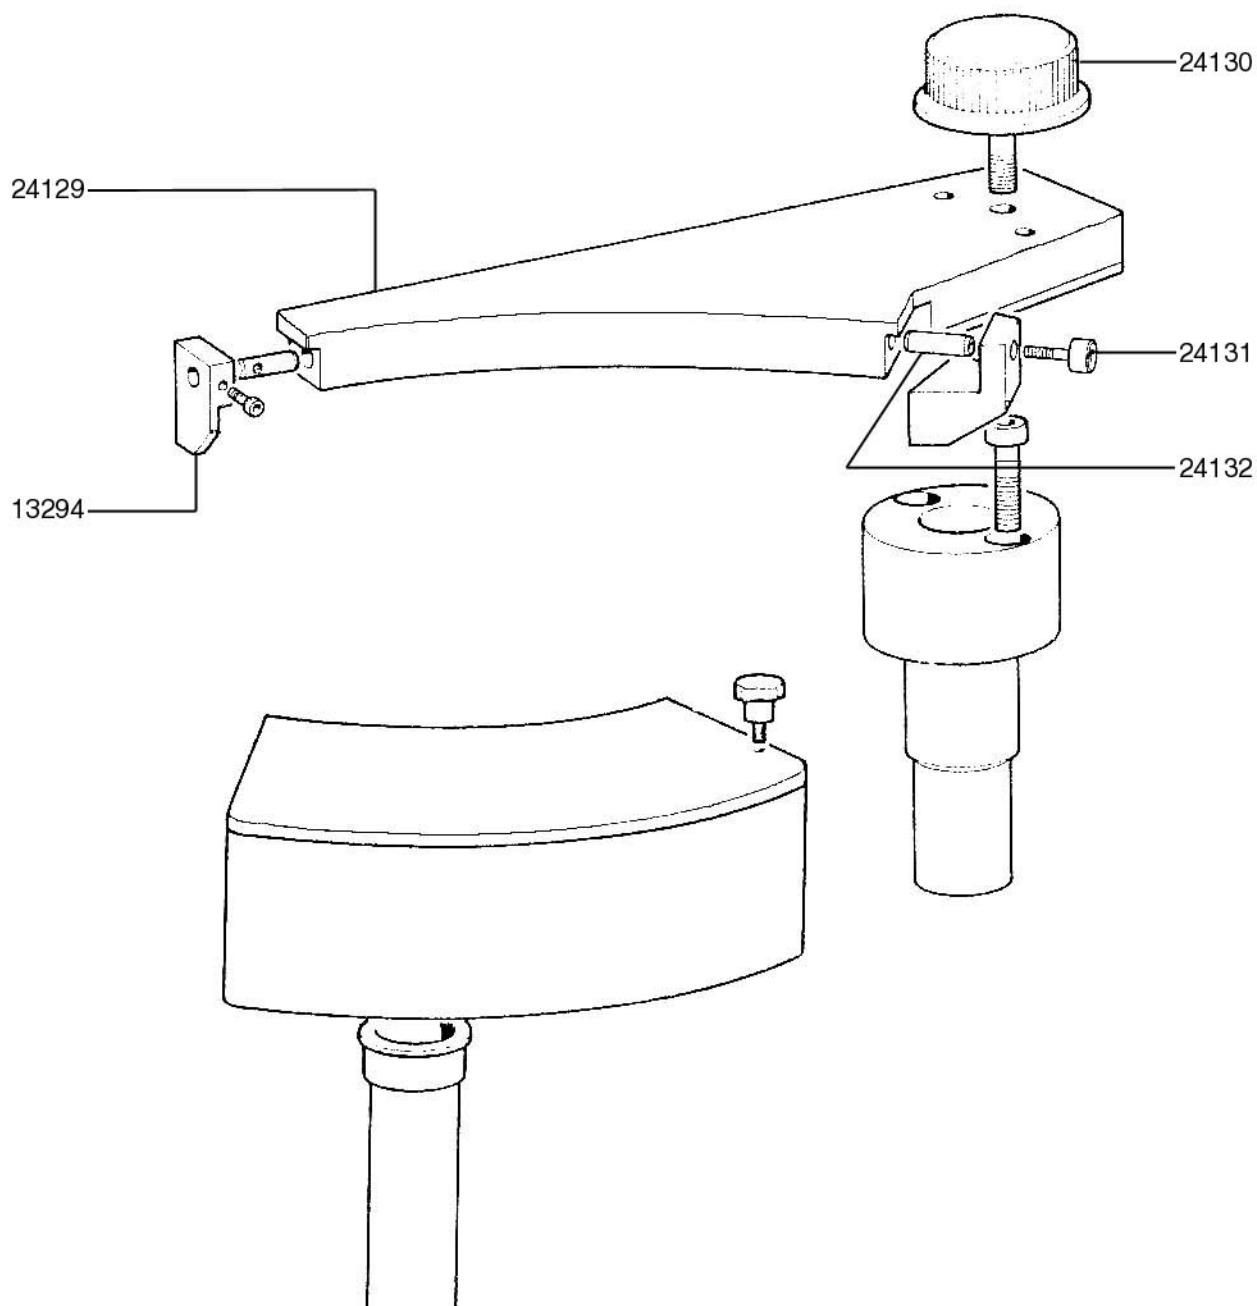


## 12. LUBRICATION SYSTEM
 
### 12.1 Lubrication pump and distribution frames

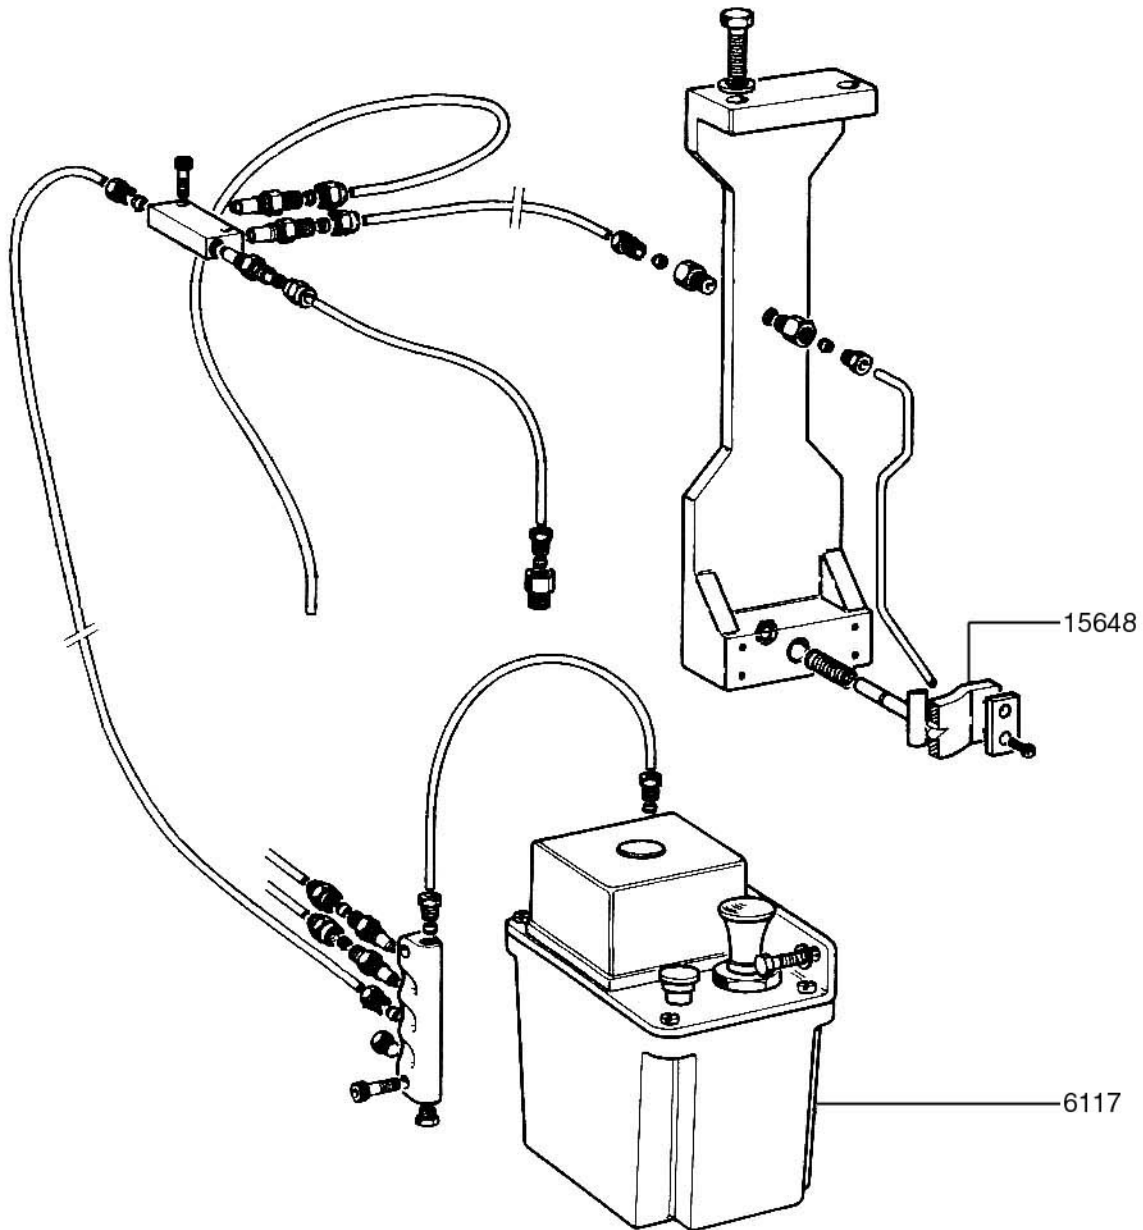

 
 
13. ELECTRIC SYSTEM  
13.1 Connections  
13.2 Tachometer

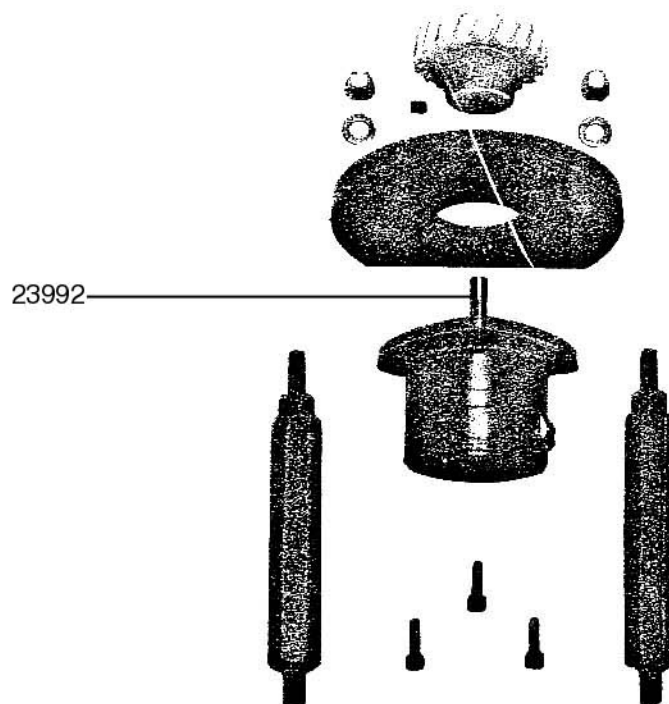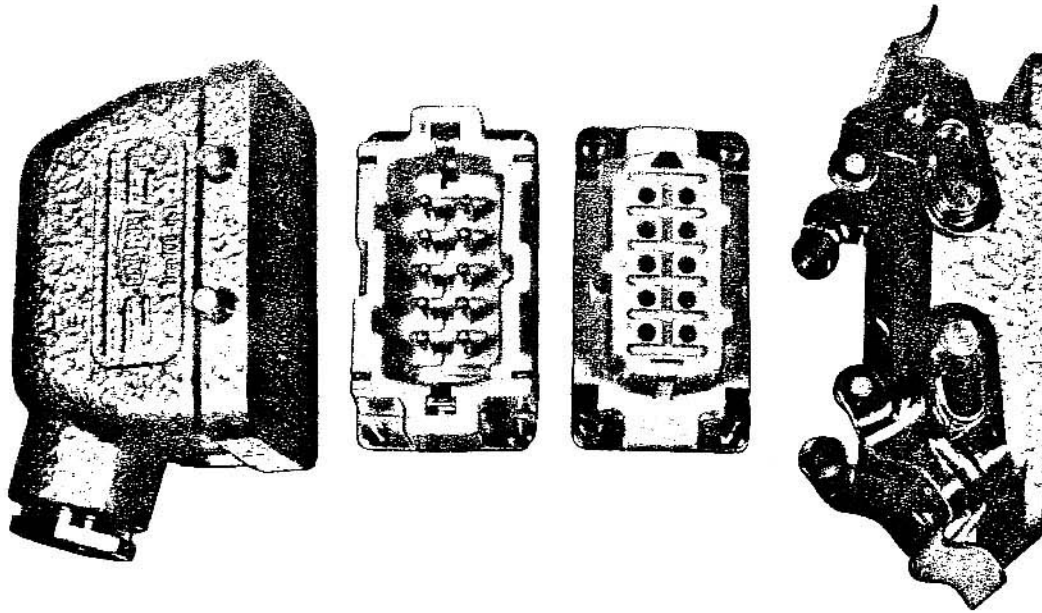



## 14. PARTICULAR EQUIPMENT

 
 
### 14.1a Tool for assembling and disassembling the rotary hopper

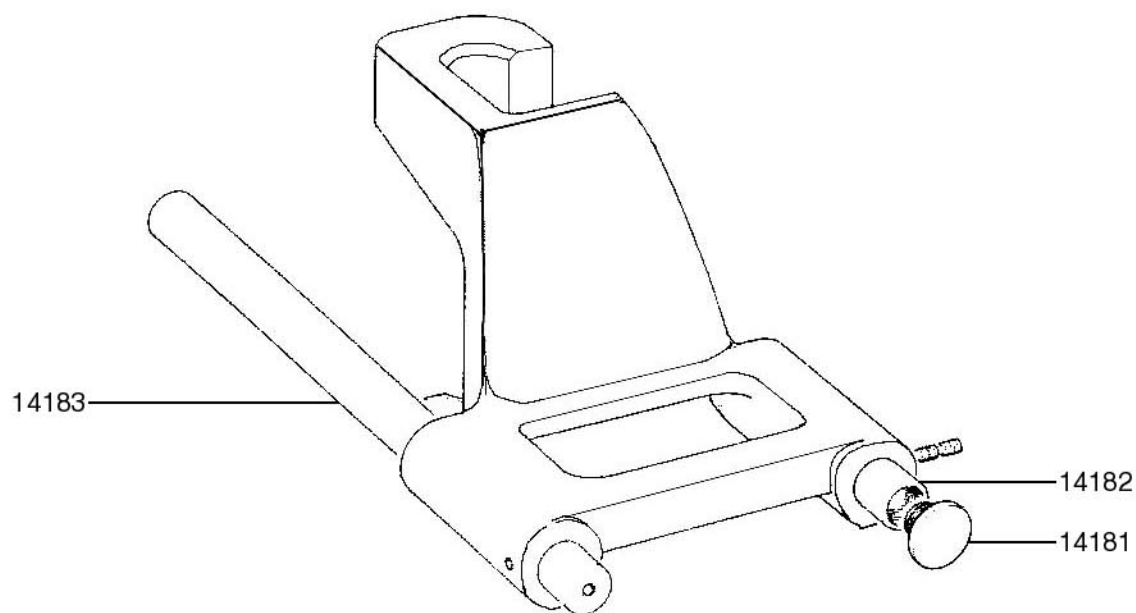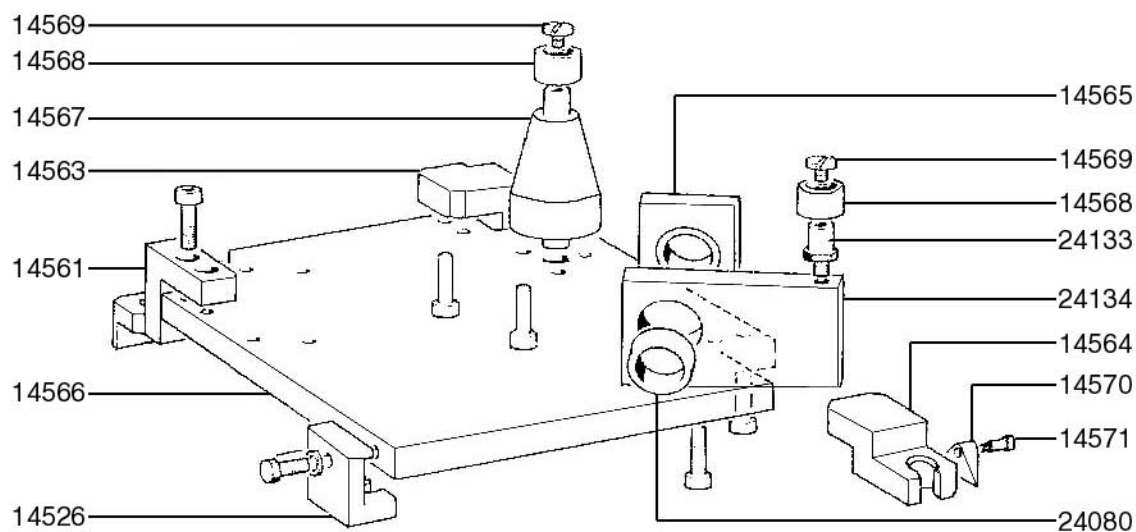



## 14. PARTICULAR EQUIPMENT
  
### 14.1b Tool for assembling and disassembling the rotary hopper

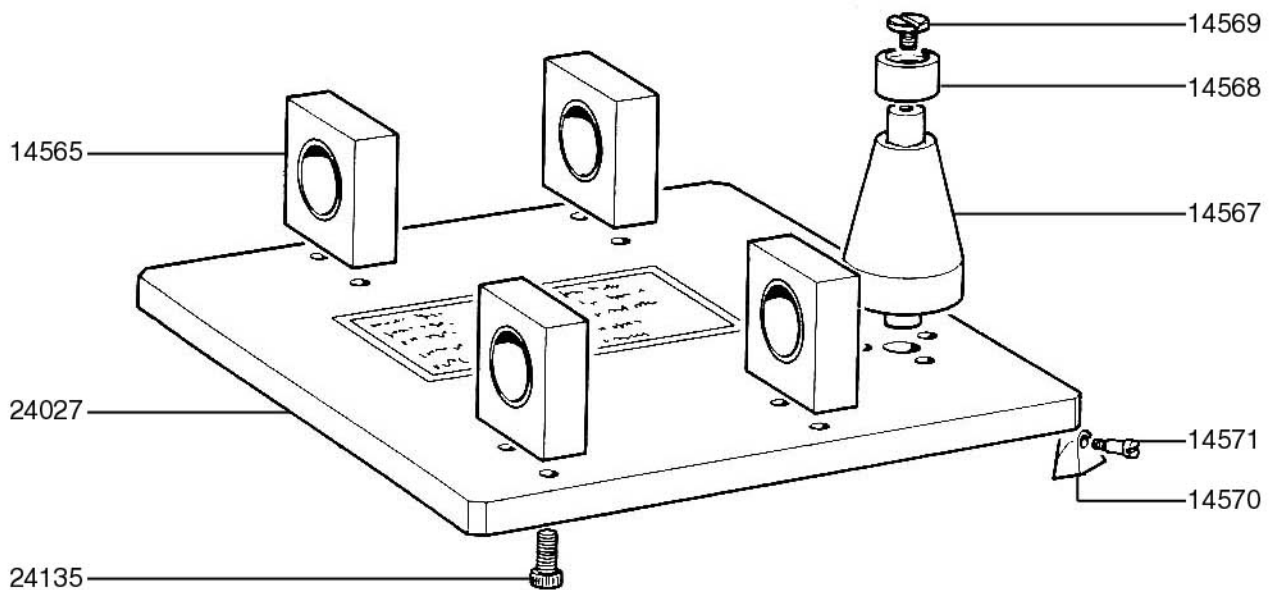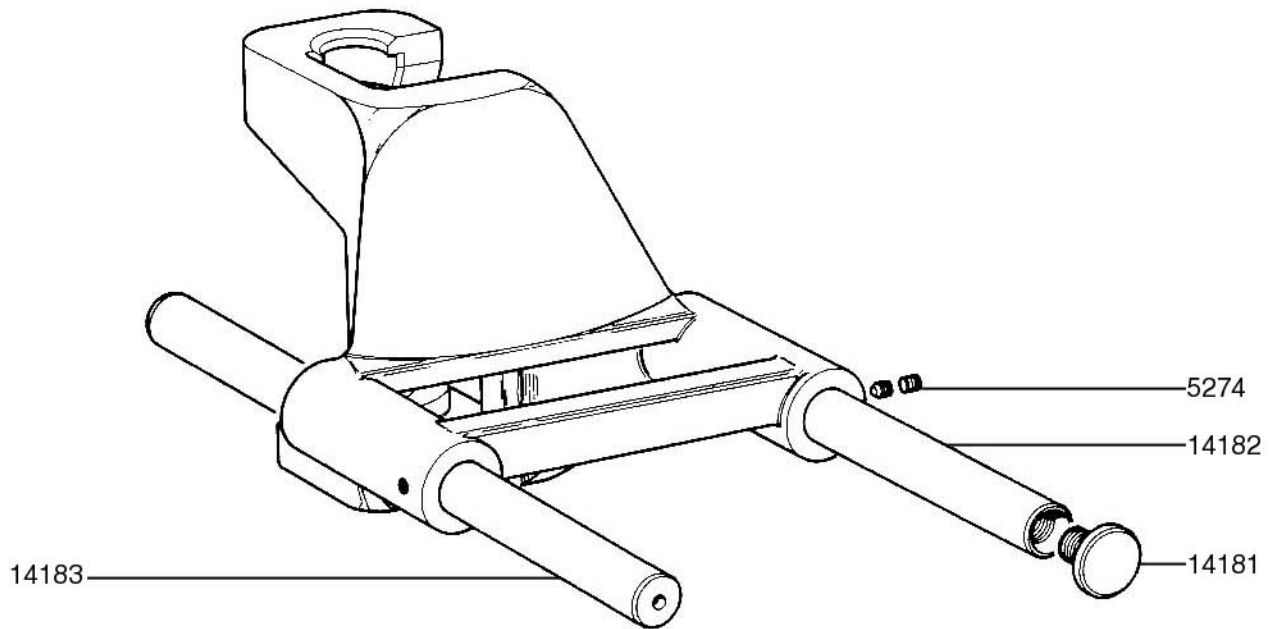

14. PARTICULAR EQUIPMENT  
14.2 Special tools

