

Problem Trouble shooting Solution

The boomerang climbs excessively, then dives crashing into the ground or swoops down low and flies past you.

You threw it side arm, releasing it with too much lay over. Release the boomerang more vertically (Throw more overhand).

The boomerang dips in the middle of the flight possible hitting the ground halfway around or comes on around and lands in front of you.

You threw it too overhand. Release the boomerang with more layover (Throw more side arm).

The boomerang maintains a level path and circles around in front of you and keeps on going landing to you're right.


You threw it too much to the right of the wind. Throw more to the left (into the wind).

Maintains a level flight but doesn't turn toward you at the end but lands way to you're left and maybe behind you.

You threw to much into the wind. Throw to the right of the wind.

Maintains a level flight but dies out halfway around its flight.

You threw too soft. Throw harder.

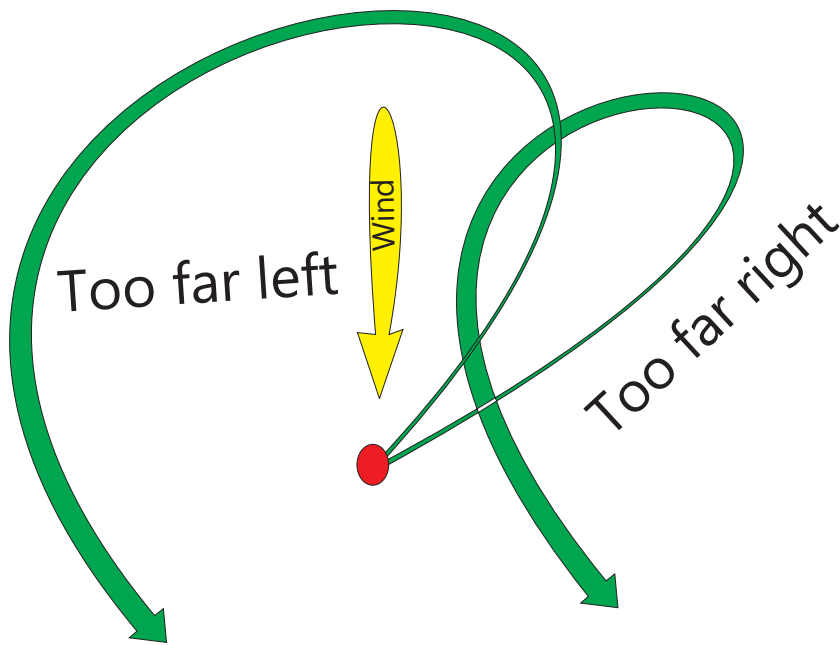

If you keep having problems send me an e-mail.