



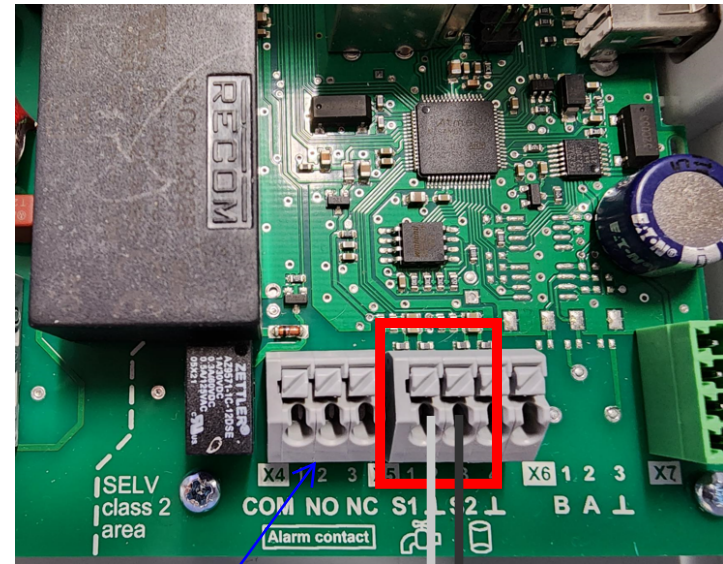
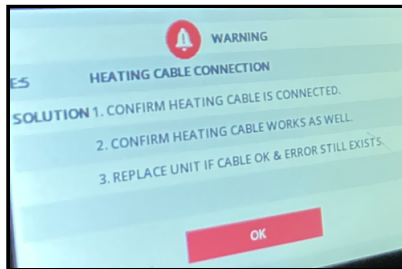
"LINE" POWER IN

"LOAD" TO HEATING CABLE


START UP Programming

Note: selecting certain options affect available options.

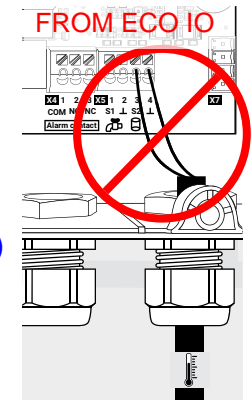
1. Select Country
2. Select Voltage

Self test will run. If you get the error below check your power connection.



Alarm contacts for BMS tie in

If only using one sensor (not required) use the "pipe" sensor S1



TITLE: Wiring an HWAT-ECO-GF		
SCALE: NONE	DATE: 8/7/23	REV: A