


70 Series Landcruiser Console Specialists

Plastic Dash 76 Wagon / 79 Dual Cab & DPF Single Cab - Waeco CDF11 fridge Base console Install Instructions

The Cruiser Consoles gearstick surround is a very popular addition to many 70 series Landcruisers. The Waeco CDF11 fridge base console is suited to the Dual Cab & Wagon New Dash model and Late 2016 onwards DPF Single Cab models. Please read these instructions carefully and consider if you have the required skill and patience to fit this kit. These consoles have been designed with minimal modifications to be done to the vehicle, but some are necessary at your own discretion for the fridge to fit. These instructions suit 76 Wagon, 79 Dual Cab and the Side Curtain Airbag 79 Single Cab though all consoles are model specific. No seat rail modifications are required for the Side Curtain Airbag Single Cabs.


1. INTRODUCTION

Take note of the hole in the console under the vinyl in this location (plastic dash only)

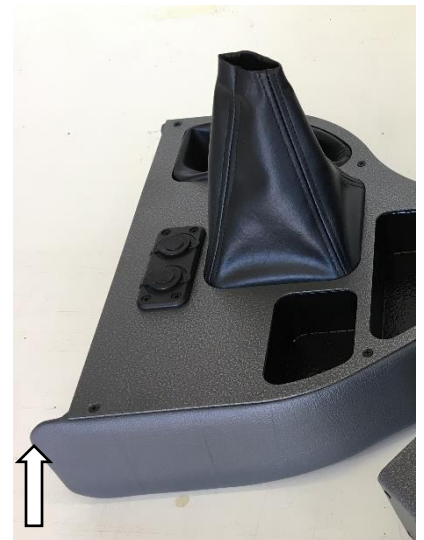


2. OEM CUPHOLDER REMOVAL

When fitting the new gearstick surround (if purchased), remove the 3 bolts (as indicated in image) and the plastic trim clip from the factory cup holder base.

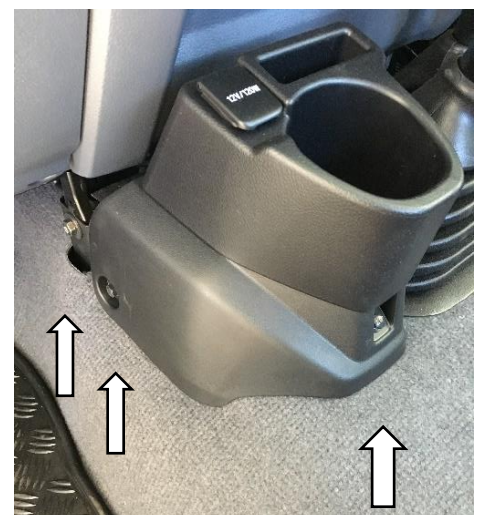

3. OEM CUPHOLDER REMOVAL

Remove the 3 bolts from the SRS airbag black metal module cover and discard. (Do not remove the silver module). Remove the 3 screws from the cup holder and unplug the harness from the factory cigarette socket.

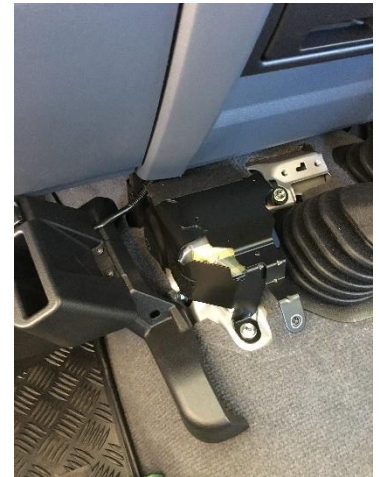

4. SOCKET WIRING

Ensure ignition is off. Cut the plug from the harness and crimp the female terminal to the red wire and the male terminal to the white wire.



5. GEARSTICK SURROUND INSTALL

Put the transfer stick in neutral and remove the gear knobs. You may want to tape the dash to prevent accidental damage to the plastic. Plug in the new USB and cigarette harness and slide the new console under the dash. You might have to wriggle it slightly to get it over the factory rubber boots.




6. REMOVE FRONT SEATS

There are 4 bolts in each seat with a 14mm Hex Head. The rear bolts have plastic covers which are easily removed by hand, then the bolts can be accessed. **It is not necessary to remove the seats in the SINGLE CAB side curtain airbag model but it does help with the installation of the fridge bracket if the seats are removed.**



7. REMOVE PLASTIC CENTRE CONSOLE

Remove the 5 screws holding the small plastic factory console in place

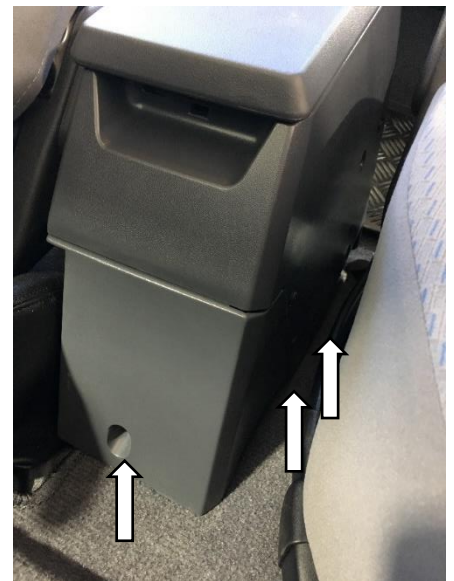

8. ALIGNMENT

If you have purchased the gearstick surround with the fridge console, the two consoles lock together using the tab and the slot.



9. FITTING MAIN CONSOLE

Start with the 6mm bolt in the base first (Taped in beneath our logo in step 10). Two of the screws that held in the old plastic console are used to hold the fridge base secure (one either side). Once the side screws are in, the front bolt can be tightened. Make sure the fridge and gear stick consoles are aligned parallel where they meet.



10. FRIDGE HARNESS

Have the power lead plug ready before the fridge goes into place on the console. We recommend connecting it to a dual battery with an inline fuse to prevent running the starter battery flat



11. FRIDGE INSTALL

The stainless steel brackets secure the fridge without any modifications. There is one for each side and one at the rear of the fridge



12. SEAT REINSTALL

The 4 holes in each seat rail will need slotting into an oval shape. About 6 mm for each hole is enough to allow for the extra room needed for the fridge to fit between the seats. This can be done with a good round file or a die grinder. Remember to file the seat rail holes towards the centre of the vehicle to allow the seats to move out. We also recommend spraying silicon spray on the sides of the fridge to help the seats slide back and forth.

**Not required for SINGLE CABS side curtain
airbag DPF**



13. GEARSTICK FITTING

Find the slotted hole under the vinyl with your thumb and then poke a screwdriver through the centre of it.



14. GEARSTICK FITTING

The factory bolt can then be replaced into the side of the console. Before tightening, pull the gear stick surround console back towards the centre console to close any gap between the fridge and the surround.



15. CONNECTIONS / BATTERY

If connected to dual battery
Read the fridge manual and set
the cut out setting to low, this
will prevent the fridge from
turning off as often the battery
will need full charge before the
fridge will reset.



CHECKLIST – OFFICE USE ONLY

- Console Matches the Invoice
- Correct Gearstick Surround
- Instructions Match the Console
- 6mm Bolt Taped in
- 3x Stainless Brackets
- 4x Stainless 5mm Screws attached
- Signed _____ .