


Touchscreen Automatic Leveling Controller



Application: Motorized vehicles with central pump systems

Part # M37069

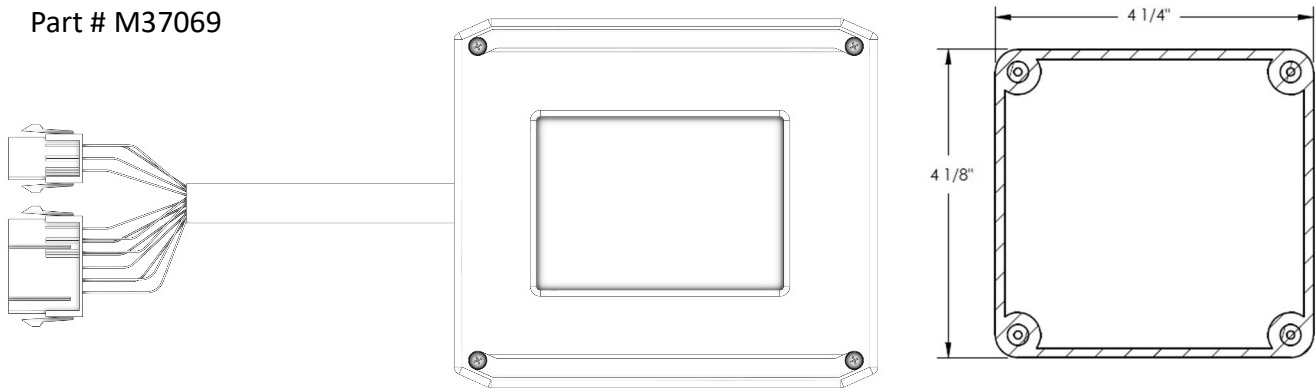

Installation:

1. Must be mounted to a vertical wall or cabinet, facing directly to the front, rear, driver or passenger side of the vehicle. Note orientation shown above when determining the location of the controller in the vehicle, the harness exiting the controller to be on the left side when facing the control screen, it can be tucked down or up to shift controller towards wall or component.
2. See cutout dimensions above, for the wall or cabinet. Ensure controller is mounted as level as possible to the chosen selected level reference point (countertop, floor, etc.). Take care not to cut the hole oversize where the front bezel will not cover where you cut.

Calibration:

1. Press menu icon (lower right corner), press Calibration. For class-c motorhome applications press "A" for leveling mode.
2. Follow instructions to choose level reference point (one area inside RV, typically kitchen counter). Next step is operating the system, ensure vehicle ignition is off, parked on flat level ground, nothing is underneath the vehicle or leveling jacks. When operating keep in mind keeping the vehicle as low as possible, using less lift is best.

Operation:

1. Vehicle ignition must be off to deploy or extend the leveling cylinders, extend functions will be disabled with vehicle ignition on, with the buttons "greyed out".
2. Screen will prompt error messages and instruct how to calibrate (only required once, unless you choose for the controller to level to a different level reference point).

Troubleshooting:

1. To reset the controller, simply press the home icon, cycle the ignition or unplug the controller.