PLUSCENT



USER MANUAL

Please read the manual carefully before using the unit

FOR VALUED CUSTOMERS

Thank you for purchasing the PLUSCENT dehumidifer.

PLUSCENT specialize in high-quality dehumidifiers, offering top-notch products and services to create a comfortable and healthier indoor environment.

To ensure optimal performance and satisfaction, we kindly remind you to carefully read the instruction manual provided. It contains valuable information on how to operate, maintain, and make the most of your dehumidifier. Should you have any questions or need further assistance, our dedicated customer support team is here to help.

TO ACCESS CUSTOMER SUPPORT FASTER

We offer a one-year warranty. If you have any questions or product issues during this period, please contact our pluscent service team: **support@pluscent.shop**.

We value our customers and strive to provide exceptional support. Our friendly customer service team is available to answer any queries, provide troubleshooting assistance, and address any concerns you may have regarding our products or services.

We will reply and answer your questions within 24 hours. CONTACT US: WE'RE HERE 7 DAYS A WEEK TO HELP You!

After-Sales Email: support@pluscent.shop

CONTENTS

SAFETY PRECAUTIONS	1
PRODUCT DETAILS	2
OPERATION INSTRUCTION	3
AUTO SHUT OFF	4
EMPTY THE WATER TANK	4
CONTINUOUS DRAINING	5
CLEANING	5
SPECIFICATIONS	5
PACKAGE CONTENTS	5
TROUBLE SHOOTING	6



PLEASE DO NOT RETURN THIS ITEM TO THE PLACE OF PURCHASE

If you are missing any parts, experiencing ANY issues while operating the item, in need of a replacement, wish to return it, or require any assistance, please contact us at:

www.pluscent.shop

SAFETY PRECAUTIONS

SAFETY NOTES:

To operate the dehumidifier better and achieve the best effect, please read the manual carefully before first use and keep it for future reference.

Please check if there is any damage around the machine, if the machine is damaged, please contact customer service immediately.

IMPORTANT NOTICE FOR FIRST TIME USE:

Cleaning: Before cleaning the dehumidifier, ensure that the power is turned off and it is unplugged from the power outlet.

Power Management: When not using the dehumidifier for an extended period, remember to turn off the power and disconnect it from the power source. Cleaning Instructions: Use a soft cloth for cleaning; avoid using wax, thinner, or strong detergents.

Placement: Keep the dehumidifier away from heat sources, flammable substances, and hazardous materials.

Power Cord: Do not use the product if the power cord is broken or damaged. Likewise, do not use a loose or damaged socket.

Air Inlet and Outlet: Never insert fingers or objects into the air inlet or outlet. Ensure that the air inlet and outlet of the dehumidifier are not blocked.

Stability: Avoid climbing or sitting on the dehumidifier. Always place it on even surfaces and refrain from placing it on uneven or sloping ground.

Water and Liquids: Do not spray water, insecticides, or flammable liquids on the unit. Power Operation: Do not operate or turn off the dehumidifier by plugging or unplugging it from the power source.

Modifications and Repairs: Do not modify the length of the power cord or share the outlet with other dehumidifiers. Never attempt to disassemble or repair the dehumidifier yourself. Contact the manufacturer or a professional for any repairs. Cord Safety: Avoid placing heavy objects on the power cord and ensure that it is not compressed. Do not place flower vases or water containers on top of the dehumidifier.

Power Cord Damage: If the power cord is damaged, it must be repaired by the manufacturer or replaced by a professional to prevent any potential hazards. Operating Environment: This dehumidifier is designed to function within a working temperature range of 59°F to 104°F.

WARNING

Manufacturer's Recommendations

Storage: The equipment should be stored in a room free from potential ignition sources, including fire, working gas equipment, and working electric heaters.

Handling: Please refrain from puncturing or burning the equipment under any circumstances.


Disposal: This product should not be disposed of with regular household garbage. It is important to properly classify and separate it for recycling purposes, promoting the sustainable use of resources.


Installation: The equipment must be installed according to national wiring requirements. If the power cord becomes damaged, it should only be replaced by the manufacturer, authorized agent, or a professional.

Proper Usage: The device should only be operated by individuals who have received guidance from a professional.

Safety Precautions: Keep the equipment out of reach of infants, children, and the elderly to ensure their safety.

PRODUCT DETAILS

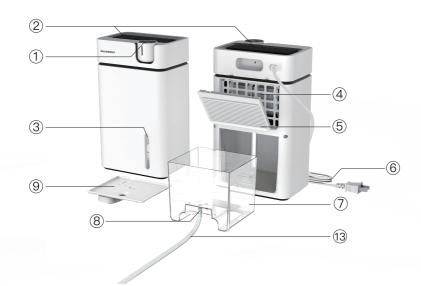

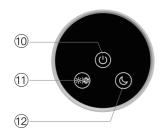

- 1 Control Panel
- 2 Dry Air Outlet
- ③ Water Level And Ambient Lighting
- (4) Air Inlet
- (5) Dust Cover
- 6 Power Cord

- (7) Water Tank
- 8 Drainage Outlet
- 9 Tank Cover
- 10 Power Button
- (1) Light Button/Defrost Mode
- 12 Sleep Mode
- (13) Drain Hose

OPERATION INSTRUCTION





Press the power button to turn on the dehumidifier and LED Atmosphere light. Press again to turn off.



Tap (1) the 7 colors light recycle

Tap (for the 1st time, lock your prefer color

Tap (for the 2nd time, light turn off

Tap (for the 3rd time, the 7 colors lights recycle again

PRESS AND HOLD FOR 5 SECONDS TO ACTIVATE THE DEFROST MODE

To activate the defrost mode, press and hold the for 5 seconds. This feature is useful when you observe frost buildup on the metal parts at the back of the machine due to low temperatures. The defrost mode will initiate the melting process. Once the frost has melted, you can simply tap the defrost button to exit the mode, and the machine will resume normal operation.

SLEEP BUTTON

By pressing the sleep button, the dehumidifier's light will turn off, the sound will be reduced, and the gear will automatically switch to a low setting. (NOTE: In the sleep mode, the dehumidifying effect may be weaker compared to the normal mode, resulting in a longer dehumidification time.)

AUTO SHUT OFF







Working Normally

Water Tank Full

Water Tank Missing

When the water tank is full or the water tank missing, the dehumidifier will stop working and the ambient light will blink red.

NOTE:

Do not use the handle to move the dehumidifier when the water tank is full, as even a slight tilt can cause spillage

EMPTY THE WATER TANK









When the water tank is full, the dehumidifier will stop working automatically, and the red indicator lights up. The buzzer will beep 5 times to remind you to empty the water tank.

- 1. Gently pull the tank out.
- 2. Take off the lid.
- Pour out the collected water.
- 4. Reposition the water tank into the machine.

NOTE:

- 1. Do not remove the float from the water tank. The full tank sensor will no longer be able to detect the water level correctly without the float and water may leak from the tank.
- 2. When reattaching the water tank, ensure it is correctly positioned. If the water tank is not properly placed, it will activate the sensor and the dehumidifier will not operate properly.

CONTINOUS DRAINING

- 1. Open the water tank cover, and pull out the water tank rubber plug.
- 2. Insert the drain hose (included)
- 3. Connect drain hose to the sewer. Make sure the hose is secure so there are no leaks.

CLEANING

If the tank is dirty, please wash it with cold or lukewarm water. Do not use detergent, scouring pads, chemically treated dust cloths, gasoline, benzene, thinner, or other solvents, as these may scratch and damage the tank and cause water leakage.

NOTE: Do not place the water tank on its side or upside down.



SPECIFICATIONS

Model	CT17	
Rated Voltage	AC100-240V, 50-60Hz	
Rated Power	60W	
Package Size	15.35*9.84*7.05 inches	
Weight	5.91lb	

PACKAGE CONTENTS

- 1*User Manual
- 1*Dehumidifier
- 1*Drain Hose

TROUBLE SHOOTING

Problem	Possible Cause	Solution
The red indicator	The water tank is full	Empty the water tank and place it in correct position
lights up	The float gets jammed	Press the float
The unit decen't energte	Has the power cord been disconnected?	Plug the power cord into the outlet
The unit doesn't operate	The air inlet or outlet is blocked	Remove foreign bodies

PLUSCENT

Dehumidifier For Home

