


Screw Placement for PB-U Panel

● Fasteners are placed in between each rib on the top, by the ridge and on the bottom, by the eave. On a panel interior they are placed between every other rib. Approx. every 4'

● Lap Screws are placed on the laps of the panels to secure them together. Approx. every 2'

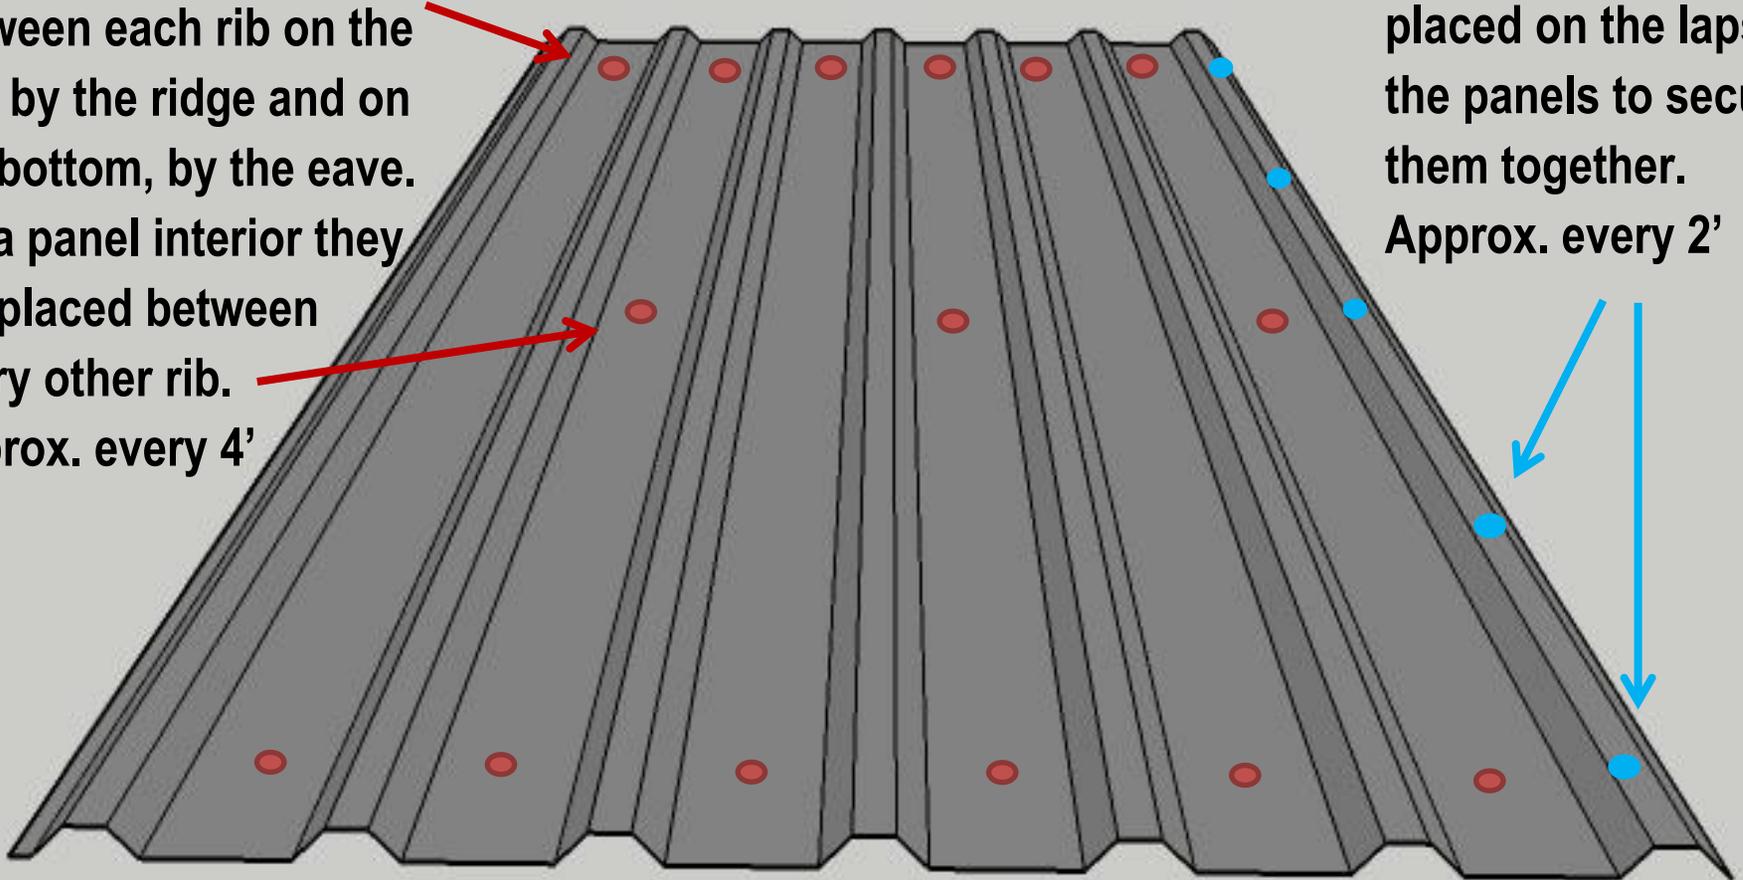

Fastening: If you want to pre-drill holes, use a cover sheet to prevent hot shavings to stick to your panels. Drive the fastener so that the washer is compressed securely against the metal. Do not overdrive the fastener as this may cause washer failure which can cause a leak.