


System Reset Instructions

Used to reset entire bay system in case of fatal malfunction. You can go back to where play left off

Press the WIN key on the keyboard




Press the reset button on the screen

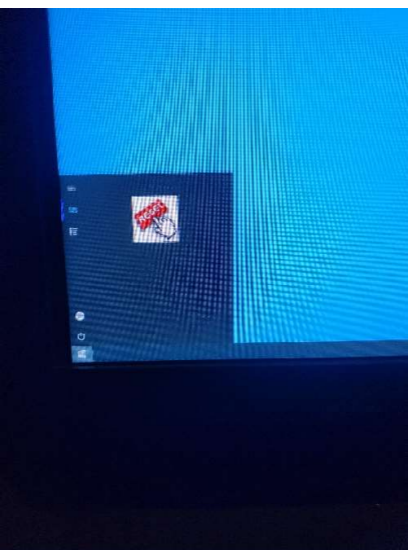

Be patient, system will restart, wait for this Uneekor screen



To turn into this Uneekor screen

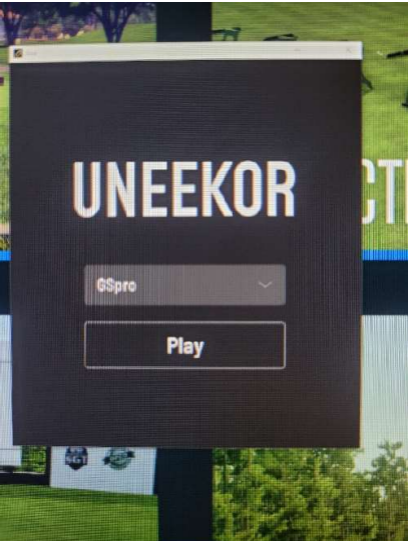

THERE IS A DELAY. After it dings, touch online match on the GSPRO screen. Go back to the course you were playing, touch match settings and check the box Resume Previous, then Play. It will pick up right where you left off with all settings, players and scores as they were.

