



# Lovely Home Systems.com

70 James Street, Worcester, MA, 01603

Office (508) 373-2808 / Fax (508) 373-2809

Cell Phone (508) 400-6599

E-mail: [g3@lovelyhomesystems.com](mailto:g3@lovelyhomesystems.com)

## DSC ALEXOR SECURITY SYSTEM QUICK REFERENCE GUIDE

### 1) TO ARM THE SYSTEM WHILE HOME.

- A) Press **Stay** & hold it until it beeps (about 3-seconds).  
This will Bypass all motions & Arm all Perimeter Devices.
- B) To shut system off press your 4-digit access code.

### 2) TO QUICK ARM THE SYSTEM FOR EXIT.

- A) Press **Away** & hold it until it beeps (about 3-seconds) the system will arm completely as soon as the countdown ends (approx. 45-sec.) or when you open & close the E/E door.
- B) To shut system off enter your 4-digit access code.

### 3) TO TURN ON THE DOOR CHIME.

- A) Press the **chime button** & hold until it beeps (about 3-seconds). This will turn on the chime so that a beep will sound from the keypad ea. time a door is opened.
- B) To turn the Chime off hold the Chime Button again until it beeps (about 3-seconds).

### 4) TO RESET THE SYSTEM CLOCK.

PRESS **(\*6)**, Then enter your **4-Digit (Master Code)**, Then Press **(#1)**. Now enter the Time in **24hr Clock Format**, next enter the Date: **(MM/DD/YR)**. 10Digits Total, 2ea. For the Hr, Min., Mth, Day & Year. Now to exit out of the Programming Menu press the Pound **(#)** Key **TWO** times.

### 5) TO ENTER A NEW MASTER CODE.

Factory Default 1234 unless changed. Enter **(\*5)**, then the **current Master Code**. Then press **(40)**. Now Enter the **New 4 Digit Master Code**. Now to exit out of the Programming Menu press the Pound **(#)** Key **TWO** times.

### 6) EMERGENCY BUTTONS – EX. (FIRE, MEDICAL & POLICE)

Push the **button(s)** next to each Symbol & **hold** until you hear a beep (about 3-seconds). If you are Monitored, Central Station will call the premises first if the Fire or Medical signal is pushed to ask if assistance is needed. If the Police button is pushed, Central Station will send Immediate Help without calling the Premises first.

### 7) TROUBLE CONDITIONS

When a trouble condition is detected, the Trouble sign will turn on and the keypad will beep every to seconds. Press the # key to silence the beeps. Please refer to manual.

**Note: A flashing trouble light indicates batteries in keypad are low.**

*Your Security, Central Vacuum, & Audio/Video Specialists*

George H. Lovely III MA License #7082-C