



Mountain Aerospace
6970 W. 116TH AVENUE, UNIT D
BROOMFIELD, CO 80020
USA

PHONE: 303-404-3248

Email: info@mountain aerospace.com

FAX: 303-404-3291

BEECH 1900
EXCHANGE INVENTORY
AS OF: DECEMBER, 2020

PART NUMBER	DESCRIPTION
00-13298-01	ISOLATOR PAD (129-389001-11)
00-13298-02	ISOLATOR PAD (129-389001-9)
065-0053-00	ALTITUDE SELECTOR (KAS-297A)
065-0053-08	ALTITUDE SELECTOR (KAS-297A)
071-01508-0201	HSI ADAPTER (KA-90)
1/2-2-81-301	FF TRANSMITTER
10-381550-4	IGNITION EXCITER
100-384040	FLAP MOTOR
100-384040-3	FLAP MOTOR
100-384118-15	NAV/STROBE ASSY (LH)
100-384118-16	NAV/STROBE ASSY (RH)
100-430060-25	DAMPNER ASSY
100-524073-1	MOTOR/GEAR BOX ASSY
100-524074-1	GEAR BOX
101-341786-1	PC BOARD
101-364572-17	PC BOARD
101-364578-1	PC BOARD
101-364578-7	PC BOARD
101-364578-9	PC BOARD
101-364580-1	PC BOARD
101-364580-11	PC BOARD
101-364580-5	PC BOARD
101-364582-11	PC BOARD
101-364582-13	PC BOARD
101-364582-21	PC BOARD
101-364584-1	PC BOARD
101-364584-5	PC BOARD
101-364715-1	PC BOARD
101-380012-3	POWER SUPPLY
101-380012-5	POWER SUPPLY
101-380018-3	SOLENOID VALVE
101-380018-7	SOLENOID VALVE

101-380019-3	SOLENOID VALVE
101-380021-3	SOLENOID VALVE
101-380021-7	SOLENOID VALVE
101-380027-1	REGULATOR VALVE
101-380031-3	TURN & SLIP INDICATOR
101-381000-9	VALVE ASSY
101-381015-9	INSTRUMENT AIR VALVE
101-384004-13	BLOWER ASSY
101-384004-9	BLOWER ASSY
101-384032-5	VALVE ASSY
101-384092-1	8 DAY CLOCK
101-384137-7	SWITCH, LANDING GEAR
101-384144-1	DE-ICE VALVE
101-384144-3	DE-ICE VALVE
101-384165-1	WIPER MOTOR
101-384233-1	VOLT/AMMETER
101-388008-3	VALVE ASSY
101-388009-5	ACCUMULATOR
101-389023-3	OIL TRANSDUCER
101-389023-5	OIL TRANSDUCER
101-389025-3	FUEL VALVE
101-389025-5	FUEL VALVE
101-521016-1	FLAP ACTUATOR
101-521016-2	FLAP ACTUATOR
101-524072-7	ACTUATOR, ELEVATOR TRIM
101-524079-9	ACTUATOR, RUDDER TRIM
101-530508-13	COMPASS
102-389006-11	AC COMPRESSOR
103646-1	OUTFLOW VALVE
103646-4	OUTFLOW VALVE
107312-10	PNEUMATIC RELAY
109-361016-5	PC BOARD
109-389002-9	FUEL VALVE
109-524329-3	TRIM ACTUATOR
109-524329-9	TRIM ACTUATOR
112-364021-1	PC BOARD
112-364021-5	PC BOARD
112-364032-1	PC BOARD
112-380022-23	NLG ACTUATOR
114-320052-1	FIRE PULL HANDLE
114-320052-3	FIRE PULL HANDLE
114-364068-1	PC BOARD
114-364068-3	PC BOARD
114-364086-1	PC BOARD
114-364093-5	PC BOARD
114-364140-7	PC BOARD
114-380002-5	HEAT EXCHANGER
114-380004-5	ITT INDICATOR
114-380004-7	ITT INDICATOR
114-380004-9	ITT INDICATOR
114-380005-5	TORQUE INDICATOR
114-380006-5	PROP TACH INDICATOR
114-380007-5	TACH INDICATOR
114-380008-1	FF INDICATOR
114-380009-5	OIL TEMP/PRESS INDICATOR

114-380009-7	OIL TEMP/PRESS INDICATOR
114-380010-1	T & B INDICATOR
114-380011-3	T & B INDICATOR
114-380012-3	AIRSPEED INDICATOR
114-380013-5	ATTITUDE GYRO
114-380015-1	PROP SYNCH INDICATOR
114-380016-1	VERTICAL SPEED INDICATOR
114-380016-3	VERTICAL SPEED INDICATOR
114-380017-3	DIFF. PRESSURE INDICATOR
114-380017-5	DIFF. PRESSURE INDICATOR
114-380018-1	CABIN CLIMB INDICATOR
114-380019-3	FLAP POSITION INDICATOR
114-380020-1	AIR TEMP INDICATOR
114-380021-1	O2 INDICATOR
114-380026-3	SUCTION GAUGE
114-380027-3	PRESSURE GAUGE
114-380027-5	PRESSURE GAUGE
114-380028-11	VENT BLOWER
114-380028-5	VENT BLOWER
114-380028-7	VENT BLOWER
114-380028-9	VENT BLOWER
114-380031-1	DC LOAD INDICATOR
114-380032-1	VOLTMETER
114-380033-1	VOLT/FREQ INDICATOR
114-380034-9	FUEL QTY INDICATOR
114-380035-1	VERTICAL SPEED INDICATOR
114-380035-3	VERTICAL SPEED INDICATOR
114-380038-1	FIRE PULL HANDLE
114-380039-1	VALVE ASSY
114-380040-1	VALVE ASSY
114-380040-13	VALVE ASSY
114-380041-15	MLG ACTUATOR
114-380041-17	MLG ACTUATOR
114-380041-5	MLG ACTUATOR
114-380041-7	MLG ACTUATOR
114-380041-9	MLG ACTUATOR
114-380042-21	PRSOV
114-380048-1	O2 INDICATOR
114-380049-11	PROP AMP INDICATOR
114-380049-5	PROP AMP INDICATOR
114-380051-1	LIFT TRANSDUCER
114-380051-3	LIFT COMPUTER
114-380051-5	LIFT COMPUTER
114-380057-1	AIR GYRO
114-380059-5	PRSOV
114-380063-5	TACH INDICATOR
114-380065-3	TORQUE INDICATOR
114-380065-5	TORQUE INDICATOR
114-380066-3	PROP TACH INDICATOR
114-380066-5	PROP TACH INDICATOR
114-381002-3	BRAKE DE-ICE VALVE
114-381002-5	BRAKE DE-ICE VALVE
114-381002-7	BRAKE DE-ICE VALVE
114-381002-9	BRAKE DE-ICE VALVE
114-381023-1	DC POWER PANEL

114-381023-3	DC POWER PANEL
114-381023-5	DC POWER PANEL
114-381023-7	DC POWER PANEL
114-384020-5	WINDSHIELD, LH HEATED (& KIT)
114-384020-6	WINDSHIELD, RH HEATED (& KIT)
114-388000-13	HYDRAULIC POWER PACK
114-388000-9	HYDRAULIC POWER PACK
114-388024-1	BRAKE ASSY
114-389000-5	OIL COOLER
114-389020-3	OVERSPEED GOVERNOR
114-389030-1	FF TRANSMITTER
114-389039-21	ICE VANE ACTUATOR
114-389040-27	FUEL LEVEL SENSOR
114-389040-29	FUEL LEVEL SENSOR
114-389042-5	FUEL PUMP
114-389043-5	FUEL PUMP
114-820052-3	SHIMMY DAMPNER
114-820052-9	SHIMMY DAMPNER
114-8008-3	BRAKE ASSY
118-364014-5	PC BOARD
118-364036-1	POWER SUPPLY
118-364059-7	PC BOARD
118-380000-1	FUEL QTY INDICATOR
118-380004-3	SOLENOID VALVE
118-381001-5	HEATED VENT
118-389004-13	FUEL PROBE
118-389004-21	FUEL PROBE
118-389004-25	FUEL PROBE
118-389004-41	FUEL PROBE
118-389004-43	FUEL PROBE
118-389004-45	FUEL PROBE
118-389004-47	FUEL PROBE
118-389004-49	FUEL PROBE
118-389005-1	FUEL VALVE
118-389006-5	FUEL PUMP
118-560005-1	O2 REGULATOR (27660-08)
122-389037-3	OVERSPEED GOVERNOR
128-380067-11	O2 MASK, CREW
129-364037-1	PC BOARD
129-364041-5	PC BOARD
129-364041-7	PC BOARD
129-364041-9	PC BOARD
129-364043-1	PC BOARD
129-364043-5	PC BOARD
129-364045-5	PC BOARD
129-364066-5	PC BOARD
129-364079-7	PC BOARD
129-364081-7	PC BOARD
129-364081-9	PC BOARD
129-364091-9	PC BOARD
129-364106-1	PC BOARD
129-380001-1	VALVE ASSY
129-380001-11	TEMP SENSOR
129-380001-13	VALVE ASSY
129-380001-5	TEMP SENSOR

129-380016-1	DC POWER PANEL
129-380020-1	O2 MASK, CREW
129-389001-11	ISOLATOR PAD (00-13298-01)
129-389001-7	MOUNT ASSY (95596-1)
129-389001-9	ISOLATOR PAD (00-13298-02)
129-514106-49	STRUT ASSY, AIRSTAIR DOOR
129-521050-1	FLAP ACTUATOR
129-521050-2	FLAP ACTUATOR
129-521051-1	FLAP ACTUATOR
129-521051-2	FLAP ACTUATOR
130-380003-1	RUDDER TRANSMITTER
130-380003-3	RUDDER TRANSMITTER
130-380005-5	AIRSPEED INDICATOR
130-380005-7	AIRSPEED INDICATOR
130-380010-1	FF TRANSMITTER
130-380041-5	ITT INDICATOR
130-380044-15	RPM INDICATOR
130-380044-5	RPM INDICATOR
130-389002-1	TORQUE TRANSMITTER
130-389002-3	TORQUE TRANSMITTER
130374-29	PRESSURE CONTROL (1900C)
130374-32	PRESSURE CONTROL (1900D)
130374-35	PRESSURE CONTROL (1900C)
130374-37	PRESSURE CONTROL (1900D)
133-389031-1	FUEL PUMP
140-04715	TRANSDUCER, WHEEL SPEED
174260-12	O2 MASK, CREW
1C27-18	CARTRIDGE, FUEL PUMP
1C64-5	FUEL PUMP
1U367-301-1	AIR GYRO
2-7657-5	STEERING AMPLIFIER
20130-11412	AIRSPEED INDICATOR
207	AUDIO AMPLIFIER
210954A/B	OVERSPEED GOVERNOR
210961A	OVERSPEED GOVERNOR
23078-019	STARTER GENERATOR
23085-001	STARTER GENERATOR
244-09015	FIRE LOOP
244-12886	FIRE LOOP
25000-00311	CVR CONTROL
25920-2	FLOW DIVIDER
2593379-001	COMPENSATOR (CS-412)
270-0930-010	YAW RATE SENSOR (YRS-65)
27660-08	O2 REGULATOR (118-560005-1)
28004-11-02	ENCODING ALTIMETER
30100023	FIRE BOTTLE
3033808	FUEL PUMP
3035228	FLOW DIVIDER
3036640	FLOW DIVIDER
3038472	FLOW DIVIDER
3040760	FUEL PUMP
3059831-01	BLEED VALVE
3106870-01	BLEED VALVE
3112714-01	BLEED VALVE
3123126-01	BLEED VALVE

35961G12	O2 MASK, CREW
36-555003-9	AC COMPRESSOR
38-691-2	VALVE, POWER BRAKE
399701-5	FUEL PUMP
3E1964-3	DE-ICE TIMER
407	AUDIO AMPLIFIER
437	AUDIO AMPLIFIER
437-003	AUDIO AMPLIFIER
477-90005	FIRE DETECTOR
48-1	MOTOR ASSY
50-380070-3	WIPER CONVERTER (LH)
50-380070-4	WIPER CONVERTER (RH)
50-389057-1	TACH GENERATOR
50-521222-3	FLAP ACTUATOR
50-521222-4	FLAP ACTUATOR
50-820205-37	DRAG BRACE (NLG)
5006749-4	BRAKE ASSY
5006749-5	BRAKE ASSY
501-1296-04	ATTITUDE INDICATOR
51538-001A	GCU
522-1936-047	COMPASS SLAVE INDICATOR
522-2638-006	COURSE INDICATOR (331A-3G)
522-2644-011	SLAVING ACCESSORY
559-1	FLAP TRANSMITTER
571302	MOTOR ASSY
605	tone generator
622-1270-001	TRANSPONDER (TDR-90)
622-2501-001	ANTENNA (ANT-312)
622-4160-018	RAD ALT INDICATOR (DRI-55)
622-4565-001	VERTICAL GYRO (332D-11T)
622-4938-001	RMI (RMI-30)
622-5734-002	SERVO (SVO-65)
622-5797-001	AIR DATA SENSOR (ADS-65)
622-6136-002	DIRECTIONAL GYRO (DGS-65)
622-6137-001	NAV RECEIVER (VIR-32)
622-6200-002	HSI CONTROL (HCP-74)
622-6263-003	DME INDICATOR (DME-42)
622-6520-008	COM CONTROL (CTL-22)
622-6521-016	NAV CONTROL (CTL-32)
622-6522-008	ADF CONTROL (CTL-62)
622-6523-008	ATC CONTROL (CTL-92)
622-6524-004	DME INDICATOR (IND-42A)
622-6590-001	ADAPTER (CAD-62)
622-9681-001	EFIS DISPLAY (EFD-84)
623372	SOLENOID VALVE
7002260-733	SERVO DRIVE
7002260-933	SERVO DRIVE
7003180-901	YAW COMPUTER
775624-1	HEAT EXCHANGER
775635-5	AIR CYCLE MACHINE
787-6173-016	INDICATOR (ADI-84)
801765-00	O2 REGULATOR
805-10007-007	TCAS INDICATOR (CD-605)
8061-328	FUEL CONTROL
8063-005	FUEL CONTROL

8210-212	PROP GOVERNOR
8210-310	PROP GOVERNOR
8210-410	PROP GOVERNOR
825601-5	FUEL PUMP
86400-1199	CLOCK
90-380000-5	REGULATOR VALVE
90-380001-23	MASTER CYLINDER
90-380001-33	MASTER CYLINDER
90033-12	LIGHT ASSY
90033-24	LIGHT ASSY
90212-001	HYDROLOK
93-A100-30	CVR
93-A100-83	CVR
93-A151-20	CVR CONTROL (GRAY)
93-A151-30	CVR CONTROL (BLACK)
95596-1	MOUNT ASSY (129-389001-7)
965-0686-001	GPWS COMPUTER
99-380010-1	ACM BYPASS VALVE
99-388004-3	NOSE STEERING ACTUATOR
99-388004-7	NOSE STEERING ACTUATOR
99-388007-1	HYDRAULIC LEVEL SENSOR
99-389014-3	TORQUE TRANSMITTER
A213796	PROP SYNCHROPHASER
AN5786-1	FLAP TRANSMITTER
AT4220A5	CLOCK
AYLF50598	TEMP SENSOR
AYLF51021	TEMP SENSOR
BYLB50474-1	ACM BYPASS VALVE
BYLB50824	VALVE ASSY
HUCAB-1-SM-1900D	BRIEFER COMPUTER
HUCAB-2-BP	CABIN BRIEFER CONTROL
HYLZ50948	PC BOARD
HYLZ51071	TEMP CONTROL
HYLZ51598	PC BOARD
LL06500-04	HYDROLOK
MB801-28	CLOCK
MC0F95055-1	AIRSPEED INDICATOR
PC-250	INVERTER
S703-1000-00	FLIGHT DATA RECORDER
SPC-38	INVERTER
SPC-10(PW)	INVERTER