



Mountain Aerospace
6970 W. 116TH AVENUE, UNIT D
BROOMFIELD, CO 80020
USA

PHONE: 303-404-3248

Email: info@mountain aerospace.com

FAX: 303-404-3291

BEECH KING AIR
EXCHANGE INVENTORY
AS OF: DECEMBER, 2020

PART NUMBER	DESCRIPTION
025323-300-03	FUEL PUMP
1/2-2-81-306	FF TRANSMITTER
10-381550-1	IGNITION EXCITER
10-381550-4	IGNITION EXCITER
100-380006-103	FUEL PROBE
100-380006-119	FUEL PROBE
100-380006-121	FUEL PROBE
100-380006-143	FUEL PROBE
100-380006-167	FUEL PROBE
100-380006-169	FUEL PROBE
100-380006-173	FUEL PROBE
100-380006-175	FUEL PROBE
100-380006-47	FUEL QTY INDICATOR
100-380006-73	FUEL PROBE
100-380006-77	FUEL PROBE
100-380006-83	FUEL PROBE
100-380006-93	FUEL PROBE
100-384072-5	A/C MOTOR
100-384040	FLAP MOTOR
100-384040-3	FLAP MOTOR
100-384118-15	NAV/STROBE ASSY (LH)
100-384118-16	NAV/STROBE ASSY (RH)
100-384118-17	NAV/STROBE ASSY (LH)
100-384118-18	NAV/STROBE ASSY (RH)
100-389020-1	VALVE ASSY
100-430060-25	DAMPNER ASSY
100-524073-1	MOTOR/GEAR BOX ASSY
100-524074-1	GEAR BOX
101-364086-7	PC BOARD
101-364092-25	PC BOARD

101-364270-5	GCU
101-364326-3	PC BOARD
101-364326-9	PC BOARD
101-364578-1	PC BOARD
101-364580-1	PC BOARD
101-364584-1	PC BOARD
101-364584-5	PC BOARD
101-364672-3	PC BOARD
101-380005-17	LIFT COMPUTER
101-380005-19	LIFT COMPUTER
101-380005-33	LIFT TRANSDUCER
101-380005-9	LIFT TRANSDUCER
101-380013-13	FLOW PACK
101-380013-3	PNEUMOSTAT
101-380018-3	SOLENOID VALVE
101-380018-7	SOLENOID VALVE
101-380019-3	SOLENOID VALVE
101-380021-3	SOLENOID VALVE
101-380021-7	SOLENOID VALVE
101-380025-11	CONTROLLER (F7-51-3)
101-380025-21	FLOWPACK (1H98-2)
101-380027-3	REGULATOR VALVE
101-380027-5	REGULATOR VALVE
101-380034-1	VERTICAL SPEED INDICATOR
101-381000-9	VALVE ASSY
101-381011-11	VALVE ASSY
101-381011-13	VALVE ASSY
101-381011-9	VALVE ASSY
101-381012-3	VALVE, BRAKE DE-ICE
101-381012-7	VALVE, BRAKE DE-ICE
101-384004-5	BLOWER ASSY
101-384008-3	TORQUE INDICATOR
101-384025-21	WINDSHIELD, LH
101-384025-22	WINDSHIELD, RH
101-384025-23	WINDSHIELD, LH
101-384025-24	WINDSHIELD, RH
101-384032-3	VALVE ASSY
101-384032-7	VALVE ASSY
101-384074-9	AIRSPD INDICATOR
101-384092-1	8 DAY CLOCK
101-384107-1	VOLT/FREQ INDICATOR
101-384135-3	BLOWER ASSY
101-384137-5	SWITCH, LANDING GEAR
101-384137-7	SWITCH, LANDING GEAR
101-384144-1	DE-ICE VALVE
101-384144-3	DE-ICE VALVE
101-384151-5	FUEL QTY INDICATOR
101-384165-1	WIPER MOTOR
101-384176-1	BLOWER ASSY
101-384176-3	BLOWER ASSY
101-384177-11	CONTROLLER
101-384177-9	CONTROLLER
101-388007-3	VALVE ASSY
101-388008-3	VALVE ASSY
101-388009-5	ACCUMULATOR

101-388014-1	MLG ACTUATOR
101-389000-5	OVERSPEED GOVERNOR
101-389005-3	TORQUE TRANSMITTER
101-389006-11	ICE VANE ACTUATOR
101-389023-3	OIL TRANSDUCER
101-389023-5	OIL TRANSDUCER
101-389025-1	FUEL VALVE
101-389025-3	FUEL VALVE
101-389025-5	FUEL VALVE
101-521016-1	FLAP ACTUATOR
101-521016-2	FLAP ACTUATOR
101-555211-7	AC COMPRESSOR
103648-7	OUTFLOW VALVE
114-389039-23	ICE VANE ACTUATOR
114-389040-21	LEVEL SENSOR
115-380002-5	MOTOR, LANDING GEAR
117-384019-3	FUEL QTY INDICATOR
129-521050-1	FLAP ACTUATOR
129-521050-2	FLAP ACTUATOR
129-521051-1	FLAP ACTUATOR
129-521051-2	FLAP ACTUATOR
130-380042-3	TORQUE INDICATOR
130-380044-7	RPM INDICATOR
130-389002-1	TORQUE TRANSMITTER
130-389002-3	TORQUE TRANSMITTER
130346-11	PRESSURE CONTROL
130346-12	PRESSURE CONTROL
1C12-1	FUEL PUMP
1D2-12	FUEL PUMP
1D2-13	FUEL PUMP
1H98-2	FLOWPACK (101-380025-21)
210632	OVERSPEED GOVERNOR
210638	OVERSPEED GOVERNOR
213765	PROP SYNCHROPHASER
23048-016	STARTER GENERATOR
30-1329-3M	NAV/STROBE ASSY (LH)
30-1329-4M	NAV/STROBE ASSY (RH)
30-1329-5M	NAV/STROBE ASSY (LH)
30-1329-6M	NAV/STROBE ASSY (RH)
30-1331-3	LIGHT ASSY
30-1331-5	LIGHT ASSY
3100829-03	BLEED VALVE
3100922-05	BLEED VALVE
3701-14	LIFT TRANSDUCER
3701-2	LIFT TRANSDUCER
38E85-2B	VALVE ASSY
38E97-2A	VALVE ASSY
3E1150-10	DE-ICE TIMER
3E1964-3	DE-ICE TIMER
4402-1	VALVE ASSY
4402-2	VALVE ASSY
45600-2	MLG ACTUATOR
48-1	MOTOR ASSY
50-380035-5	PROP TACH INDICATOR
50-380071	WIPER MOTOR

50-380177-5	FUEL PUMP
50-380177-7	FUEL PUMP
50-389057-1	TACH GENERATOR
50-389091	PROP SYNCH INDICATOR
50-389094-5	FUEL PUMP
50-521222-3	FLAP ACTUATOR
50-521222-4	FLAP ACTUATOR
50-521223-3	FLAP ACTUATOR
50-521223-4	FLAP ACTUATOR
51530-001	GCU
51530-001A	GCU
51530-007B	GCU
559-1	FLAP TRANSMITTER
571302	MOTOR ASSY
60-1750-3	POWER SUPPLY
623372	SOLENOID VALVE
7130BC78	VERTICAL SPEED INDICATOR
801765-00	O2 REGULATOR
90-380000-3	VALVE ASSY
90-380001-23	MASTER CYLINDER
90-380001-33	MASTER CYLINDER
90-380009-5	FF INDICATOR
90-380009-7	FF TRANSMITTER
90-380033-3	ITT INDICATOR
90-384026-29	ITT INDICATOR
90-384031-1	BLOWER ASSY
91-360011-1	PC BOARD
91-380003	FUEL PUMP
91-380003-3	FUEL PUMP
9133-25-B1	FF TRANSMITTER
93-A100-83	CVR
93-A151-30	CVR CONTROL (BLACK)
9544397-1	BRAKE ASSY
97-380000-17	PNEUMOSTAT
97-380000-33	FLOW PACK
97-389000-3	OVERSPEED GOVERNOR
99-388007-3	HYDRAULIC LEVEL SENSOR
A213796	PROP SYNCHROPHASER
AN5786-1	FLAP TRANSMITTER
AV16B1700B	FUEL VALVE
EM603-7	BLOWER ASSY
EM603-9	BLOWER ASSY
EM651-1	BLOWER ASSY
HYLZ50336-001	TEMP CONTROL
HYLZ50336-011	TEMP CONTROL
LT-55	POWER SUPPLY
MB801-28	CLOCK
PC-17	INVERTER
PC-250	INVERTER
RG34720A	FUEL PUMP
RG34720F	FUEL PUMP
SPC-60(A)	INVERTER