

# Stage Set up



# **Important**

- Return the allen key If not returned, you will be charged a \$5 replacement fee
- All the stage clips needs to be back on the panels, if not you will be charged \$2 per clip. If they are not return, you will be charged a \$5 remplacement fee
- All skirts needs to be back in a bag with all the skirt clips

# Steps:

### Installation of raiser

- 1. Open the riser
- 2. Put the stage panel on the floor
- 3. Put the riser on the panel. Make sure that the arrows points toward the panel
- 4. Clip the riser onto the panel by pushing on the four black buttons. Make sure you hear a click
- 5. Flip the panel onto the riser



## Connecting the panels

- 1. To connect the panels, loosen the clips on the side of the panels with the allen key provided
- 2. Squeeze the stage clip
- 3. Slide the two panels together
- 4. Tighten the clips with the align key provided







