 
813-417-8442

4025 Tampa Road Suite 1115 Oldsmar, Fl 34677





















## Preventative Maintenance for H2O-2412 CUDA Automatic Parts Washers

## Daily:

- Check water level (add as necessary)
- Check and empty debris screen
- Turn heater on (115V models; leave heater on)
- To prevent foaming, allow Cuda to heat up (approx. 1-2 hr)
- Turn on oil skimmer and run for 15-30 min, or until solution draining into bucket runs clear
- Conduct a brief visual inspection to check for loose or damaged parts

## Weekly:

- Add **1 scoop** of Cuda Powdered Detergent, **Water must be HOT**; Sprinkle on turntable and run pump for 5 min to mix
- Add 5oz of Cuda VCI
- Empty Skimmer from oil bucket

## Monthly:

- Check TT arm tension; 7lb slip required (do not over tighten)
- Inspect lid safety switch operation
- Lubricate lid and sump door hinges
- Check spray nozzles for clogs, remove and clean as necessary, reinstall (TIP: Make note of orientation prior to removal; reinstall in same orientation)
- Remove (lift straight up) turntable and lubricate spindle
- Inspect low water float and safety shut off operation
- Inspect oil skimmer assembly (motor, wiper blades, wheel)
- Drain sump and clean out debris
- Inspect heating element for damage, ensure pump inlet is clear of debris
- Refill with fresh water, add **5 scoops** of Cuda powdered detergent, and **10 oz** of Cuda VCI; WATER MUST BE HOT PRIOR TO ADDING POWDERED DETERGENT, sprinkle 2 scoops at a time on the turntable and run pump to dissolve.
- Wipe down exterior of machine with a mild degreaser

Note: Detergent amounts recommended are a guide; some applications may require more or less depending on water quality. If necessary, contact IWS to determine the amount needed for your application.