 
813-417-8442

4025 Tampa Road Suite 1115 Oldsmar, Fl 34677





















## Preventative Maintenance for Karcher Floor Scrubbers

#### After Each Use:

- Drain off dirty water
- Rinse the waste water tank with clean water
- Clean the outside of the appliance with a damp cloth which has been soaked in mild detergent
- Check the fluff filter, clean if required
- Clean the vacuum lips and the wiping lips, check for wear and replace if required
- Check the brush for wear and replace if required (see "maintenance tasks")
- Charge the battery:

\*\*\* Be sure batteries are able to vent while charging to limit the accumulation of potentially flammable gasses

- 1. If the charging state of the battery is under 50%, charge the battery fully and without interruption.
- 2. If the charging state of the battery is over 50%, only recharge the battery if the entire operation duration will be required when used next.

# Weekly:

When used regularly, charge the battery fully and without interruption at least once a week

### Monthly:

- Check battery poles for oxidation, brush off if necessary. Ensure that the connection cable sits firmly
- Clean the seals between waste water tank and cover and check for tightness, replace if required
- Clean sieve
- Check the acid density of the cells if the batteries are not maintenance-free batteries
- For long periods of disuse, only turn the device off when the battery if fully charged
- Fully recharge the battery at least every month

## Annually:

Have the prescribed inspection carried out by the customer service

Note: Be sure to only use Karcher approved shop floor cleaner to prevent soap residue build up, and/or foaming issues.